



Gebrauchsanweisung
51 4778
(D,GB,F,I,NL)
Montageanleitung
51 4220
(D,GB,F,I,NL,DK,N,SF,E,S)

Schraubensatz
08 4136

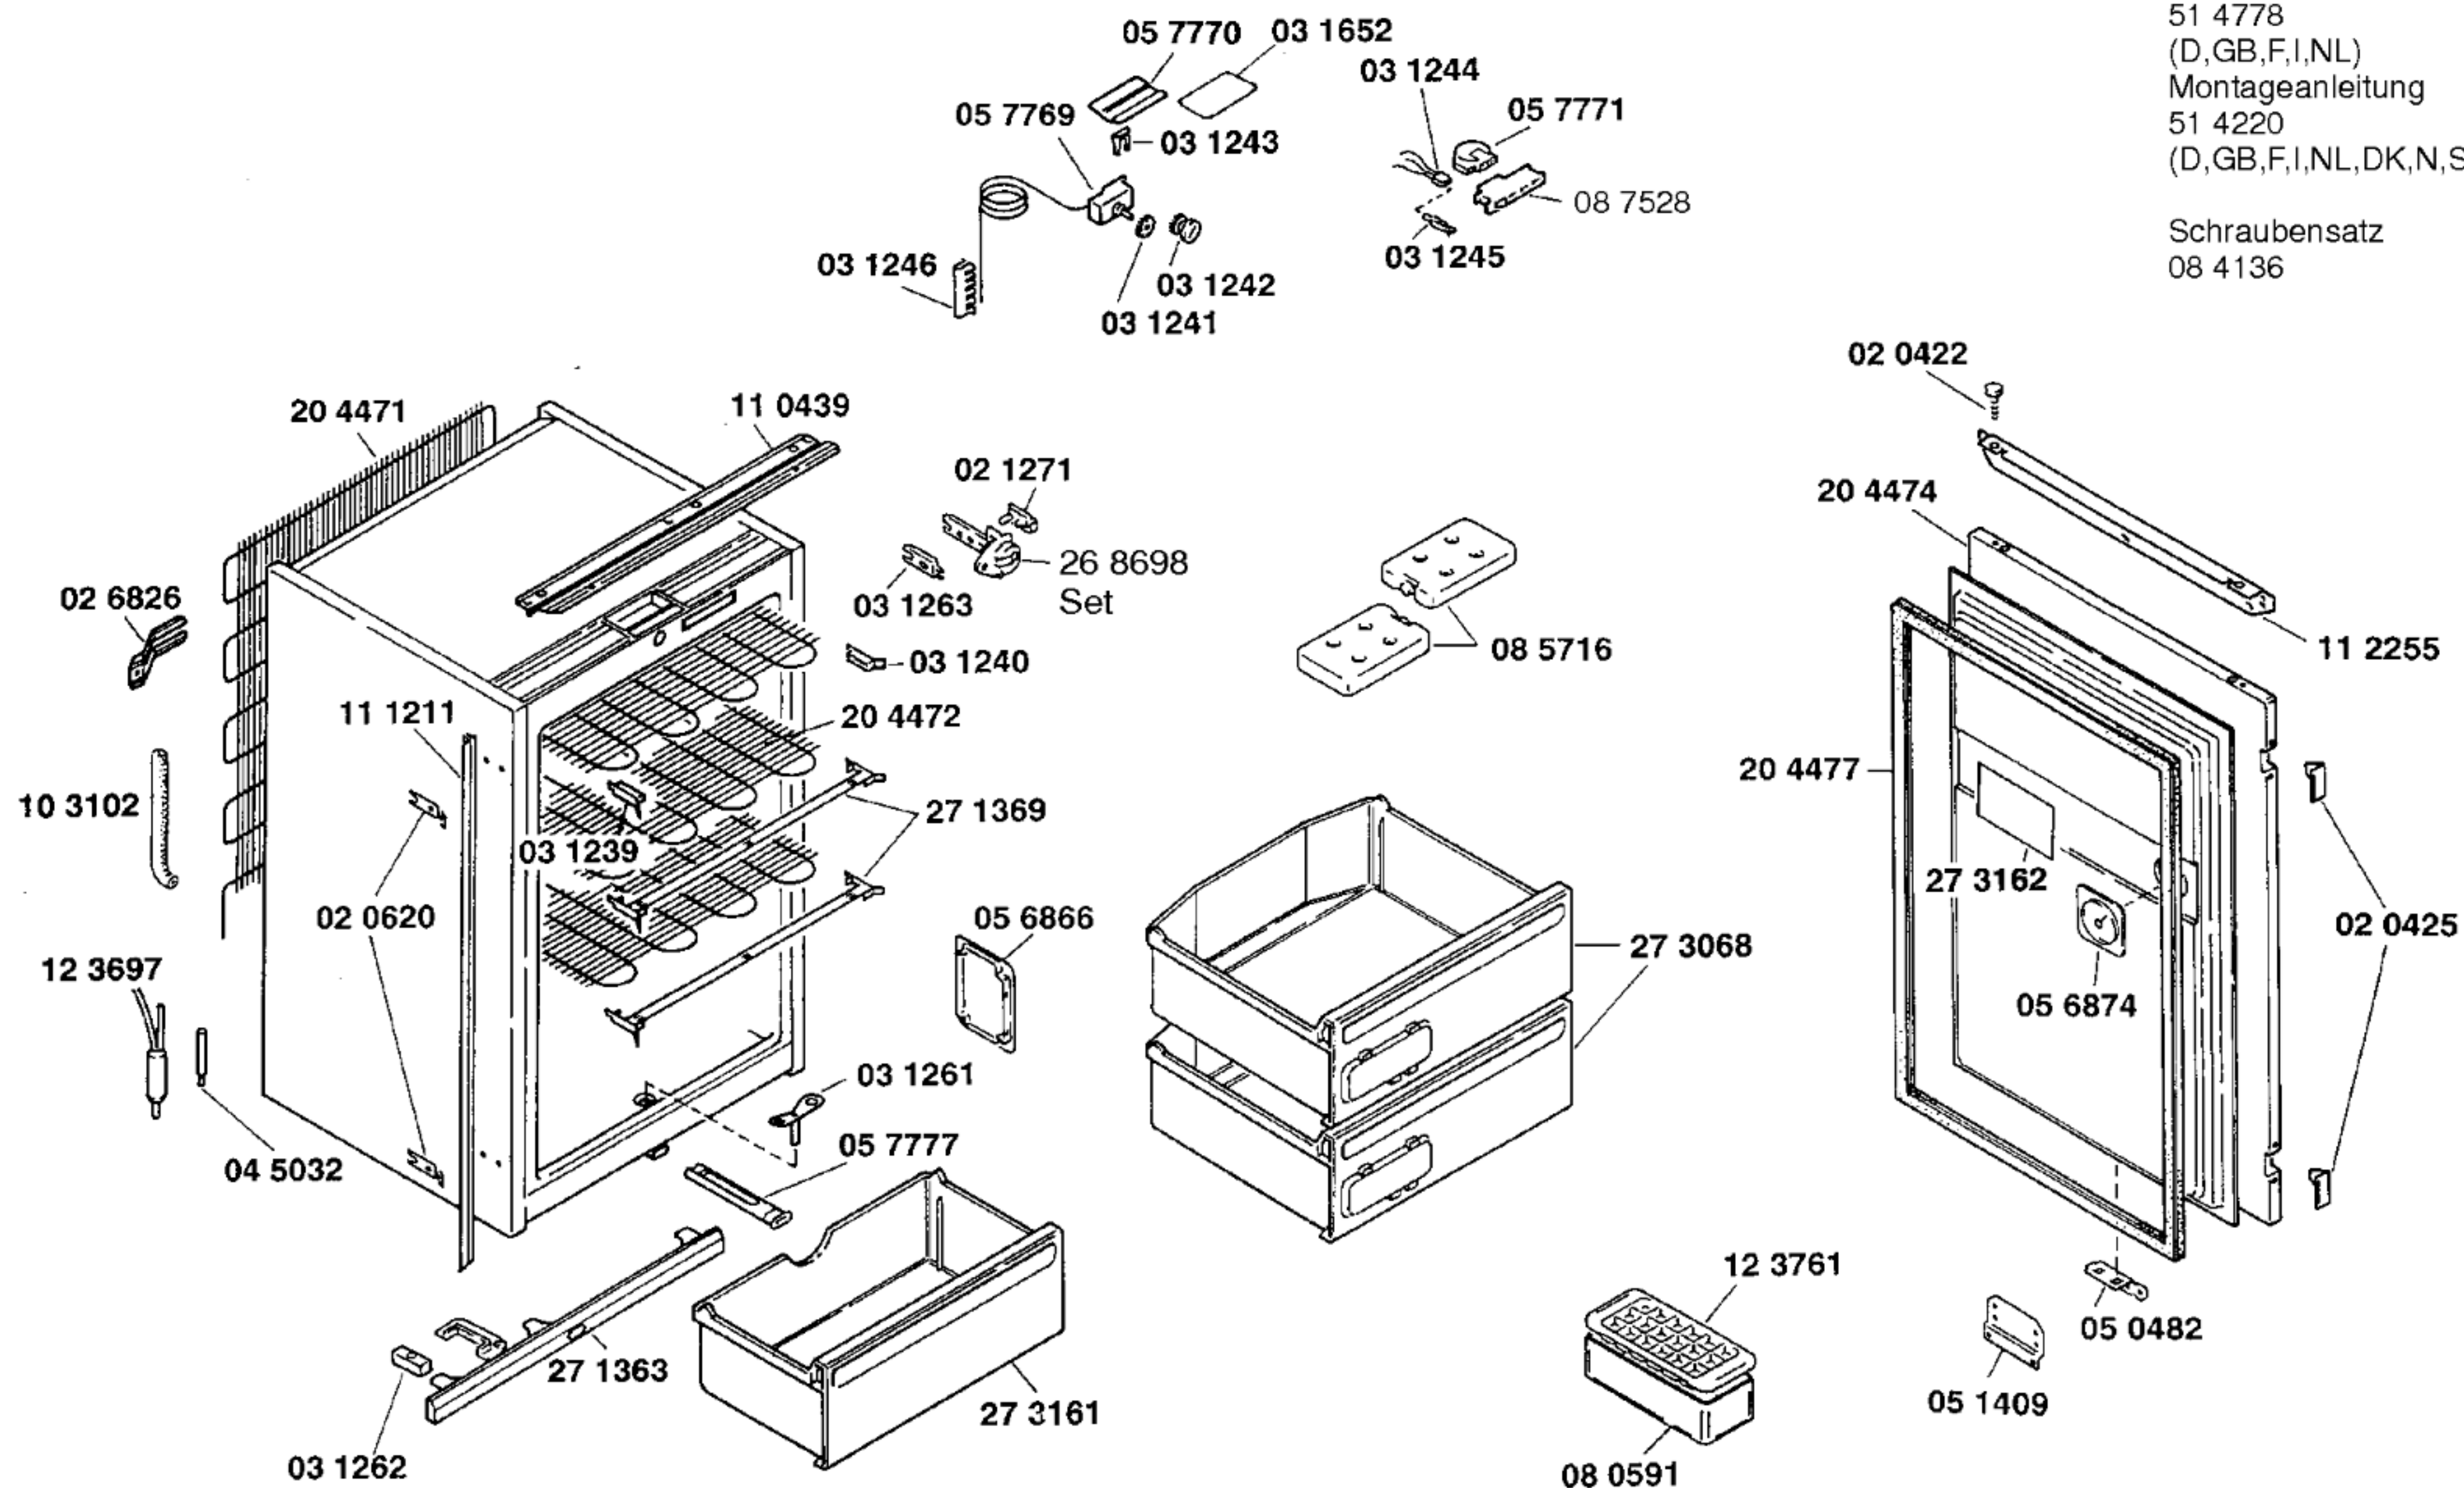

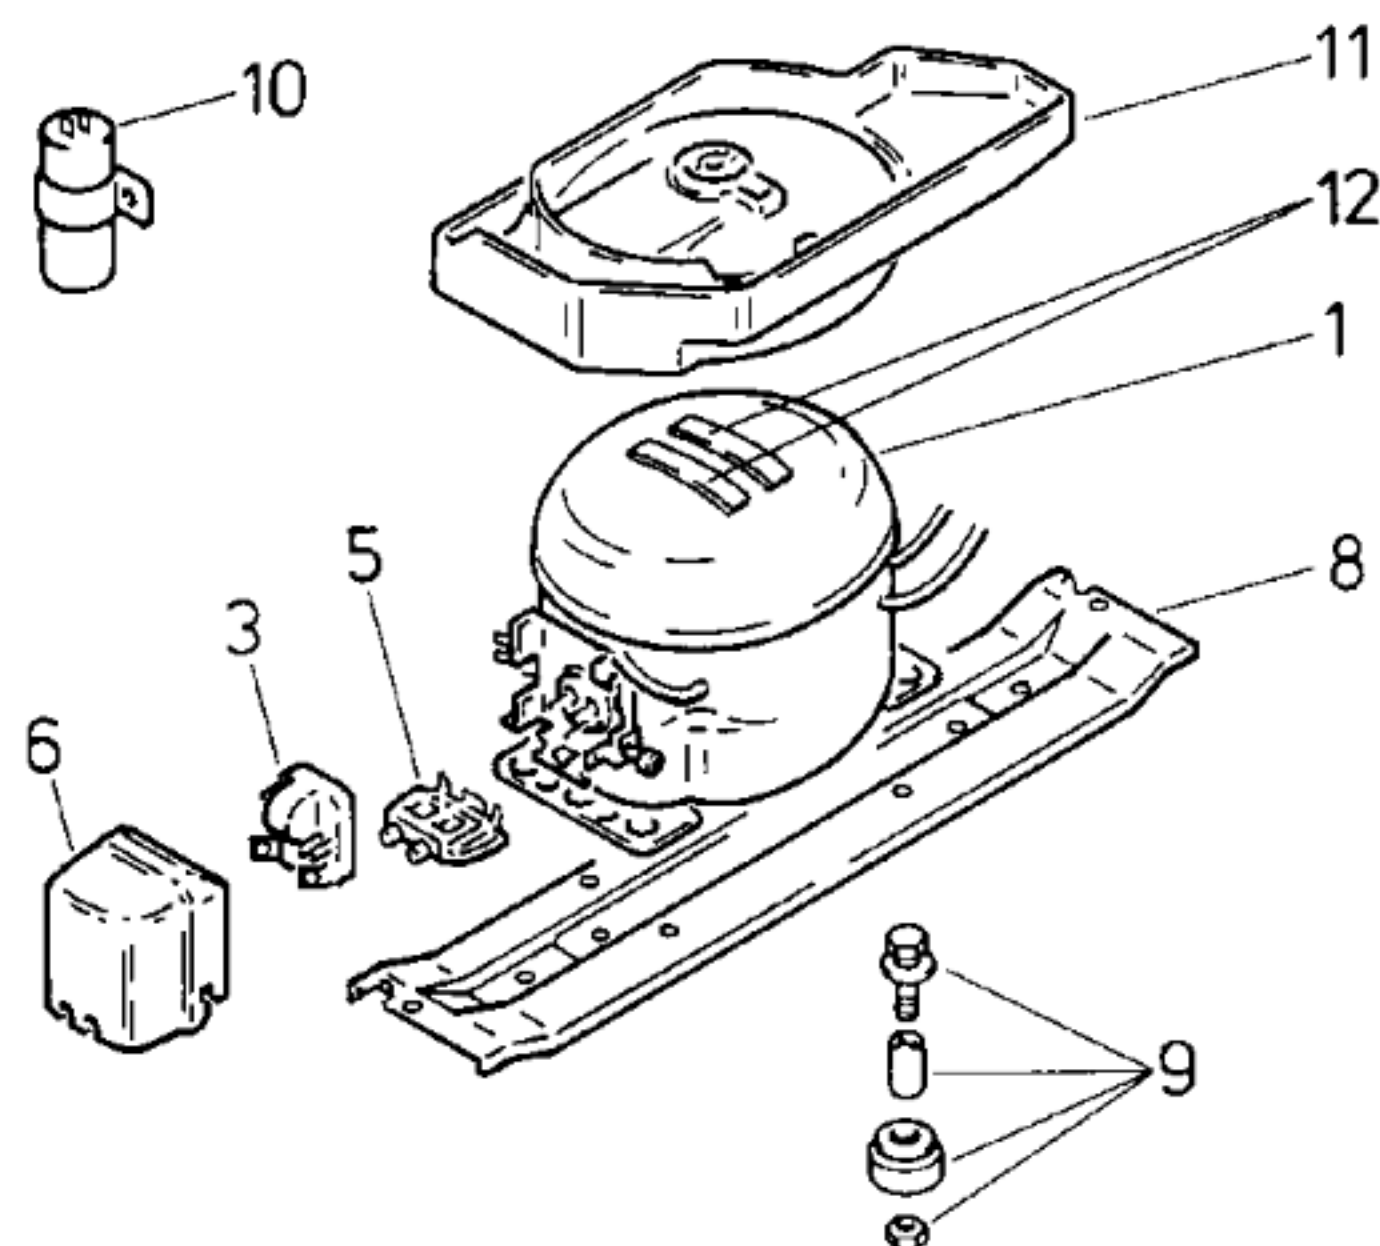

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss	Danfoss	
Typ/Type		TL 4 A	TL 5 A	
Förderleistung/Delivery/Débit	l/h	V 695	914	
Anlaufstrom/Starting current/Cour. de démarrage	A	8,3	9,0	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	23,4	15,5	
	Hi/aux Ω	15,5	16,8	

Temp.-Regler/Thermostat		WHF		
Typ/Type		TF57 SF2		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	-25	-17	
Valeurs de commutation	„aus“	-33	-23	
(„abtauen“ od.)	„alarm“	-19,5	-13	

Füllmenge/Fill.quantity/Charge	R12	g	120	
--------------------------------	-----	---	-----	--

Anschlußwert/Conn.load/Puiss. connectée	W	110		
---	---	-----	--	--

Heizung/Heater/Chauffage				
Widerstand/Resistance/Resistance	Ω			
Leistung/Power/Puissance	W			

Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			

Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

Pos.	EU1,GB1	E1	
	Danfoss	Danfoss	
	TL 4 A	TL5A	
1	13 1064	14 0065	
2			
3	02 0108	02 0108	
4			
5	02 7310	02 7310	
6	05 1413	05 1413	
7			
8	27 1375	27 1375	
9	05 0166	05 0266	
10			
11			
12			