


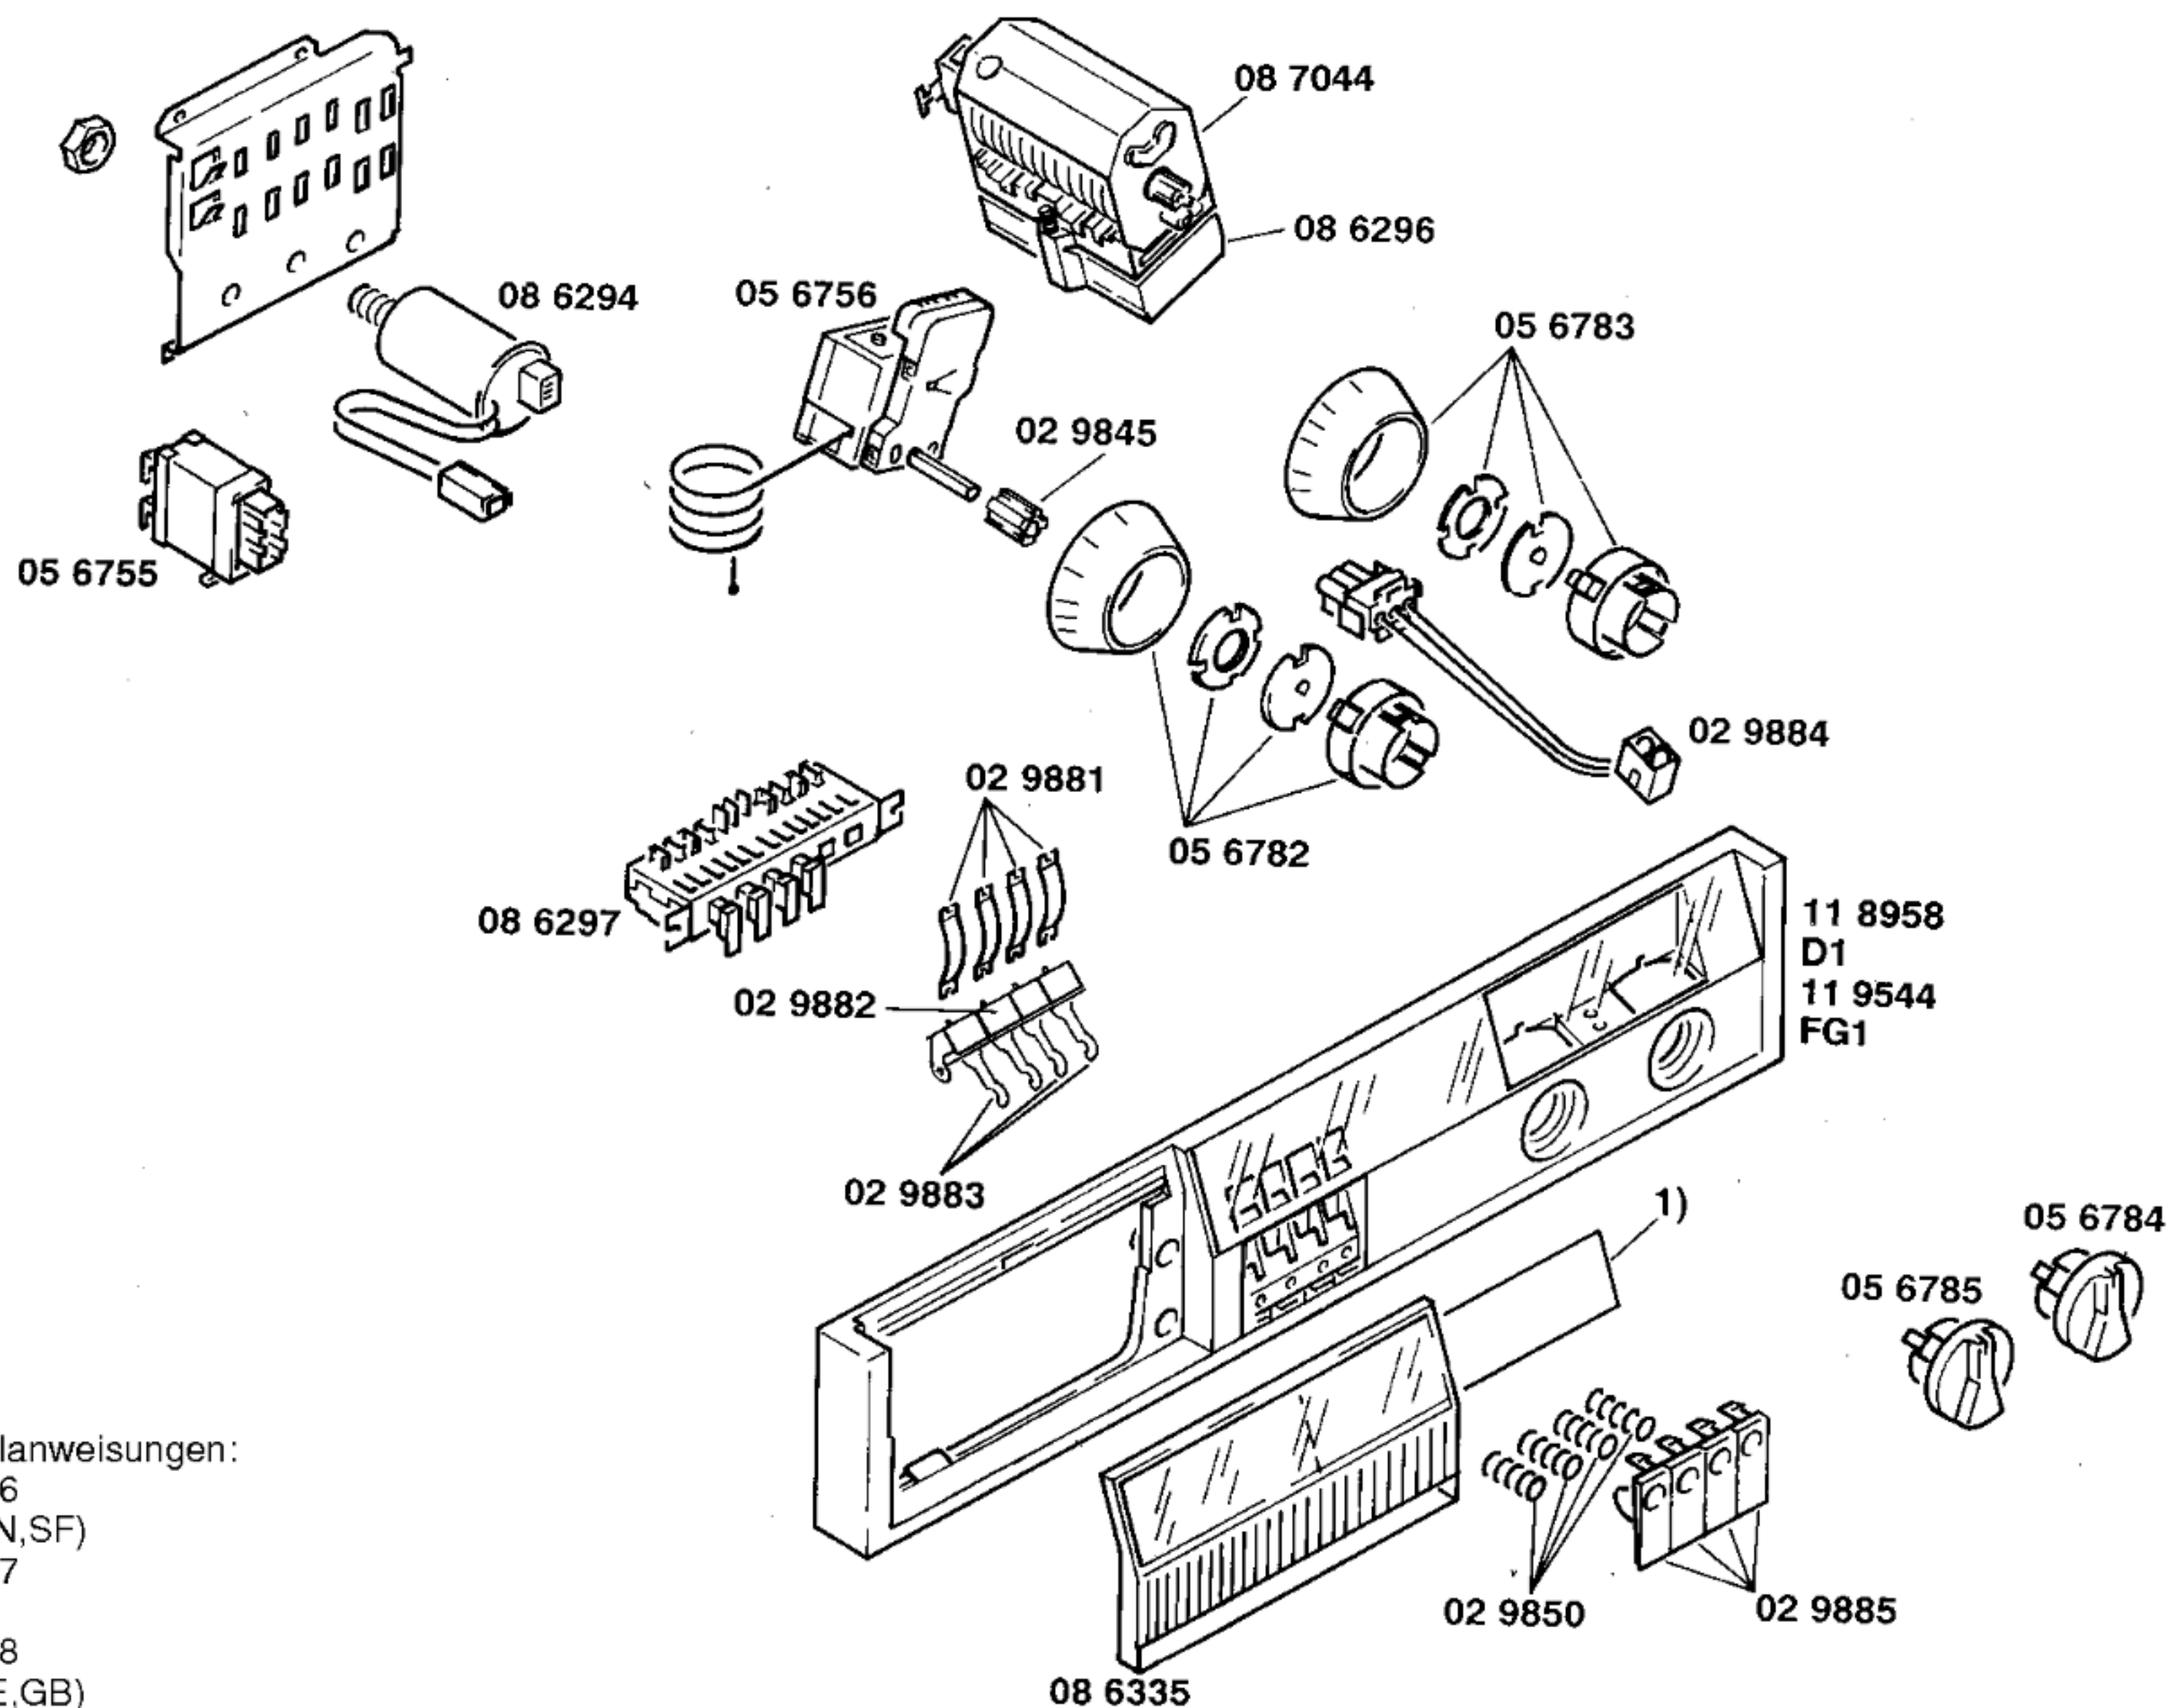

Aufstellanweisungen:

51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

Ident – Nummern – Konstante
3740

1) 08 6336
(D)
08 6337
(NL)
08 6338
(N)
08 6339
(SF)
08 6340
(S)
08 6341
(E)
08 6342
(F)
08 6343
(DK)
08 6344
(I)
08 6686
(TR,YU,E,GB)
08 6690
(GB)

Gebrauchsanweisungen:

51 3566
(D,I,S,N,SF)
51 3567
(S,DK)
51 3568
(NL,F,E,GB)

Programmtabellen:

51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)

**BOSCH**

WFK6000-WFK6000/02-D1


WFK6000-WFK6000FG/02-FG1

WFK6000-WFK6000SI/02-SI1

WFK6000-WFK6000/03-D2

WFK6000-WFK6000FG/03-FG2

WFK6000-WFK6000SI/03-SI2

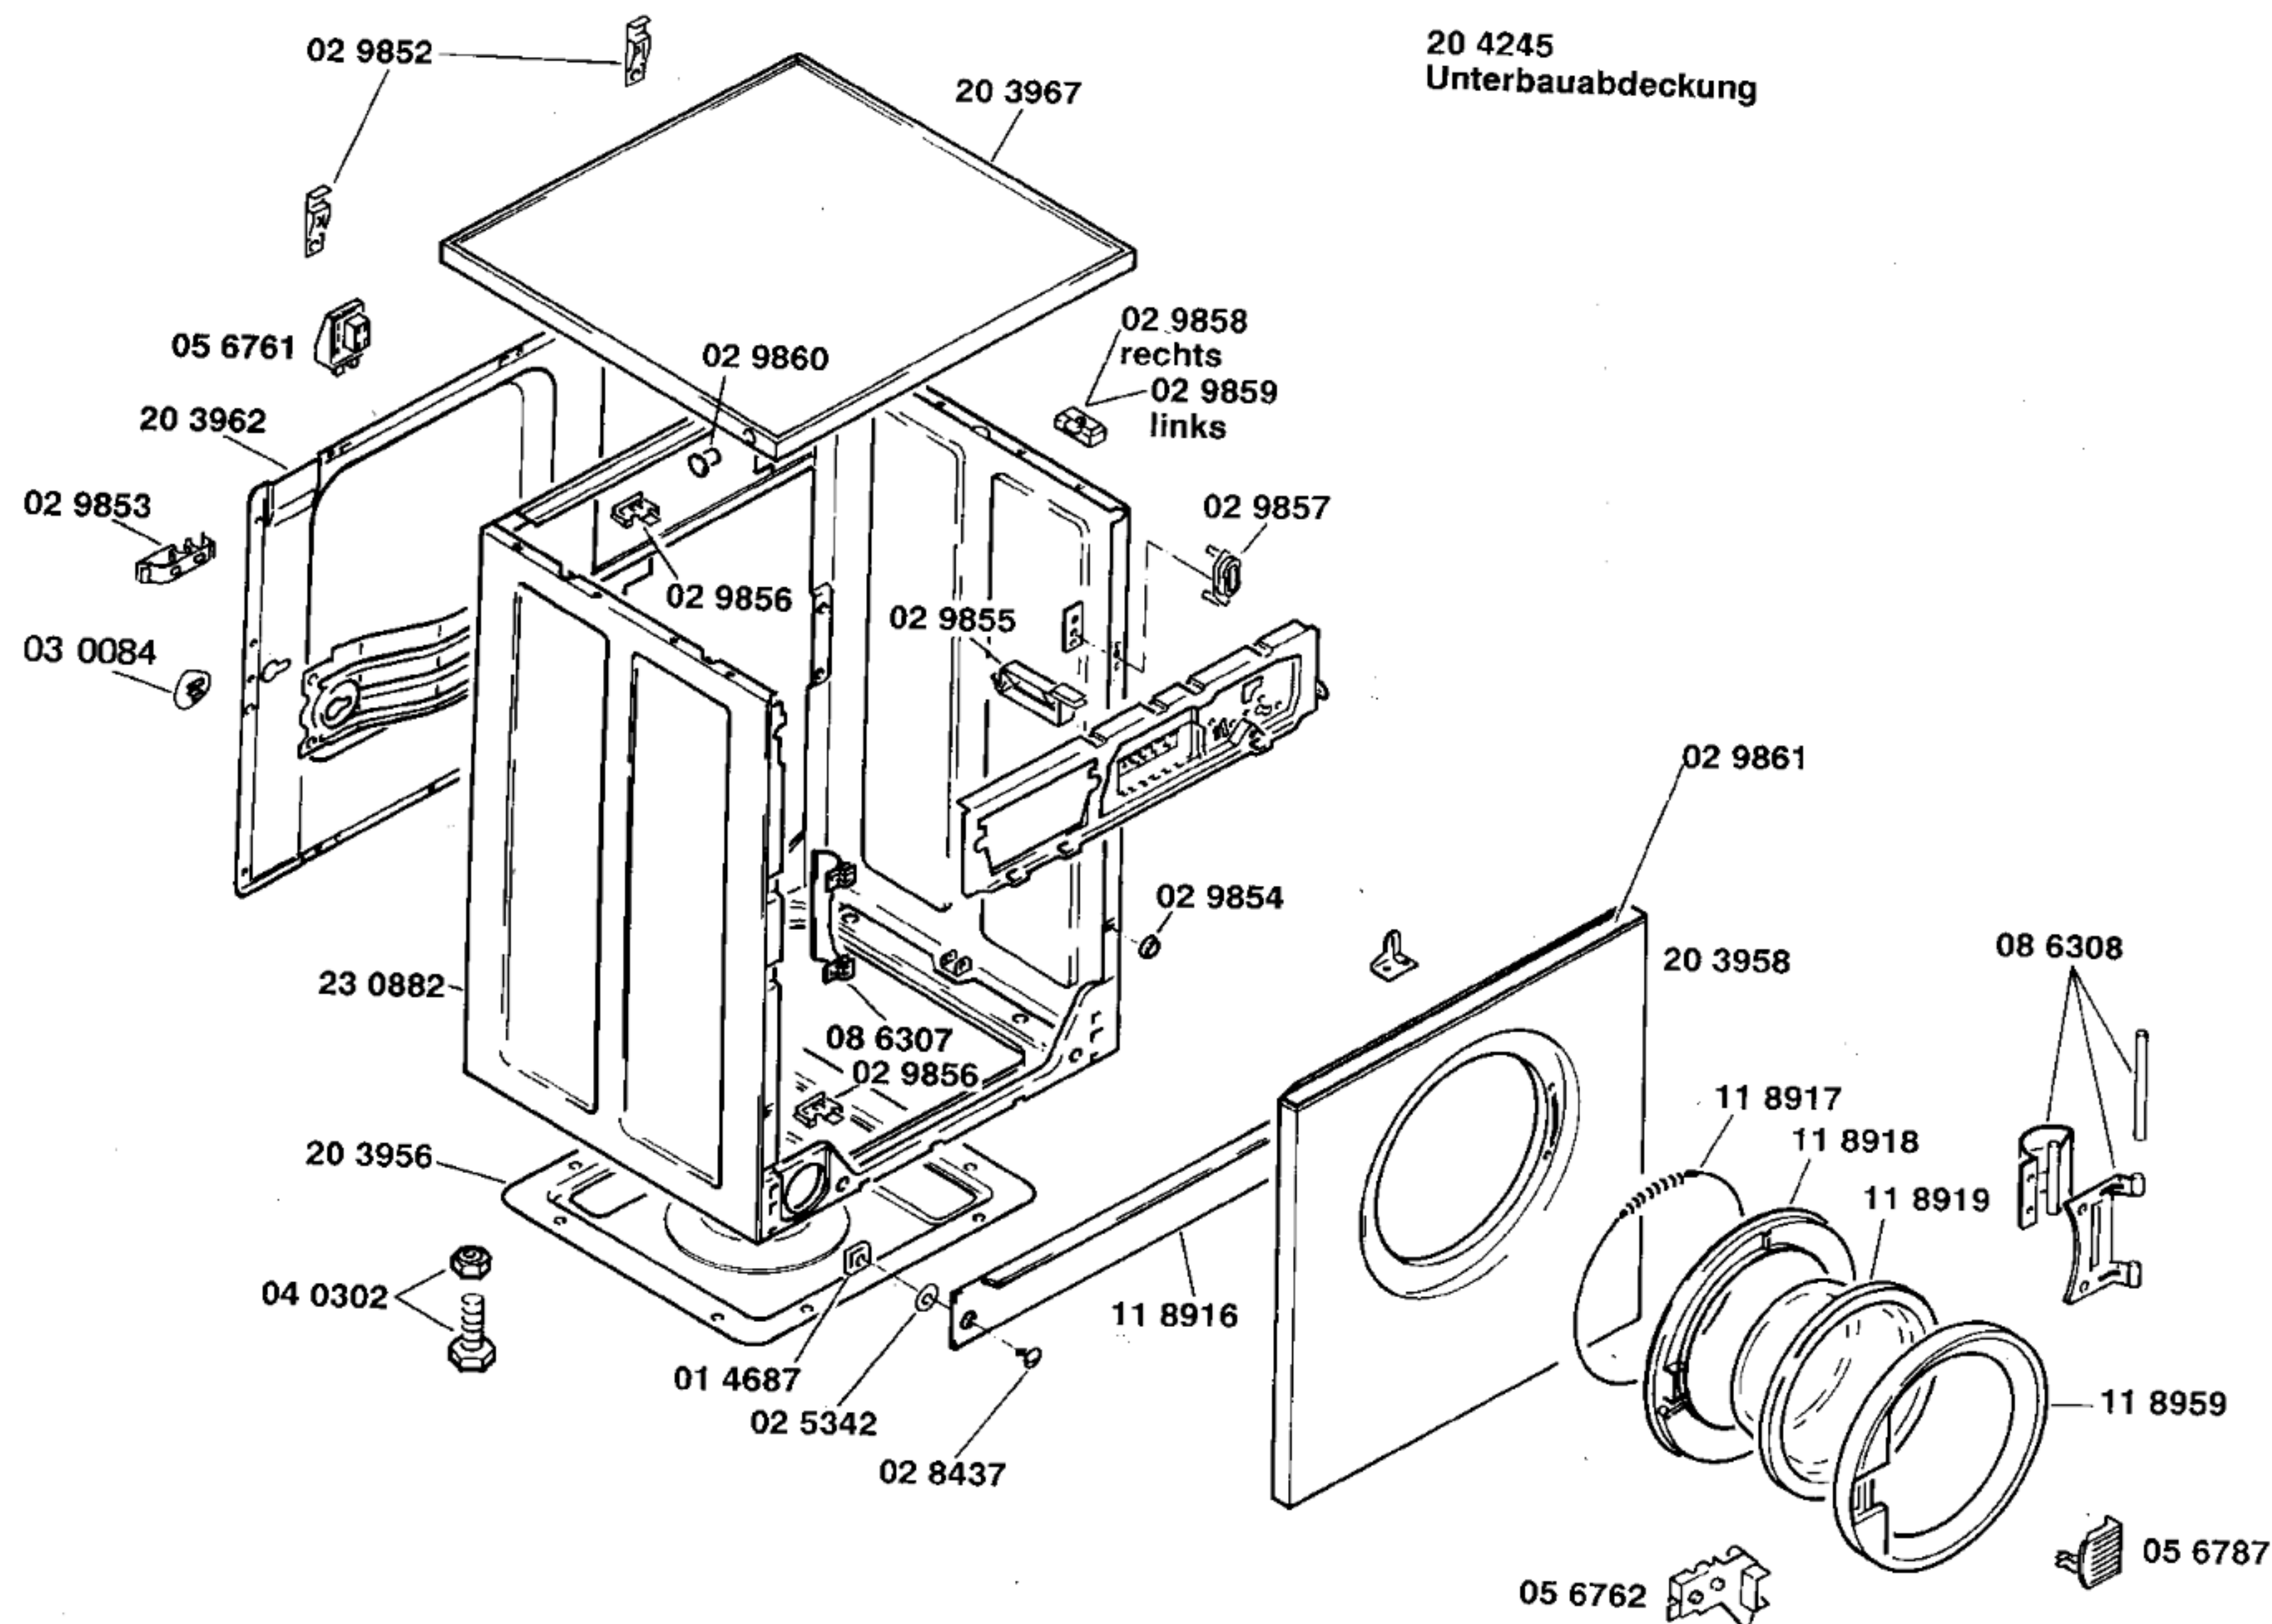WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740

**BOSCH**

WFK6000-WFK6000/02-D1

WFK6000-WFK6000FG/02-FG1

WFK6000-WFK6000SI/02-SI1


WFK6000-WFK6000/03-D2

WFK6000-WFK6000FG/03-FG2

WFK6000-WFK6000SI/03-SI2

WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740

- 1) 14 0469
D1,FG1,SI1
14 0522
D2,FG2,SI2
- 2) 27 0443
15 5272
Triac-Motorleistung

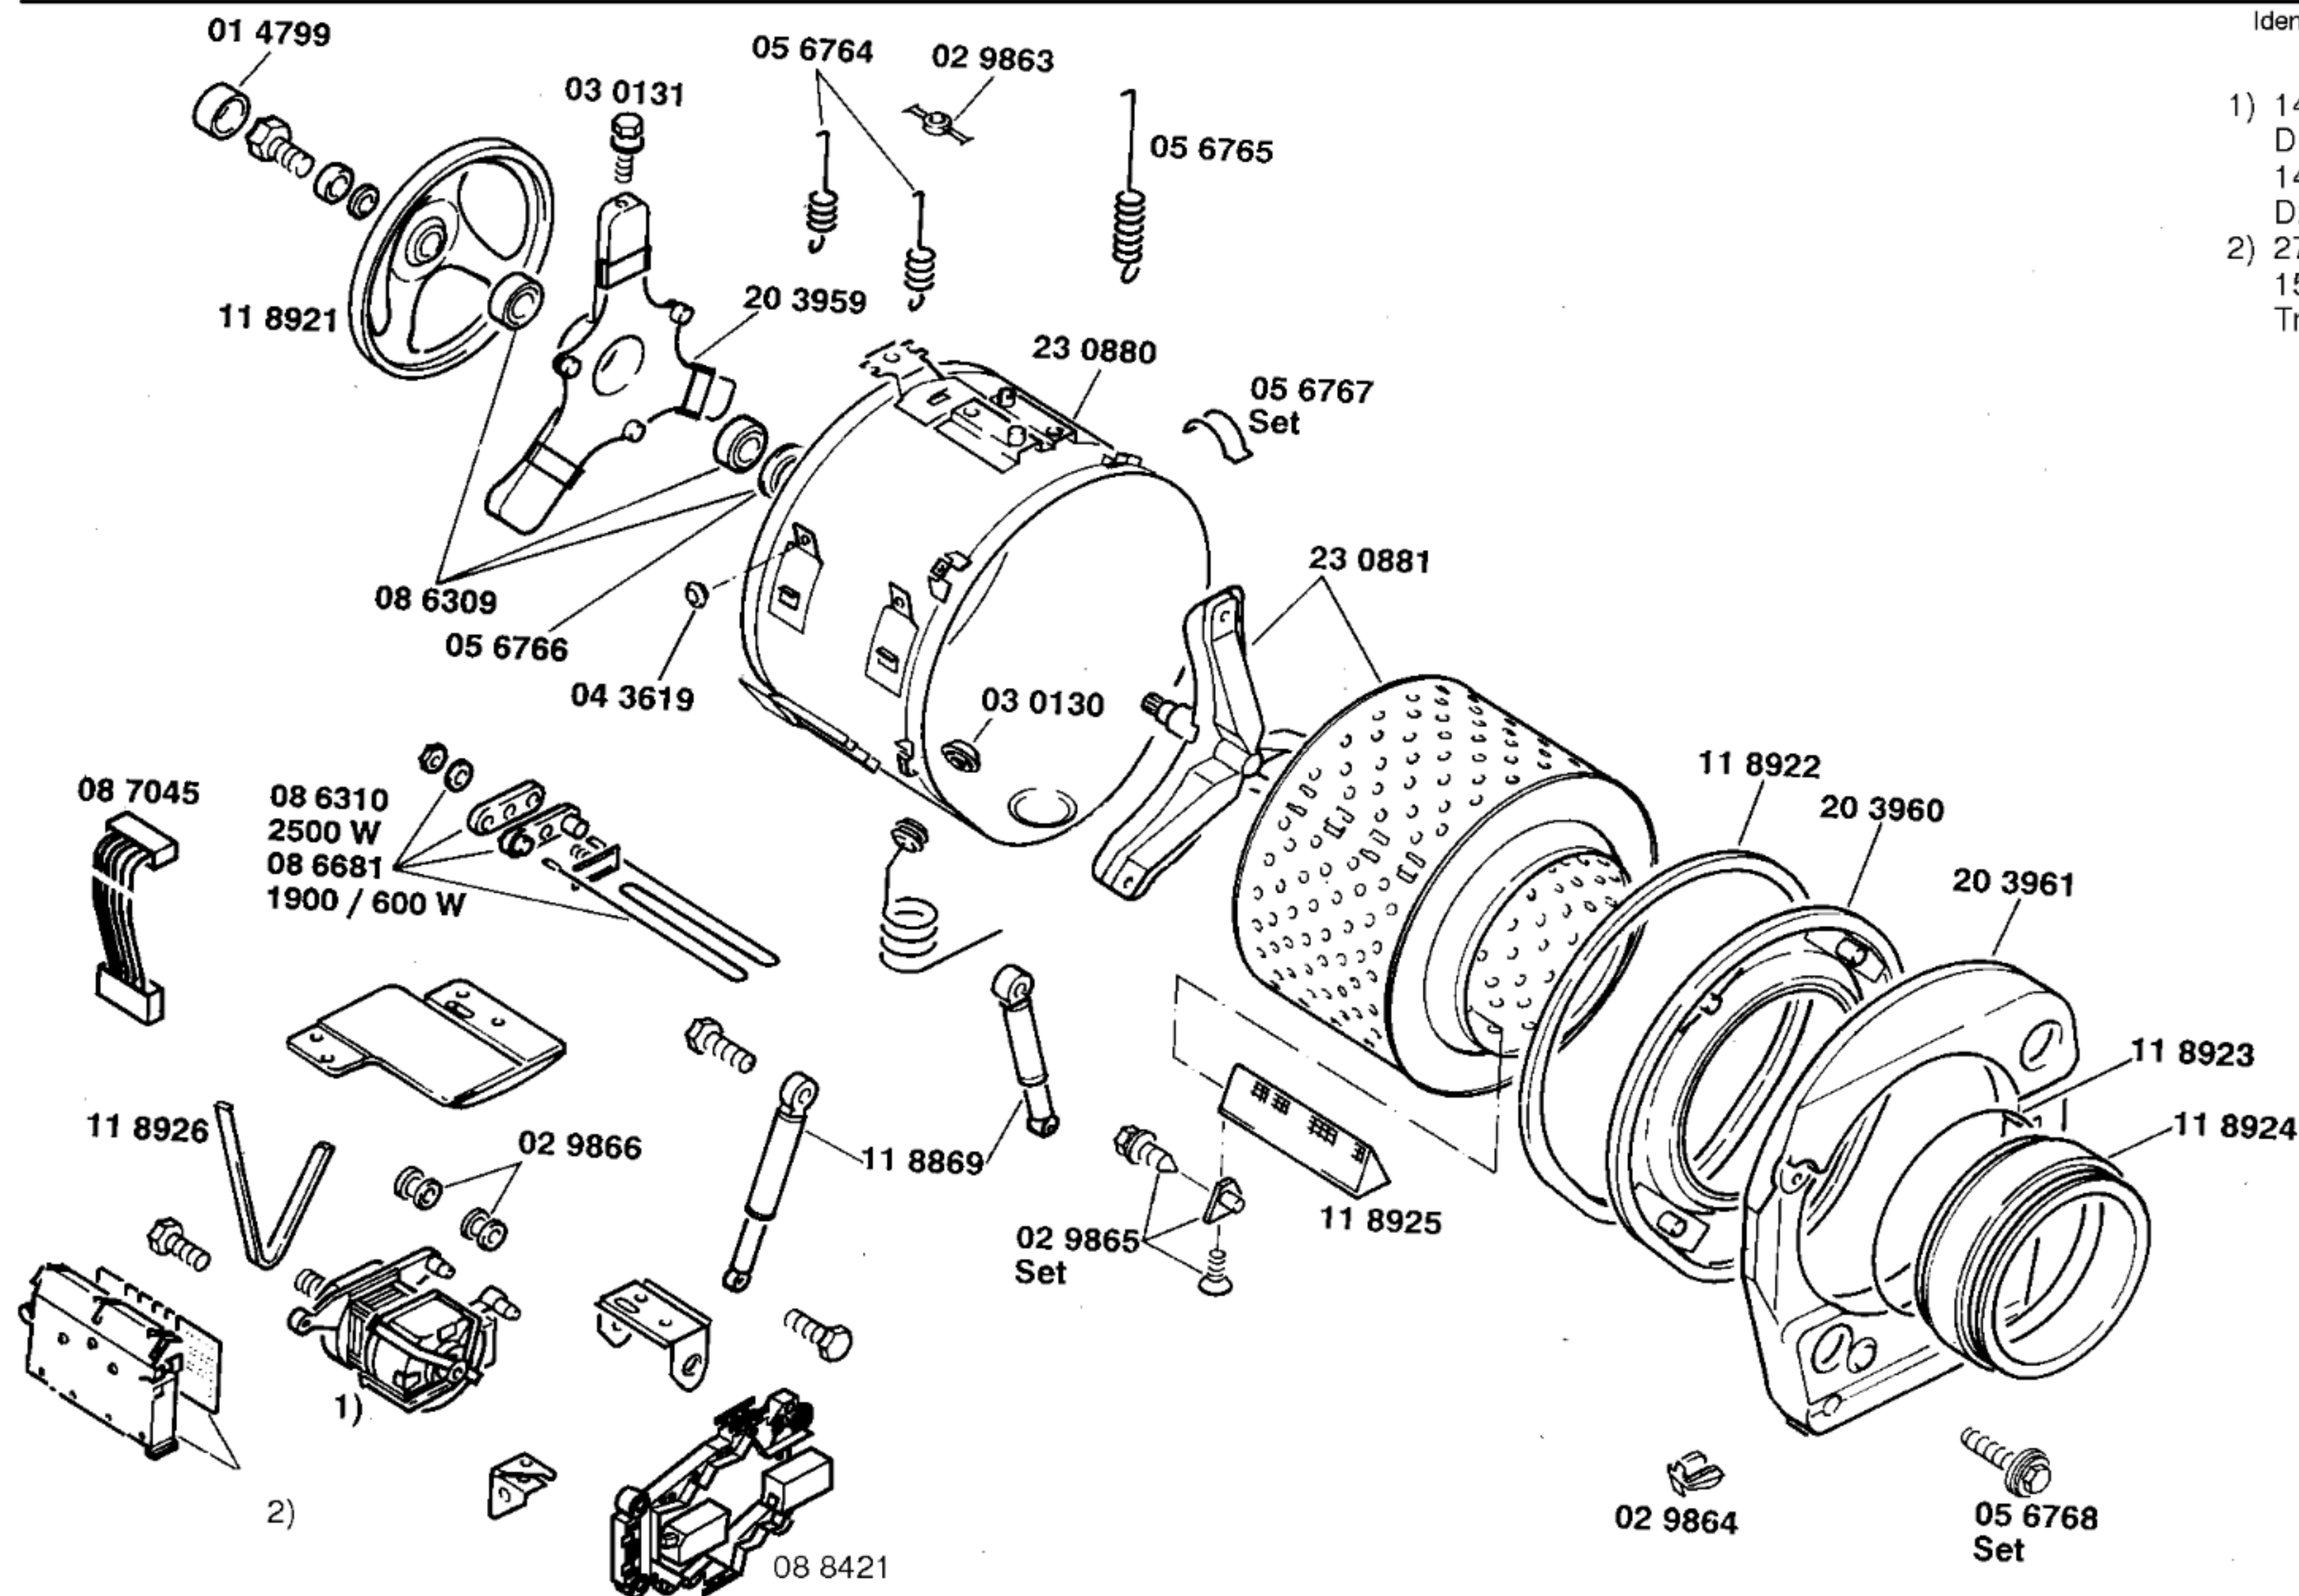

**BOSCH**

WFK6000-WFK6000/02-D1

WFK6000-WFK6000FG/02-FG1

WFK6000-WFK6000SI/02-SI1

WFK6000-WFK6000/03-D2

WFK6000-WFK6000FG/03-FG2

WFK6000-WFK6000SI/03-SI2

WASCHGERÄTE
WaschvollautomatenIdent - Nummern - Konstante
3740