


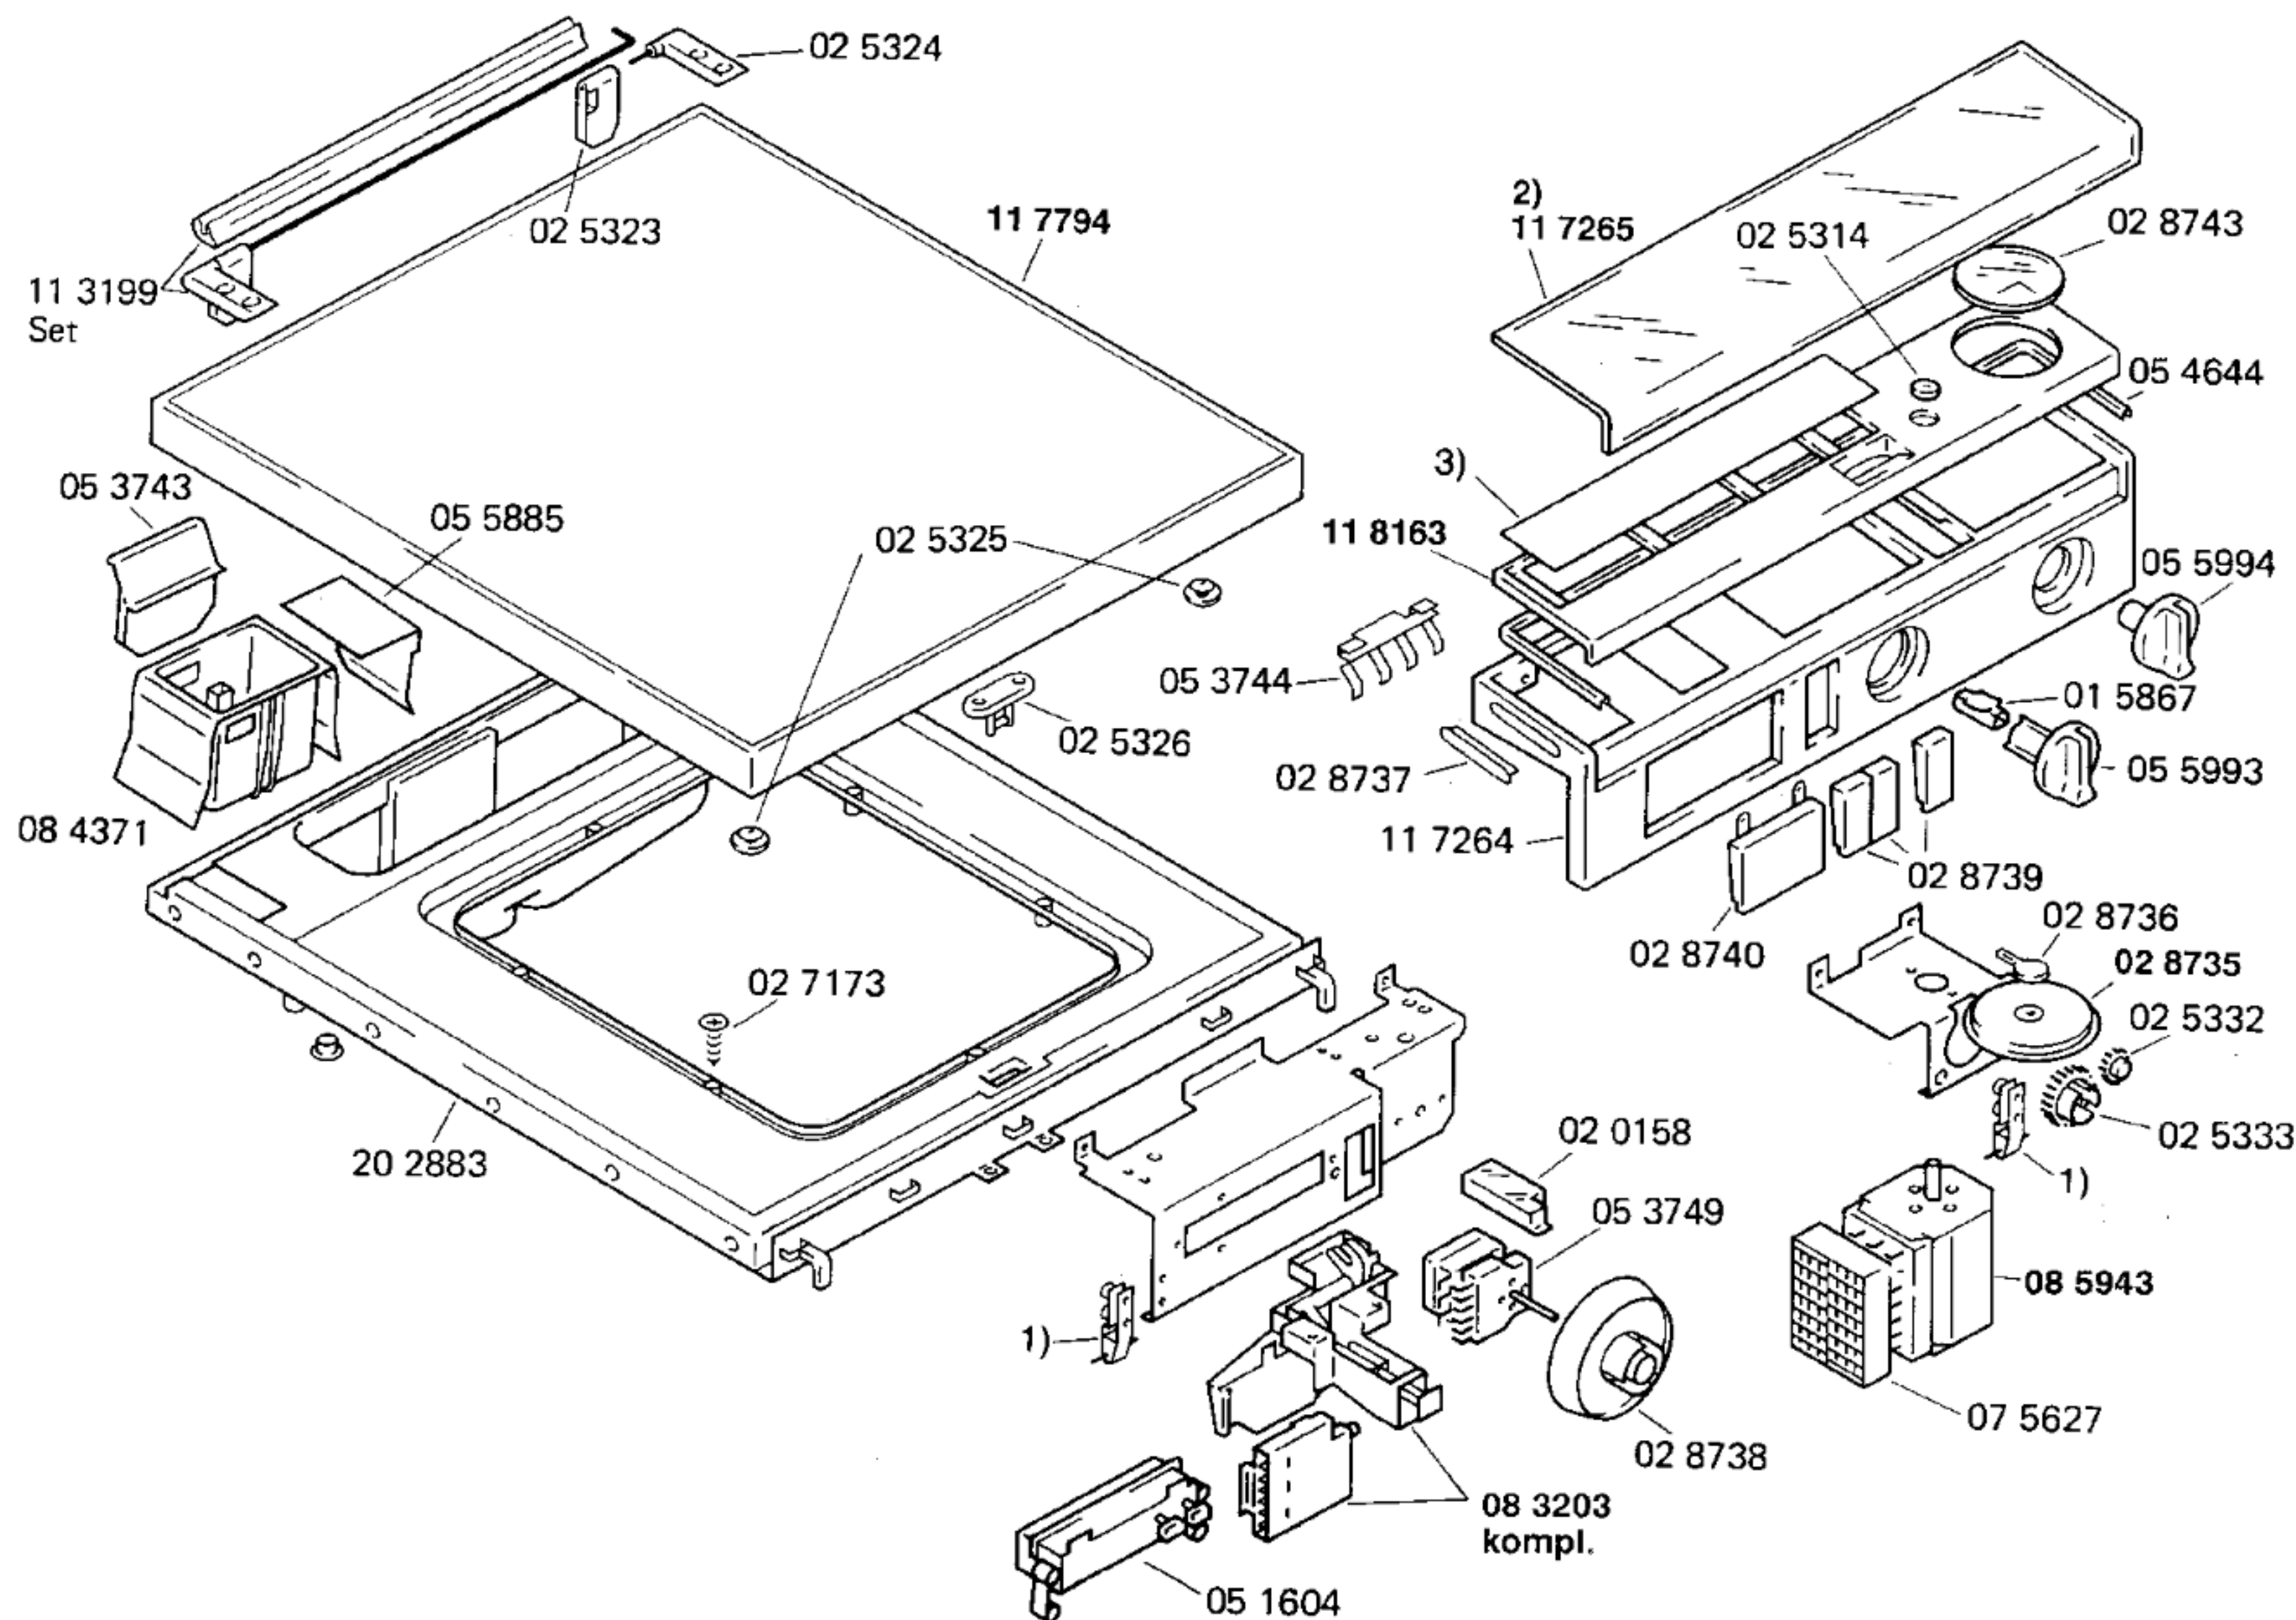

Aufstellanweisungen:

51 3182
(D,GB,F,I,NL,E)
51 1674
(D,I,S,DK,N,SF)

Gebrauchsanweisungen:

51 3216
(D,GB,F,I,NL,E)
51 3217
(D,I,S,DK,N,SF)

Programmtabellen:

51 3178
(D,GB,F,I,NL,E)
51 3177
(D,I,S,DK,N,SF)


- 1) 02 5334
- 2) einschl. 05 4644
- 3) 08 5665
(D,Symbole)
08 5666
(F,NL)
08 5667
(I,GB)
08 5668
(S,N)
08 5669
(SF,DK)
08 5671
(TR,YU)
08 5670
(GR,E)

**BOSCH**

V3410-WMV3410/00-D1
 V3410-WMV341034/00-Exp.1
 V3410-WMV341026/01-I1
 V3413-WMV341325/00-F1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

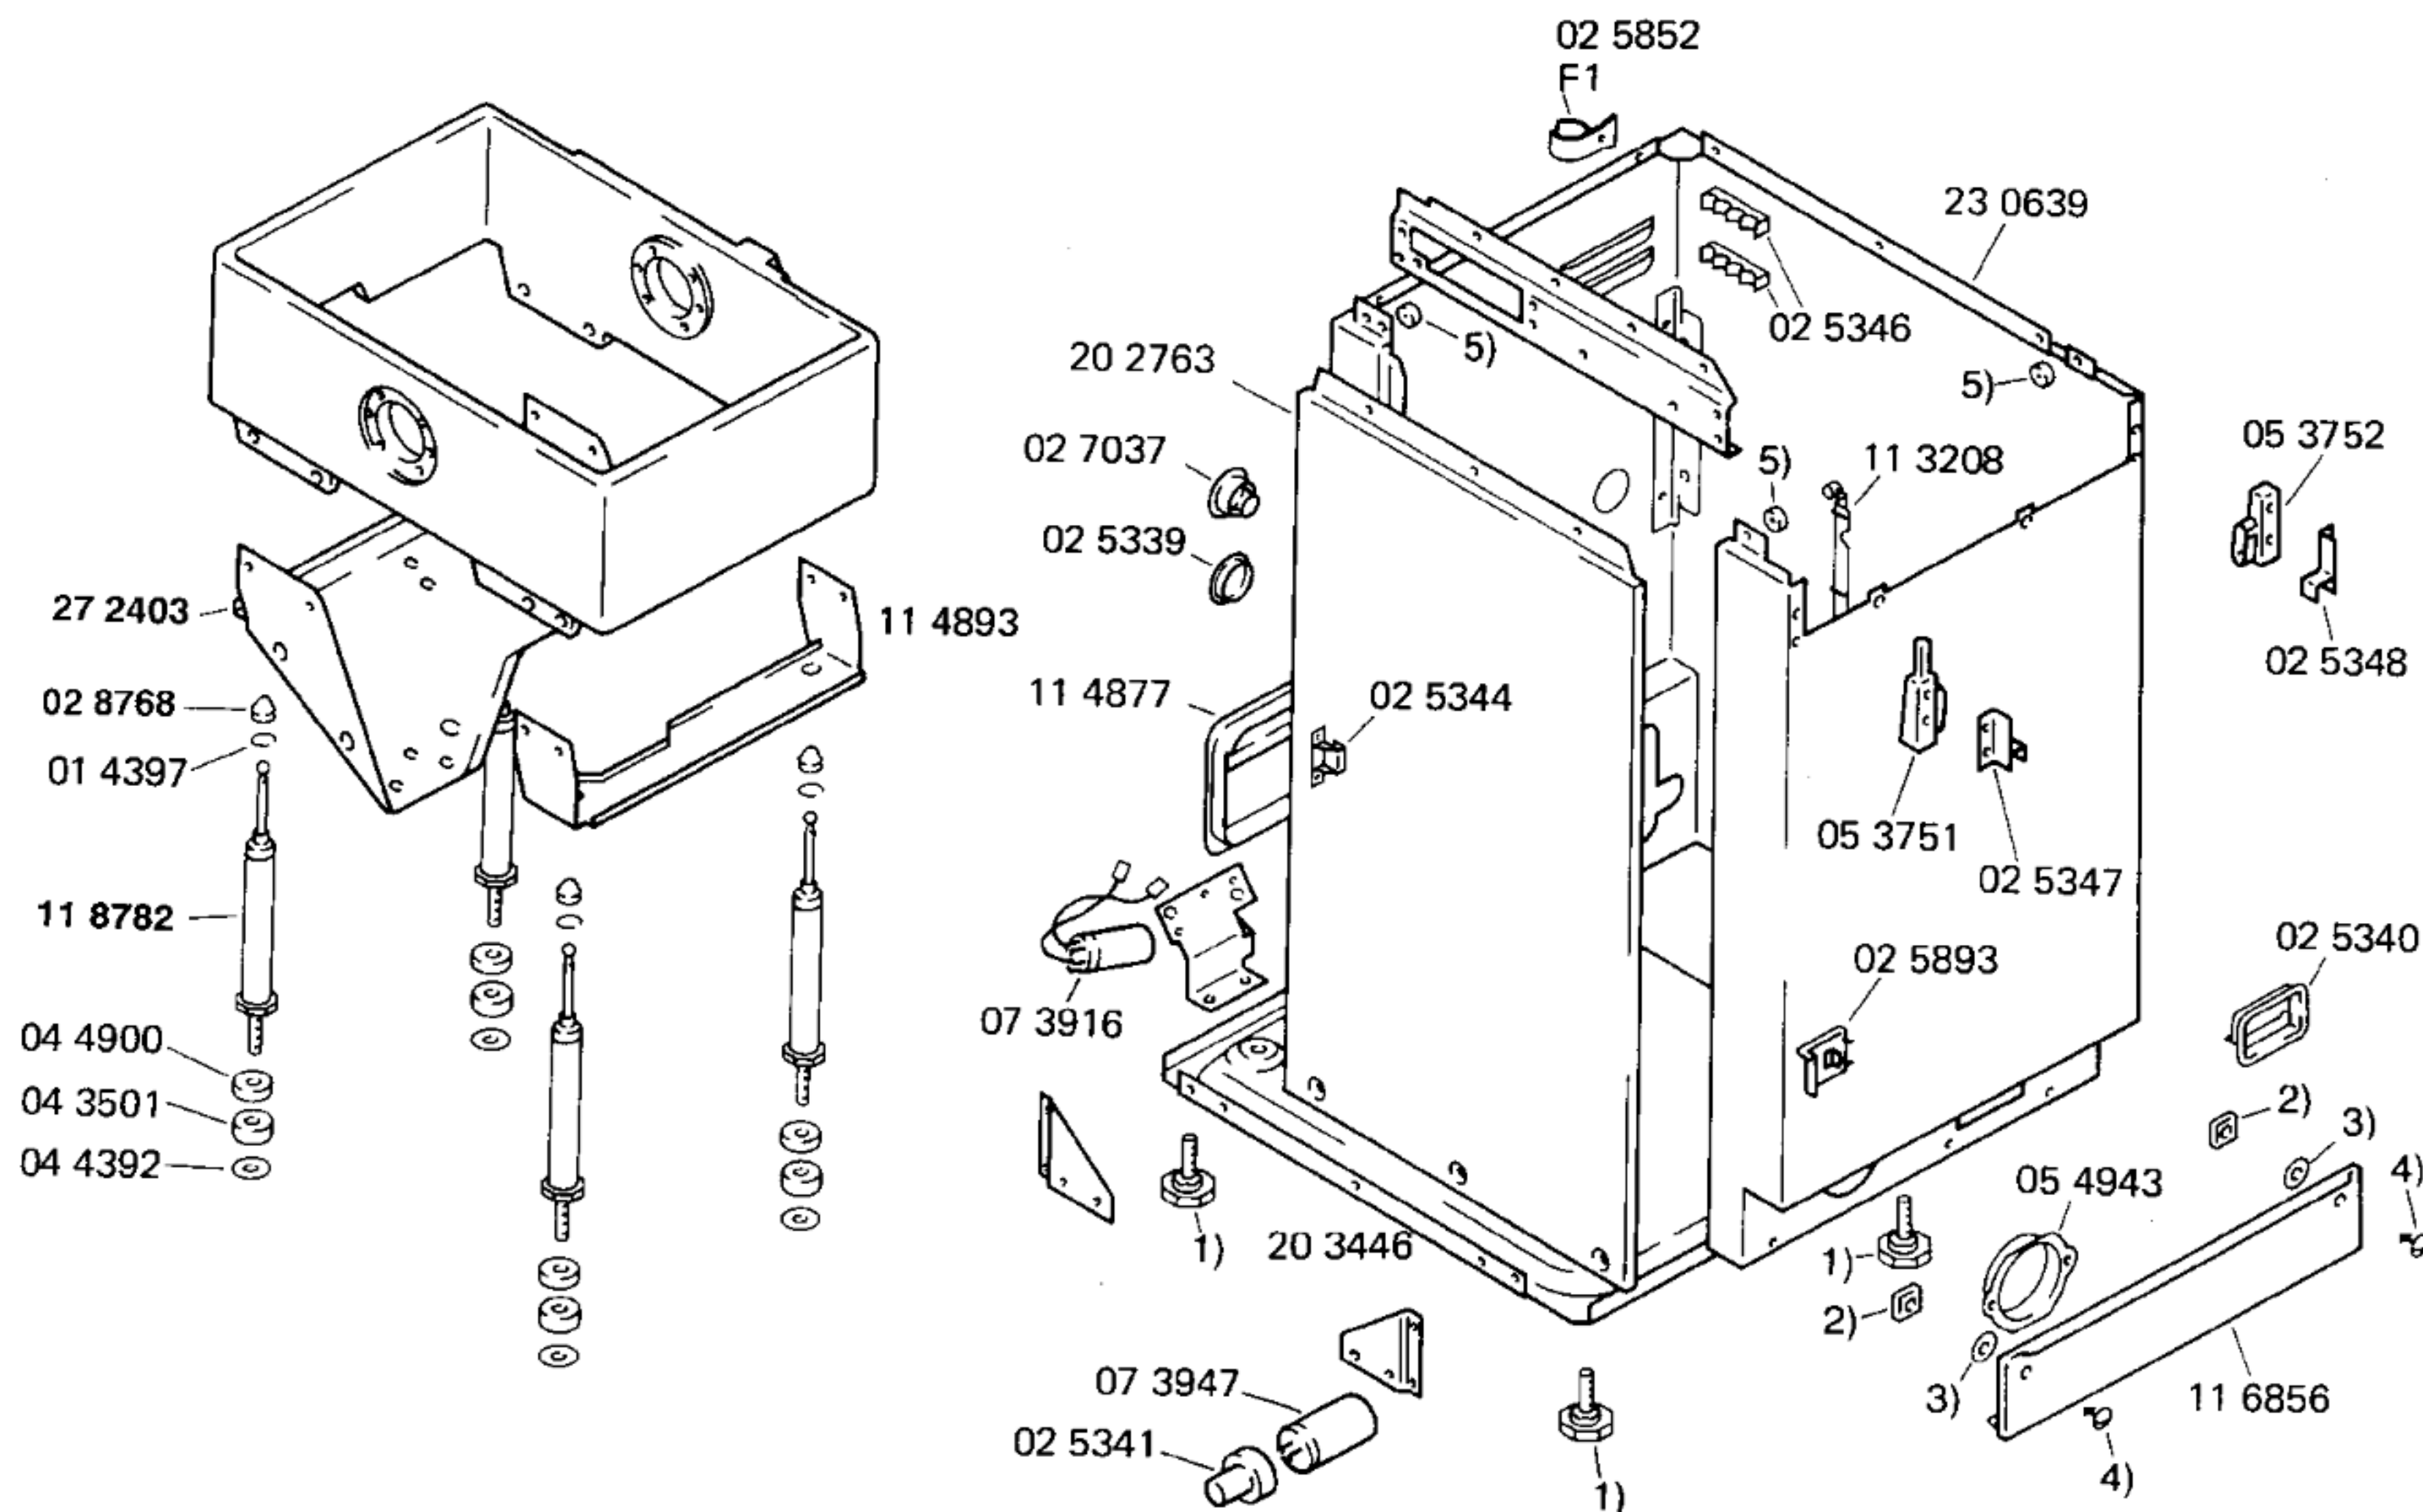

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 8437
- 5) 02 5345




BOSCH

V3410-WMV3410/00-D1
V3410-WMV341034/00-Exp.1
V3410-WMV341026/01-I1
V3413-WMV341325/00-F1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

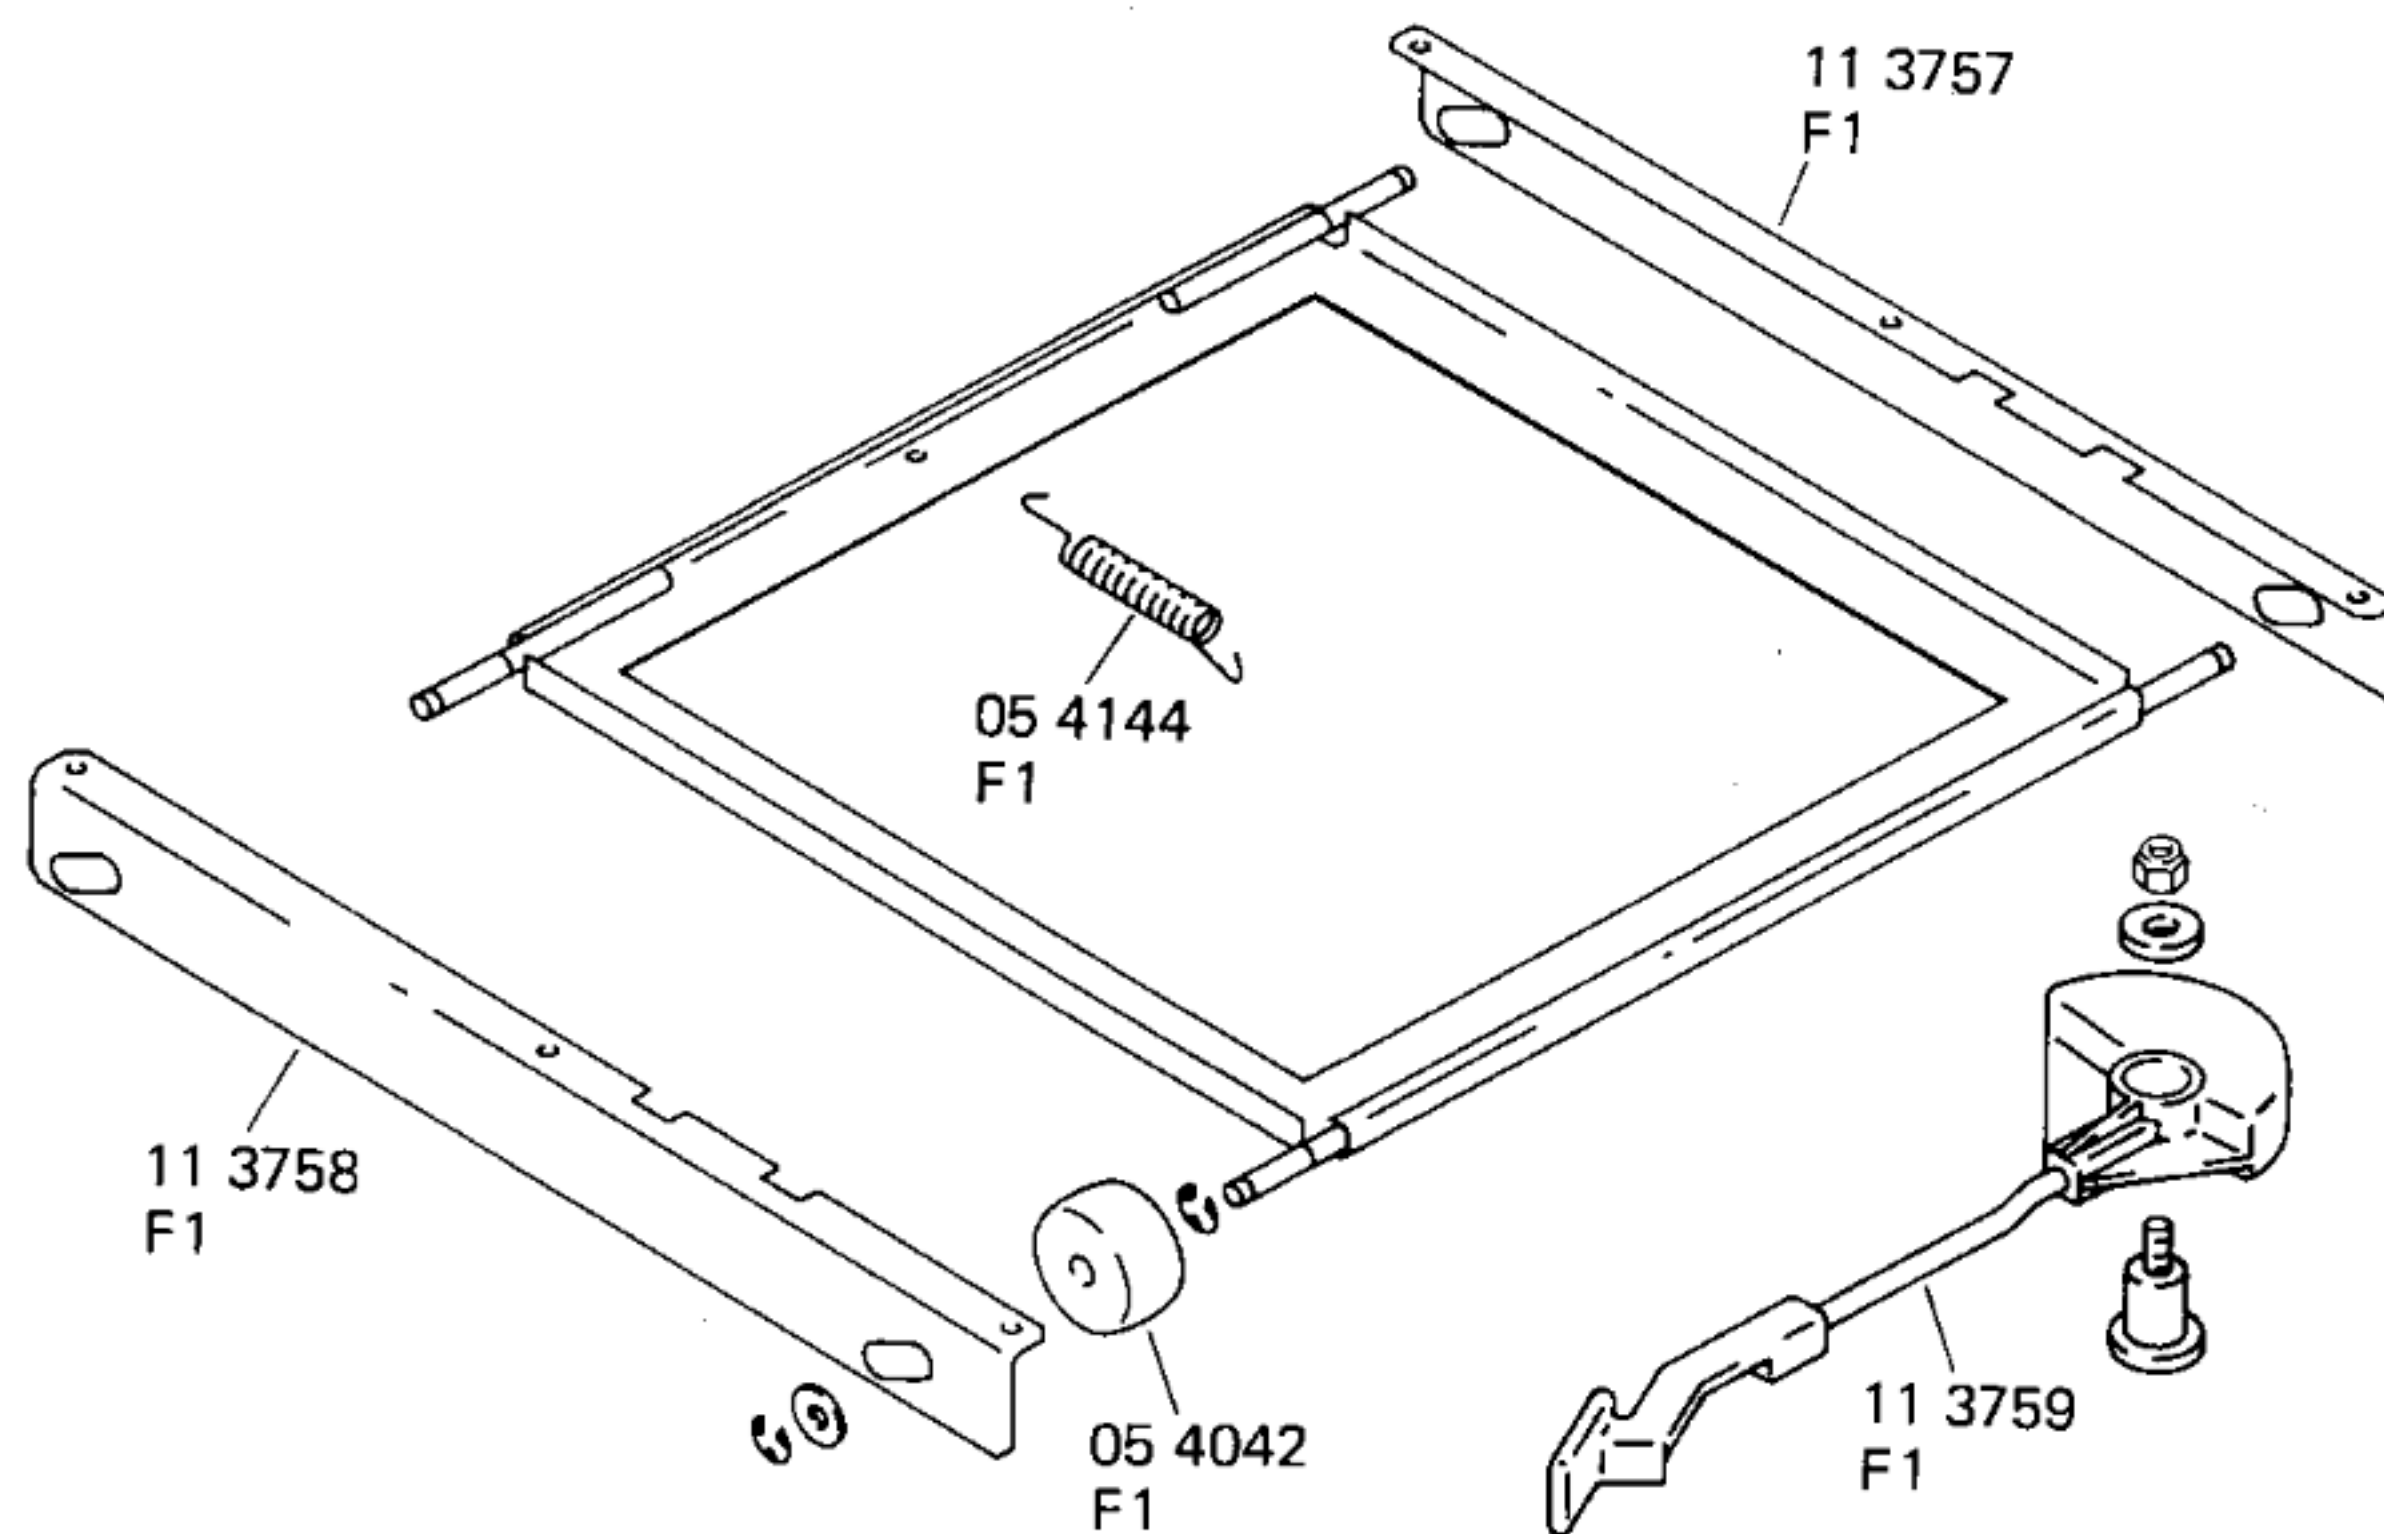


**BOSCH**

V3410-WMV3410/00-D1
 V3410-WMV341034/00-Exp.1
 V3410-WMV341026/01-I1
 V3413-WMV341325/00-F1

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

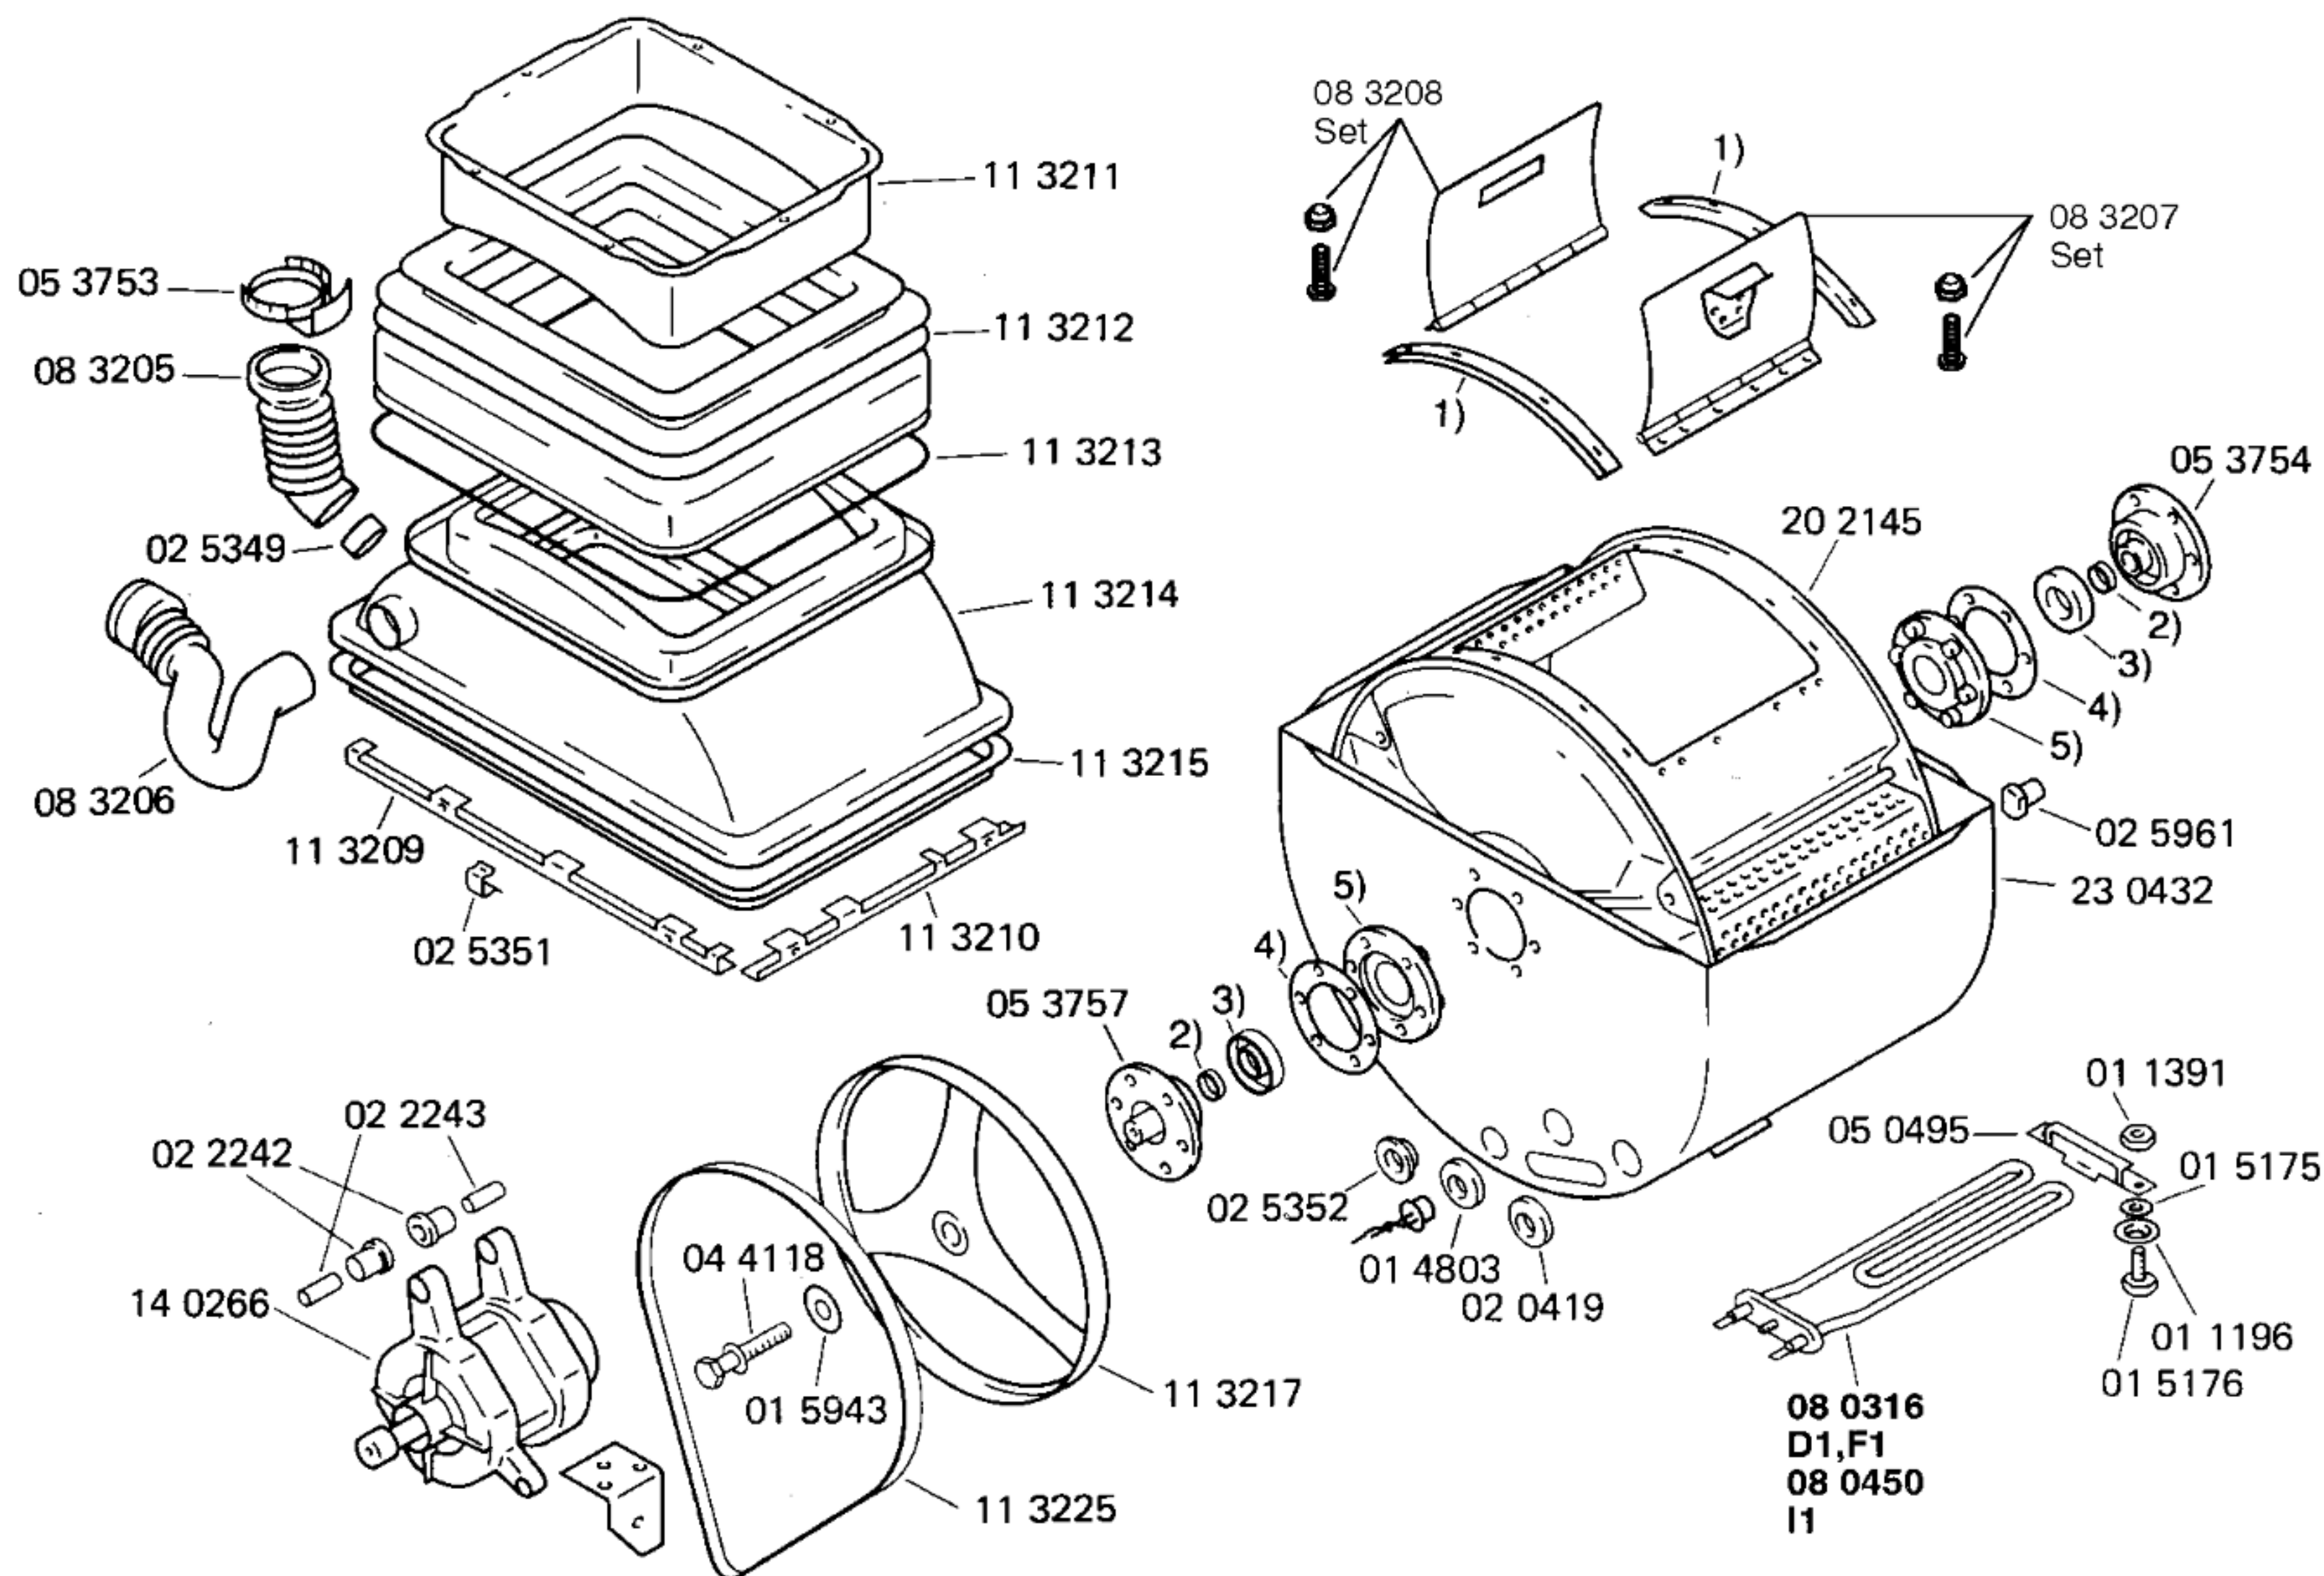

1) 11 3216

2) 04 2309

3) 02 5350

4) 05 3755

5) 05 3756

**BOSCH**

V3410-WMV3410/00-D1
V3410-WMV341034/00-Exp.1
V3410-WMV341026/01-I1
V3413-WMV341325/00-F1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

