


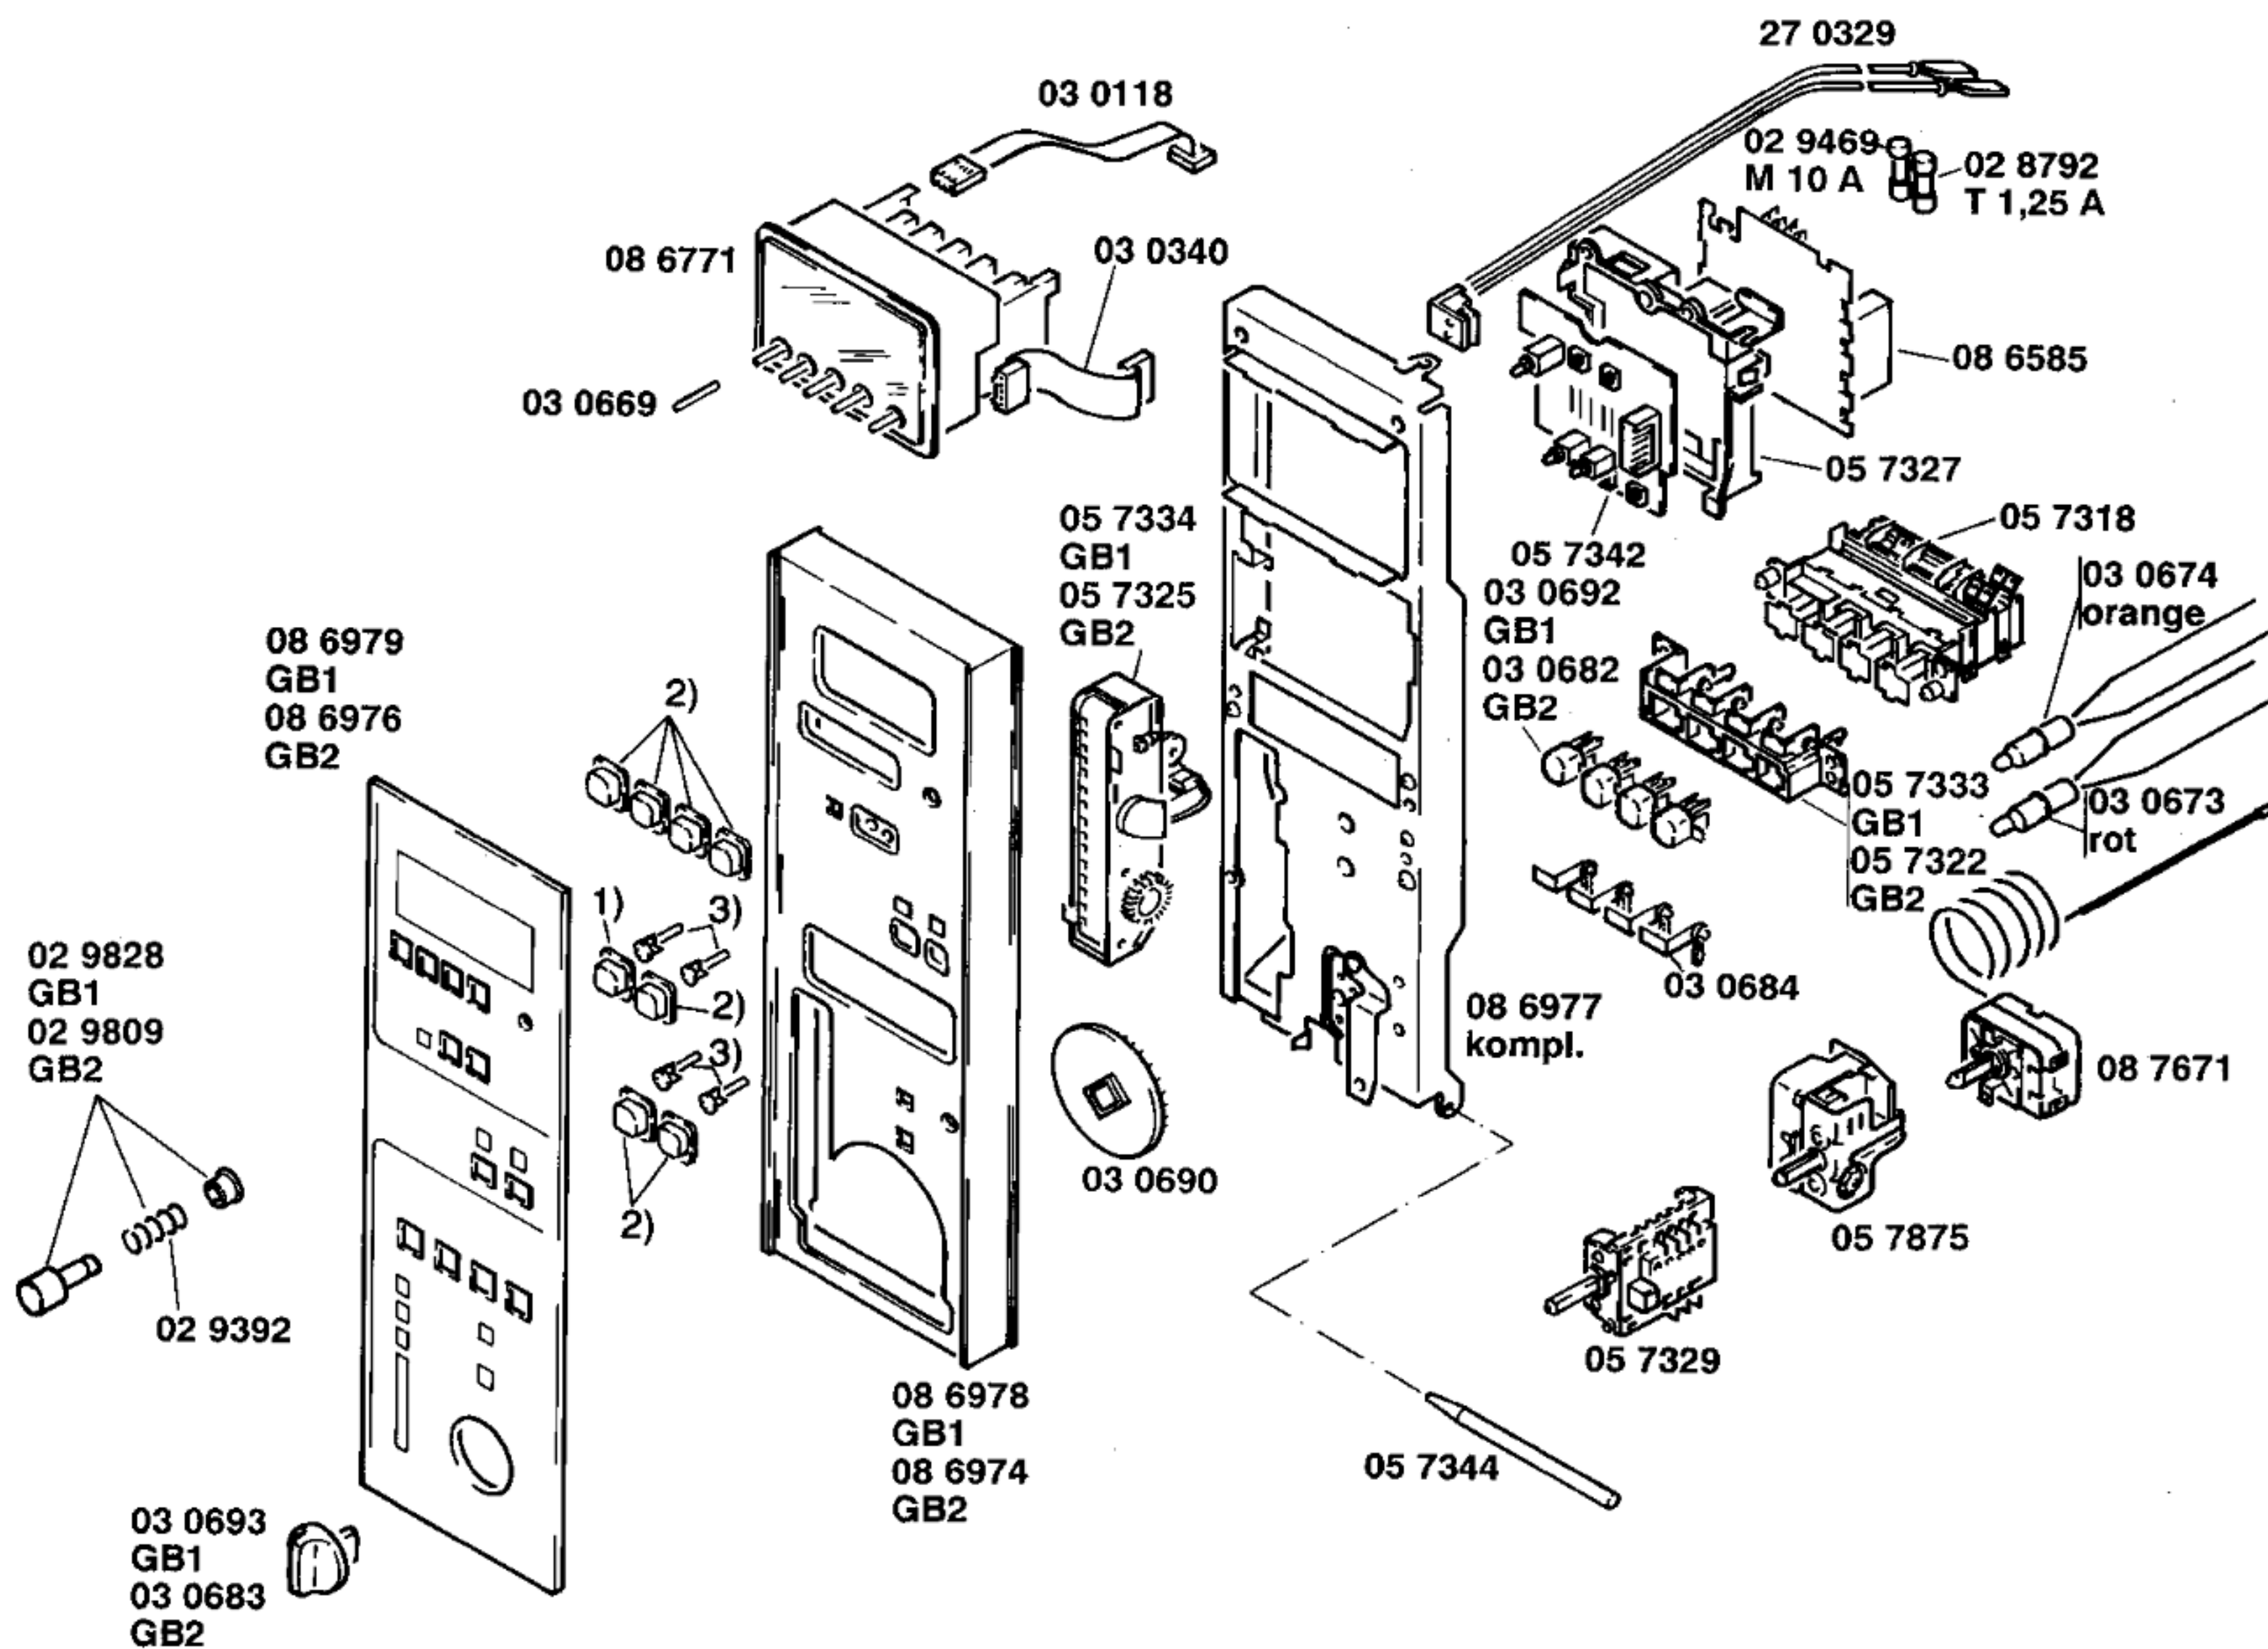


Gebrauchsanweisung
51 3926
(D,F,GB,I,NL)
Kochbuch
51 4300
(GB)

Zubehör:


Einbaurahmen
HZ 67020
GB2
HZ 67040
GB1
kratzfeste Abdeckung
HZ 67720
GB2
HZ 67740
GB1
Alu-Backblech
HZ 8055
Glaspfanne
HZ 8056
Glasbräter
HZ 9150

- 1) 03 0681
grün
- 2) 03 0680
GB2
03 0691
GB1
- 3) 03 0679

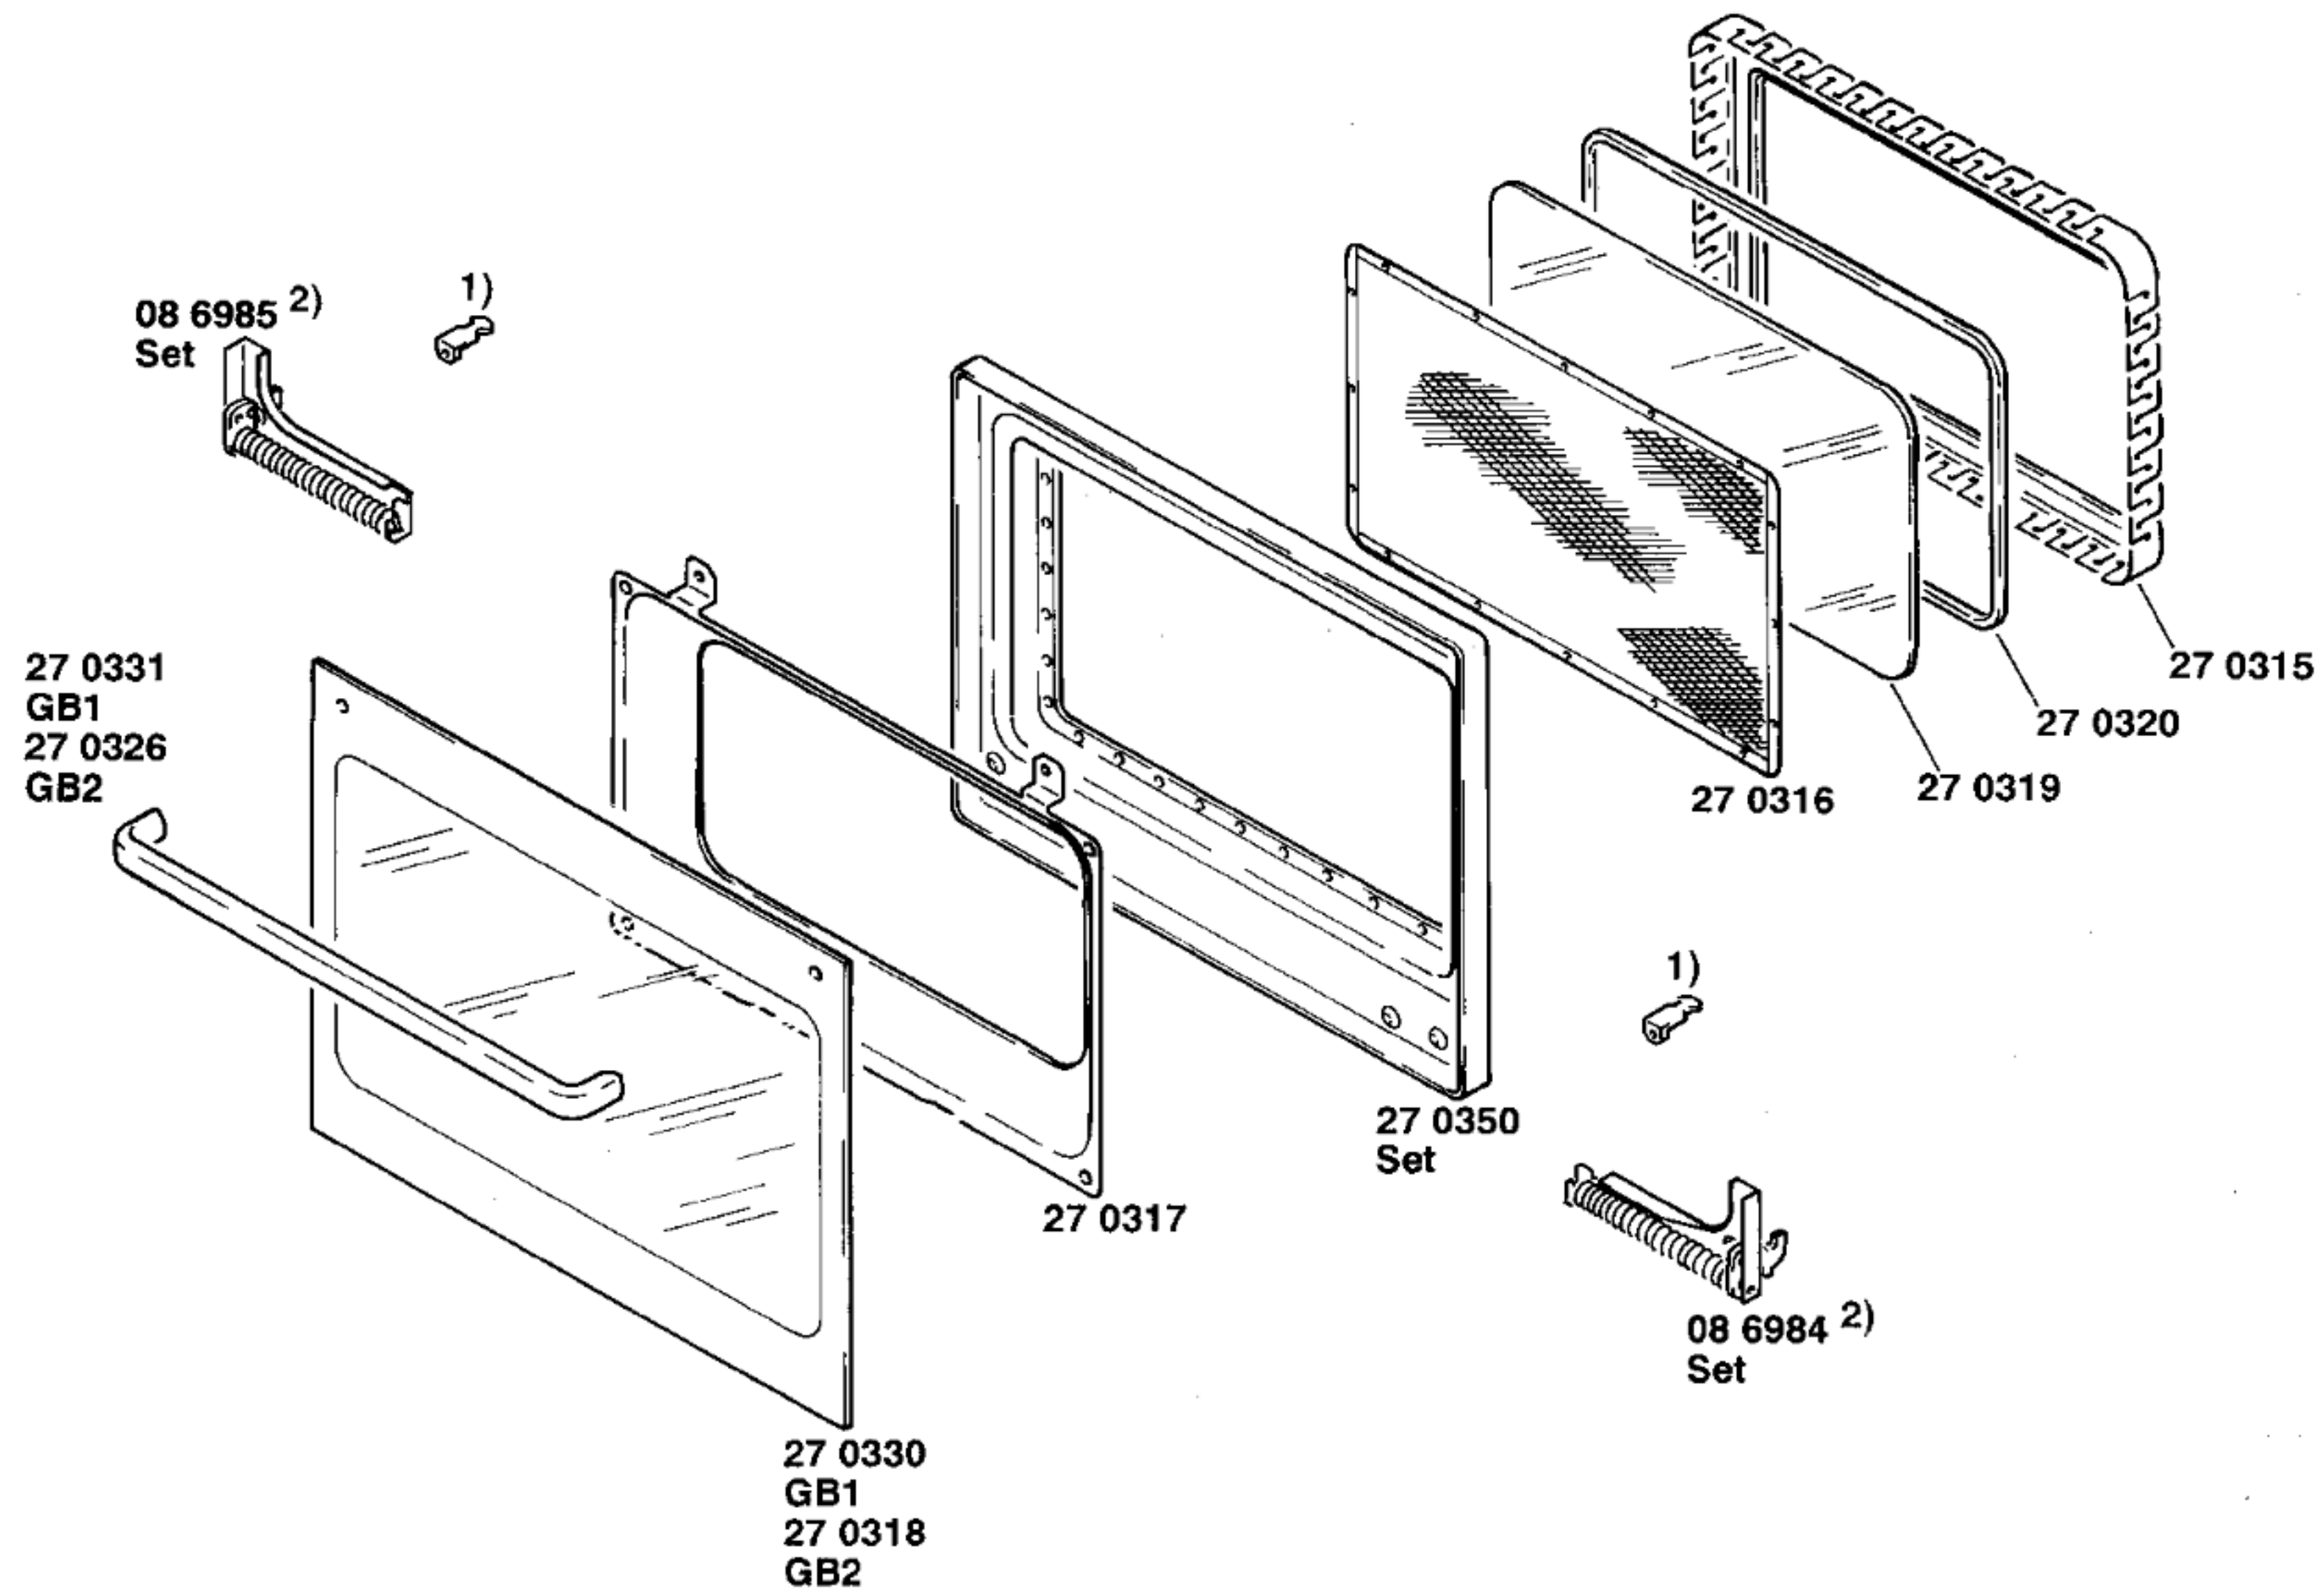

- 1) 03 0671
- 2) 03 0813
- Arretierstift

03 0698
GB1
03 0688
GB2

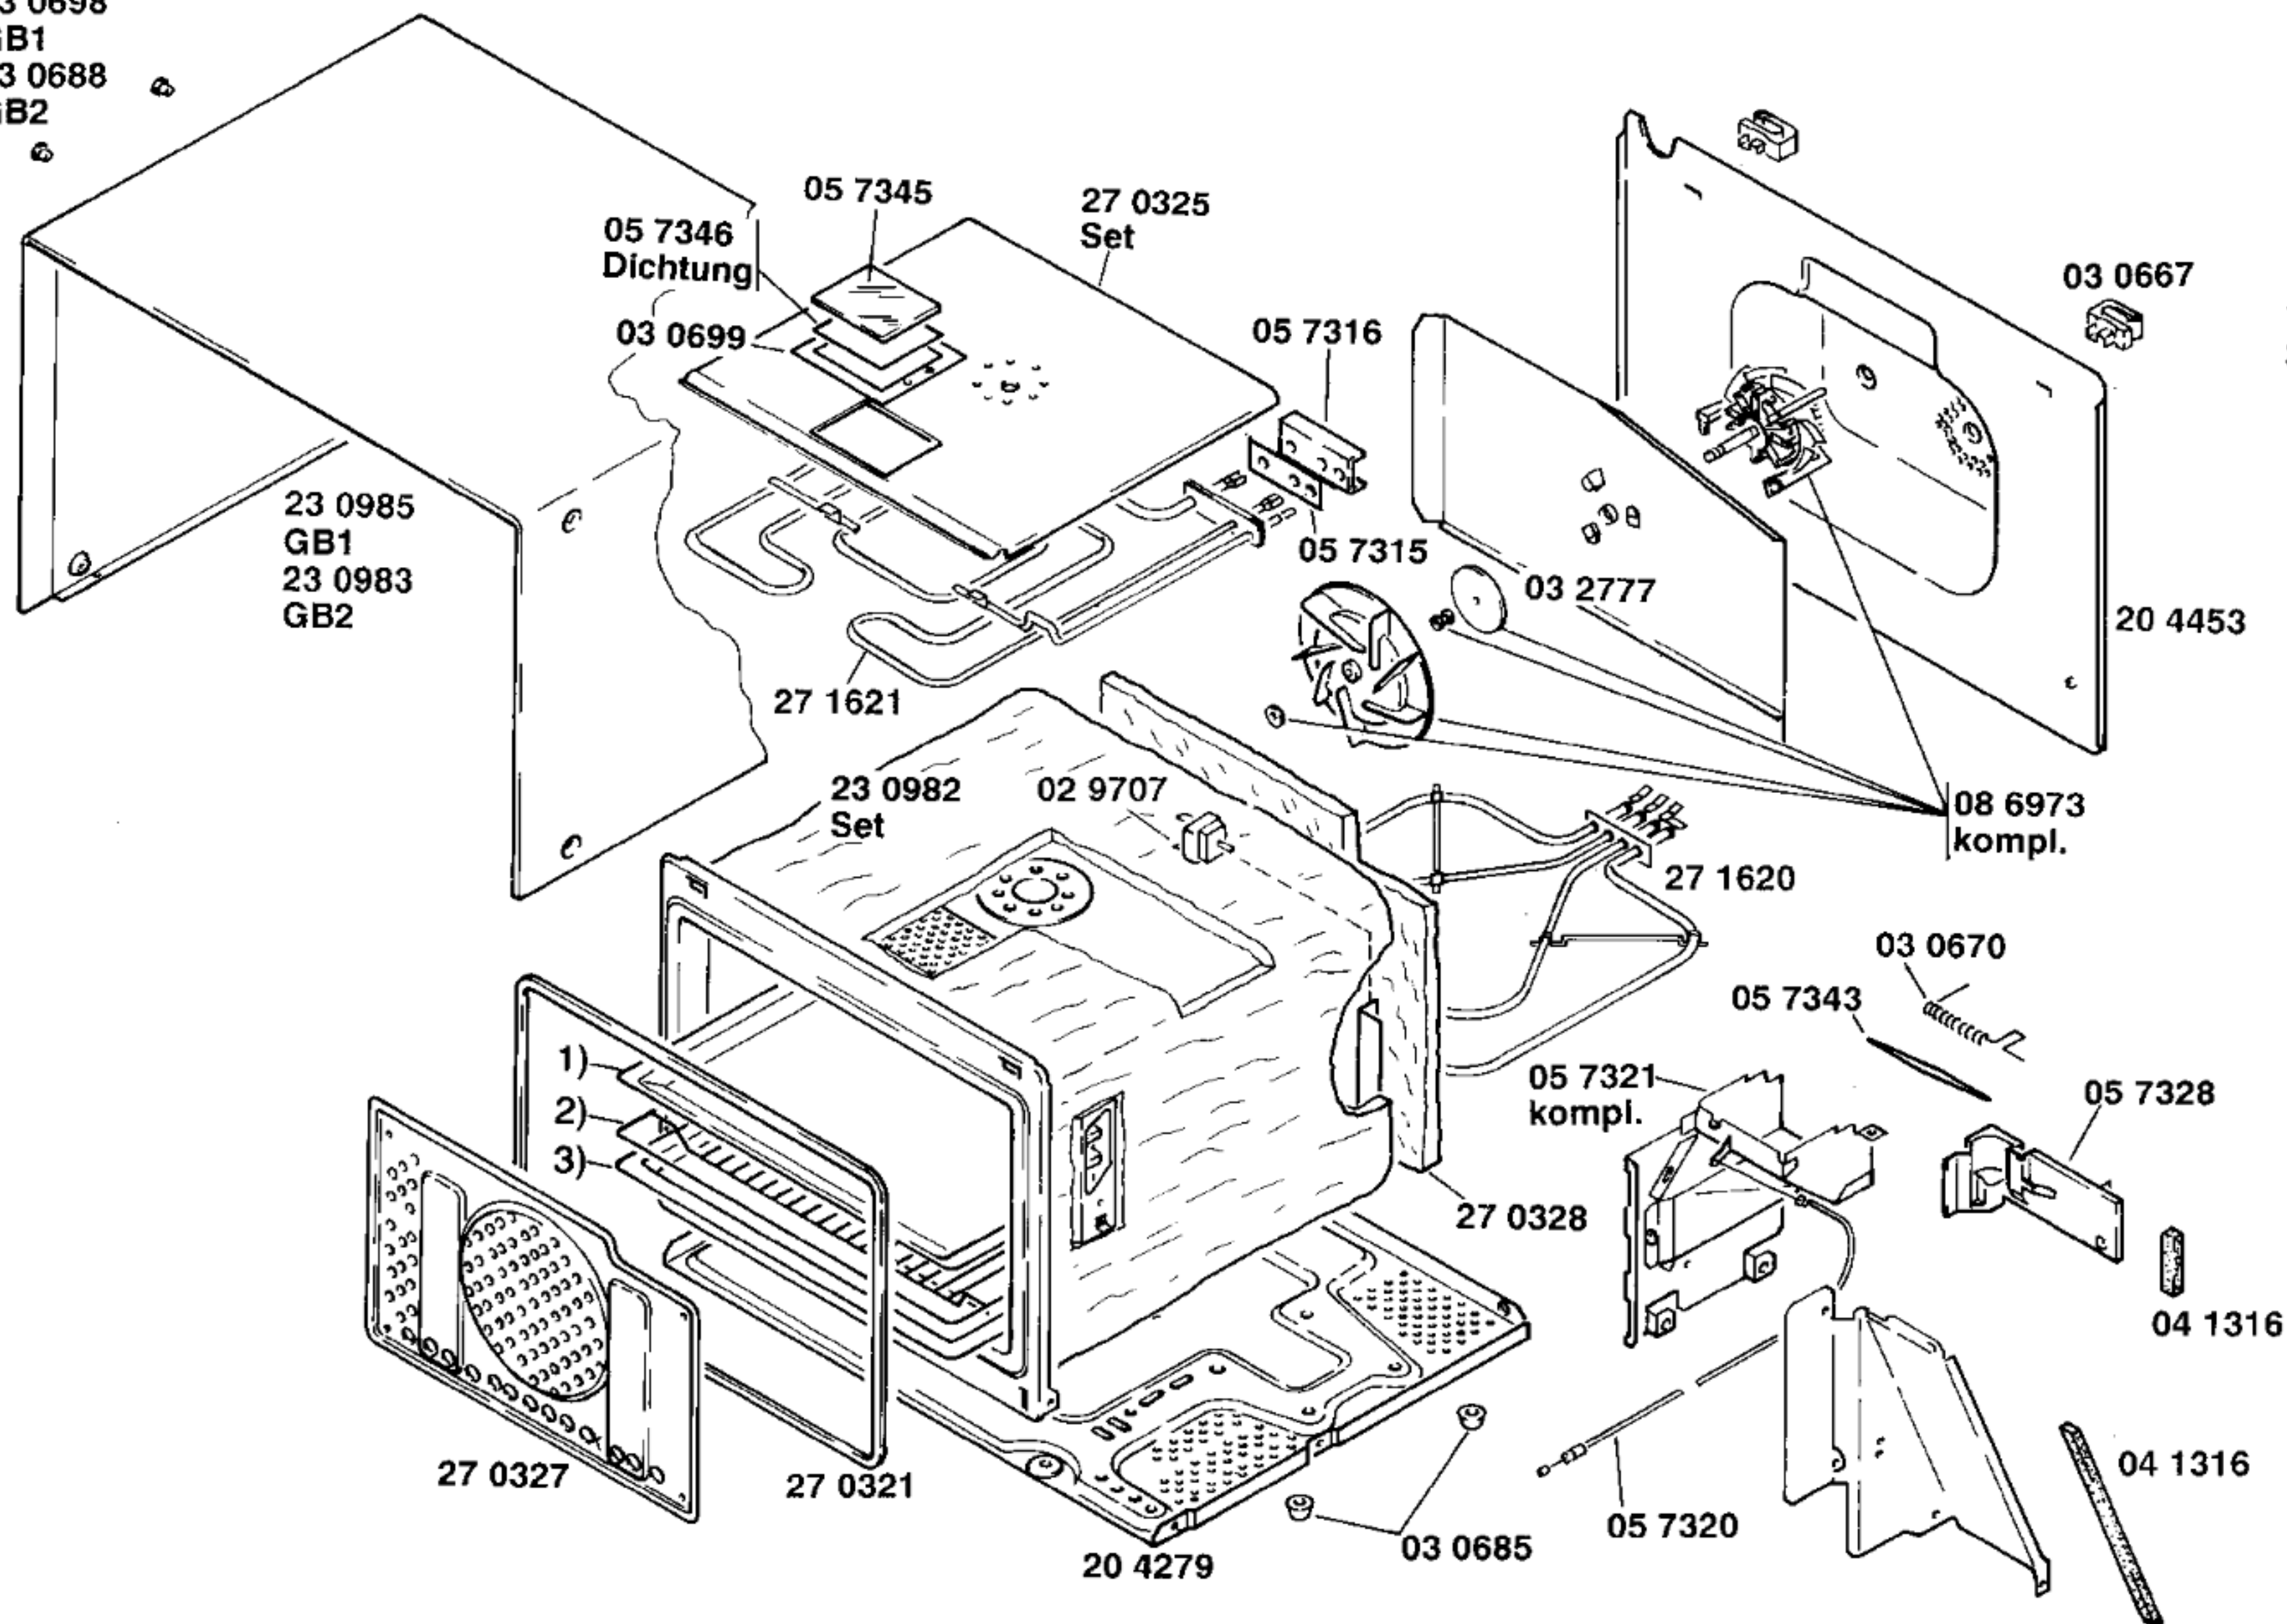

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 11 4537
Glasschale

