



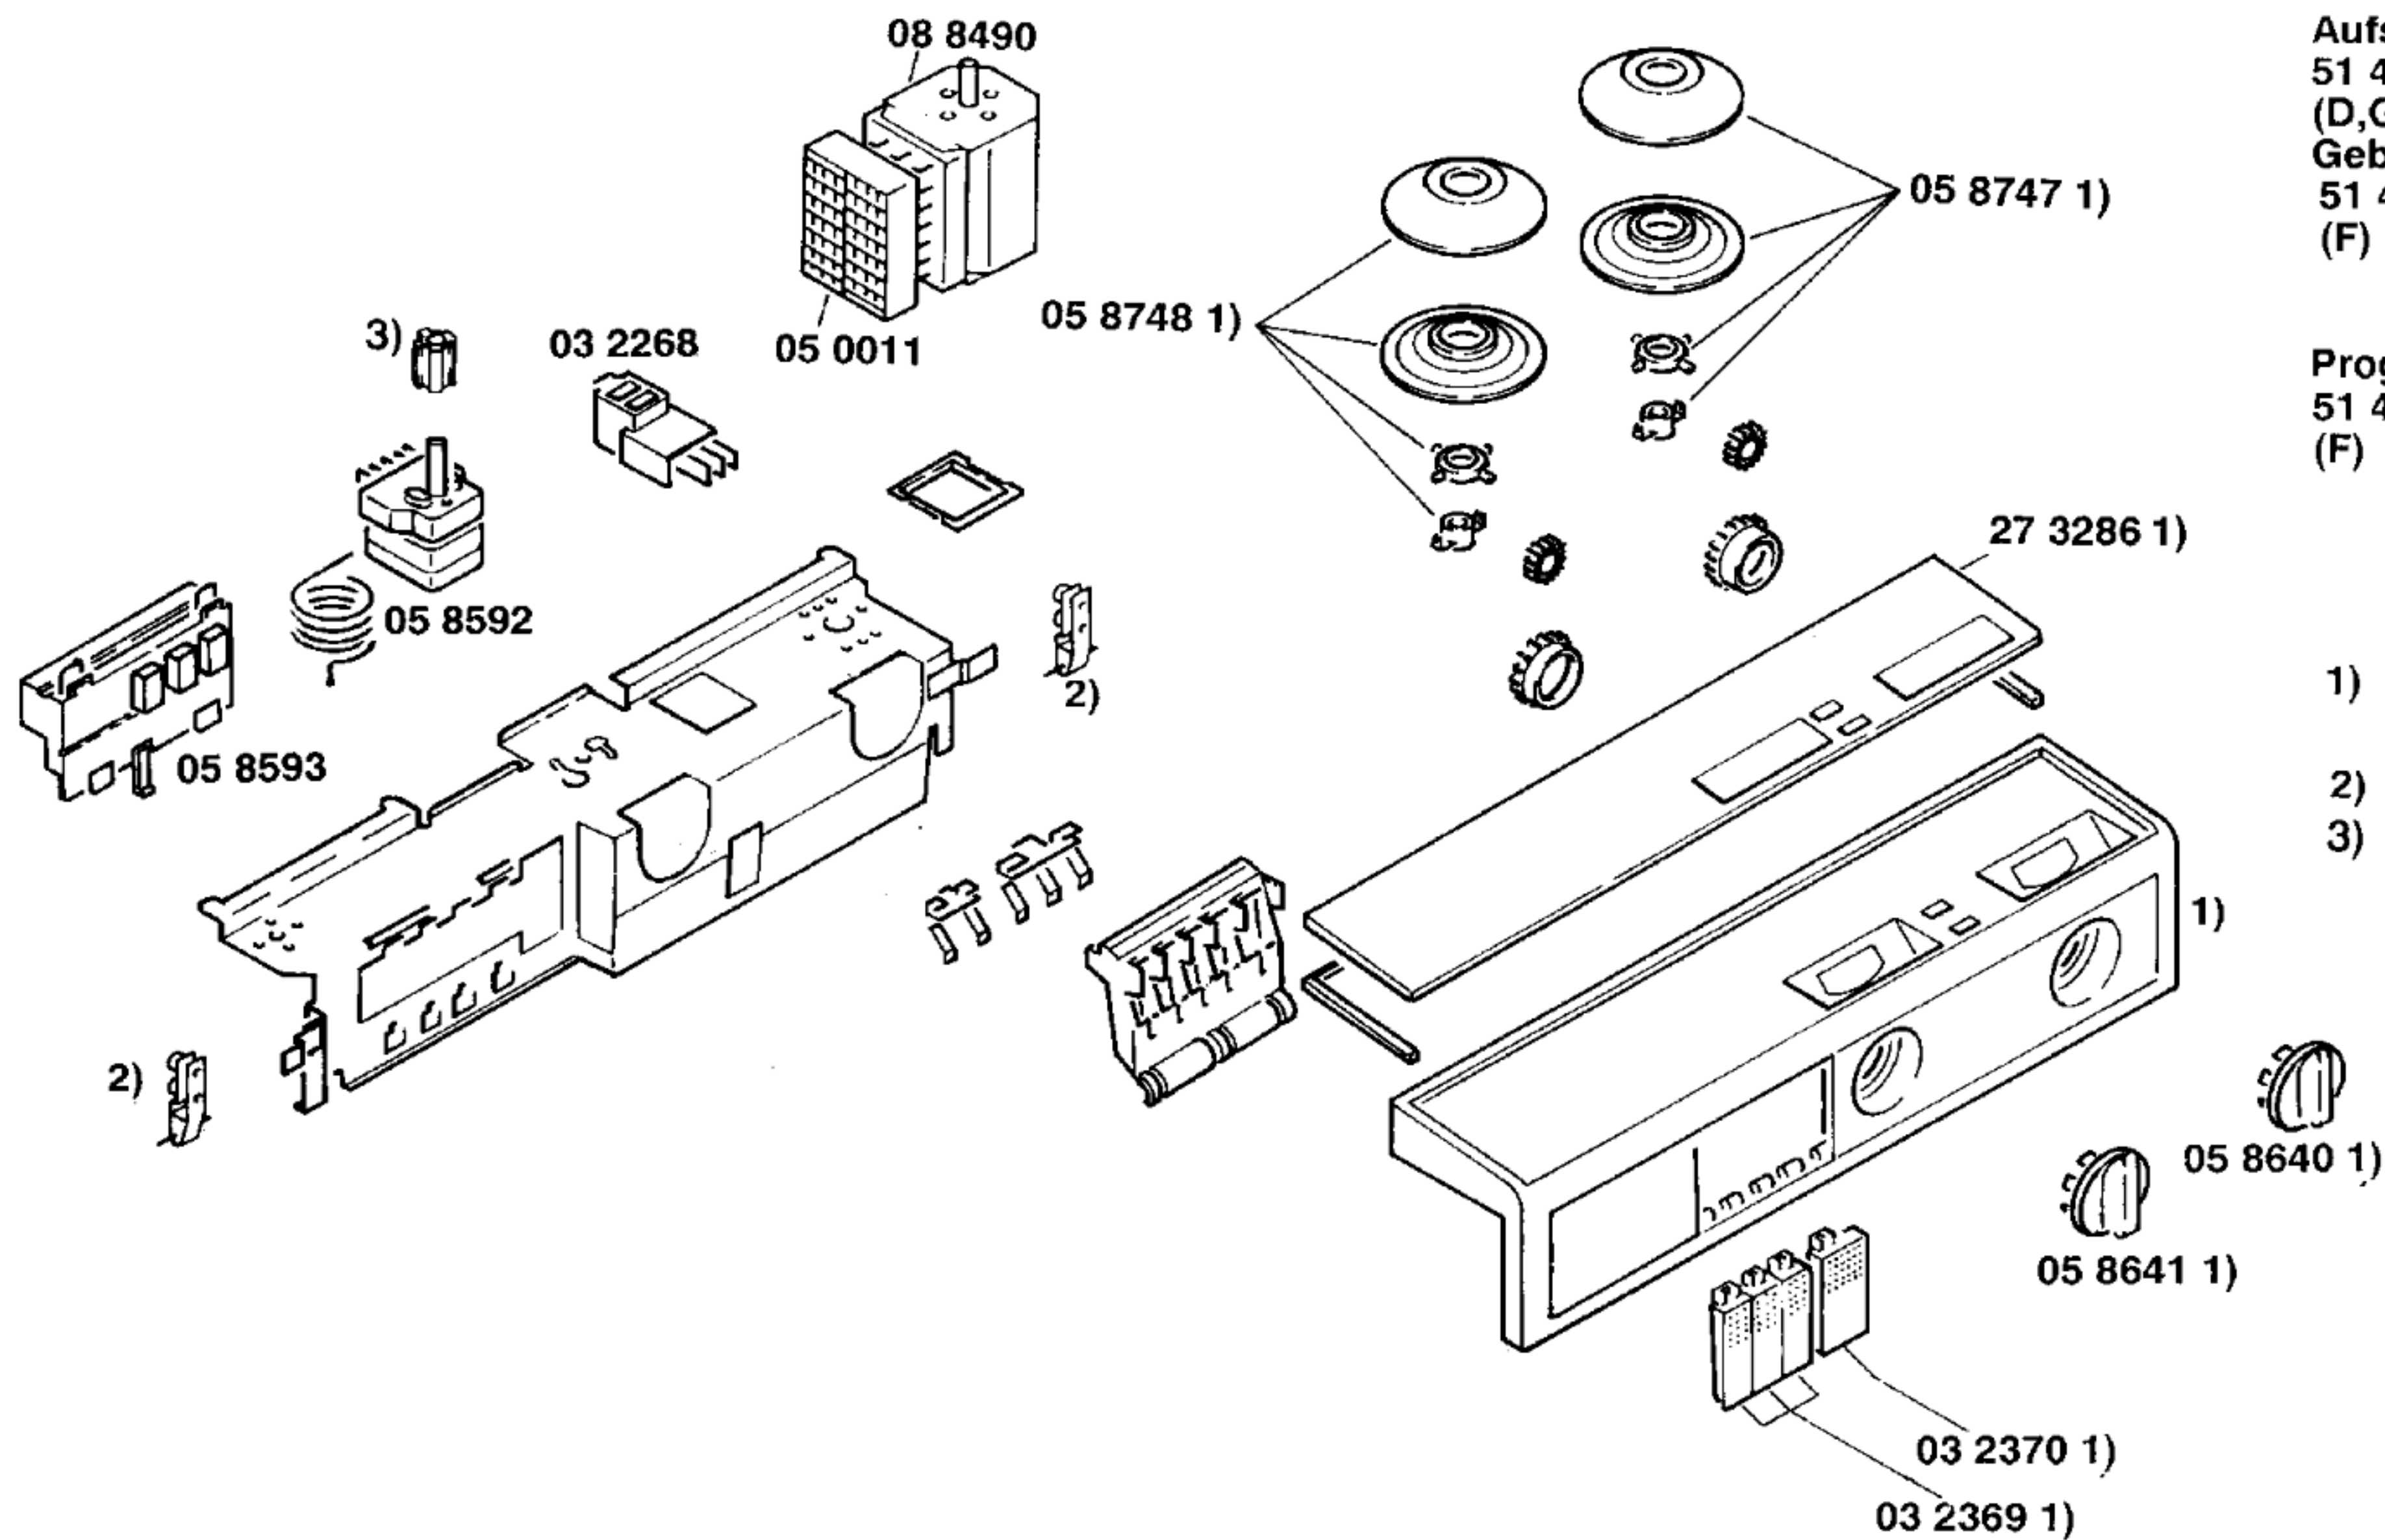



Aufstellanweisung
51 4750
(D,GB,F,I,NL,E)
Gebrauchsanweisung
51 4837
(F)


Programmtabelle
51 4838
(F)

- 1) 27 3285
Blende kompl.
- 2) 03 2288
- 3) 02 9845

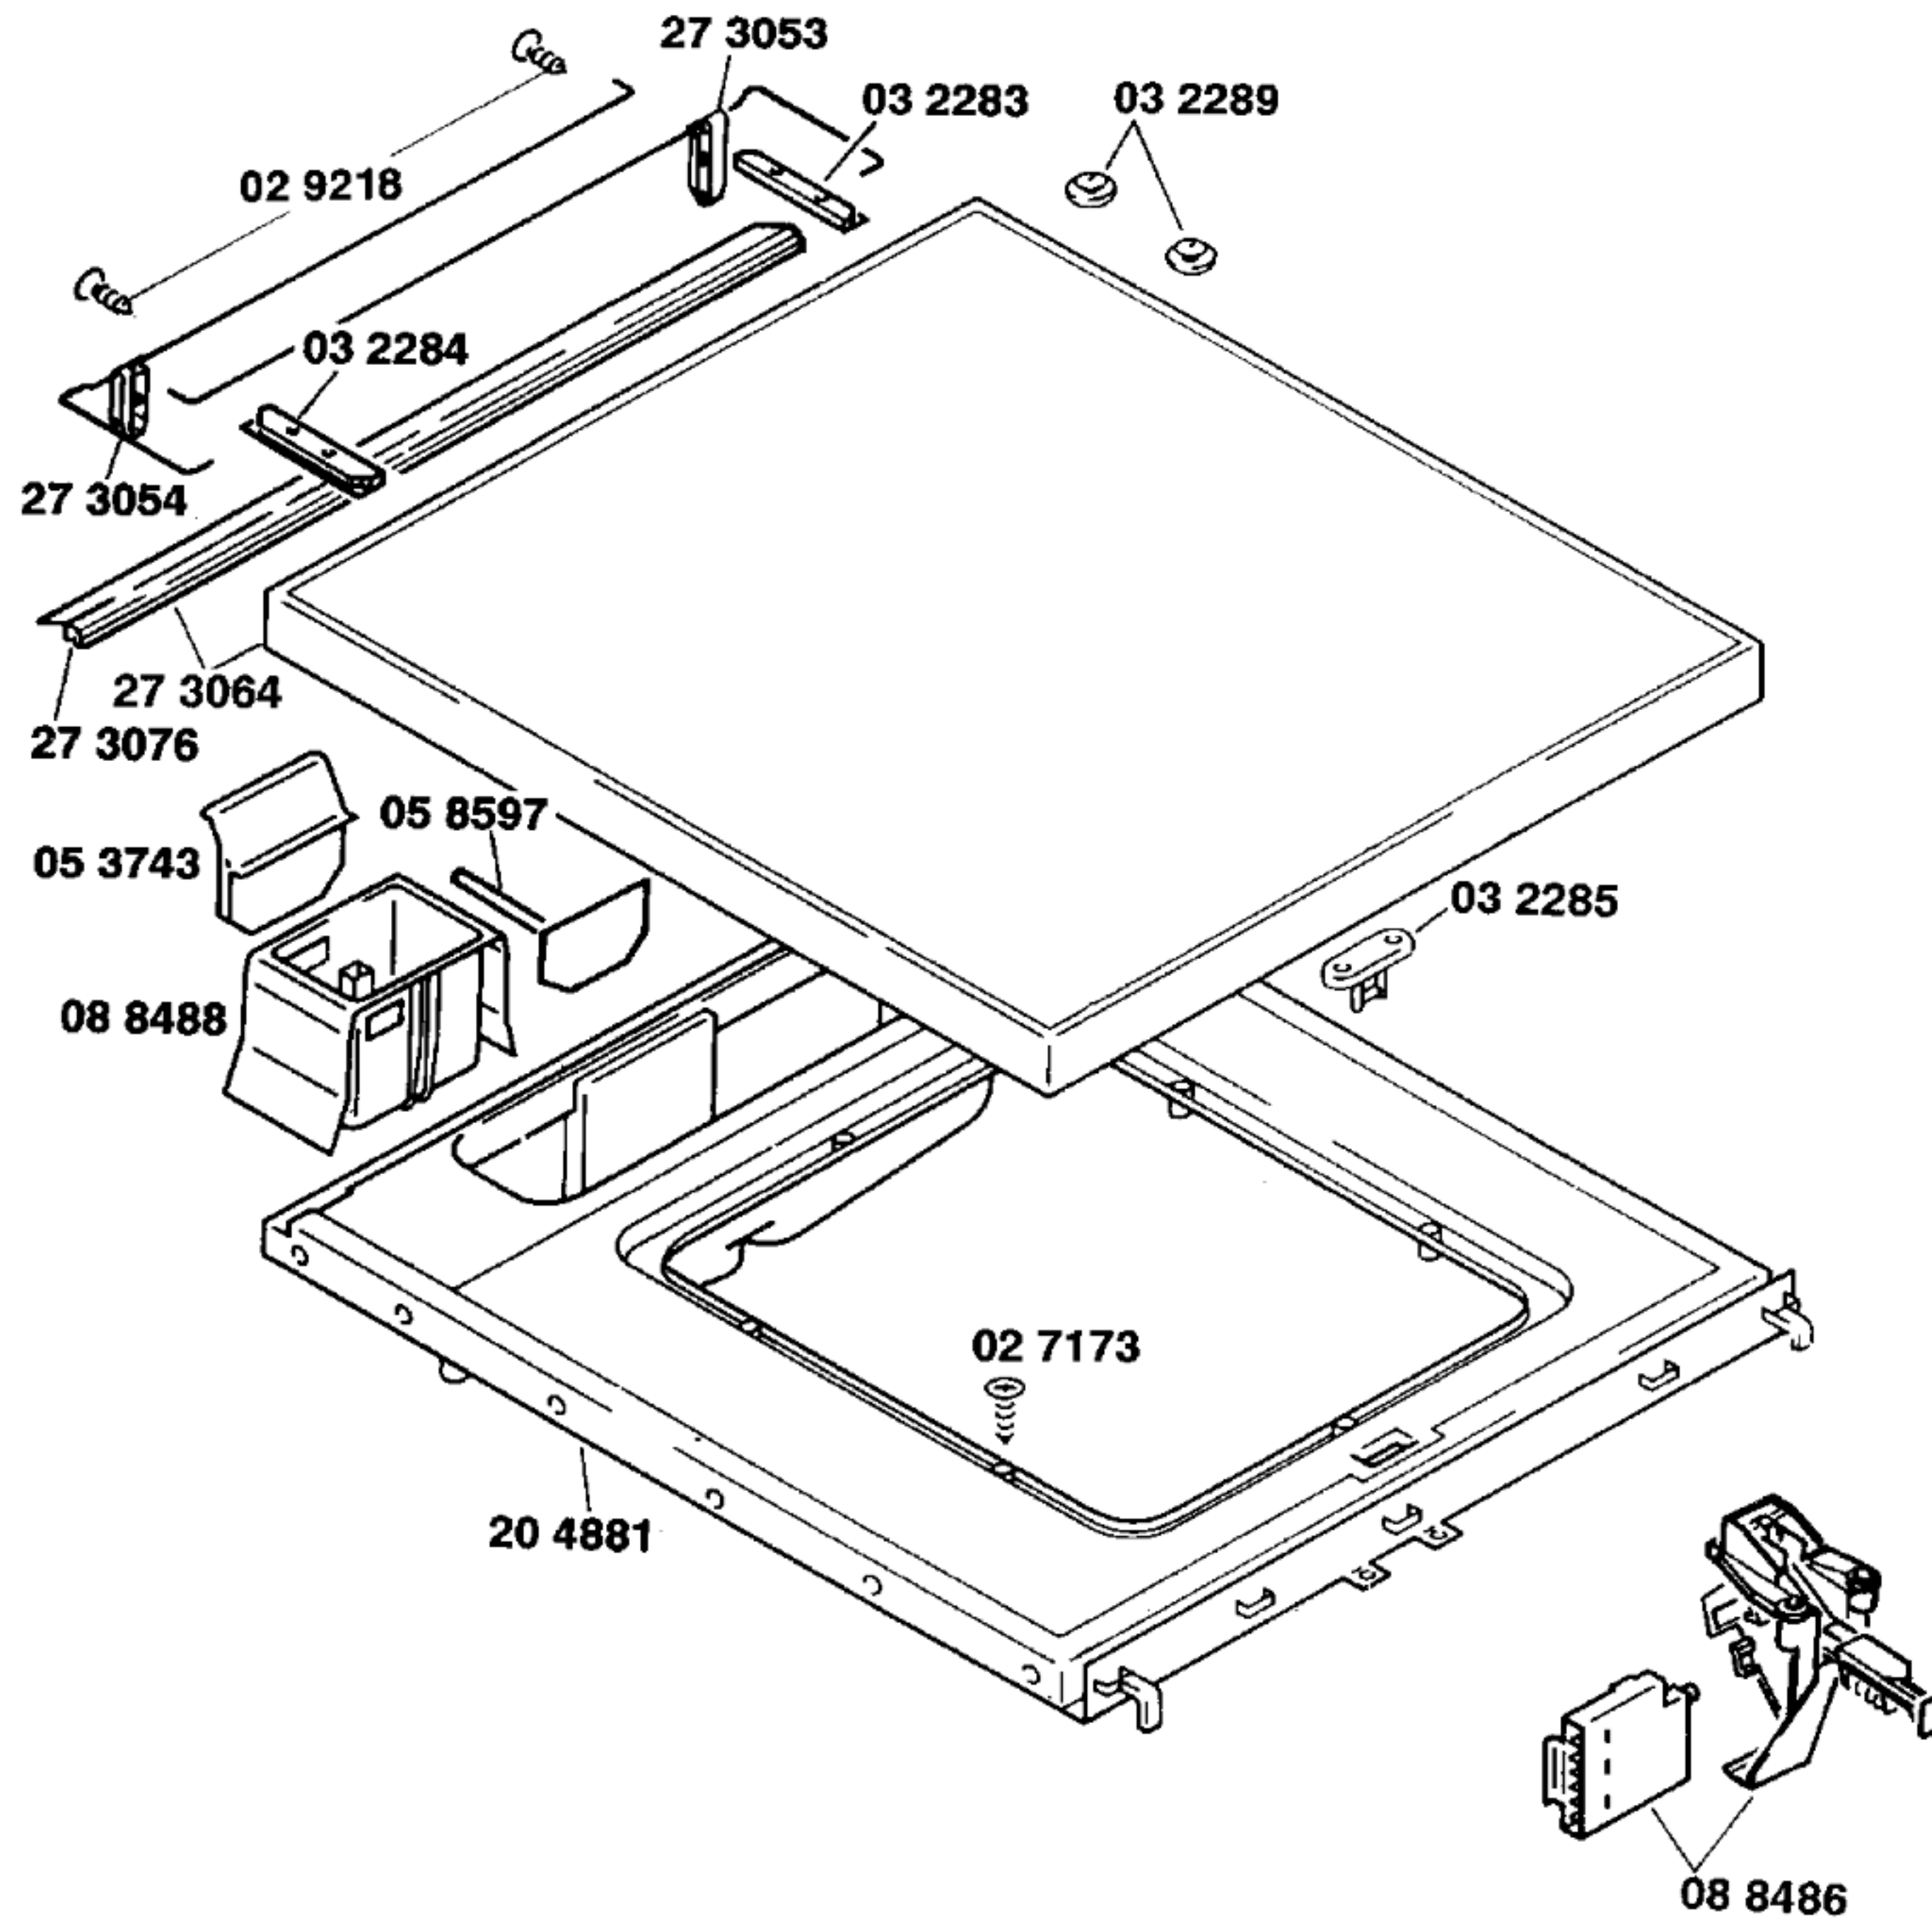

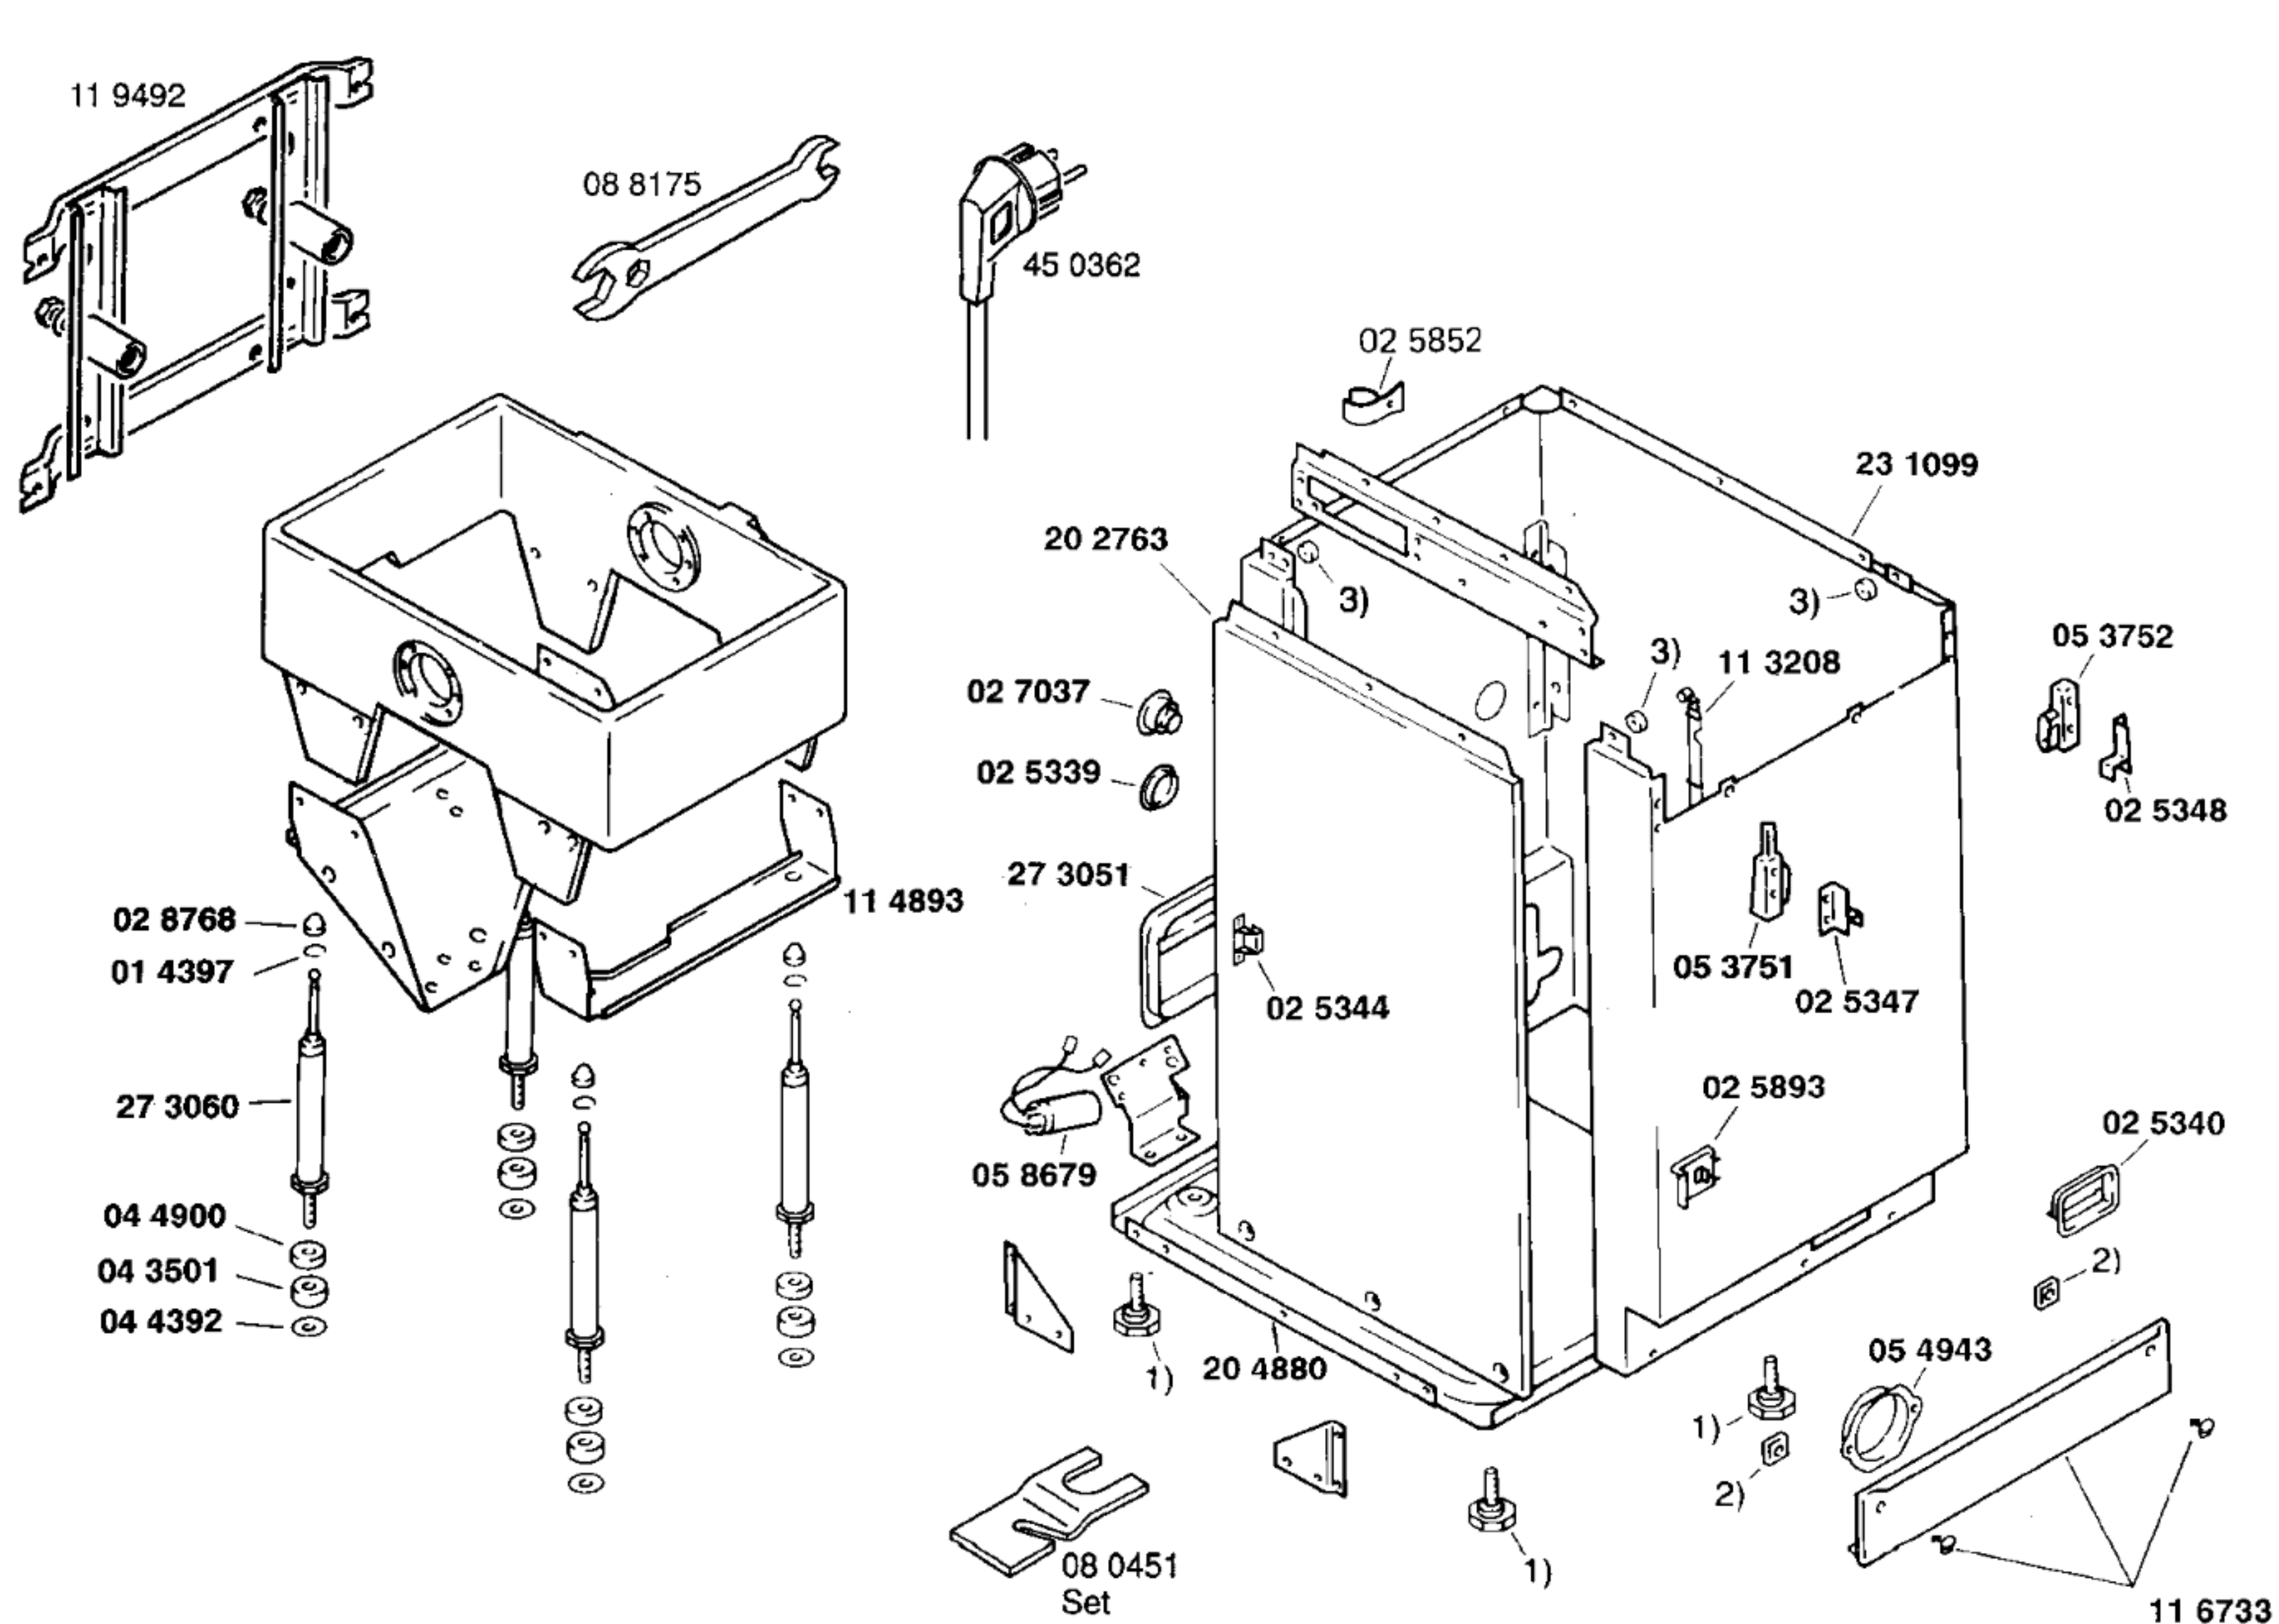

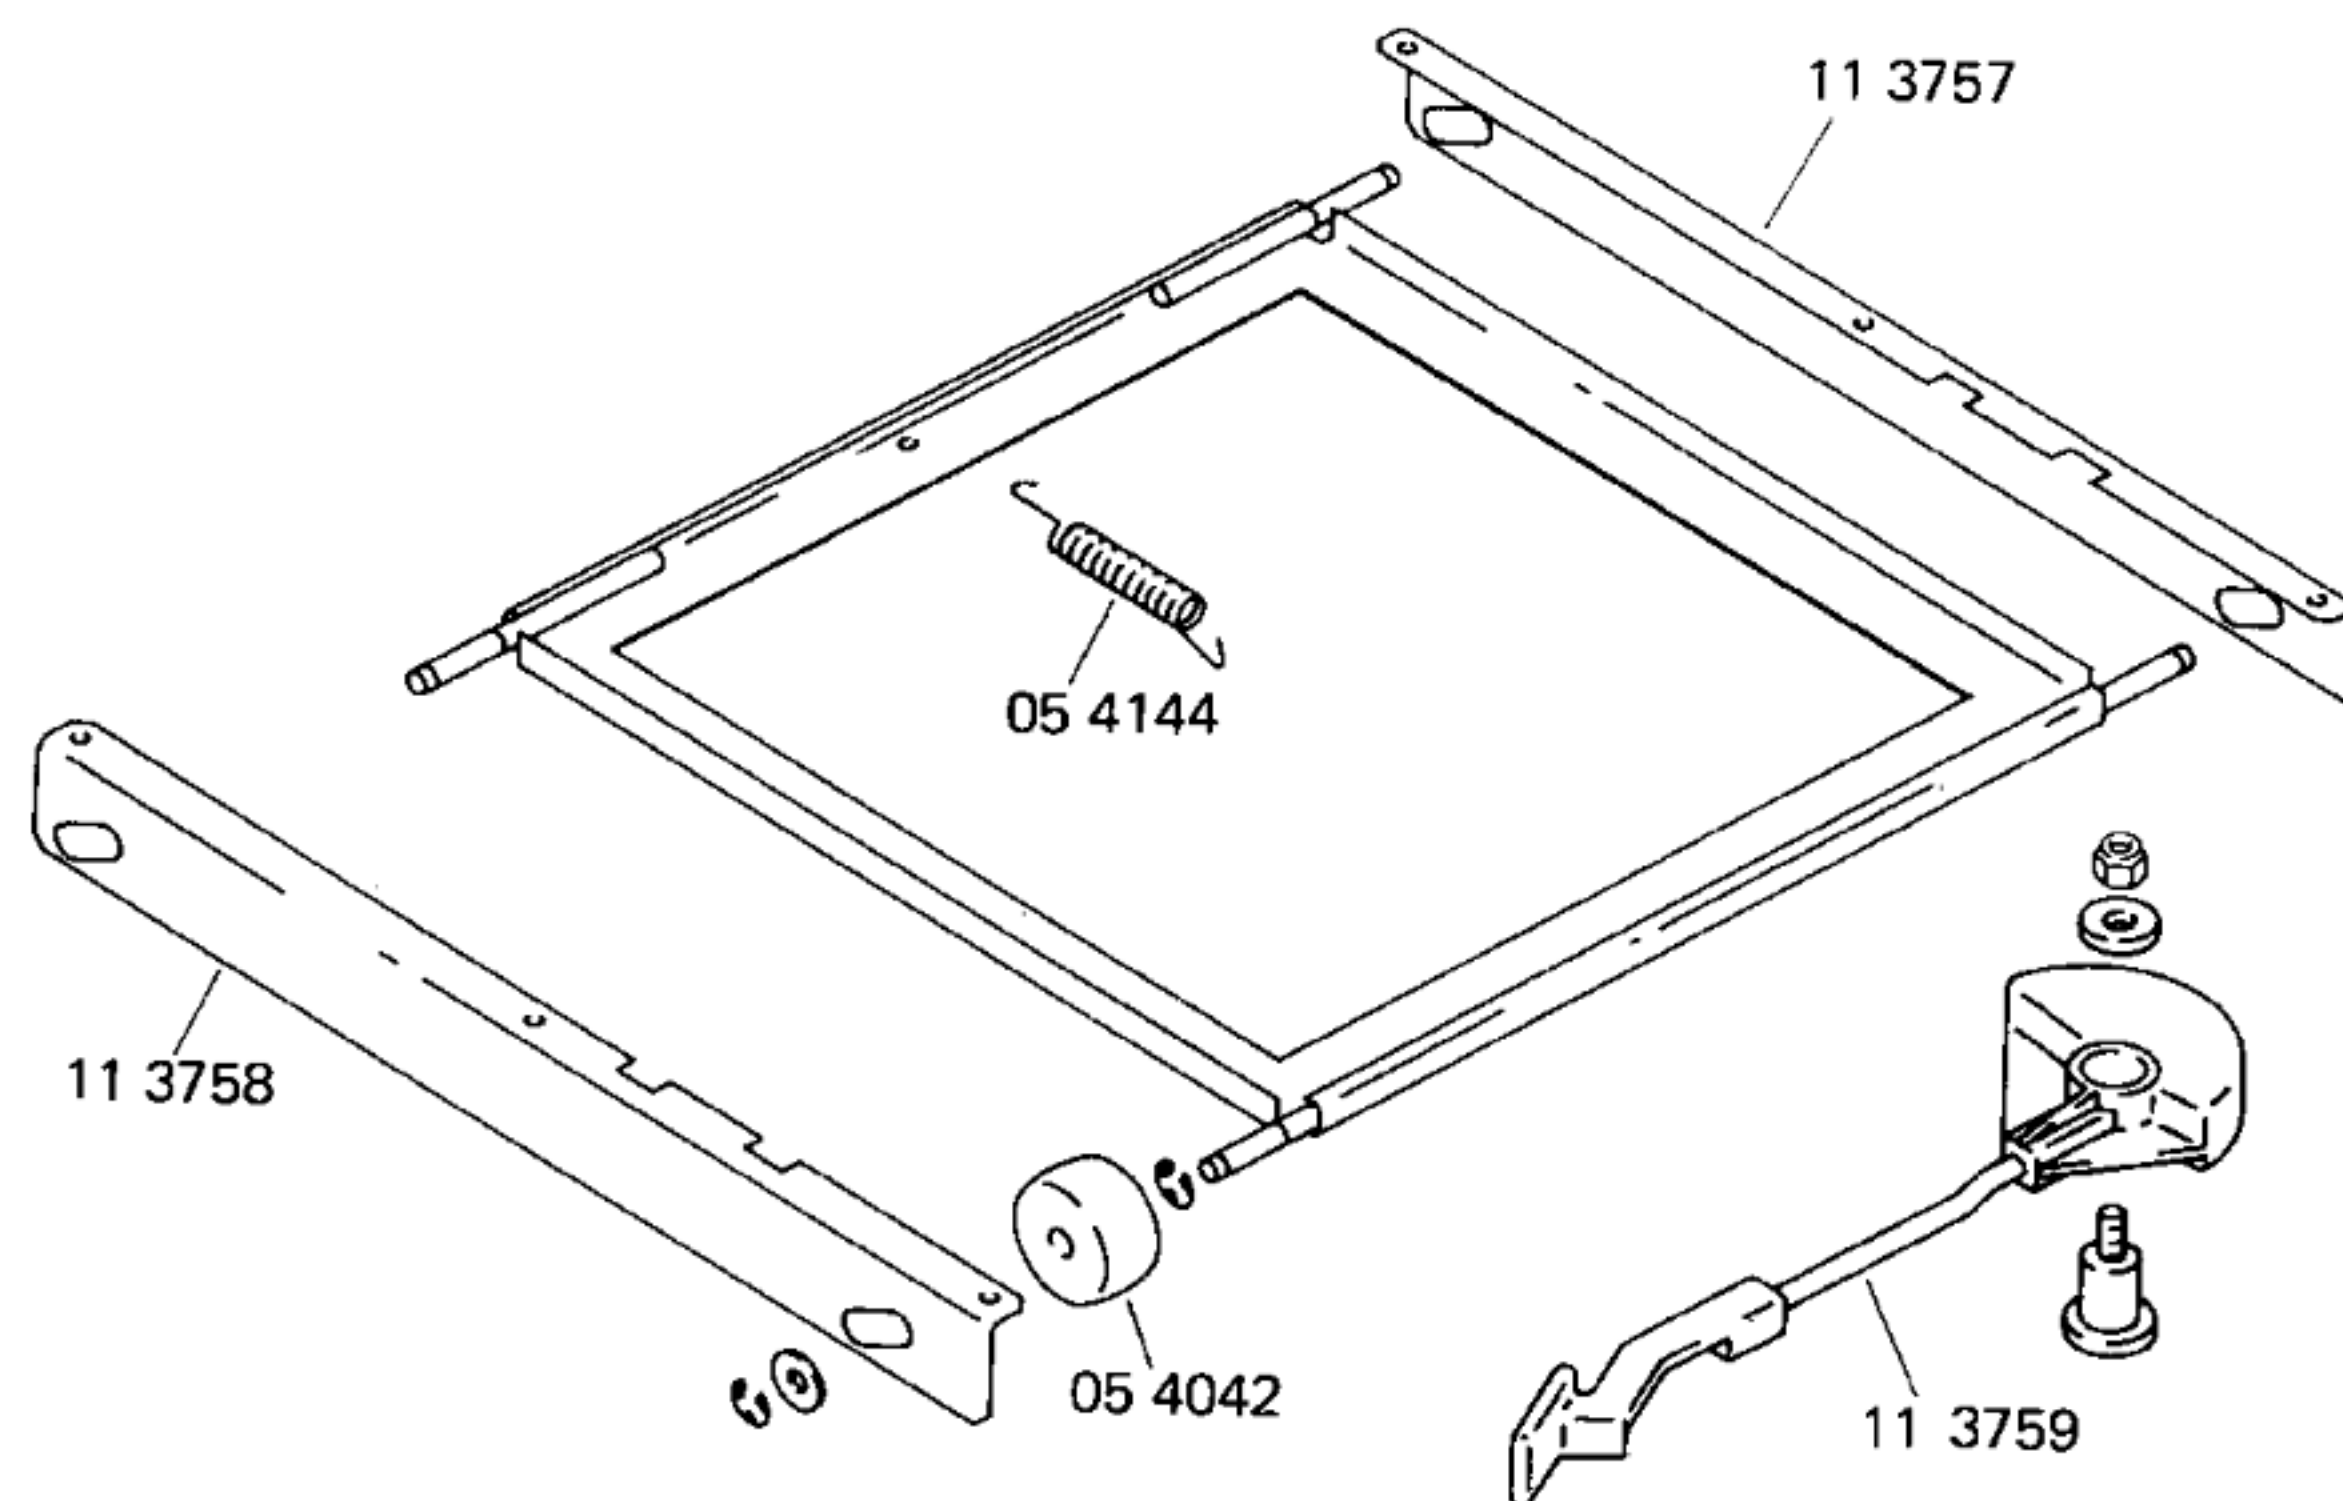

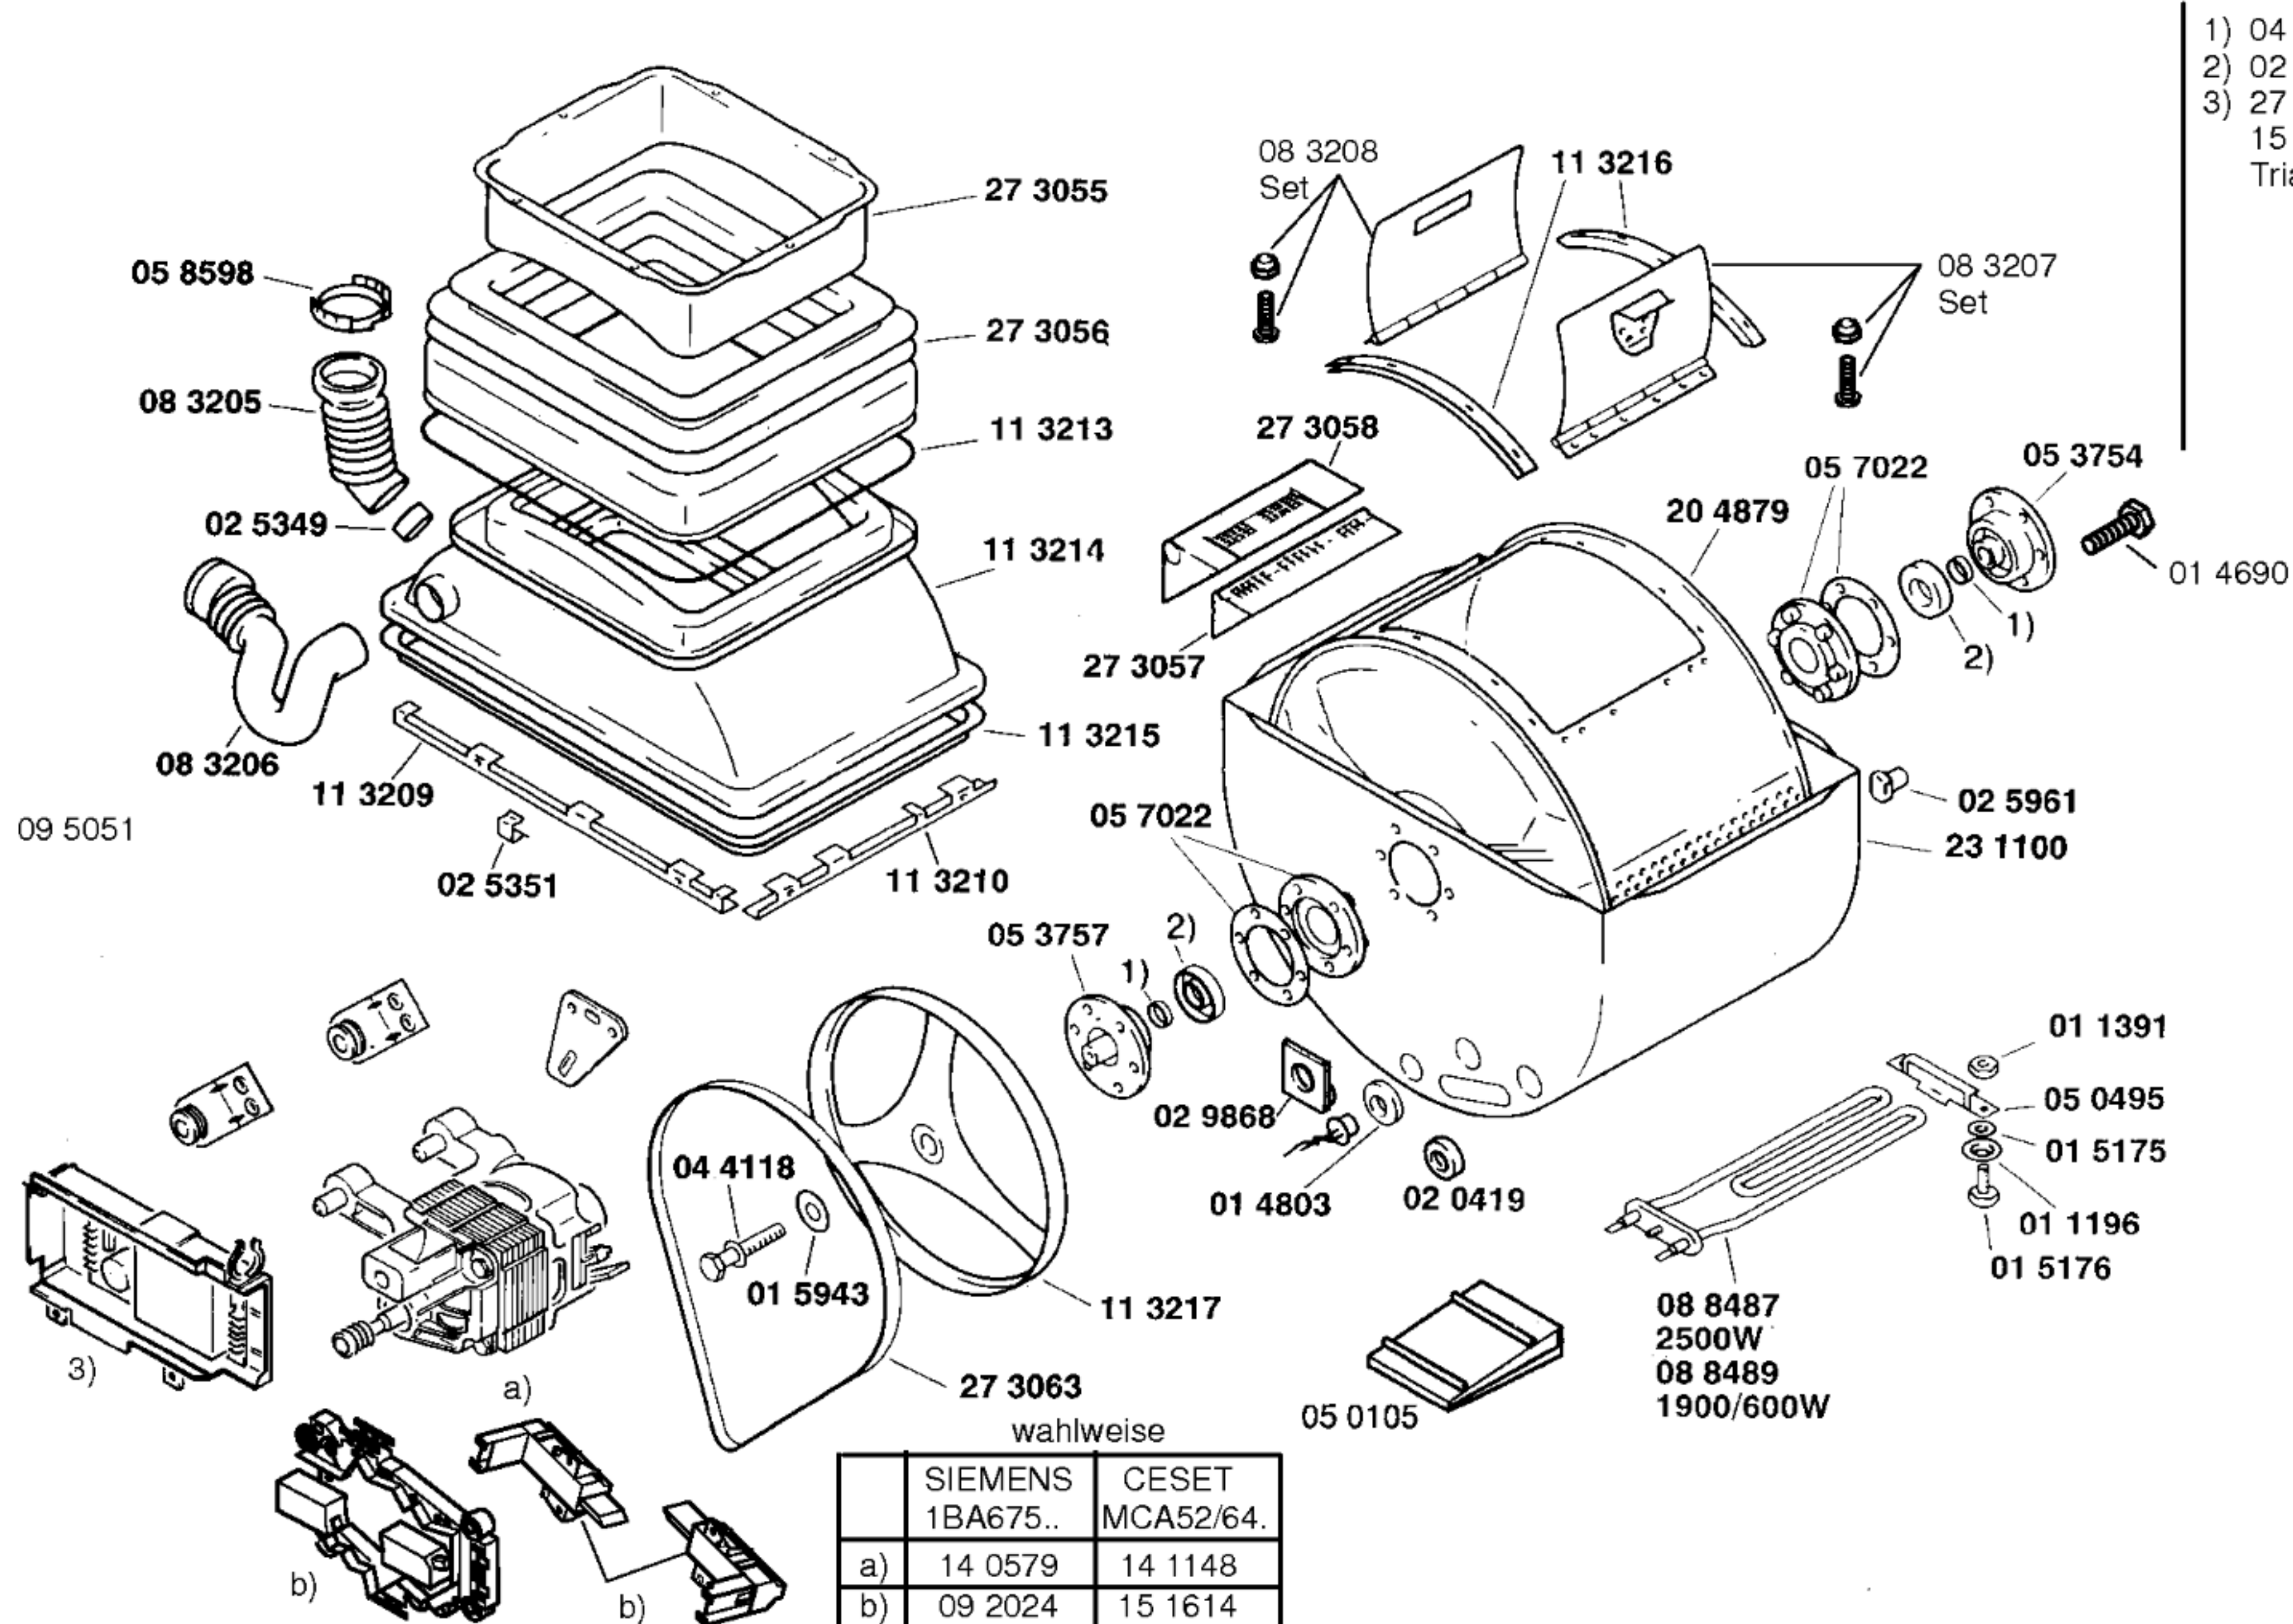

- | | |
|----|---------------------|
| 1) | 04 2309 |
| 2) | 02 5350 |
| 3) | 27 3073 |
| | 15 5272 |
| | Triac-Motorleistung |

