


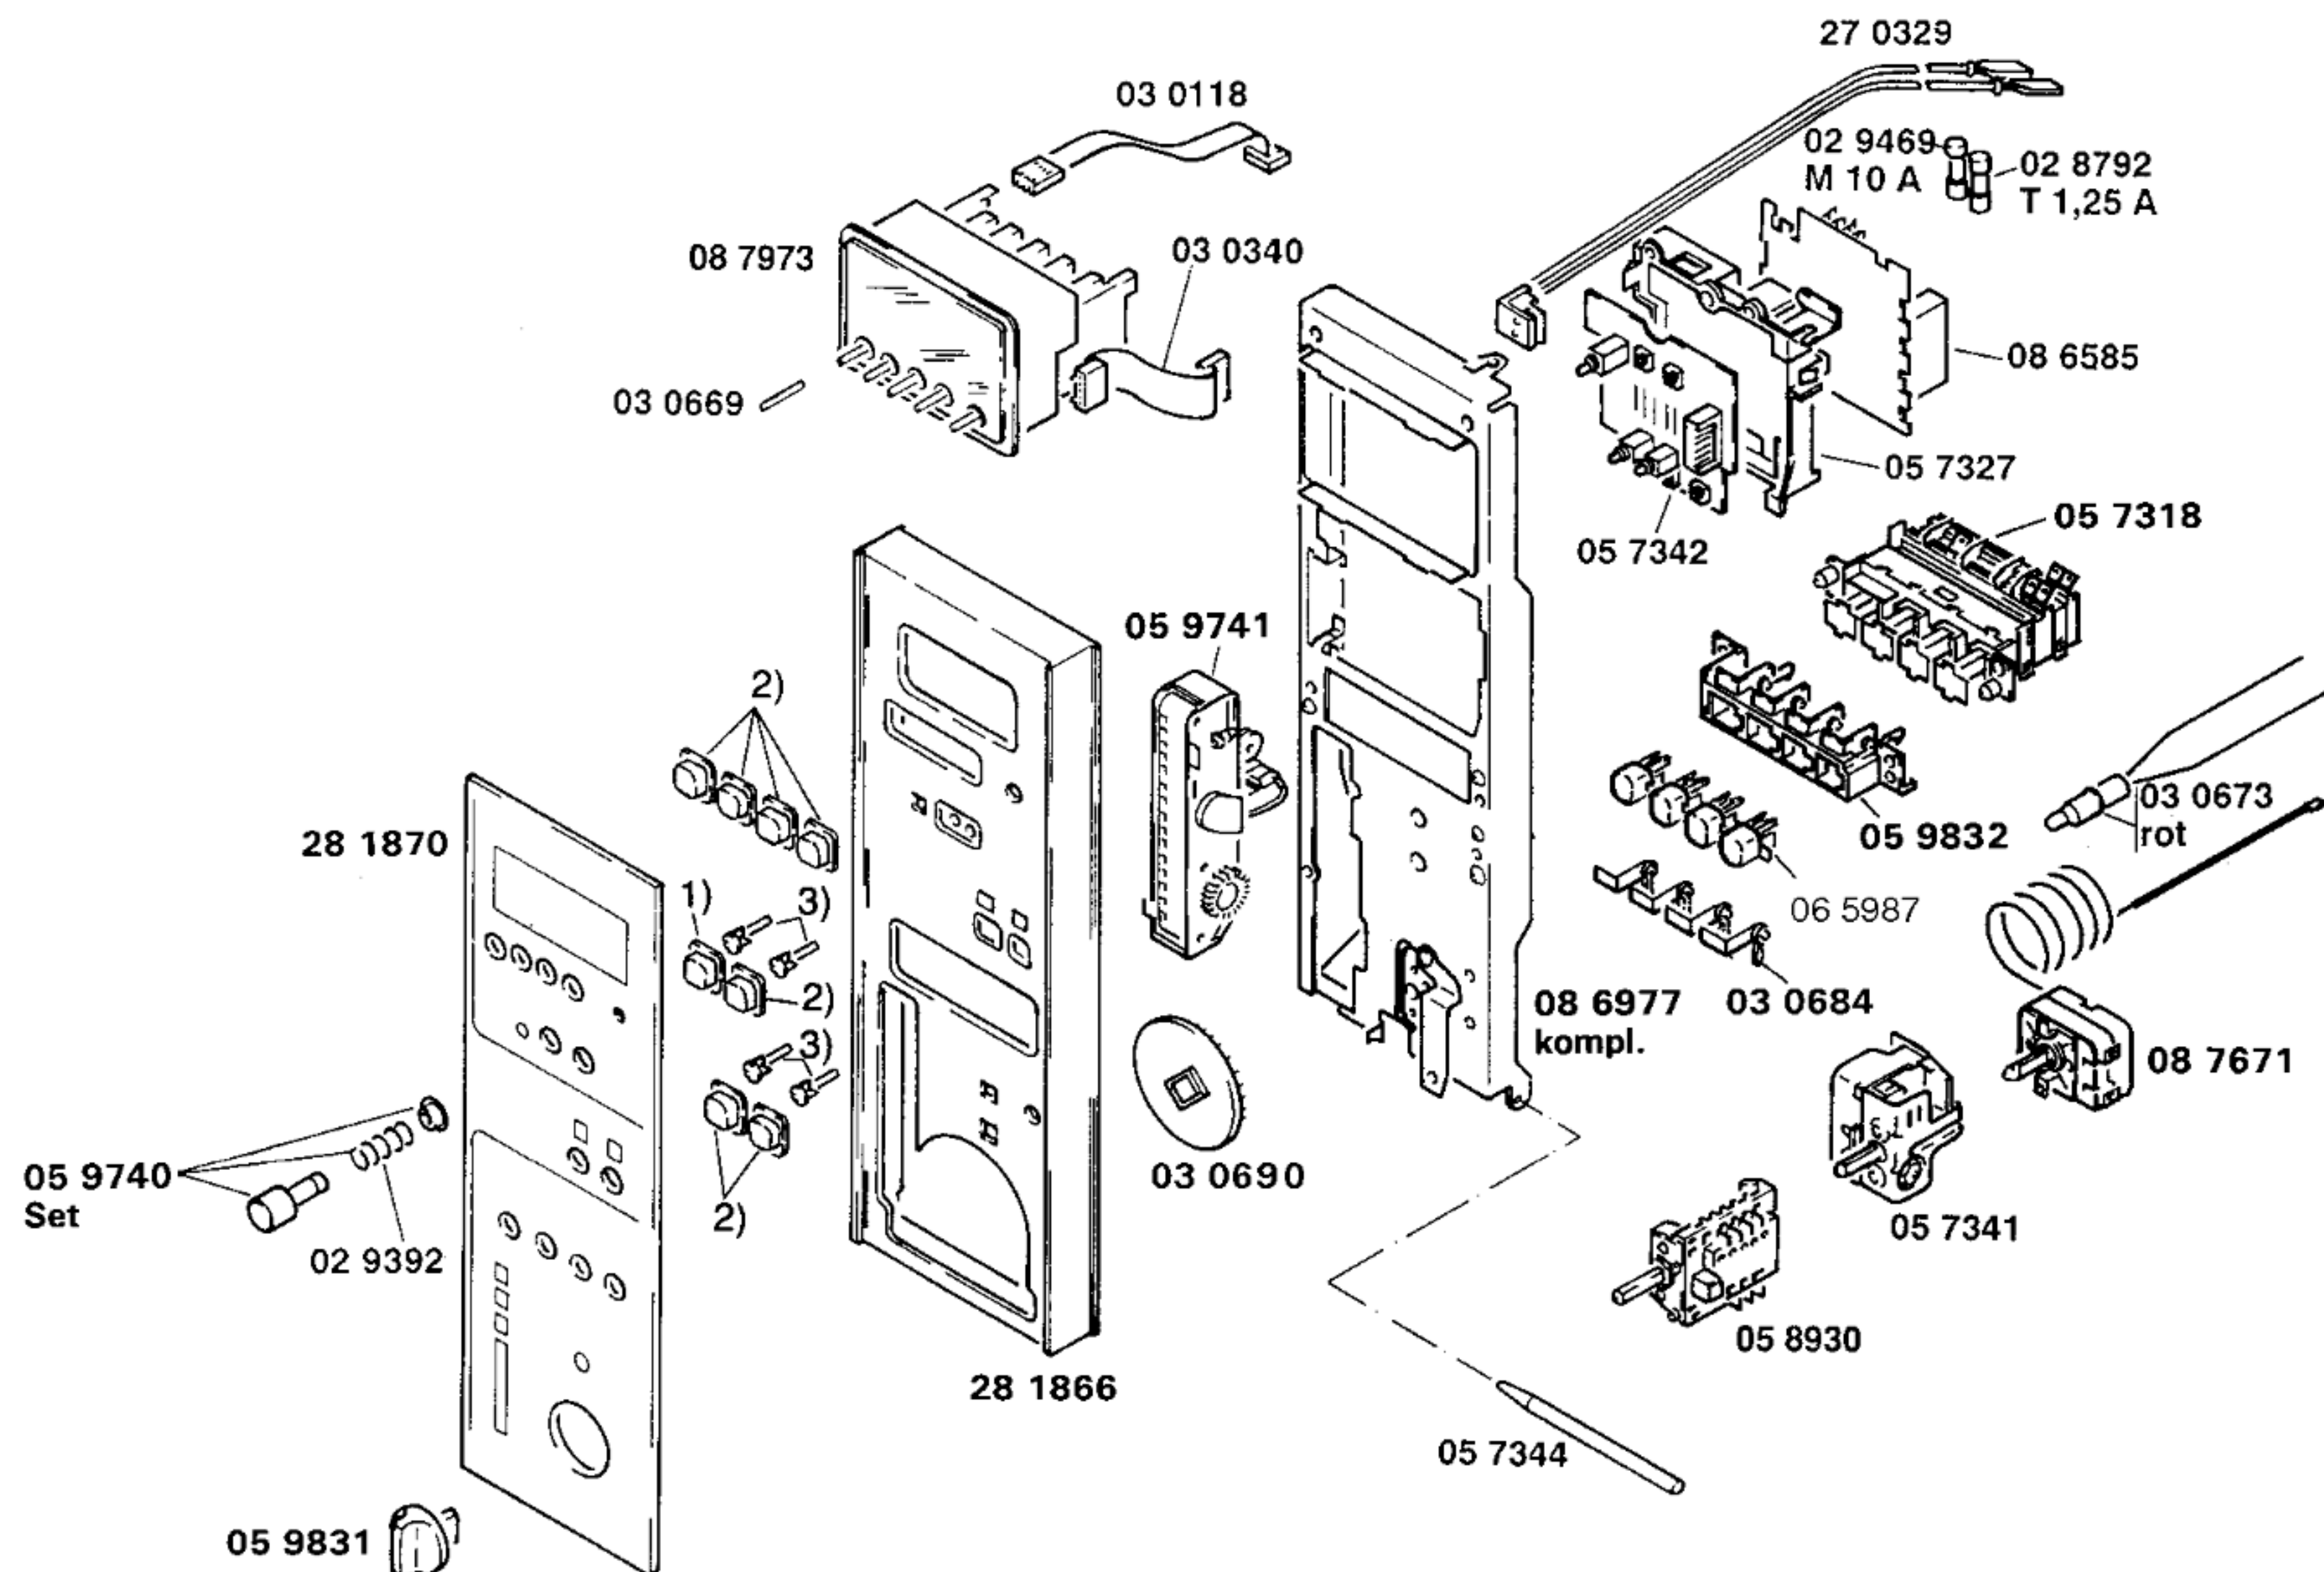

Gebrauchsanweisung
51 5096
(D,F,GB,I,NL)

Kochbuch
51 5563
NL1
(NL)
51 4861
D1
(D)

Kurzanweisung
51 6004
D1

1) 03 0681
2) 05 9834
3) 03 0679

Zubehör:


Einbaurahmen
HZ67060

Universalpfanne
HZ67615

Alu-Backblech
HZ 8055

Glaspfanne
HZ 8056

Glasbräter
HZ 9150

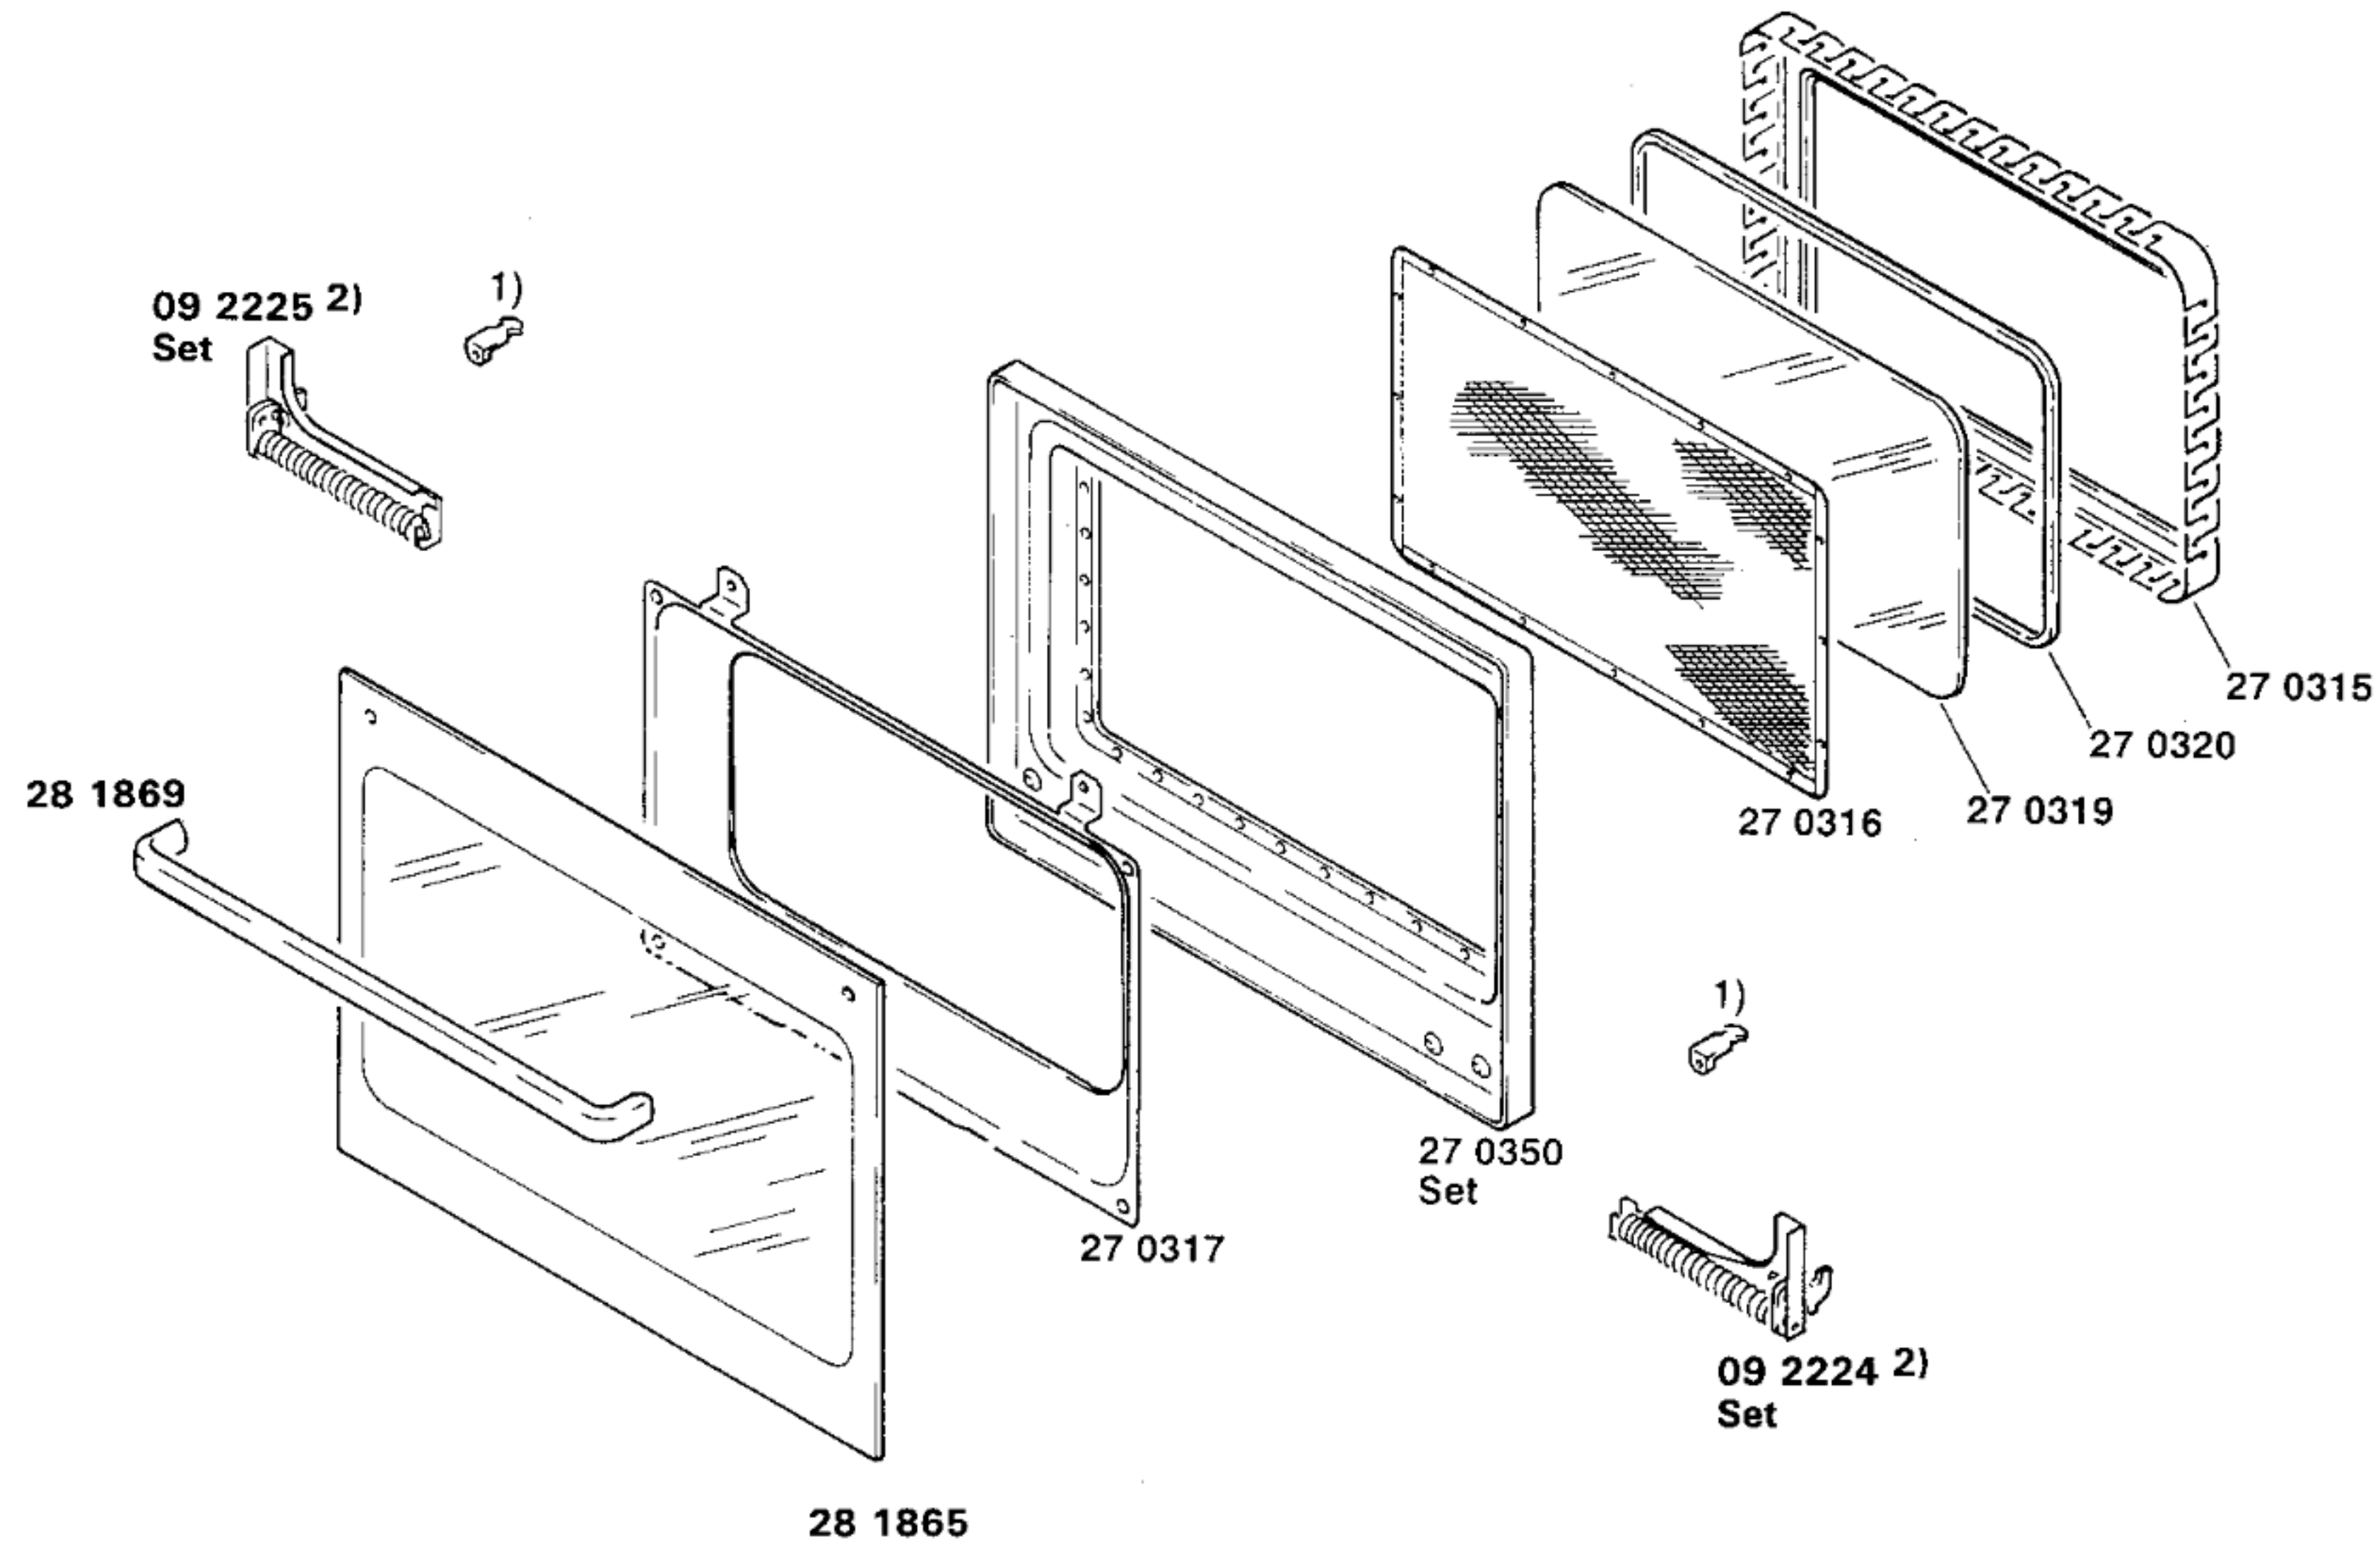

- 1) 03 0671
- 2) 03 0813
- Arretierstift

