



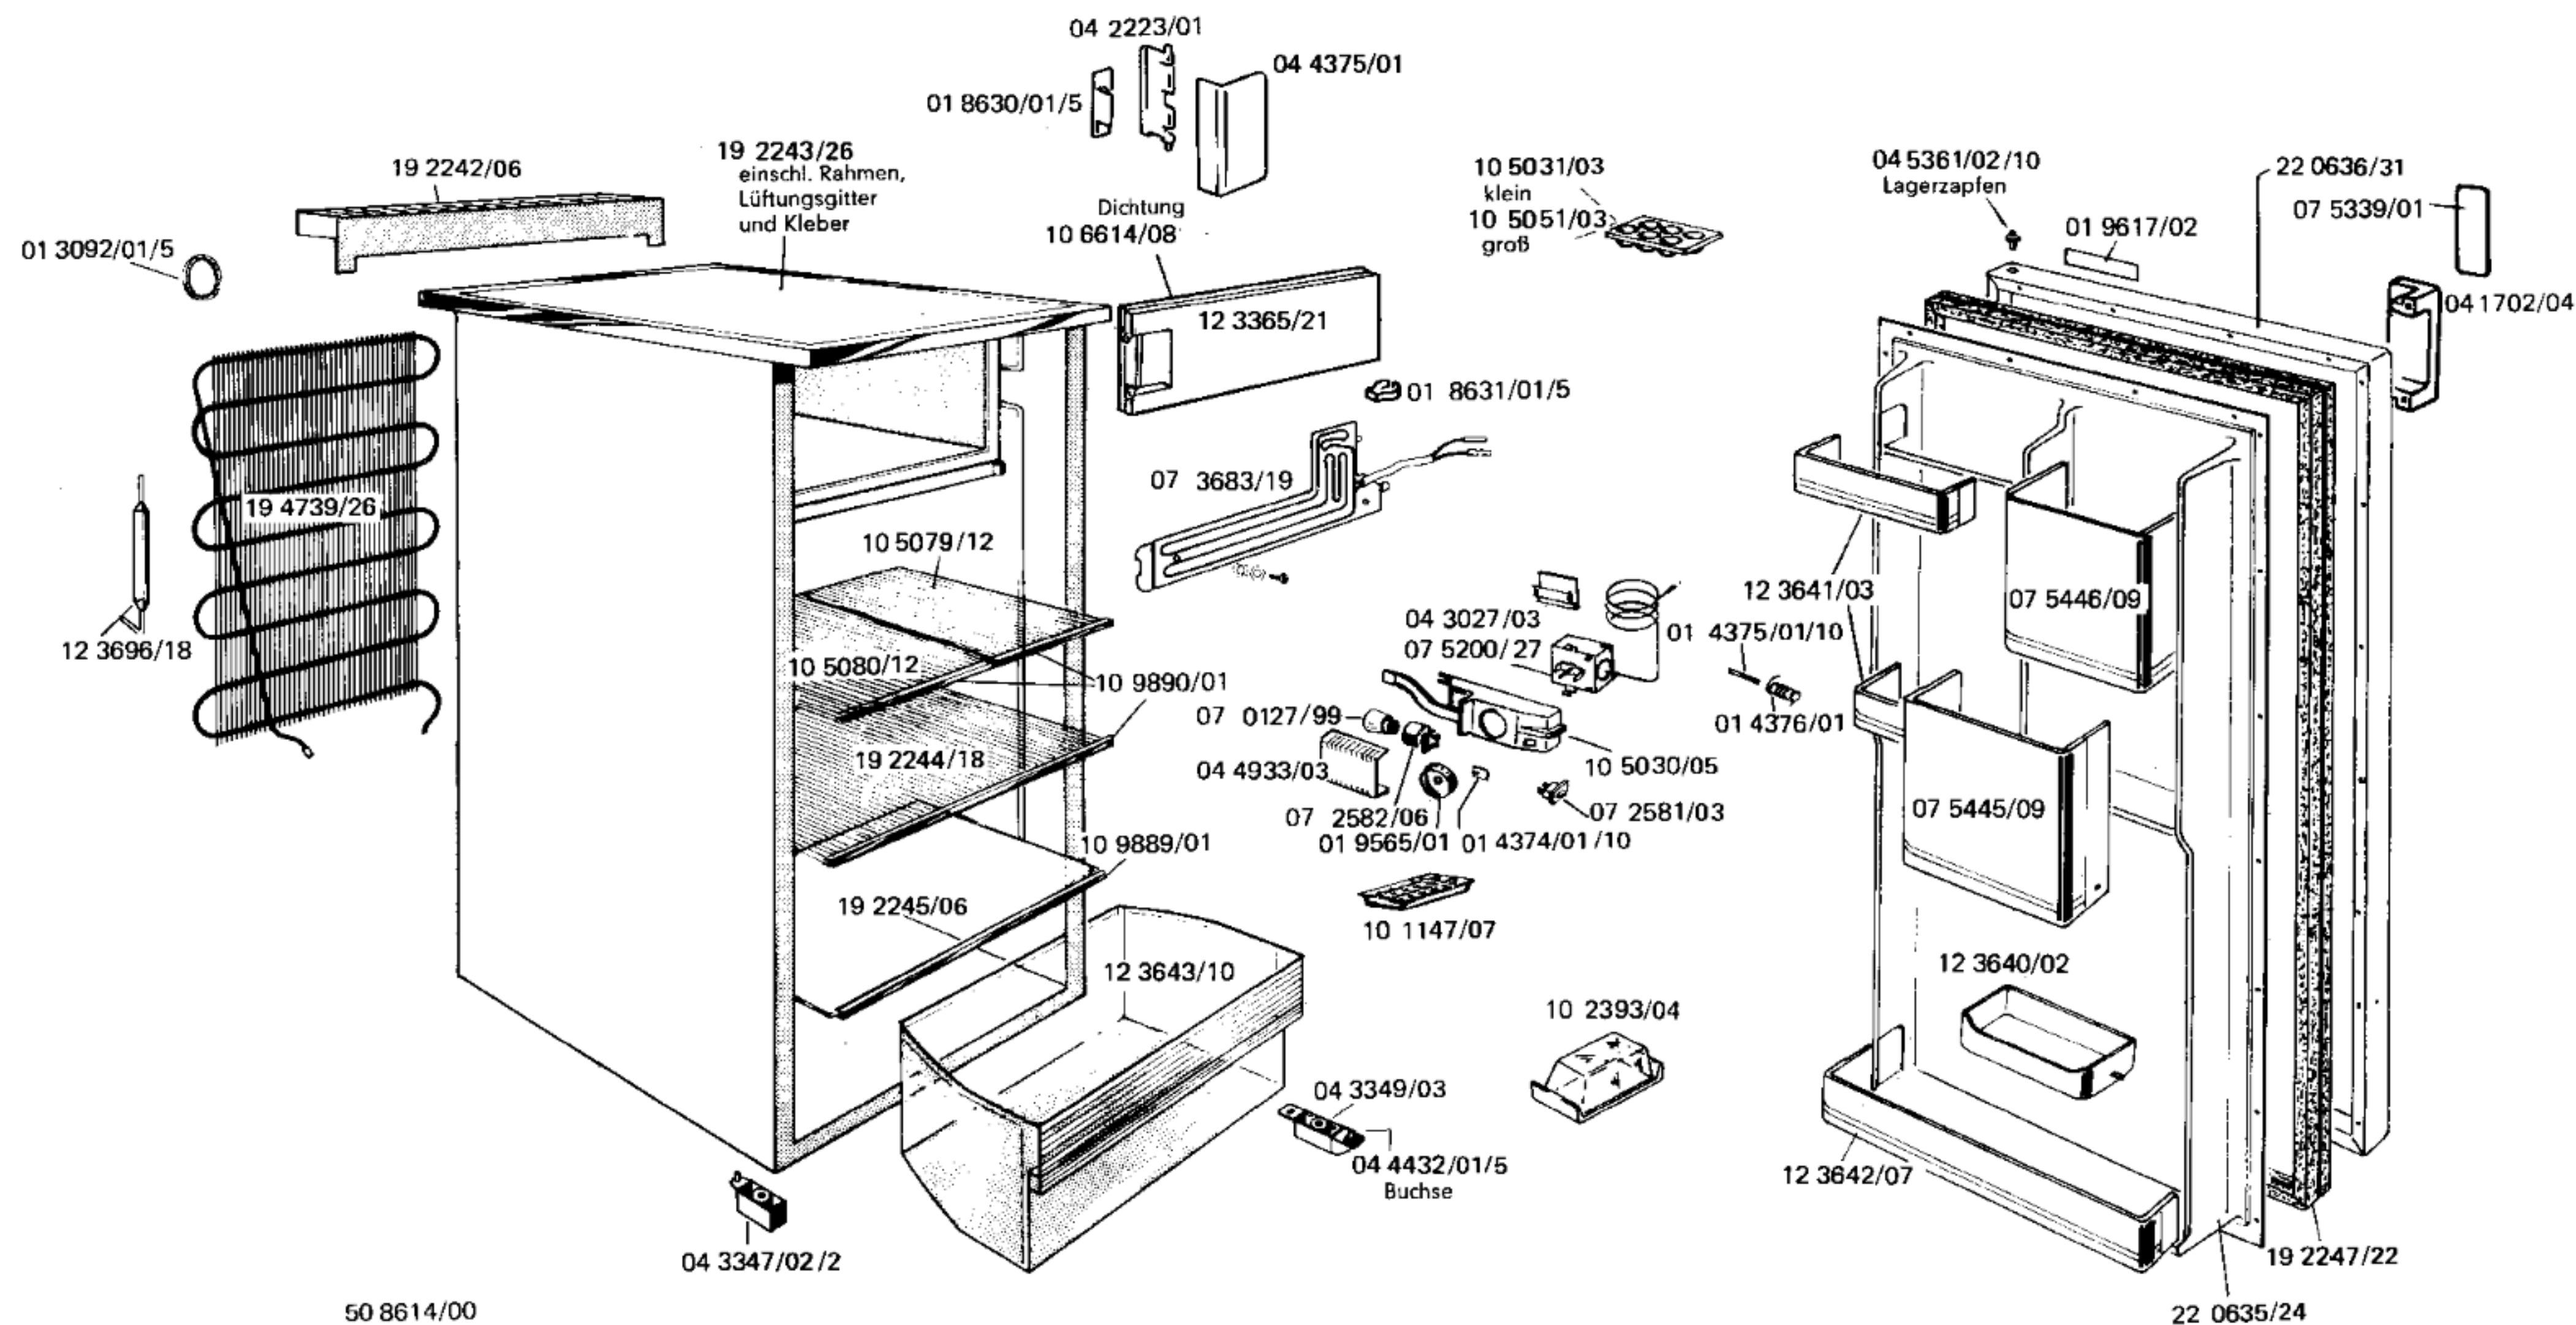

50 8614/00  
Bed.-Anleitung

01 4881/01/5  
Schraube für  
Verdampfer

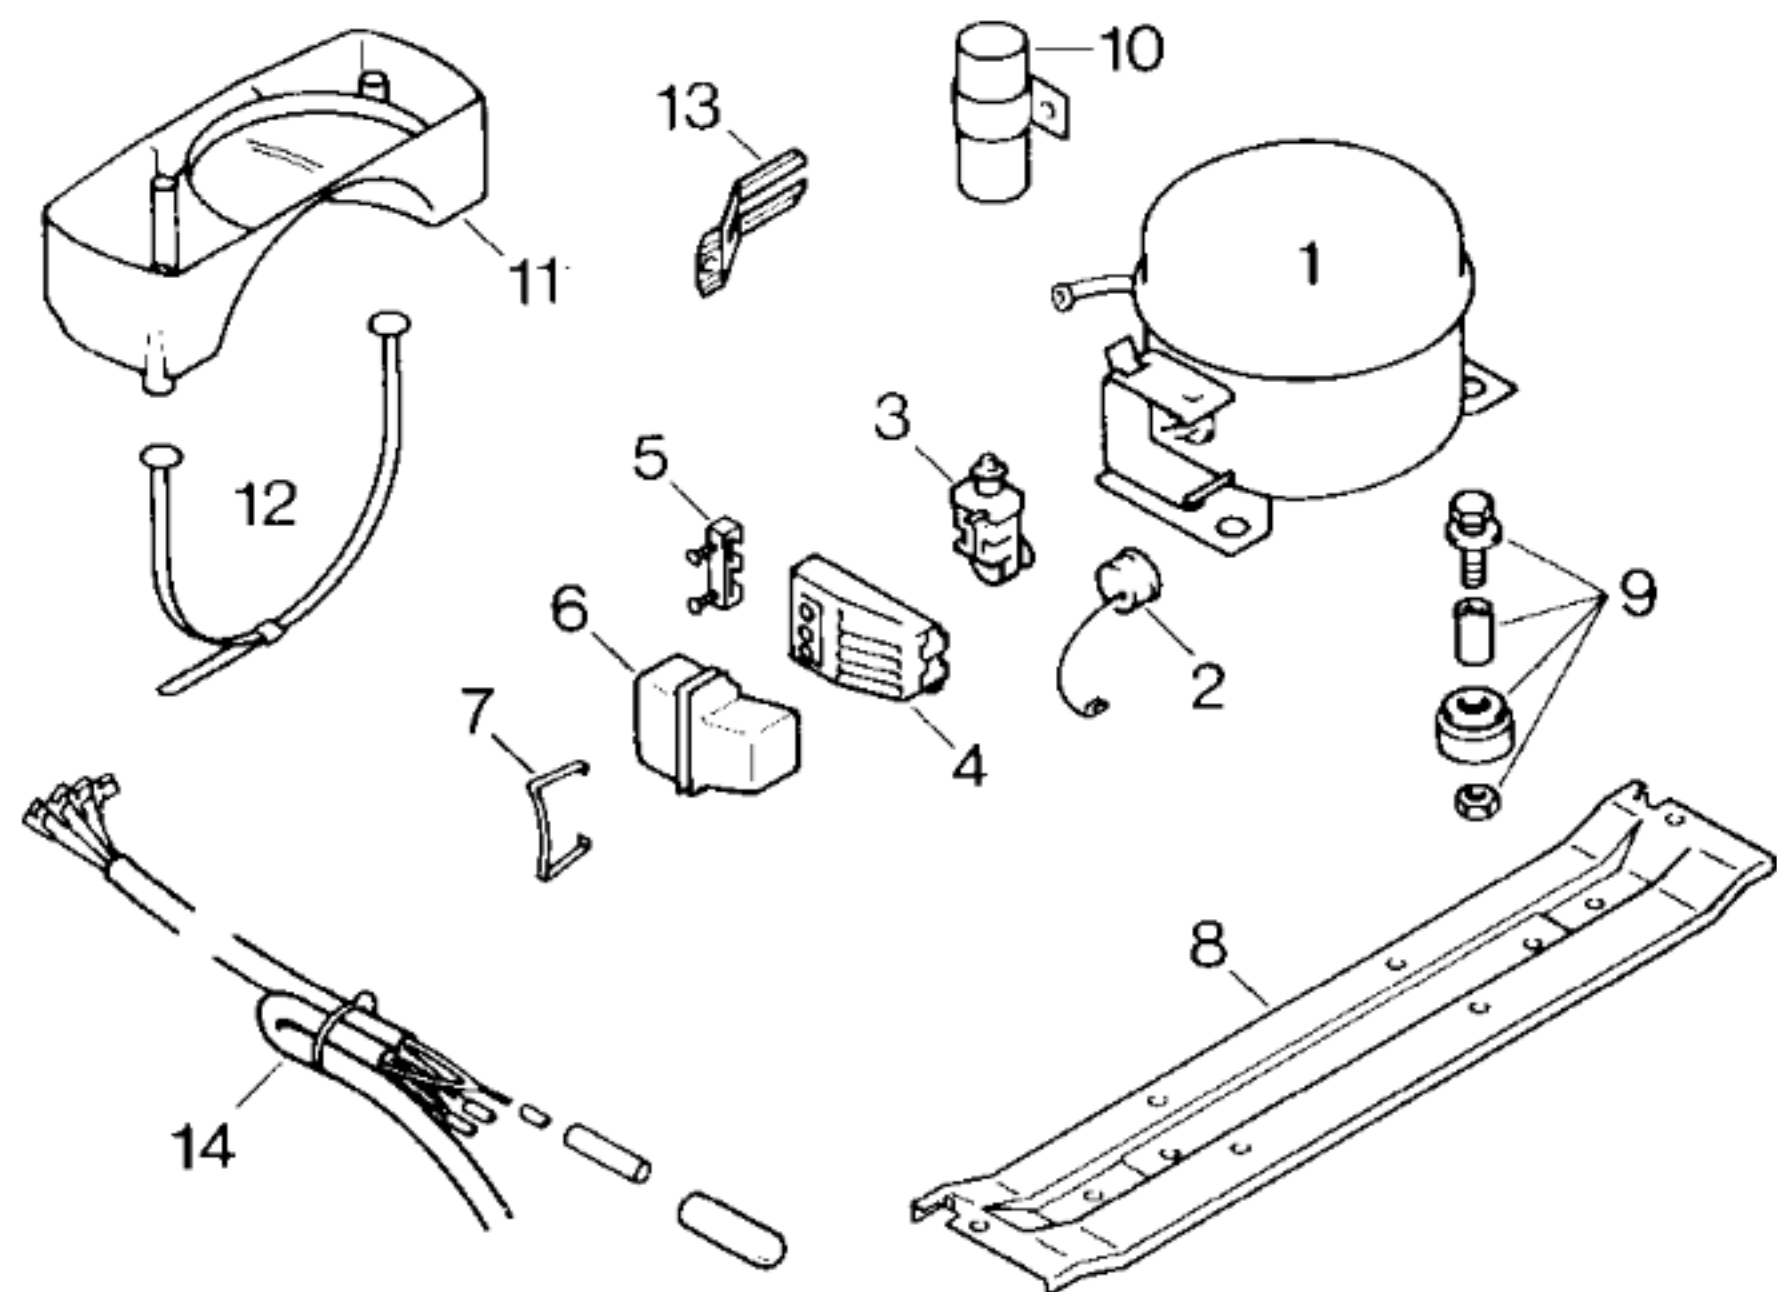

## TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

|                                                 |  |        |                 |         |  |
|-------------------------------------------------|--|--------|-----------------|---------|--|
| Verdichter/Compressor/Compresseur               |  | Bosch  | Danfoss         |         |  |
| Typ/Type                                        |  | V 792  | TL 4 A          |         |  |
| Förderleistung/Delivery/Débit                   |  | l/h    | 792             | 702     |  |
| Anlaufstrom/Starting current/Cour. de démarrage |  | A      | 8,3             | 7,8     |  |
| Widerstand/Resistance/Résistance                |  | Ω      | 23,0            | 23,8    |  |
|                                                 |  | Hi/aux | 25,2            | 17,0    |  |
| Temp.-Regler/Thermostat                         |  |        | Ranco           |         |  |
| Typ/Type                                        |  |        | A 59            |         |  |
| Reglerstellung/Position                         |  |        | kalt            | warm    |  |
| Schaltwerte/Switching values/                   |  | °C     | + 4             | + 4     |  |
| Valeurs de commutation                          |  |        | - 29            | - 19    |  |
|                                                 |  |        | („abtauen“ od.) | „alarm“ |  |
| Füllmenge/Fill.quantity/Charge                  |  | R12    | g               | 110     |  |
| Anschlußwert/Conn.load/Puiss. connectée         |  | W      | 120             |         |  |
| Heizung/Heater/Chauffage                        |  |        |                 |         |  |
| Widerstand/Resistance/Résistance                |  | Ω      | 3280            |         |  |
| Leistung/Power/Puissance                        |  | W      | 14,8            |         |  |
| Ventilator/Blower/Ventilateur                   |  |        |                 |         |  |
| Widerstand/Resistance/Résistance                |  | Ω      |                 |         |  |
| Magnetventil/Magnetic valve/Electrovanne        |  |        |                 |         |  |
| Widerstand/Resistance/Résistance                |  | Ω      |                 |         |  |
| Spannung/Voltage/Tension                        |  | V      |                 |         |  |

| Pos. | D1, D2, CH1 | D1, D2, CH1   |  |  |
|------|-------------|---------------|--|--|
|      | Bosch       | Danfoss       |  |  |
| 1    |             | 13 1064/45    |  |  |
| 2    | 07 2115/18  |               |  |  |
| 3    | 07 1804/18  | 02 0108/27    |  |  |
| 4    | 04 9757/02  |               |  |  |
| 5    |             | 02 1361/04    |  |  |
| 6    | 04 9758/02  | 05 1413/06    |  |  |
| 7    |             |               |  |  |
| 8    |             | *11 1838/03   |  |  |
| 9    |             | *05 0166/05/4 |  |  |
| 10   |             |               |  |  |
| 11   | 10 6693/03  | *11 1243/01   |  |  |
| 12   |             |               |  |  |
| 13   |             | *04 1568/01/2 |  |  |
| 14   |             | *05 1226/08   |  |  |

\*) Bei Ersatz des Bosch-Verdichters mitbestellen  
To be ordered when replacing the Bosch compressor  
A commander lors du remplacement du compresseur Bosch