


**BOSCH**

HMG8601/01-D1,merianbraun
 HMG8621/01-D2,weiss
 HMG8601/02-D3,merianbraun
 HMG8621/02-D4,weiss

HMG8601/03-D5,merianbraun
 HMG8621/03-D6,weiss
 HMG8621SS/01-S1,weiss
 HMG8621SS/02-S2,weiss

HMG8621SS/03-S3,weiss

HERDE
 Mikrowellenherde

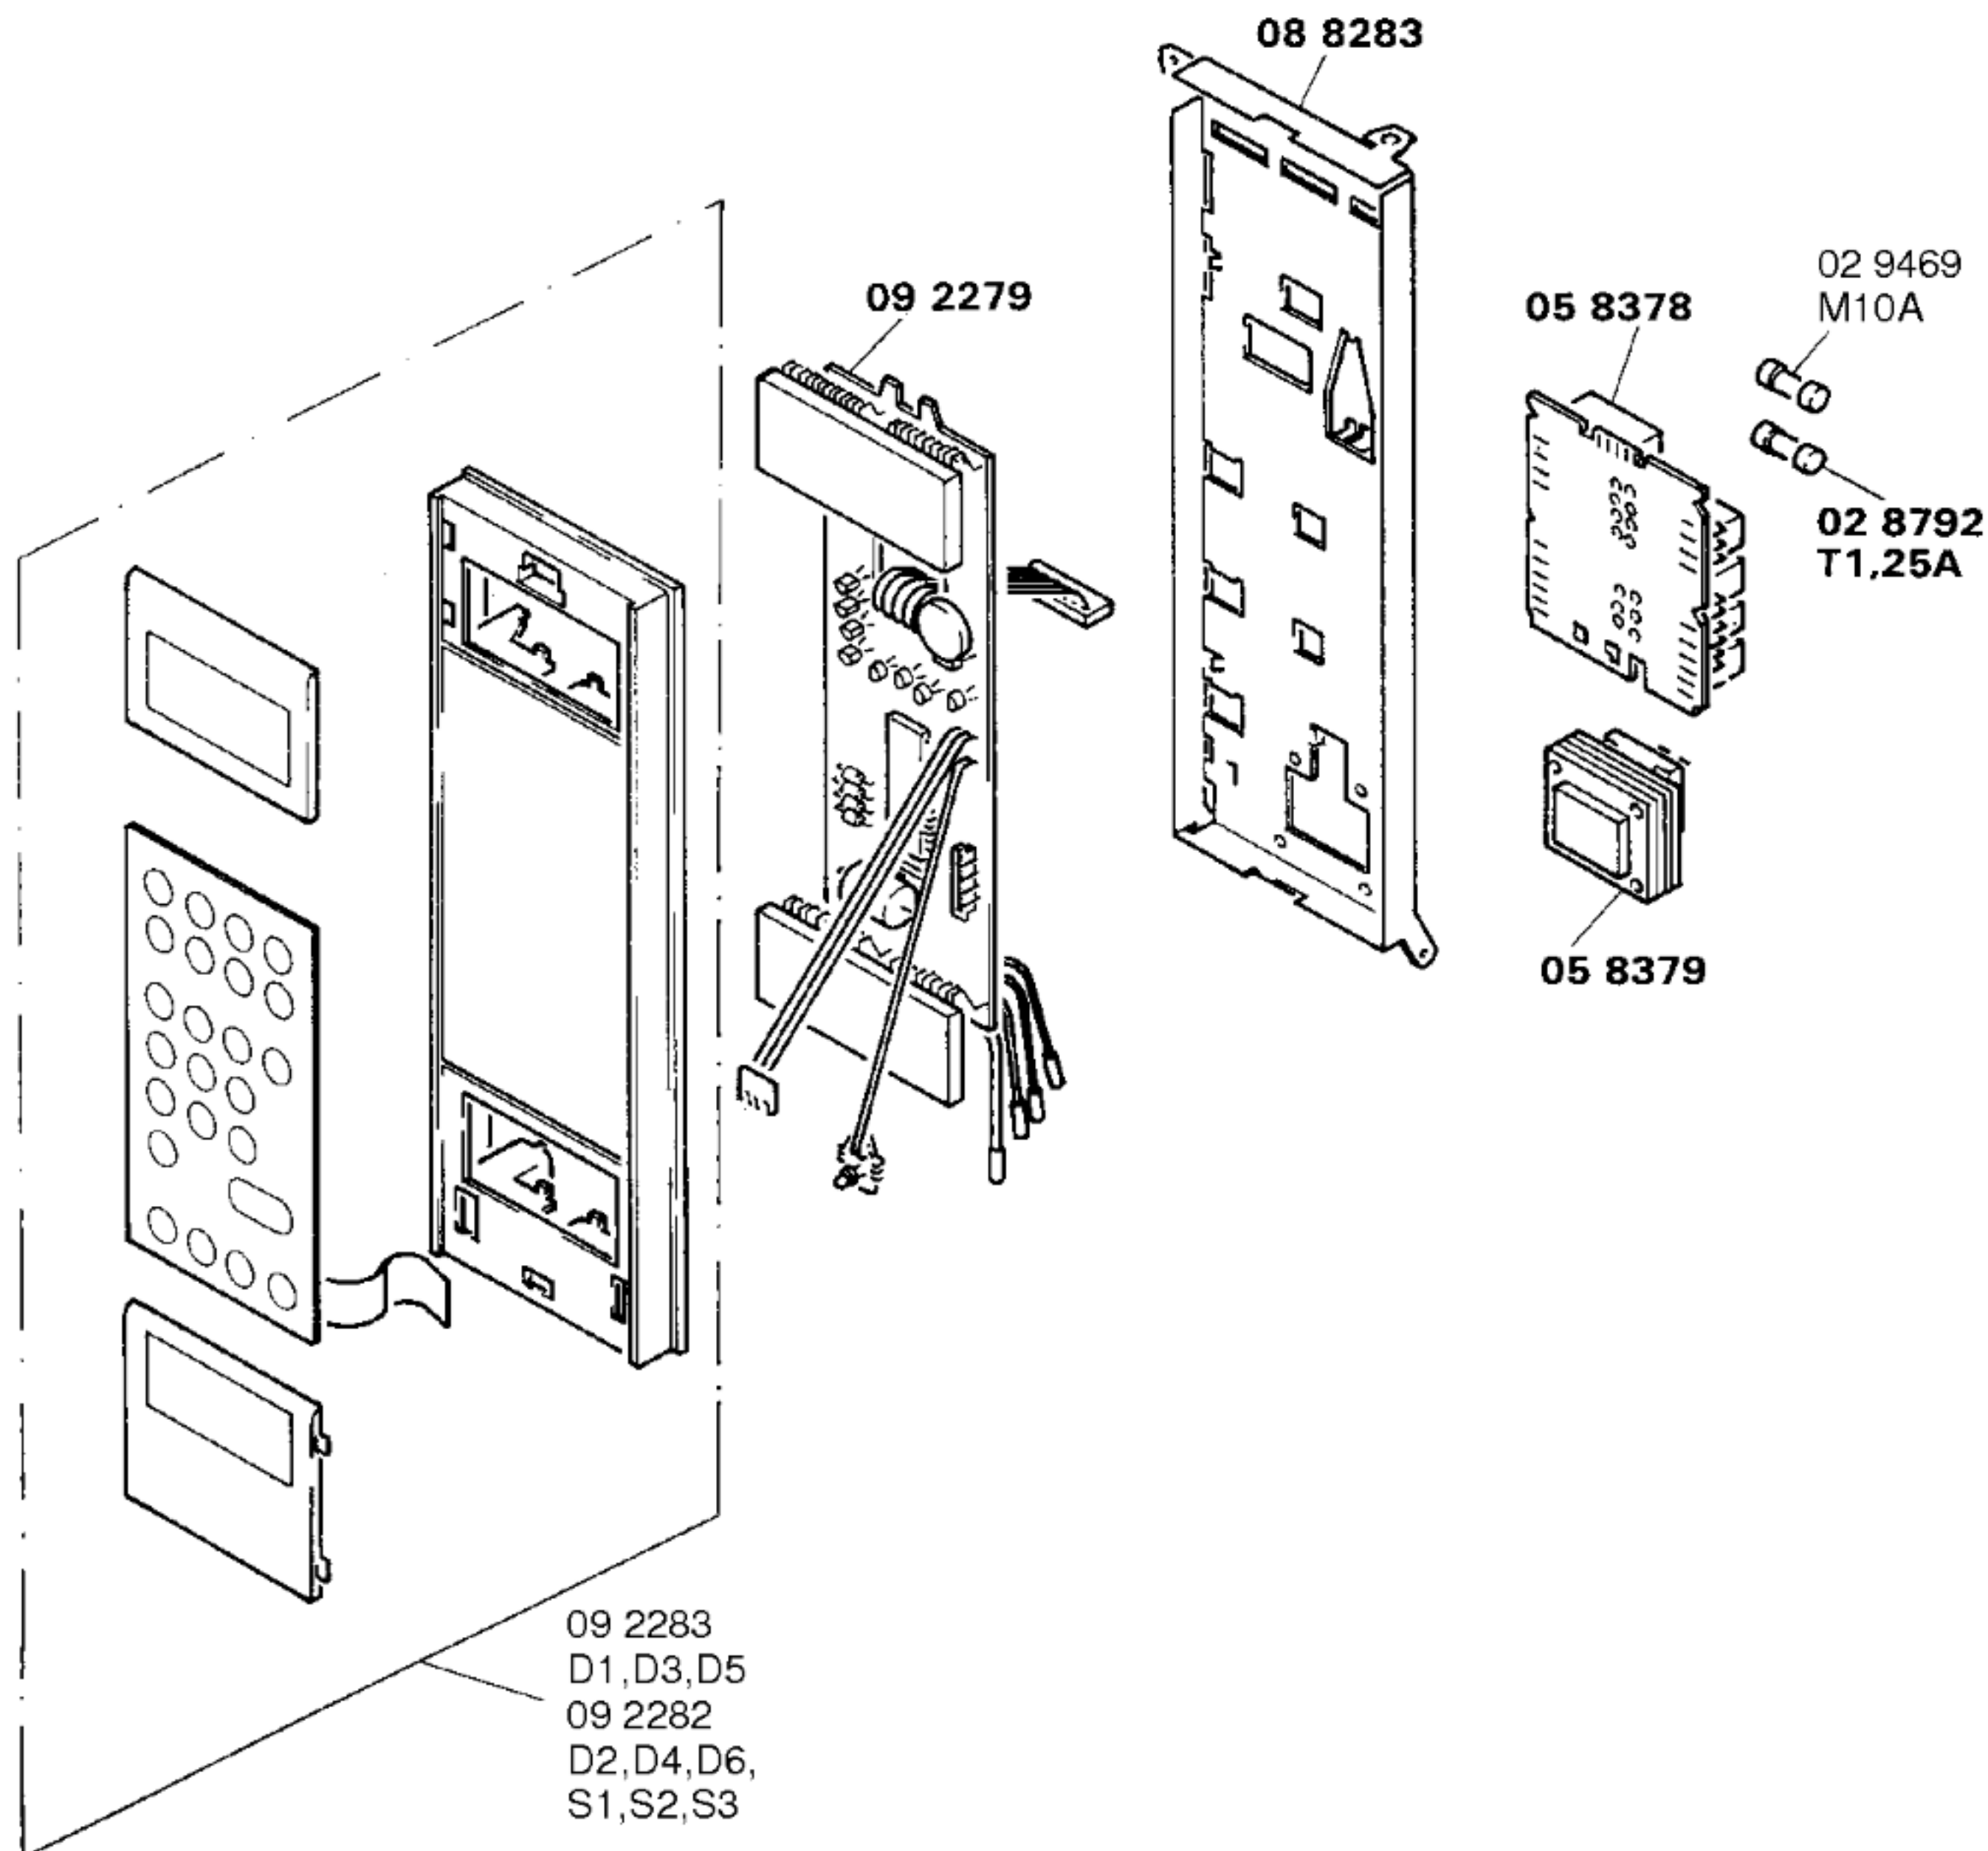

Ident – Nummern – Konstante
 3740

Gebrauchsanweisung

51 4858

(D)

51 5595

(D,F,GB,I,NL)

51 6096

(S,10A)

Tips und Rezepte

51 4859

(D)

Zubehör:

Eibaurahmen

HMZ 8000

D1,D3,D5

HMZ 8020

D2,D4,D6,

S1,S2,S3,

kratzfeste Abdeckung

HMZ 8700

D1,D3,D5

HMZ 8720

D2,D4,D6,

S1,S2,S3

Alu-Backblech

HMZ 19 BB

Glaspfanne

HMZ 10 GP

Glasbräter

HMZ 21 GB

**BOSCH**

HMG8601/01-D1,merianbraun
 HMG8621/01-D2,weiss
 HMG8601/02-D3,merianbraun
 HMG8621/02-D4,weiss


HMG8601/03-D5,merianbraun
 HMG8621/03-D6,weiss
 HMG8621SS/01-S1,weiss
 HMG8621SS/02-S2,weiss

HMG8621SS/03-S3,weiss

HERDE
 Mikrowellenherde

Ident – Nummern – Konstante
 3740

- 1) 03 0671
 2) 03 0813
 Arretierstift

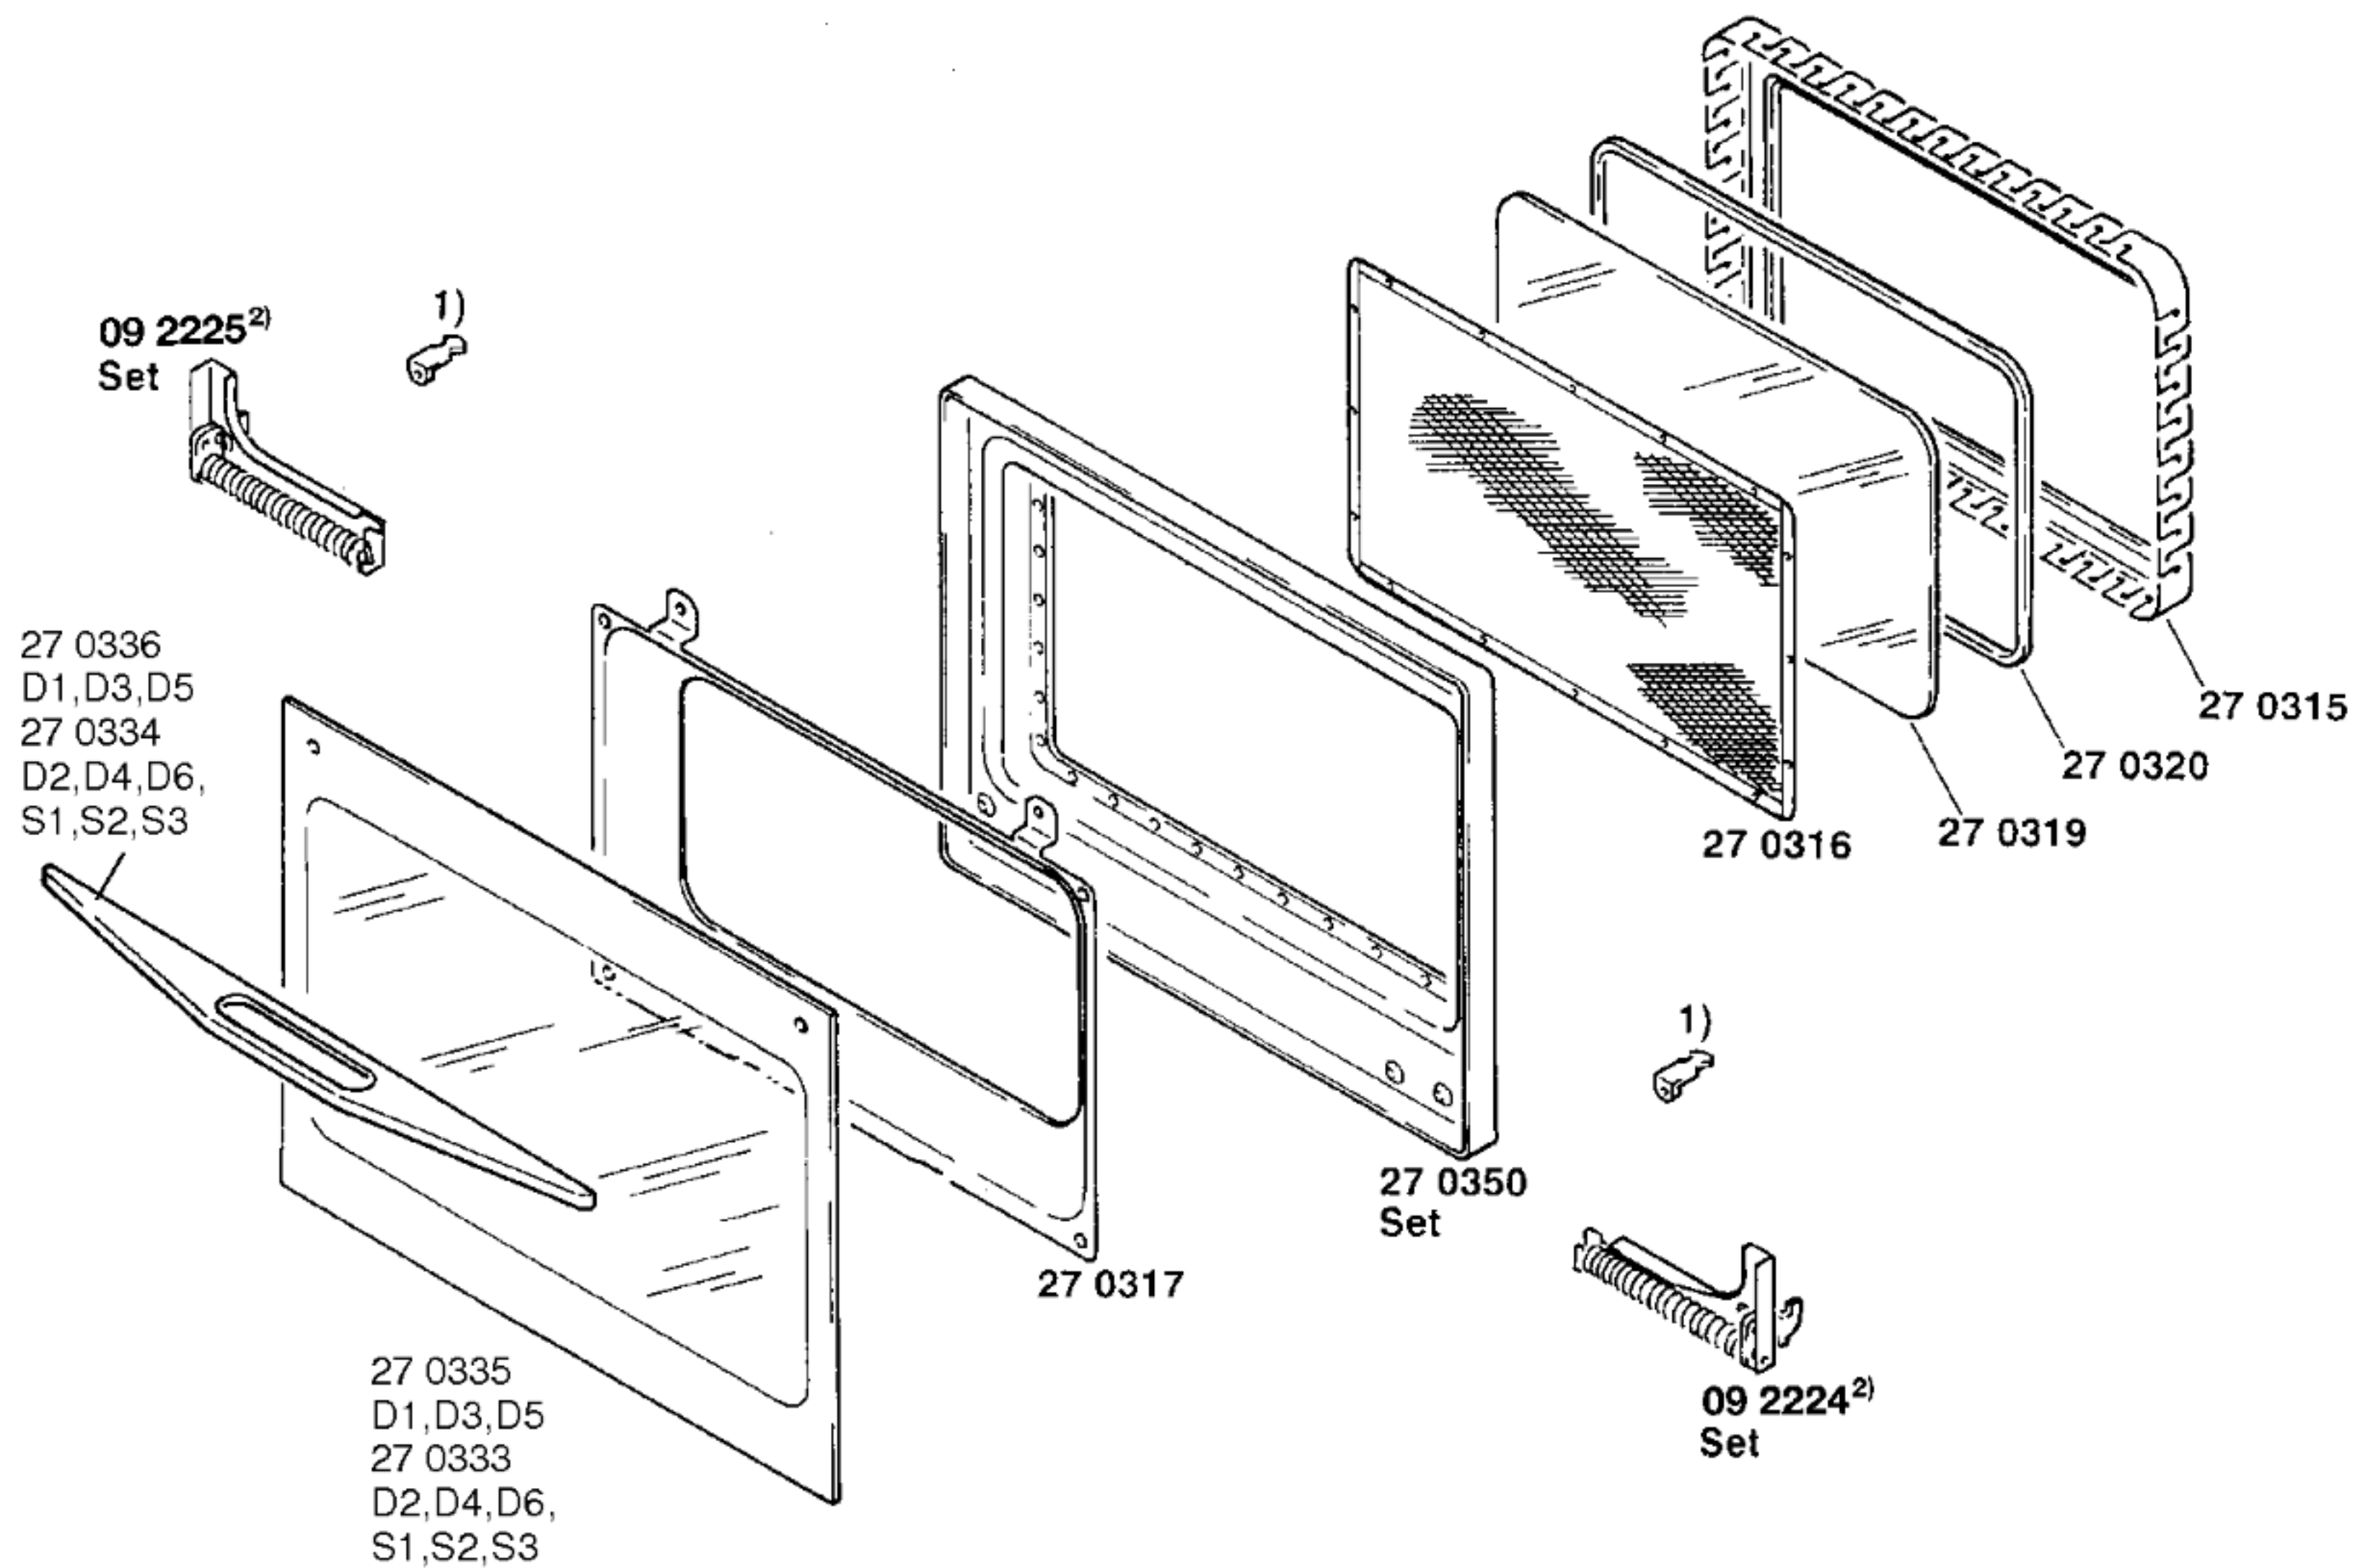


**BOSCH**

HMG8601/01-D1,merianbraun
HMG8621/01-D2,weiss
HMG8601/02-D3,merianbraun
HMG8621/02-D4,weiss

HMG8601/03-D5,merianbraun
HMG8621/03-D6,weiss
HMG8621SS/01-S1,weiss
HMG8621SS/02-S2,weiss

HMG8621SS/03-S3,weiss

HERDE
Mikrowellenherde

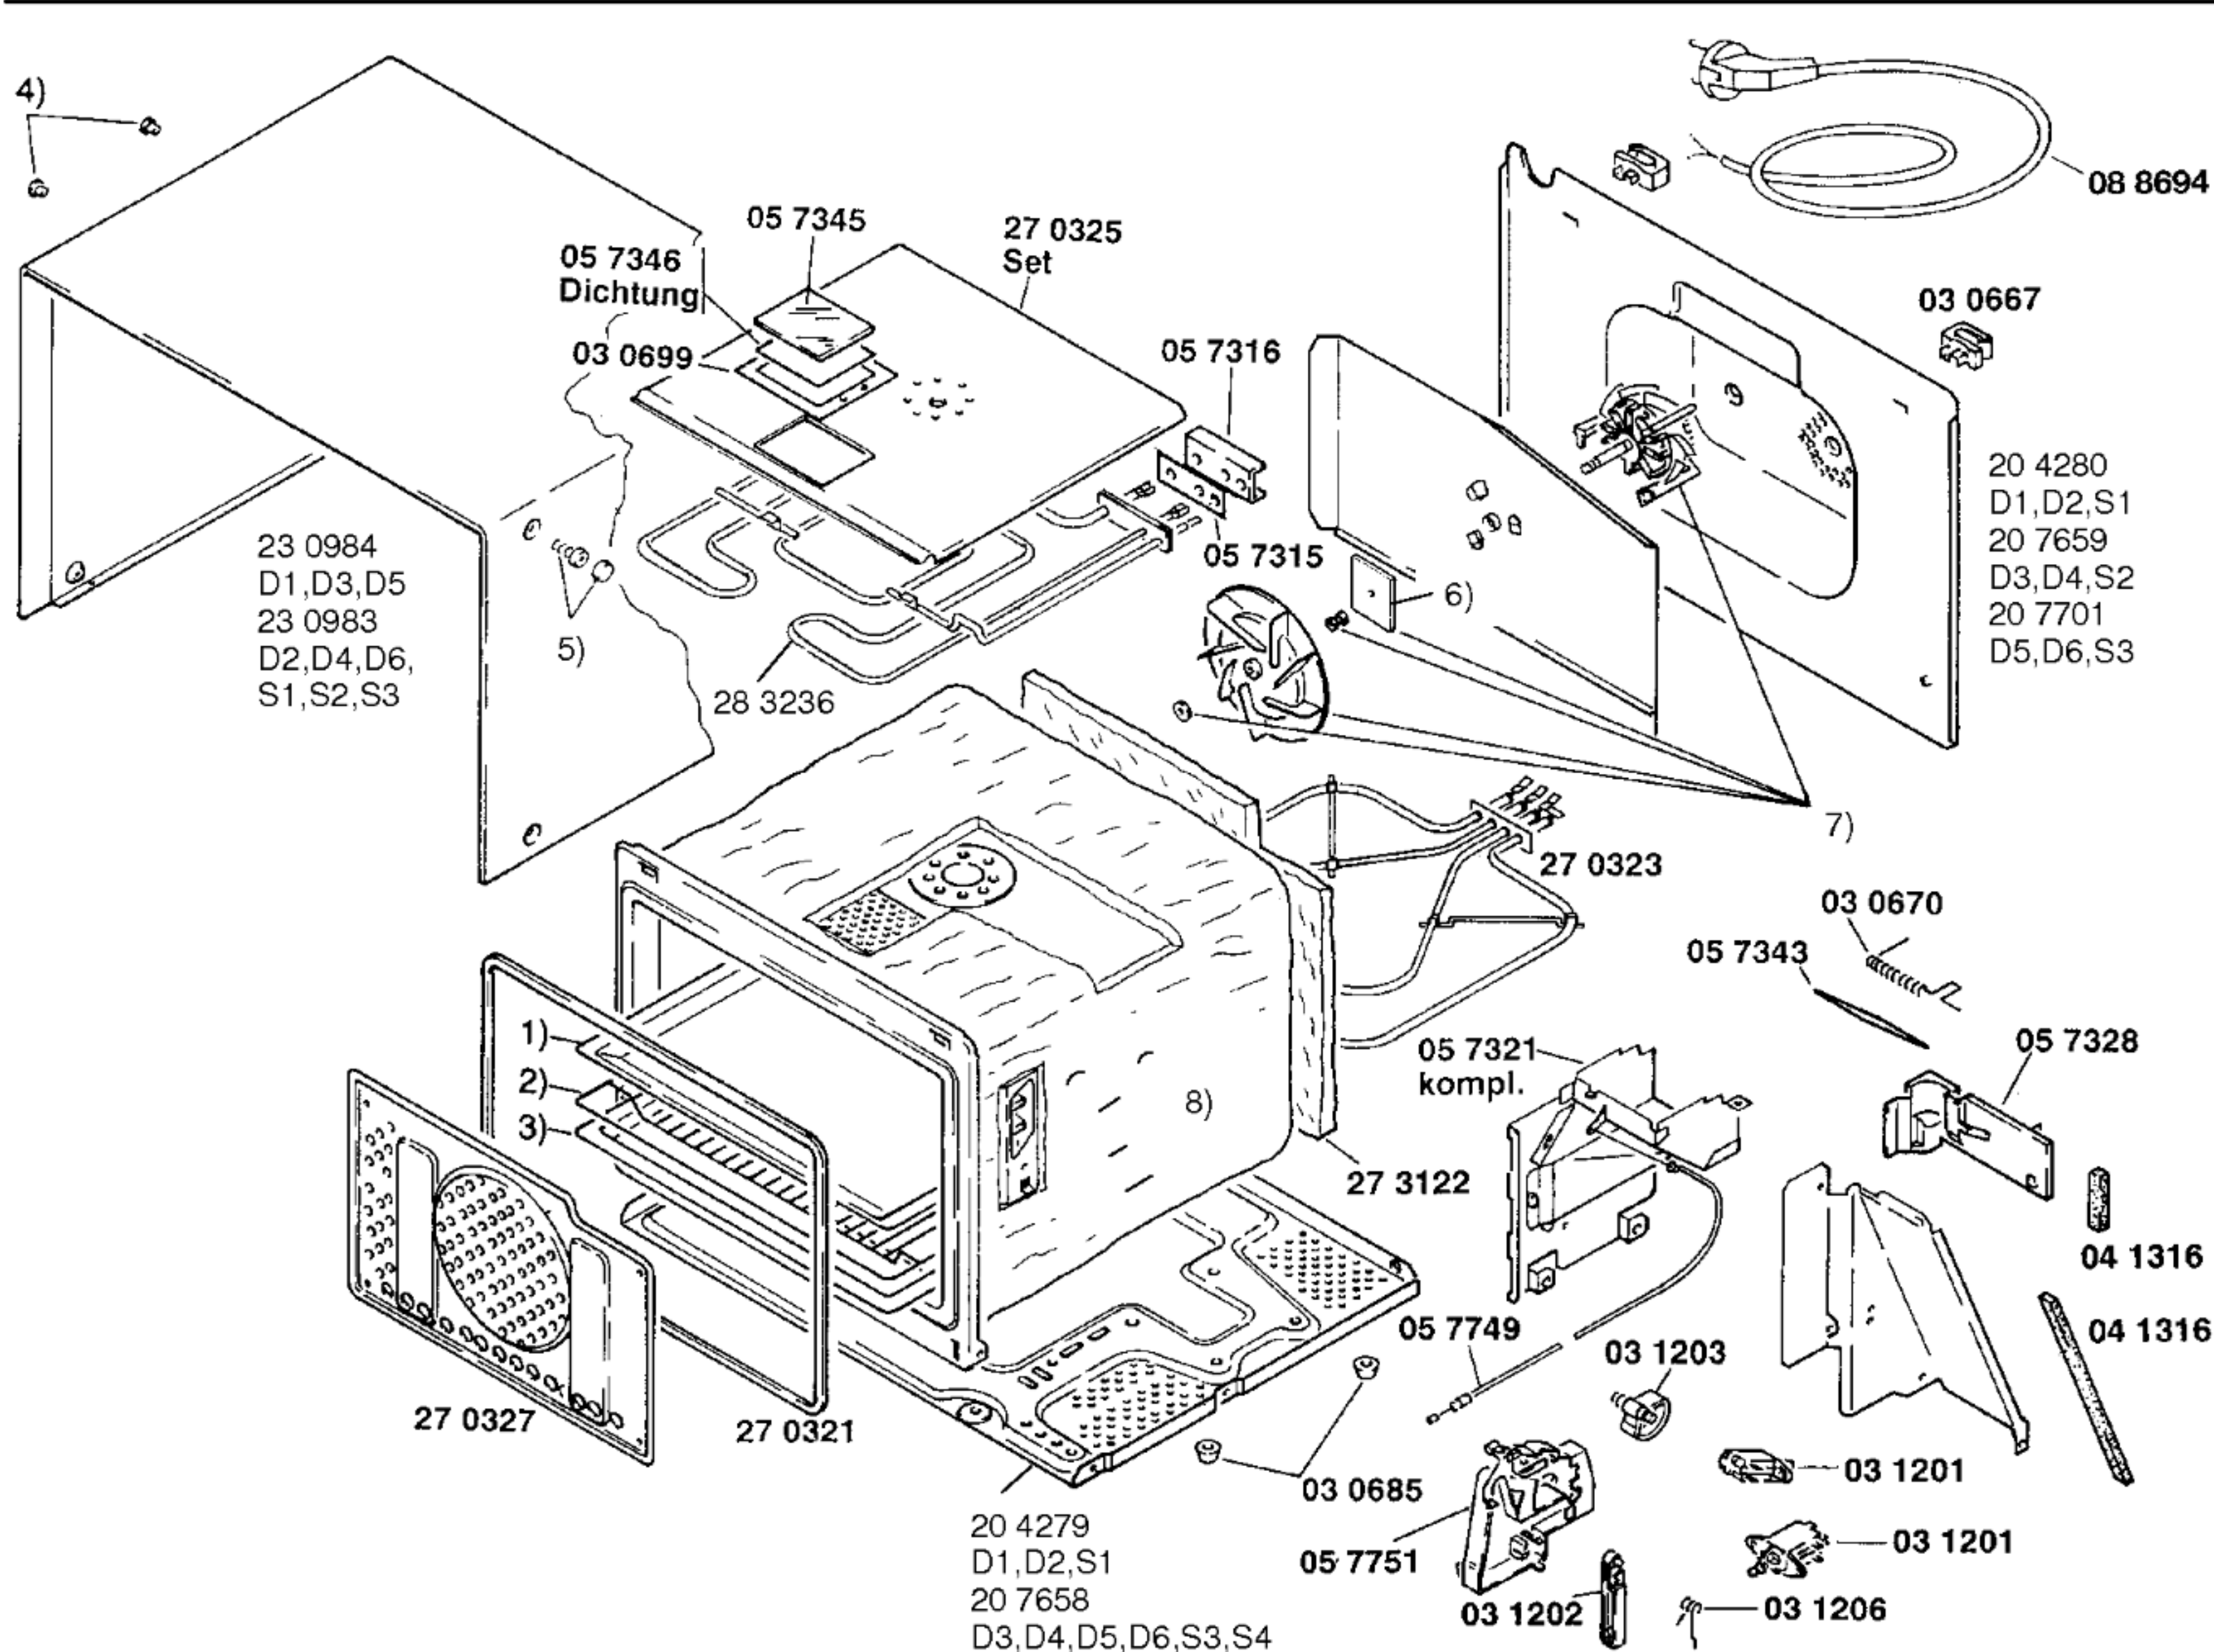

Ident - Nummern - Konstante
3740

- 1) 11 4538
Backblech
- 2) 11 4539
Rost
- 3) 11 4537
Glasschale
- 4) 03 0698
D1,D3,D5
03 0688
D2,D4,D6,
S1,S2,S3
- 5) 03 2282
D1,D3,D5
03 2281
D2,D4,D6,
S1,S2,S3
- 6) 03 2778
D1,D2,D3,D4,
S1,S2
- 7) 08 8518
kompl.
D1,D2,D3,D4,S1,S2
09 2677
D5,D6,S3
- 8) 23 1101
D1,D2,D3,D4,S1,S2
Set
23 2269
D5,D6,S3
Set

02 8732
Anschlag-Backblech


**BOSCH**

HMG8601/01-D1,merianbraun
 HMG8621/01-D2,weiss
 HMG8601/02-D3,merianbraun
 HMG8621/02-D4,weiss

HMG8601/03-D5,merianbraun
 HMG8621/03-D6,weiss
 HMG8621SS/01-S1,weiss
 HMG8621SS/02-S2,weiss

HMG8621SS/03-S3,weiss

HERDE
 Mikrowellenherde

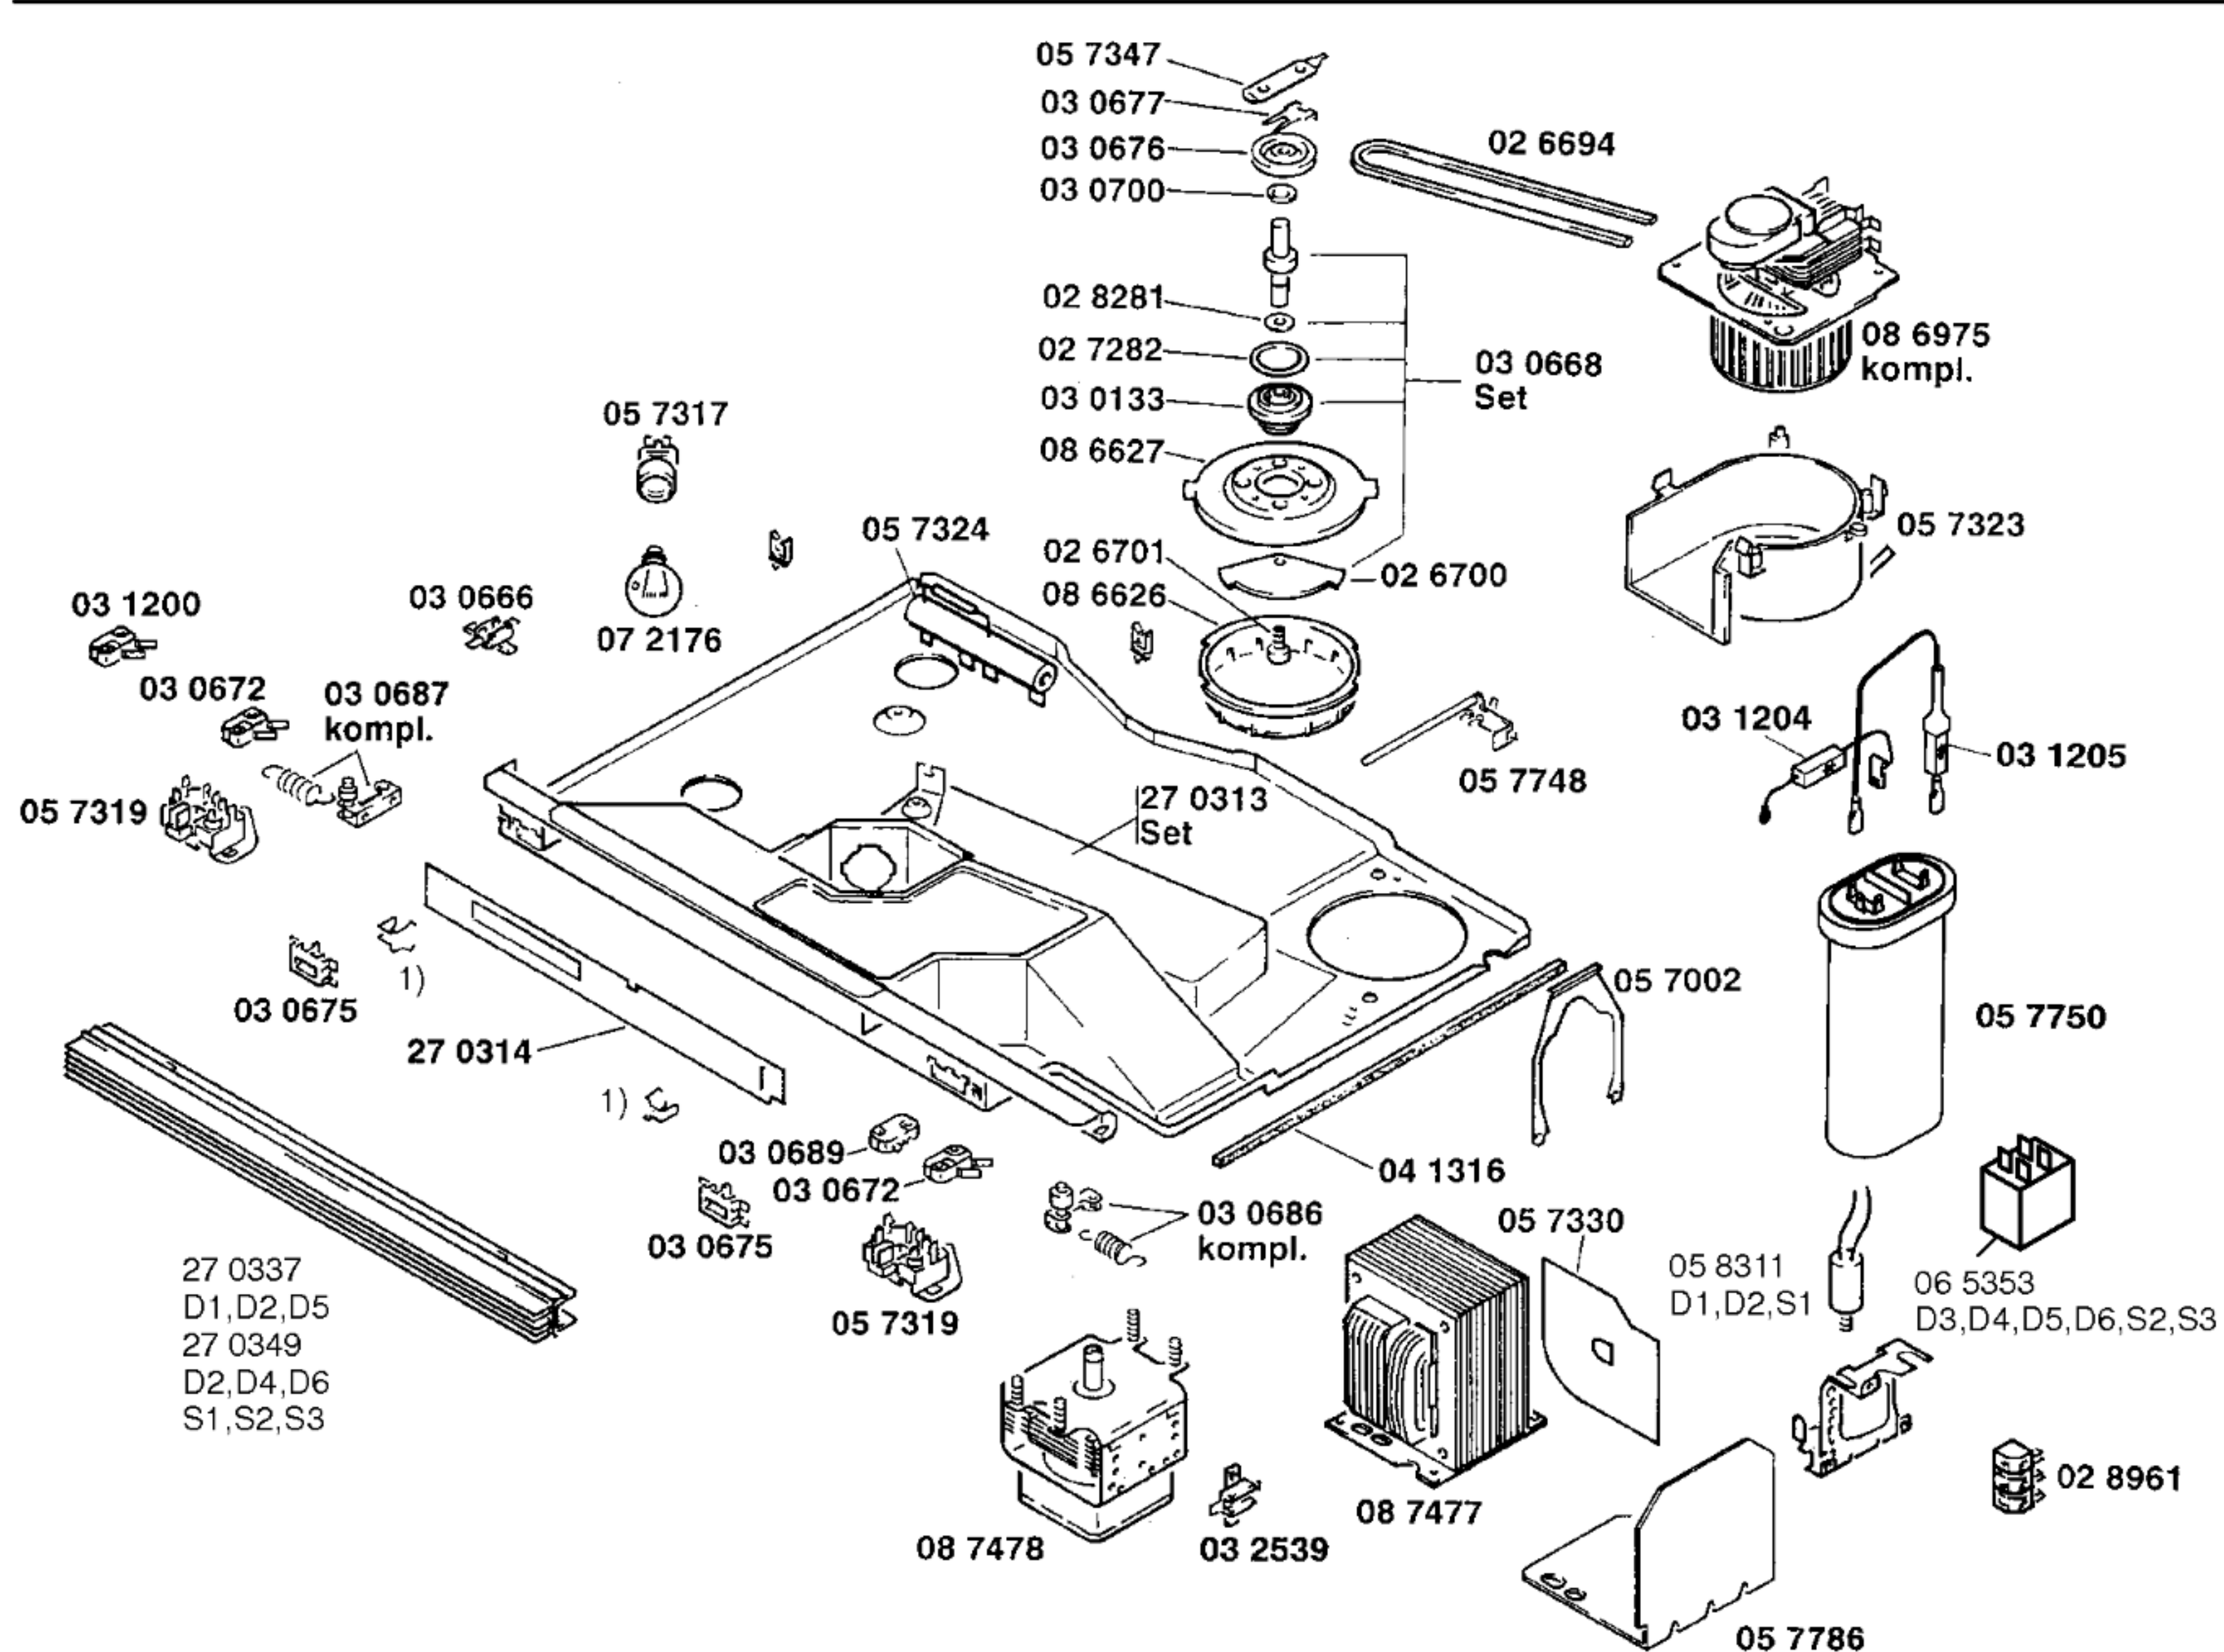

Ident - Nummern - Konstante
 3740

1) 03 0678
 D2,D4,D6,
 S1,S2,S3