 


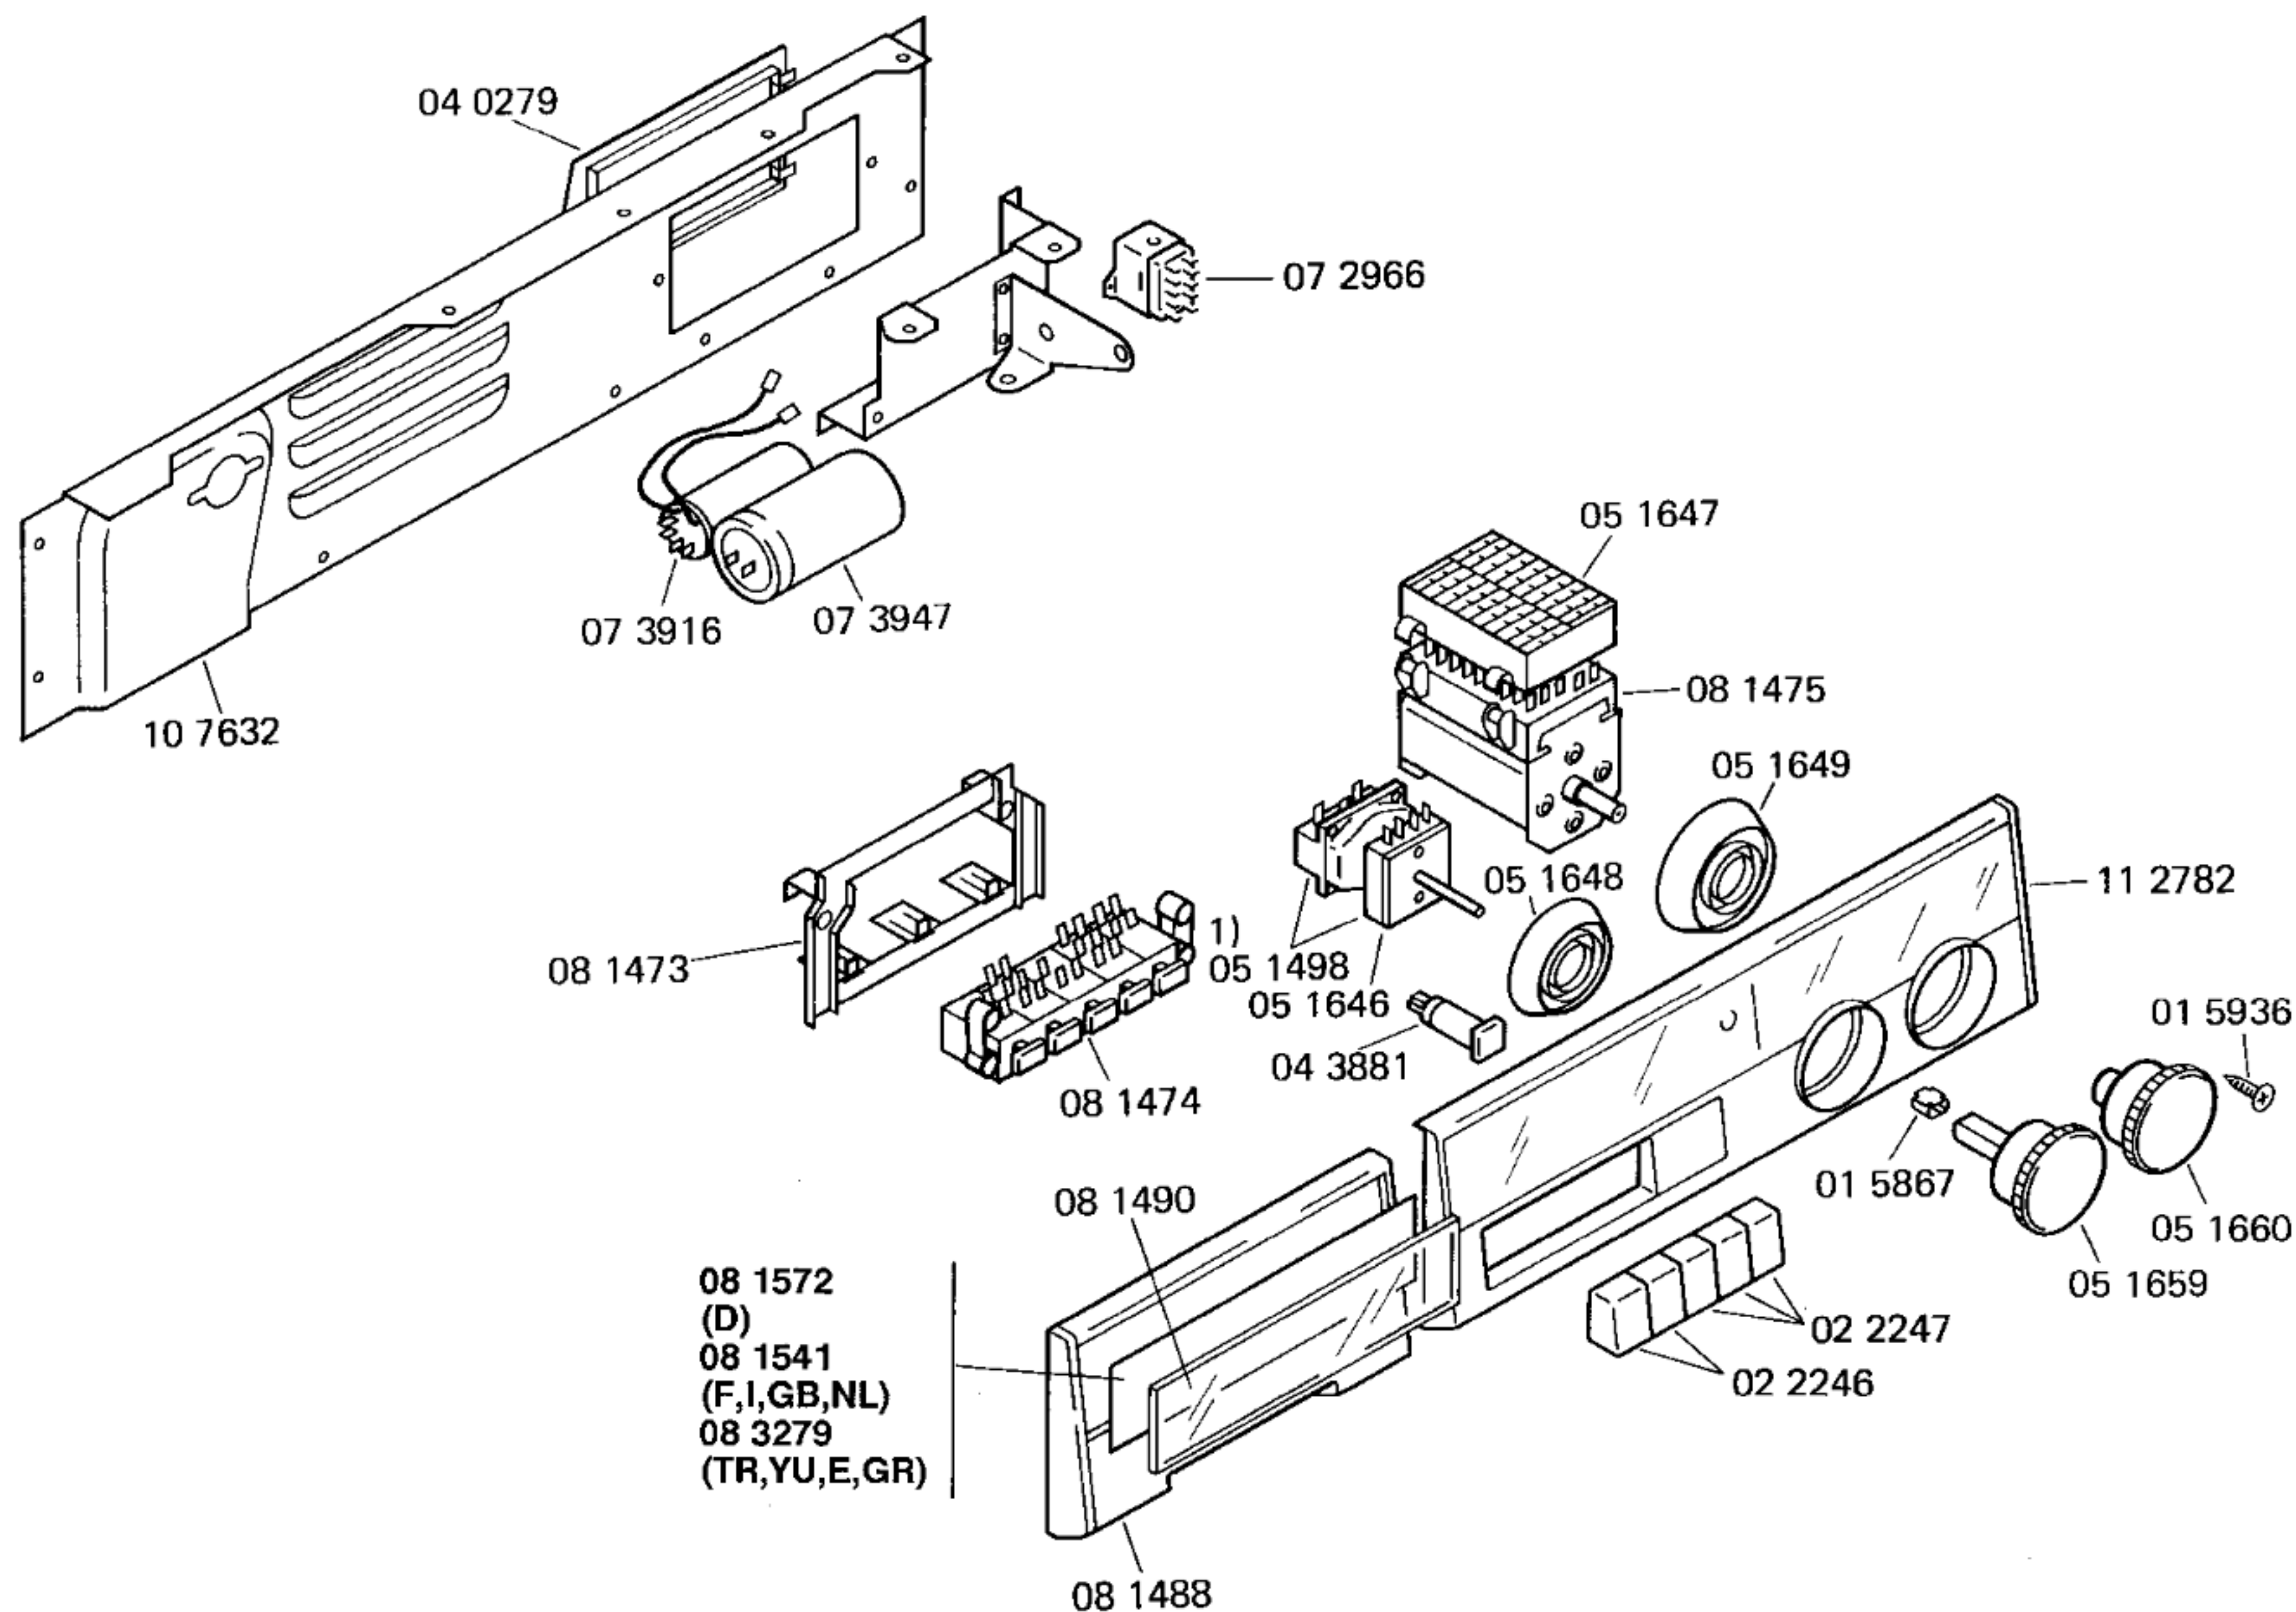


Aufstellanweisungen:


51 1221
D1
(D,F,I,NL,GB,E)
51 1430
CH1
(D,F,I)

51 1238
Gebrauchsanweisung
(D,F,I,NL,GB,E)

51 1223
Programmtabelle
(D,F,I,NL,GB,E)

  1) Bis FD 6301
05 1648 mitbestellen!

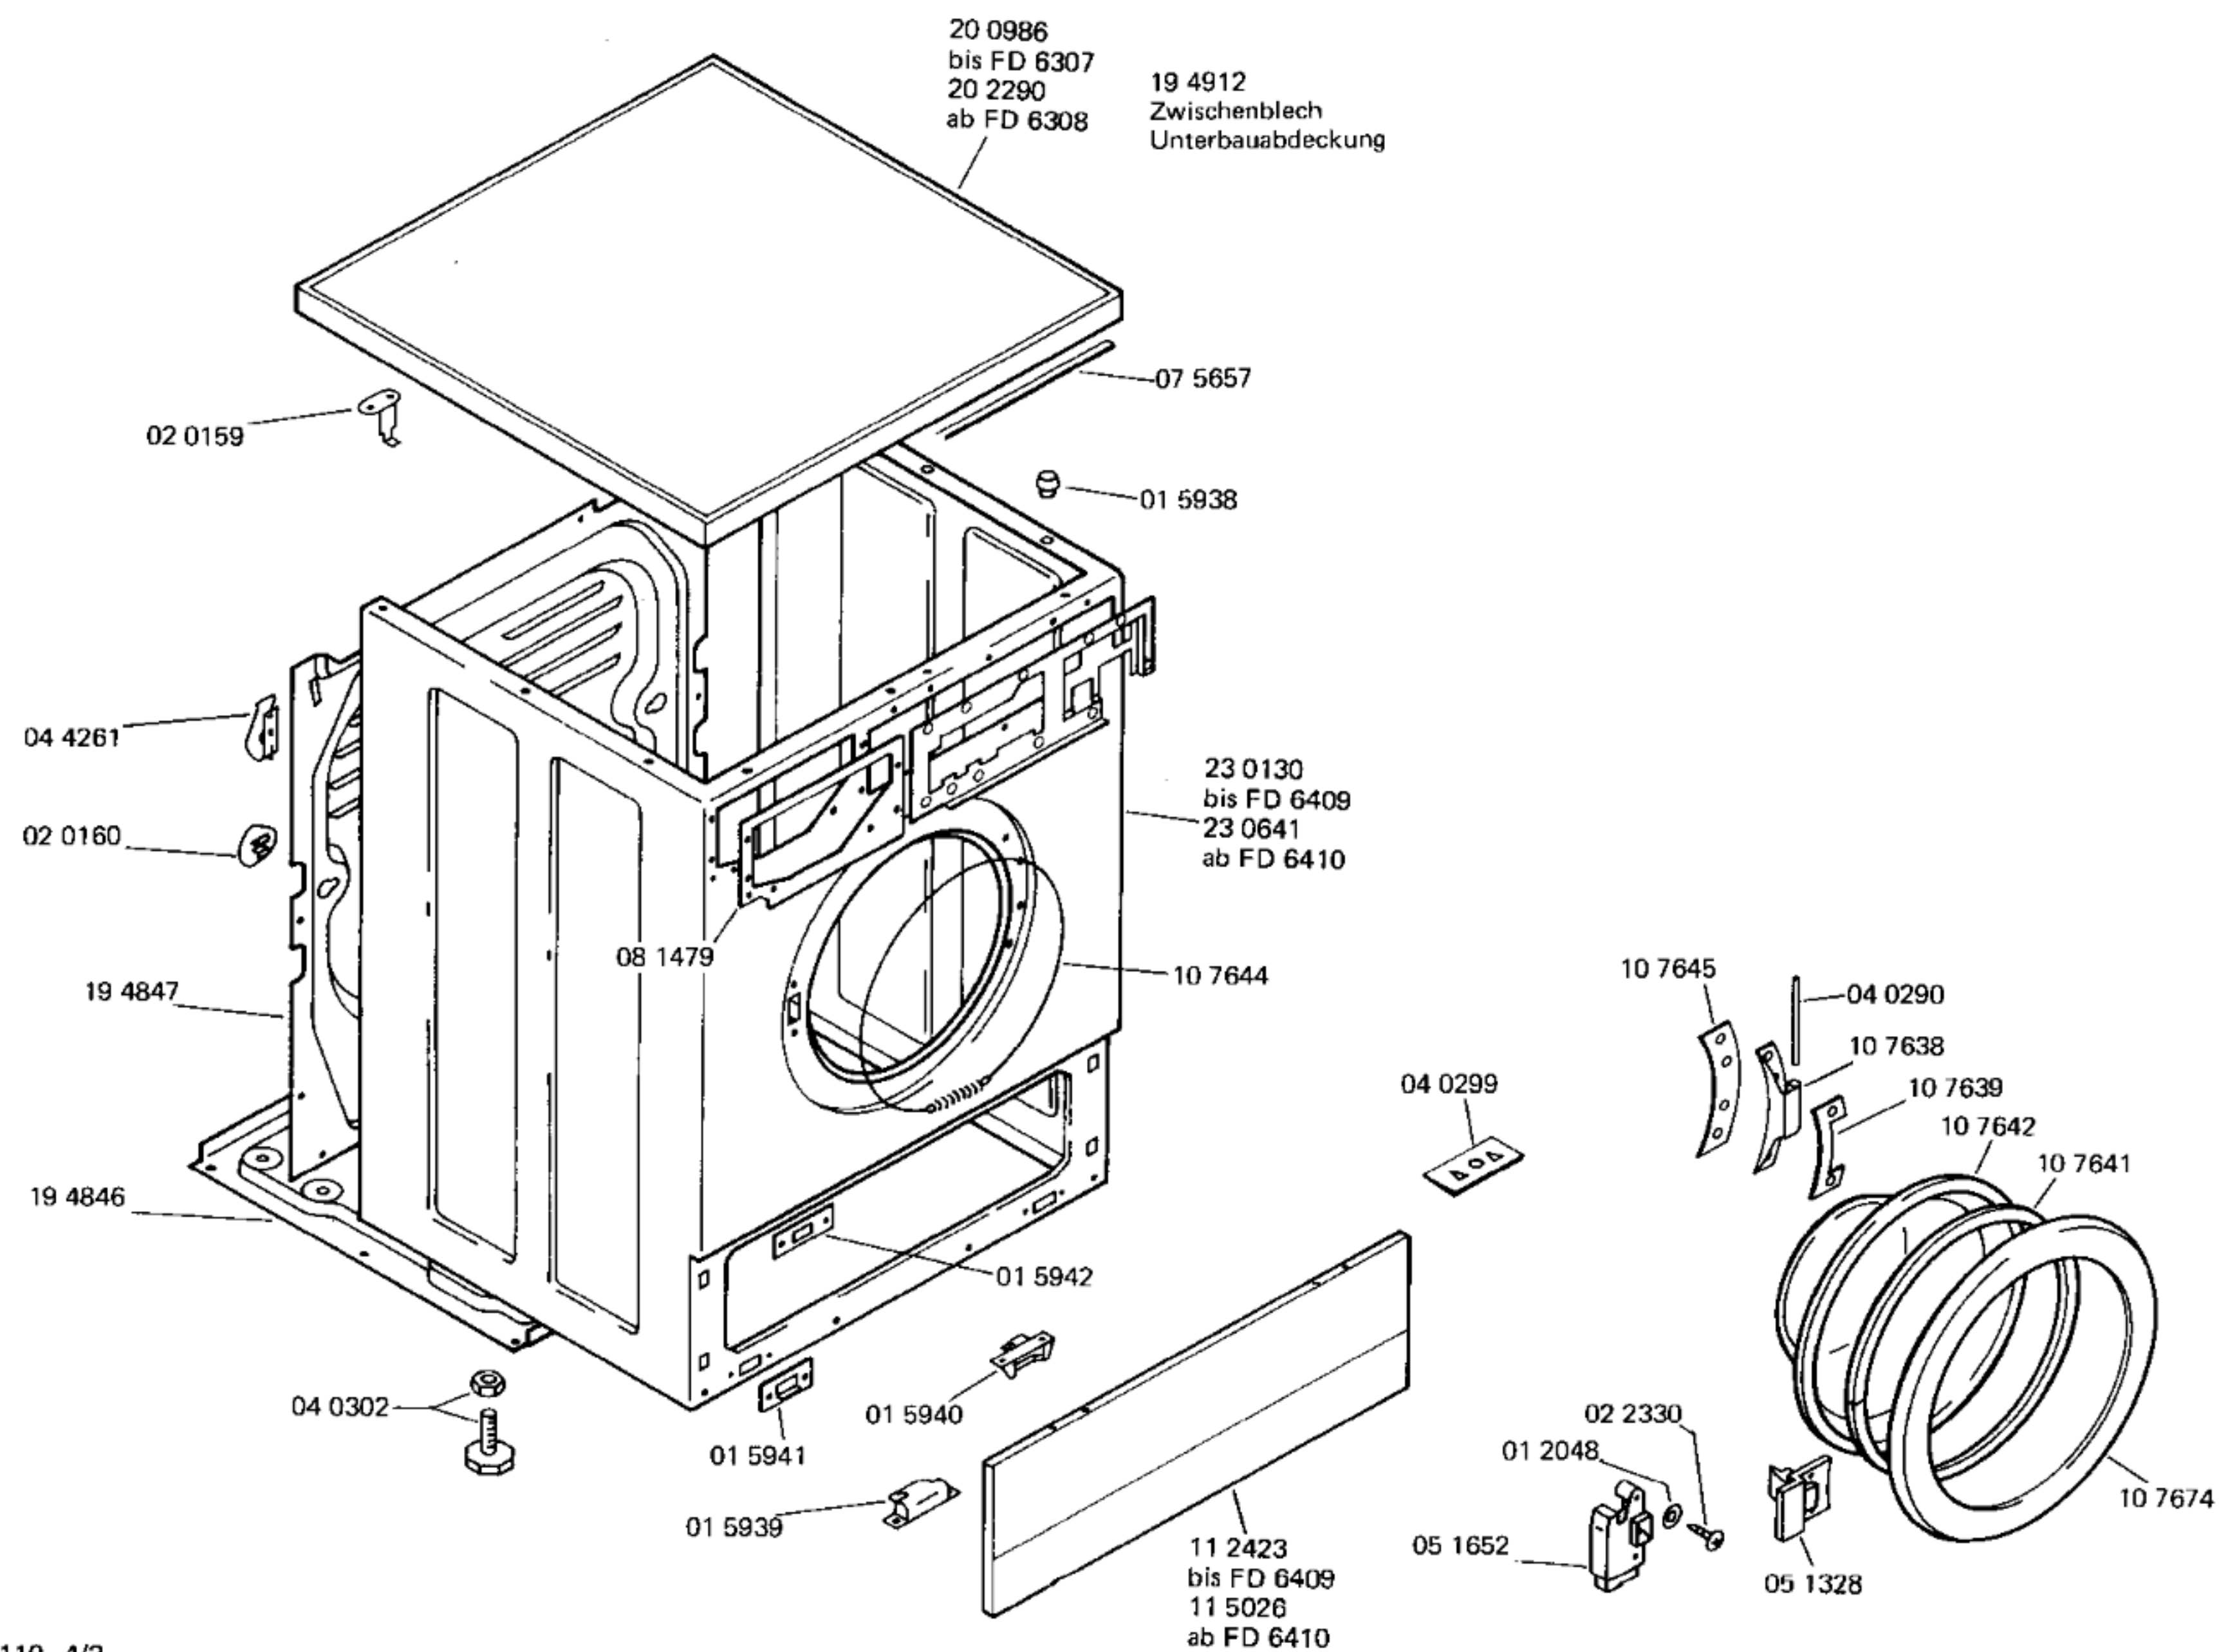

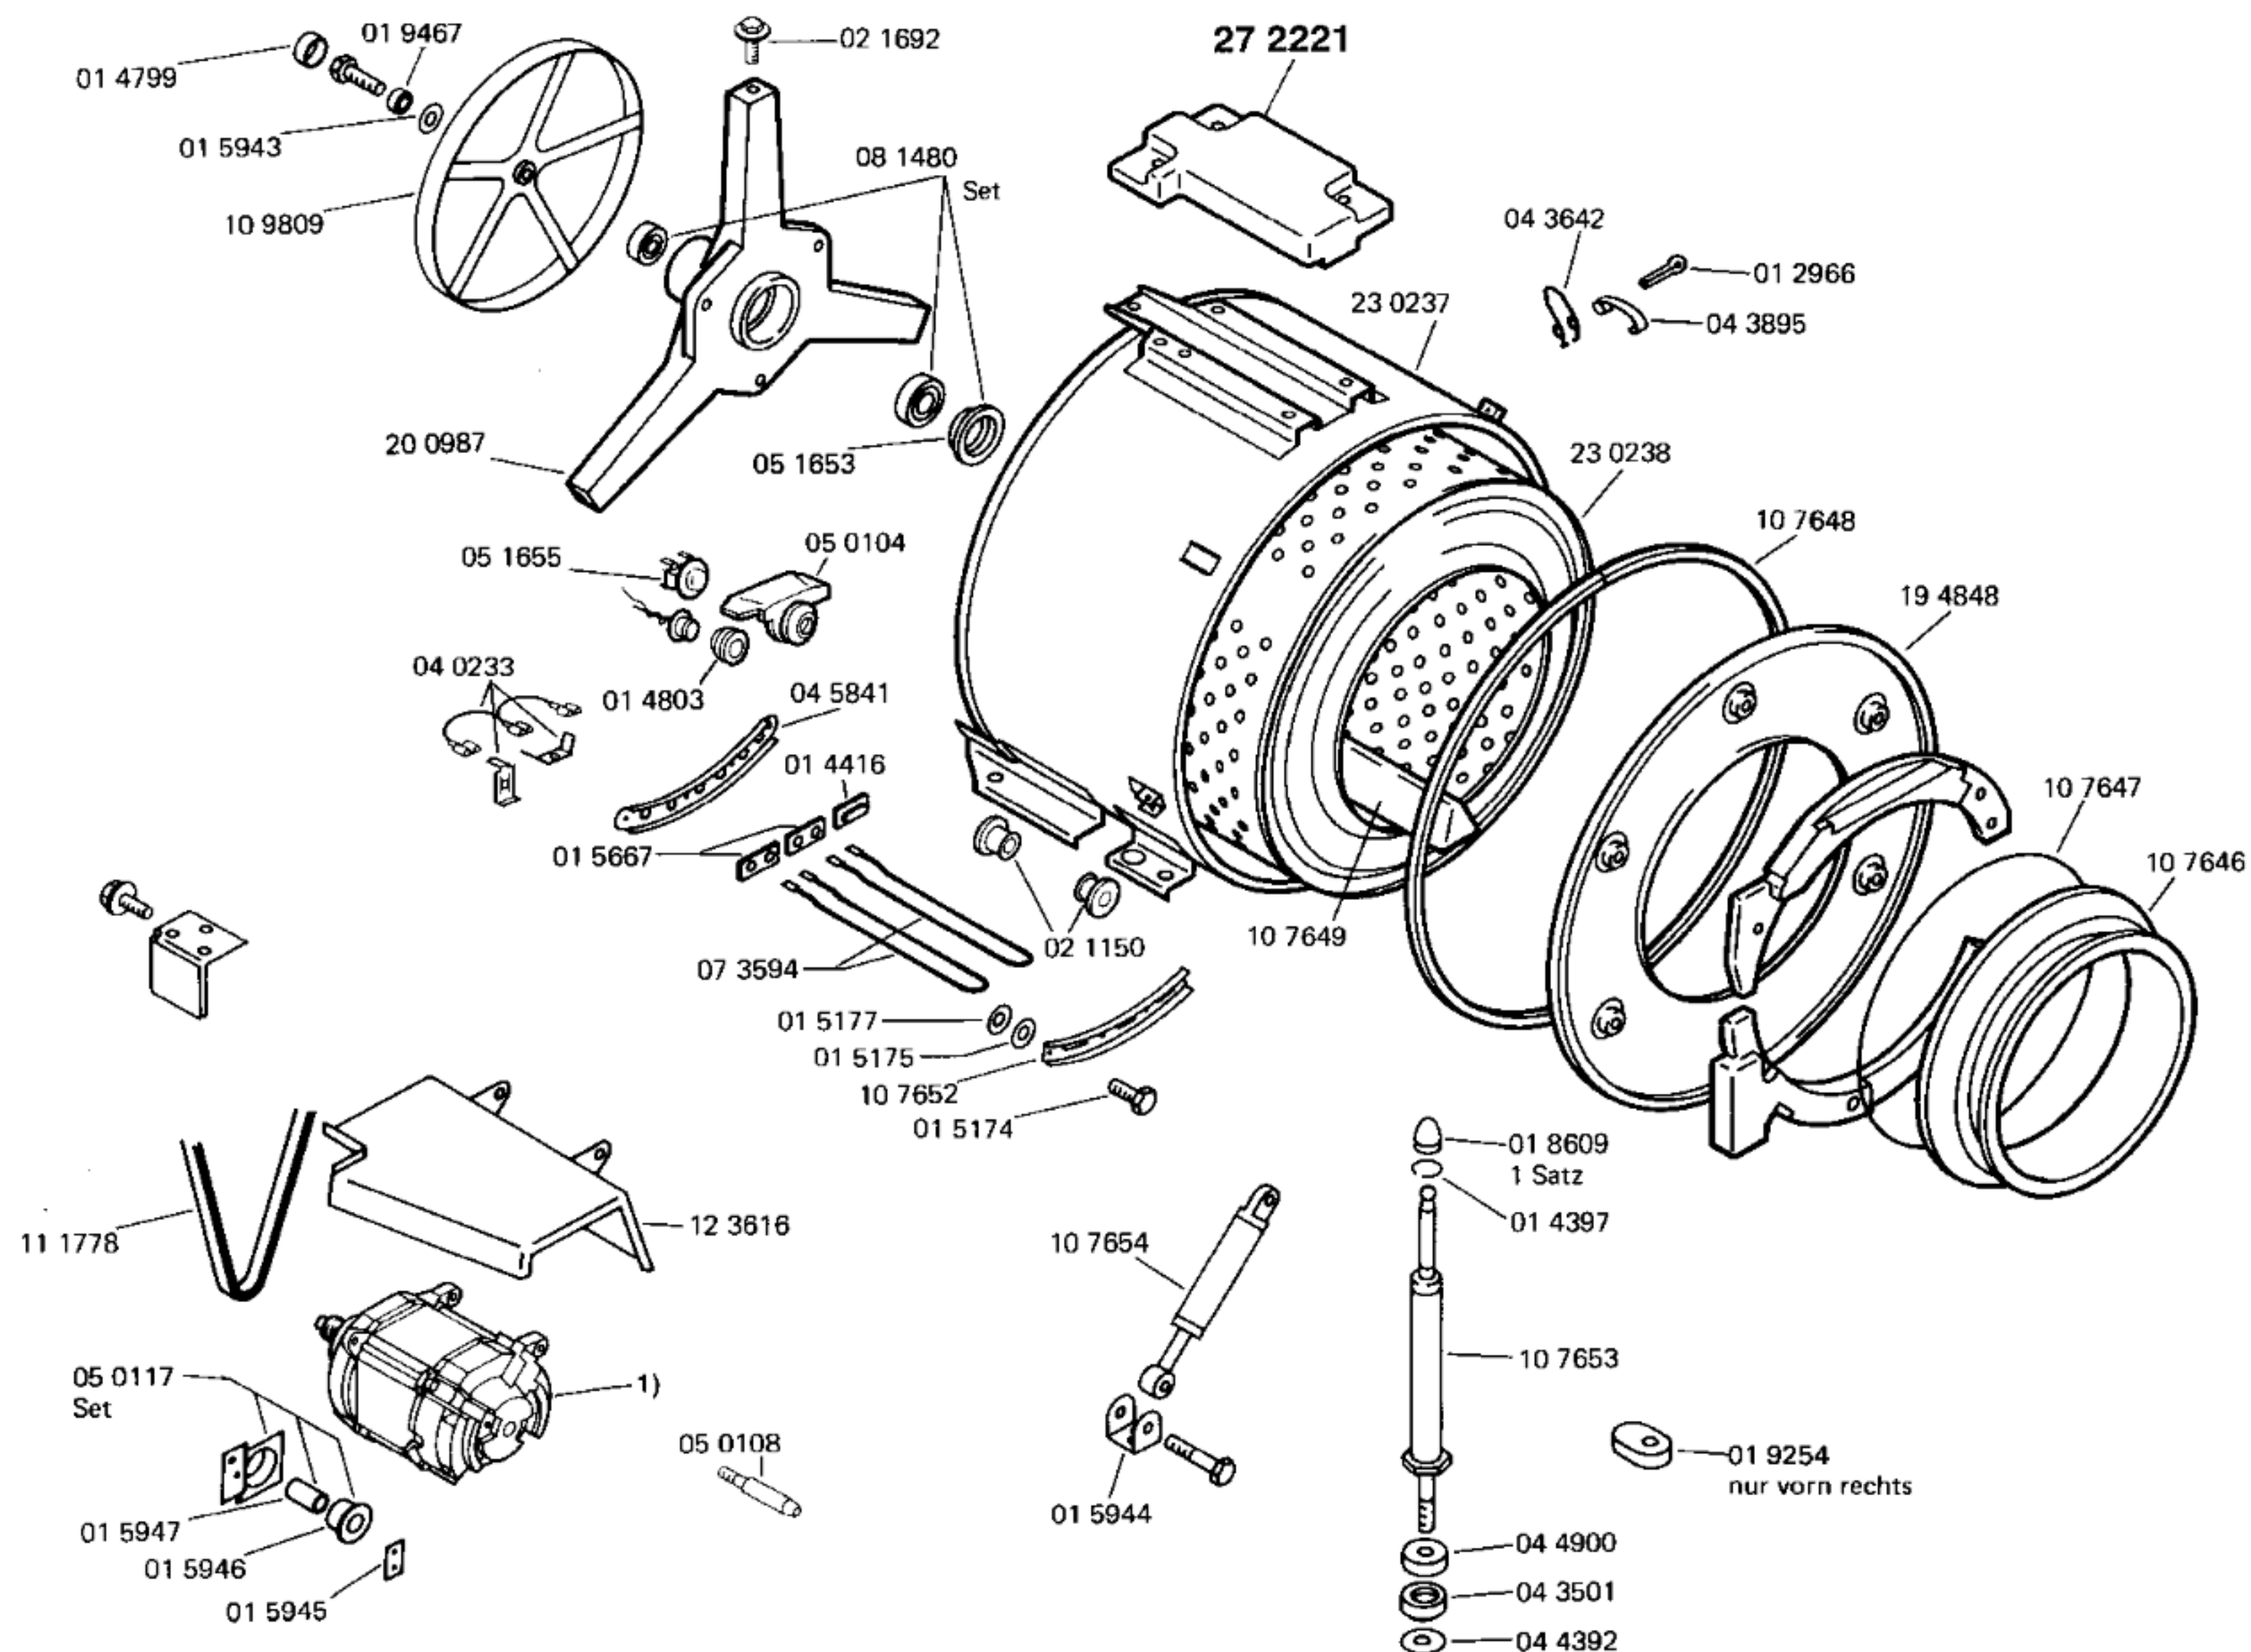

1) 14 0178 *
bis FD 6510
14 0376
ab FD 6511

*05 0117
bis FD 6409
mitbestellen

