


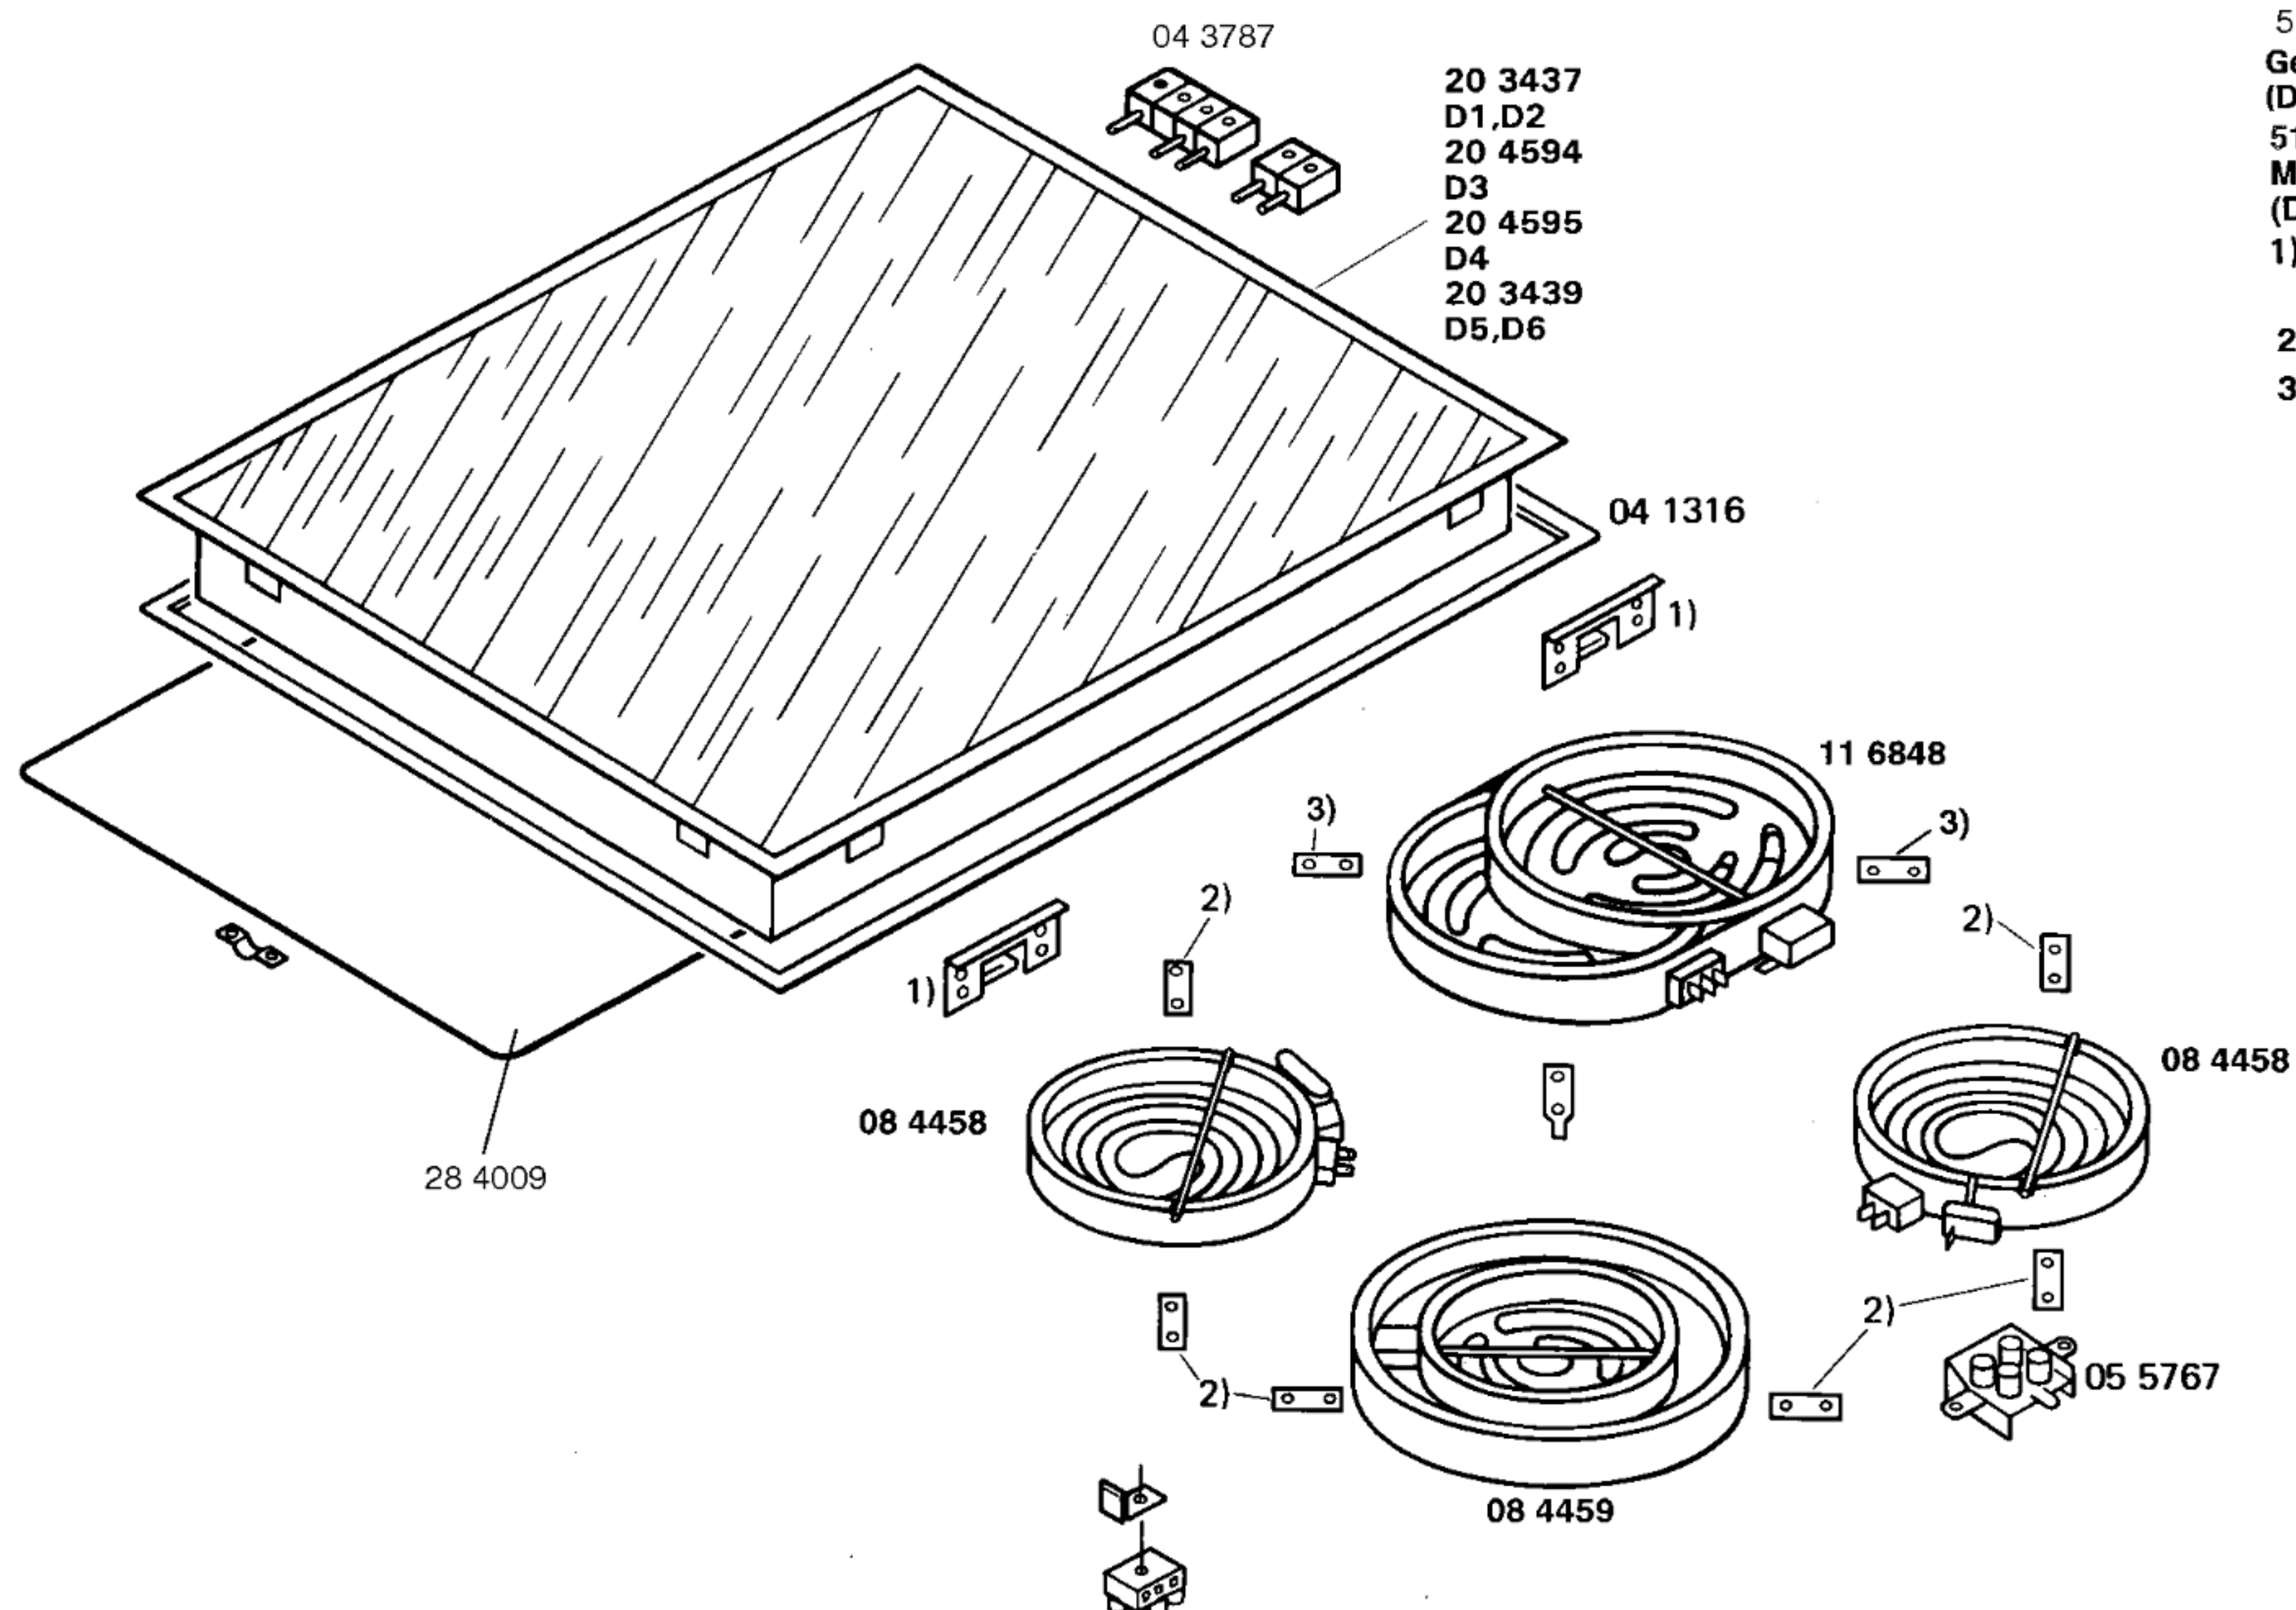

51 3883
Gebrauchsanweisung
(D, GB, F, NL, I, E)
51 2849
Montageanleitung
(D, GB, F, NL, I, E)
1) 05 5224
Einbausatz
2) 02 6752
3) 02 6761