 


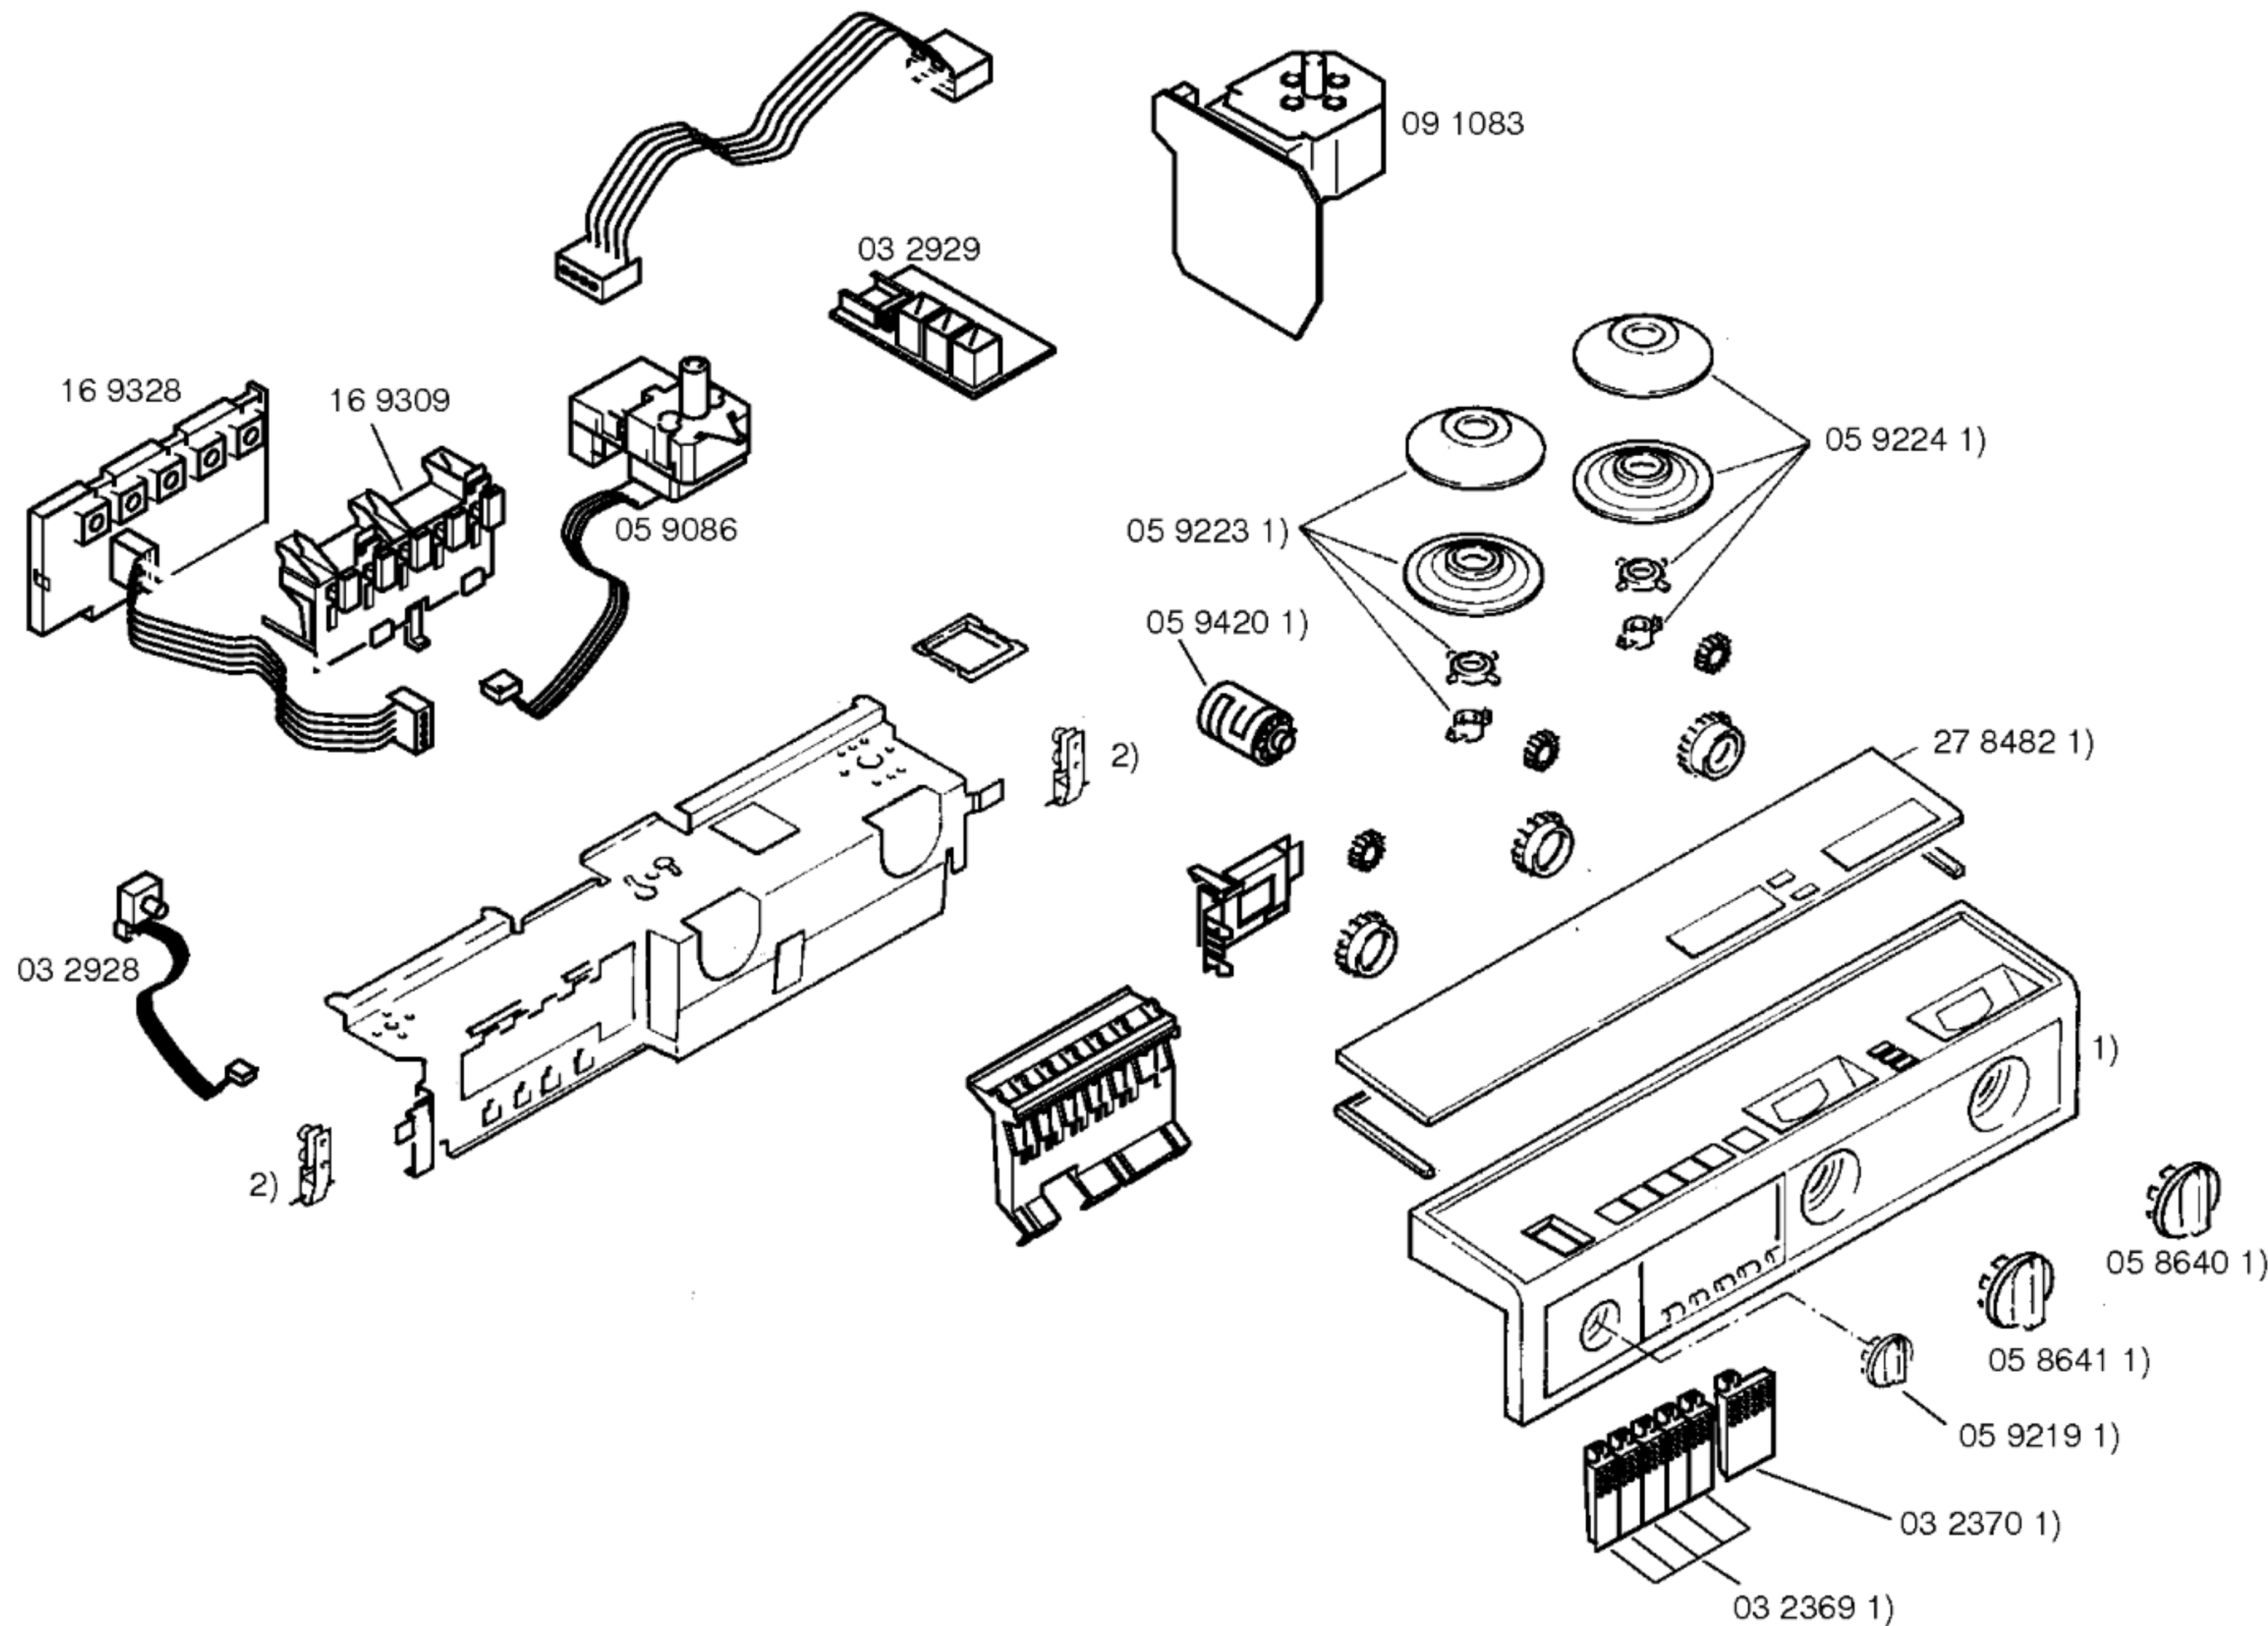

Gebrauchsanweisung

51 5346

(D)

51 5347

(NL, F, E, GB)

51 5348

(SF, N, S)

Aufstellanweisung

51 5345

(D, I, NL, F, E, GB)

Programmtabelle

51 5350

(NL, F, E, GB)

51 5542

(D)

1) 27 8479

Blende kompl.

2) 03 2288

Zubehör:

Bodenbefestigung


WX 9756


Wäsche-Top

WZ 10120


Entkalker

  
46 0038

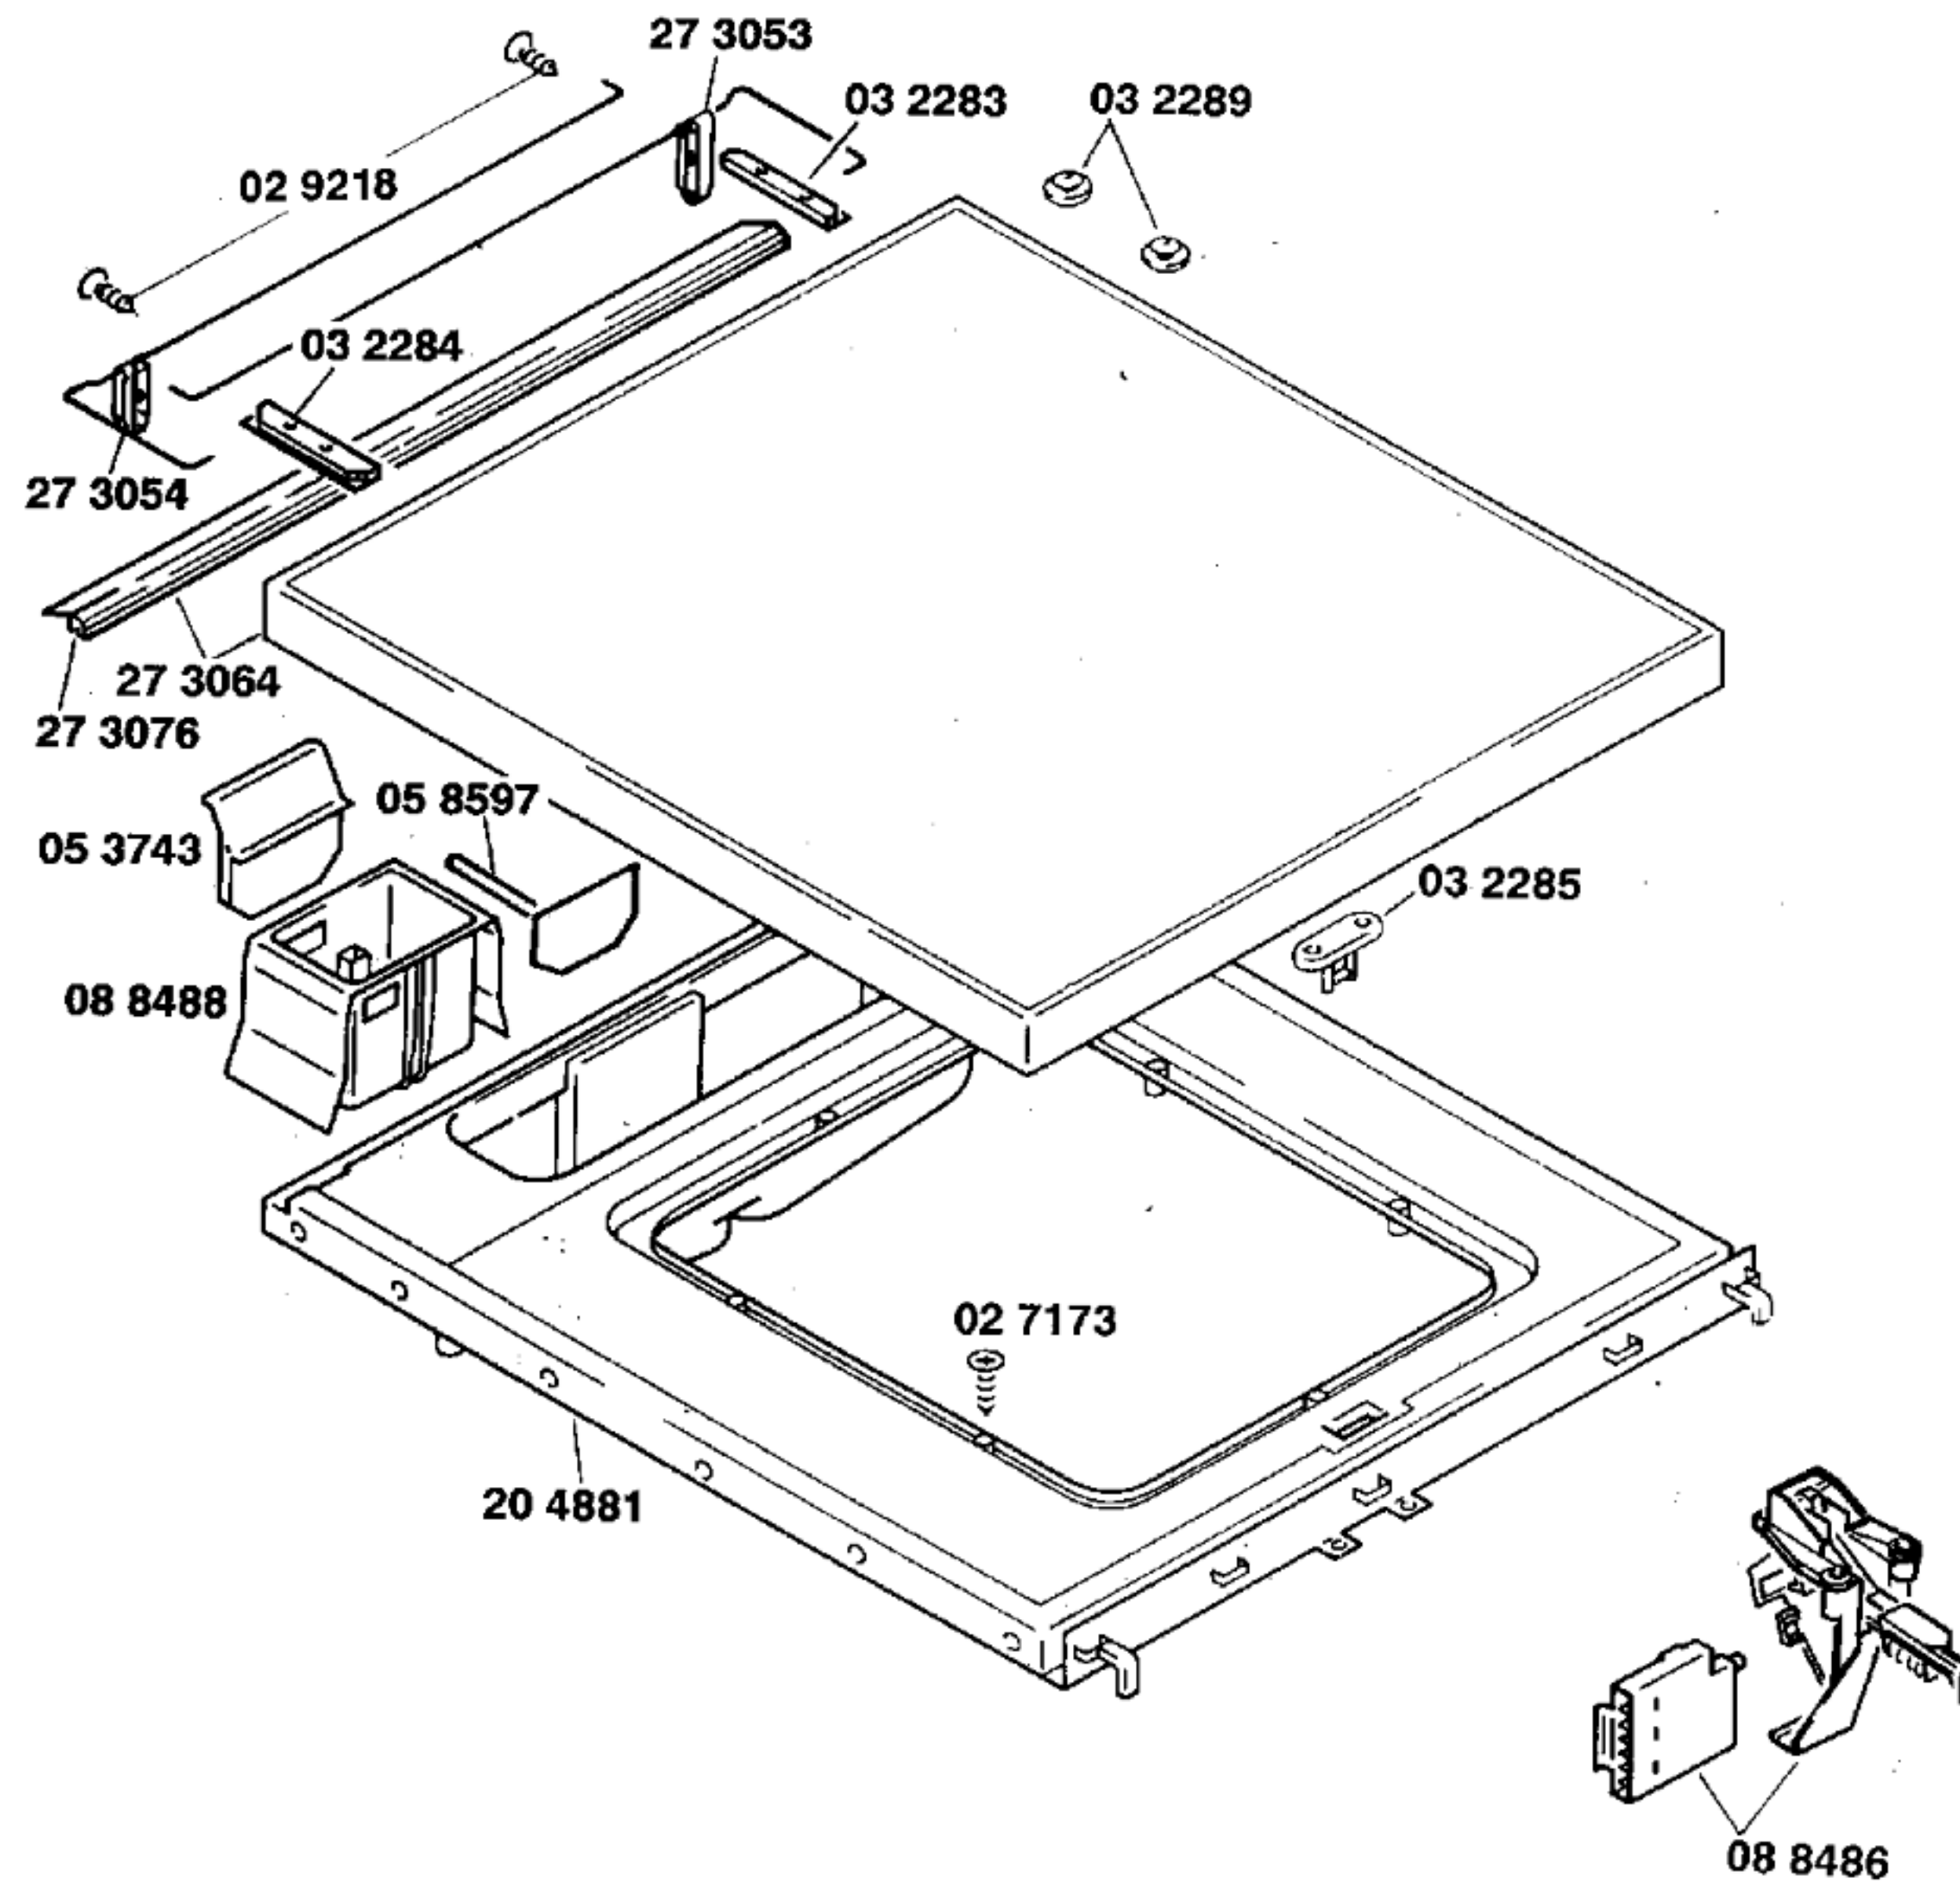

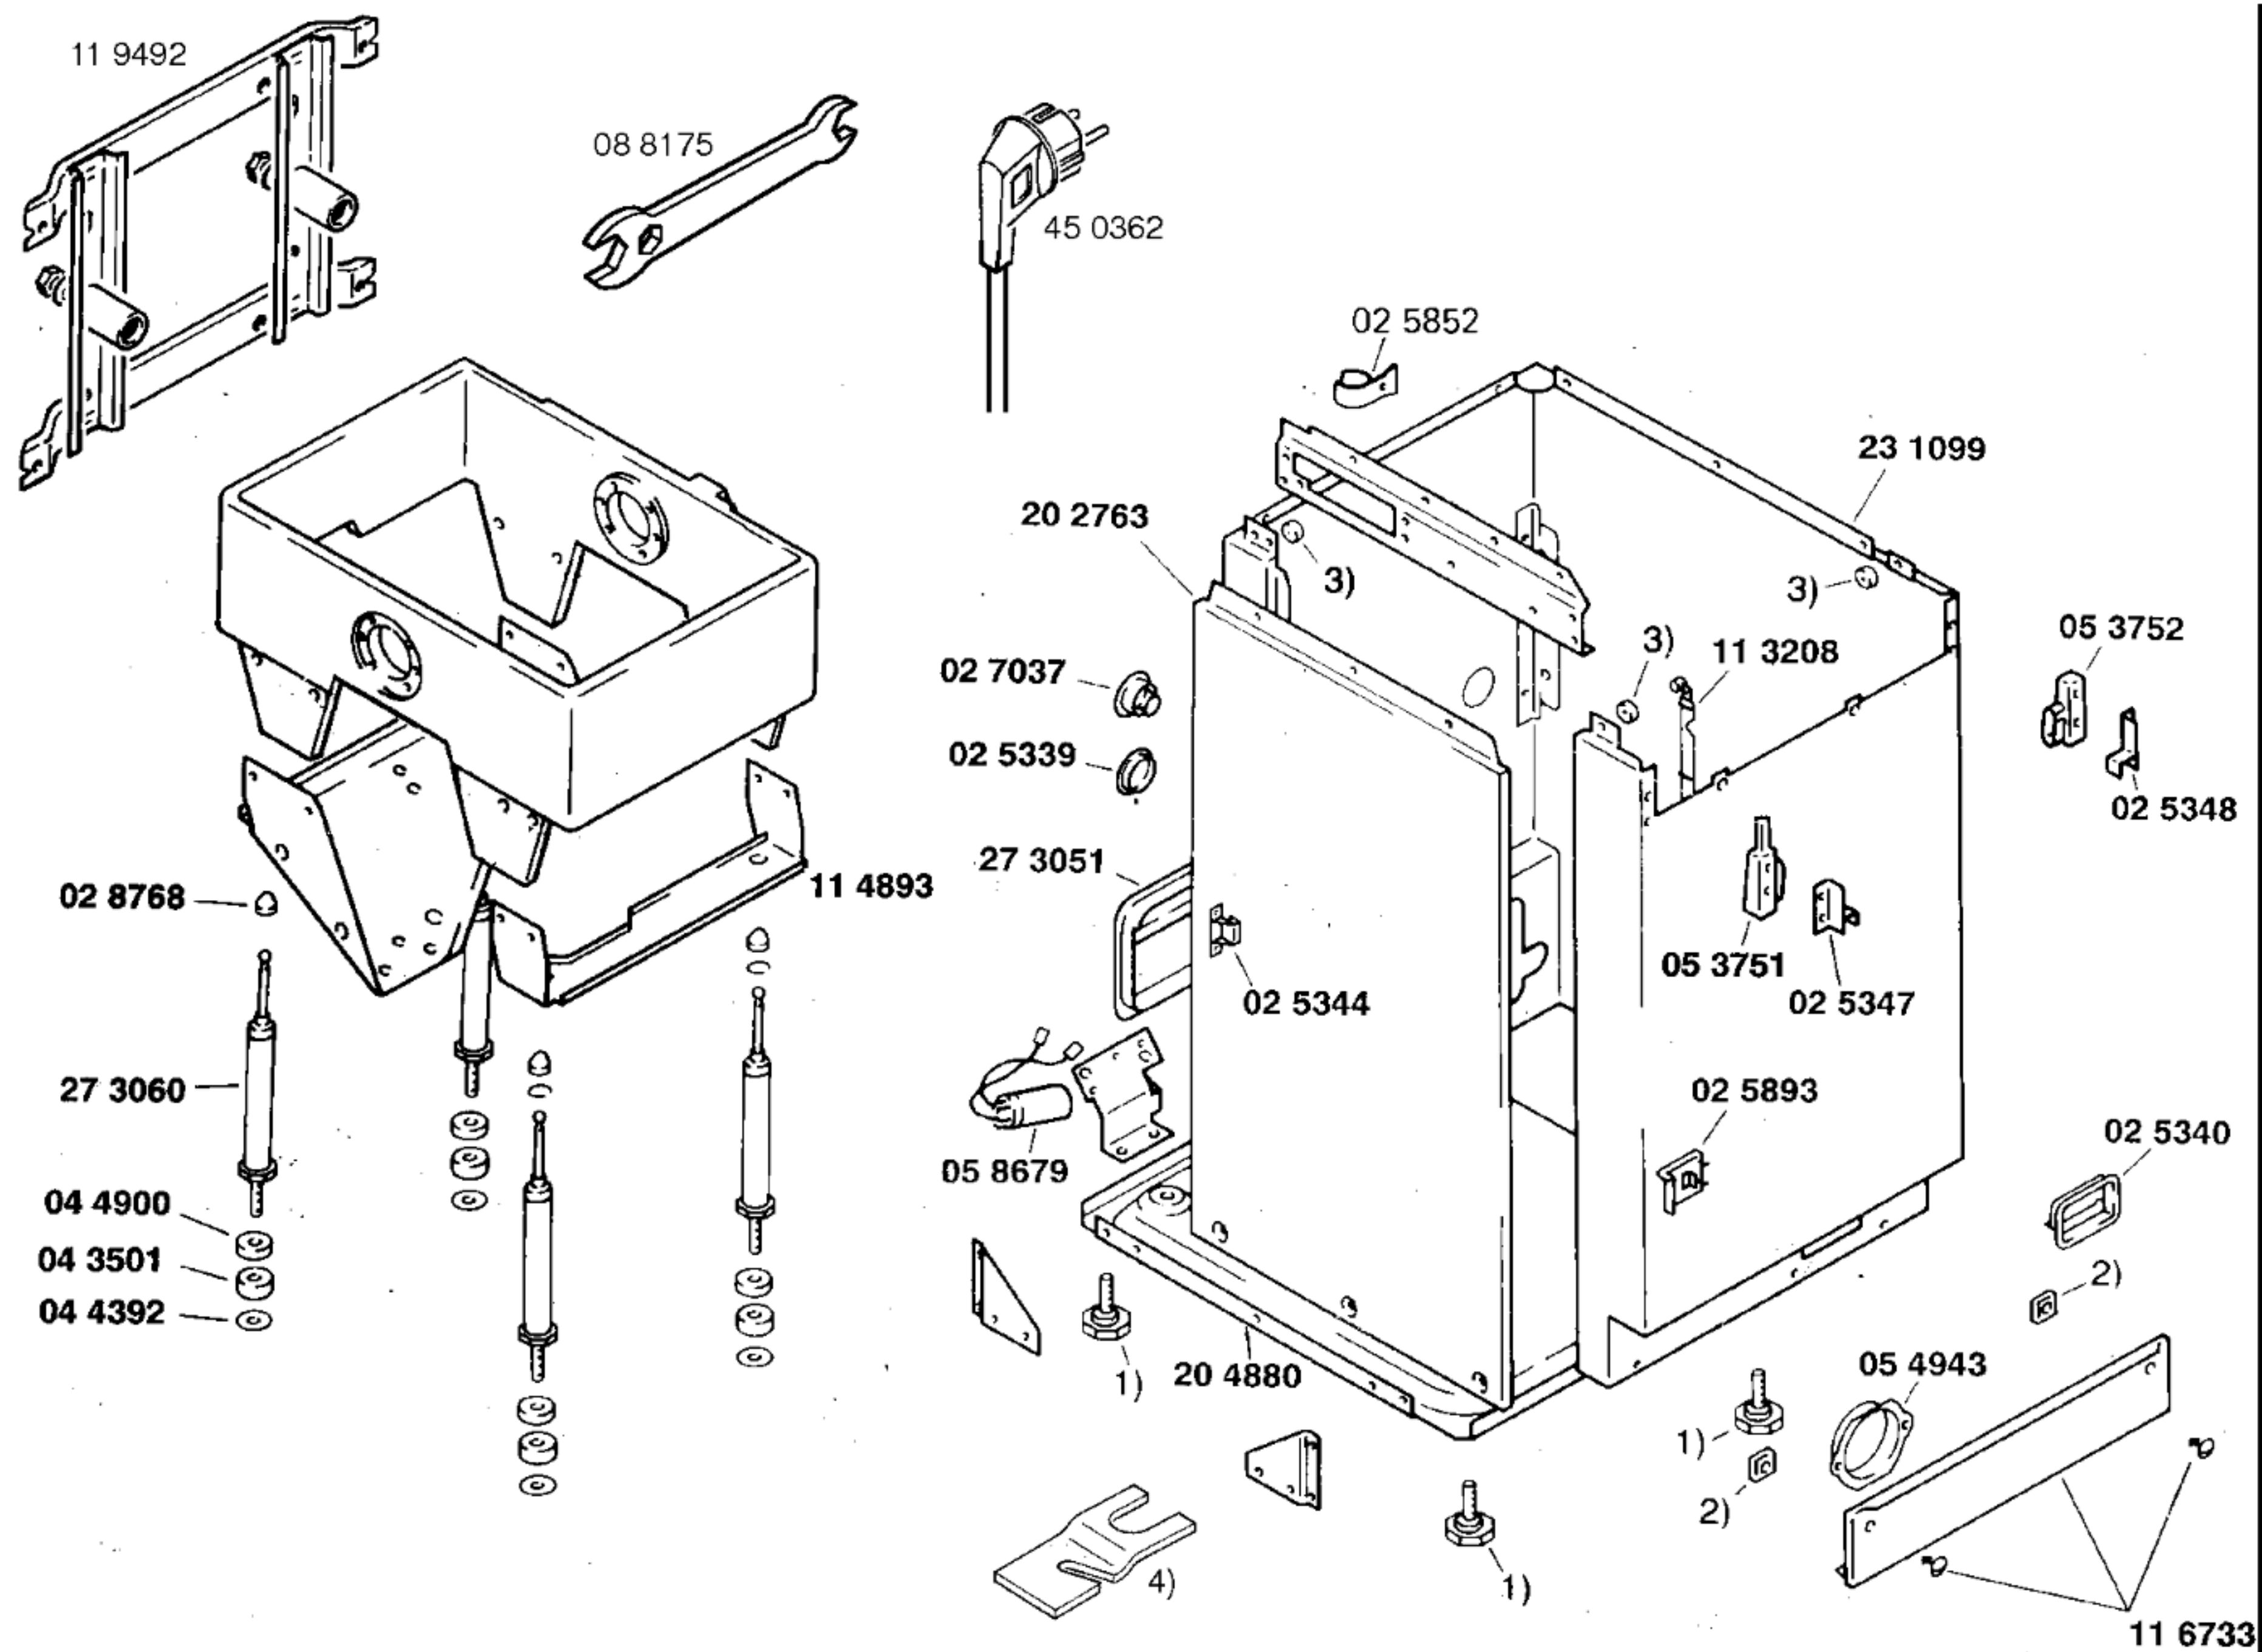

  - 1) 04 5561
- 2) 01 4687
- 3) 02 5345
- 4) 08 0451
Set

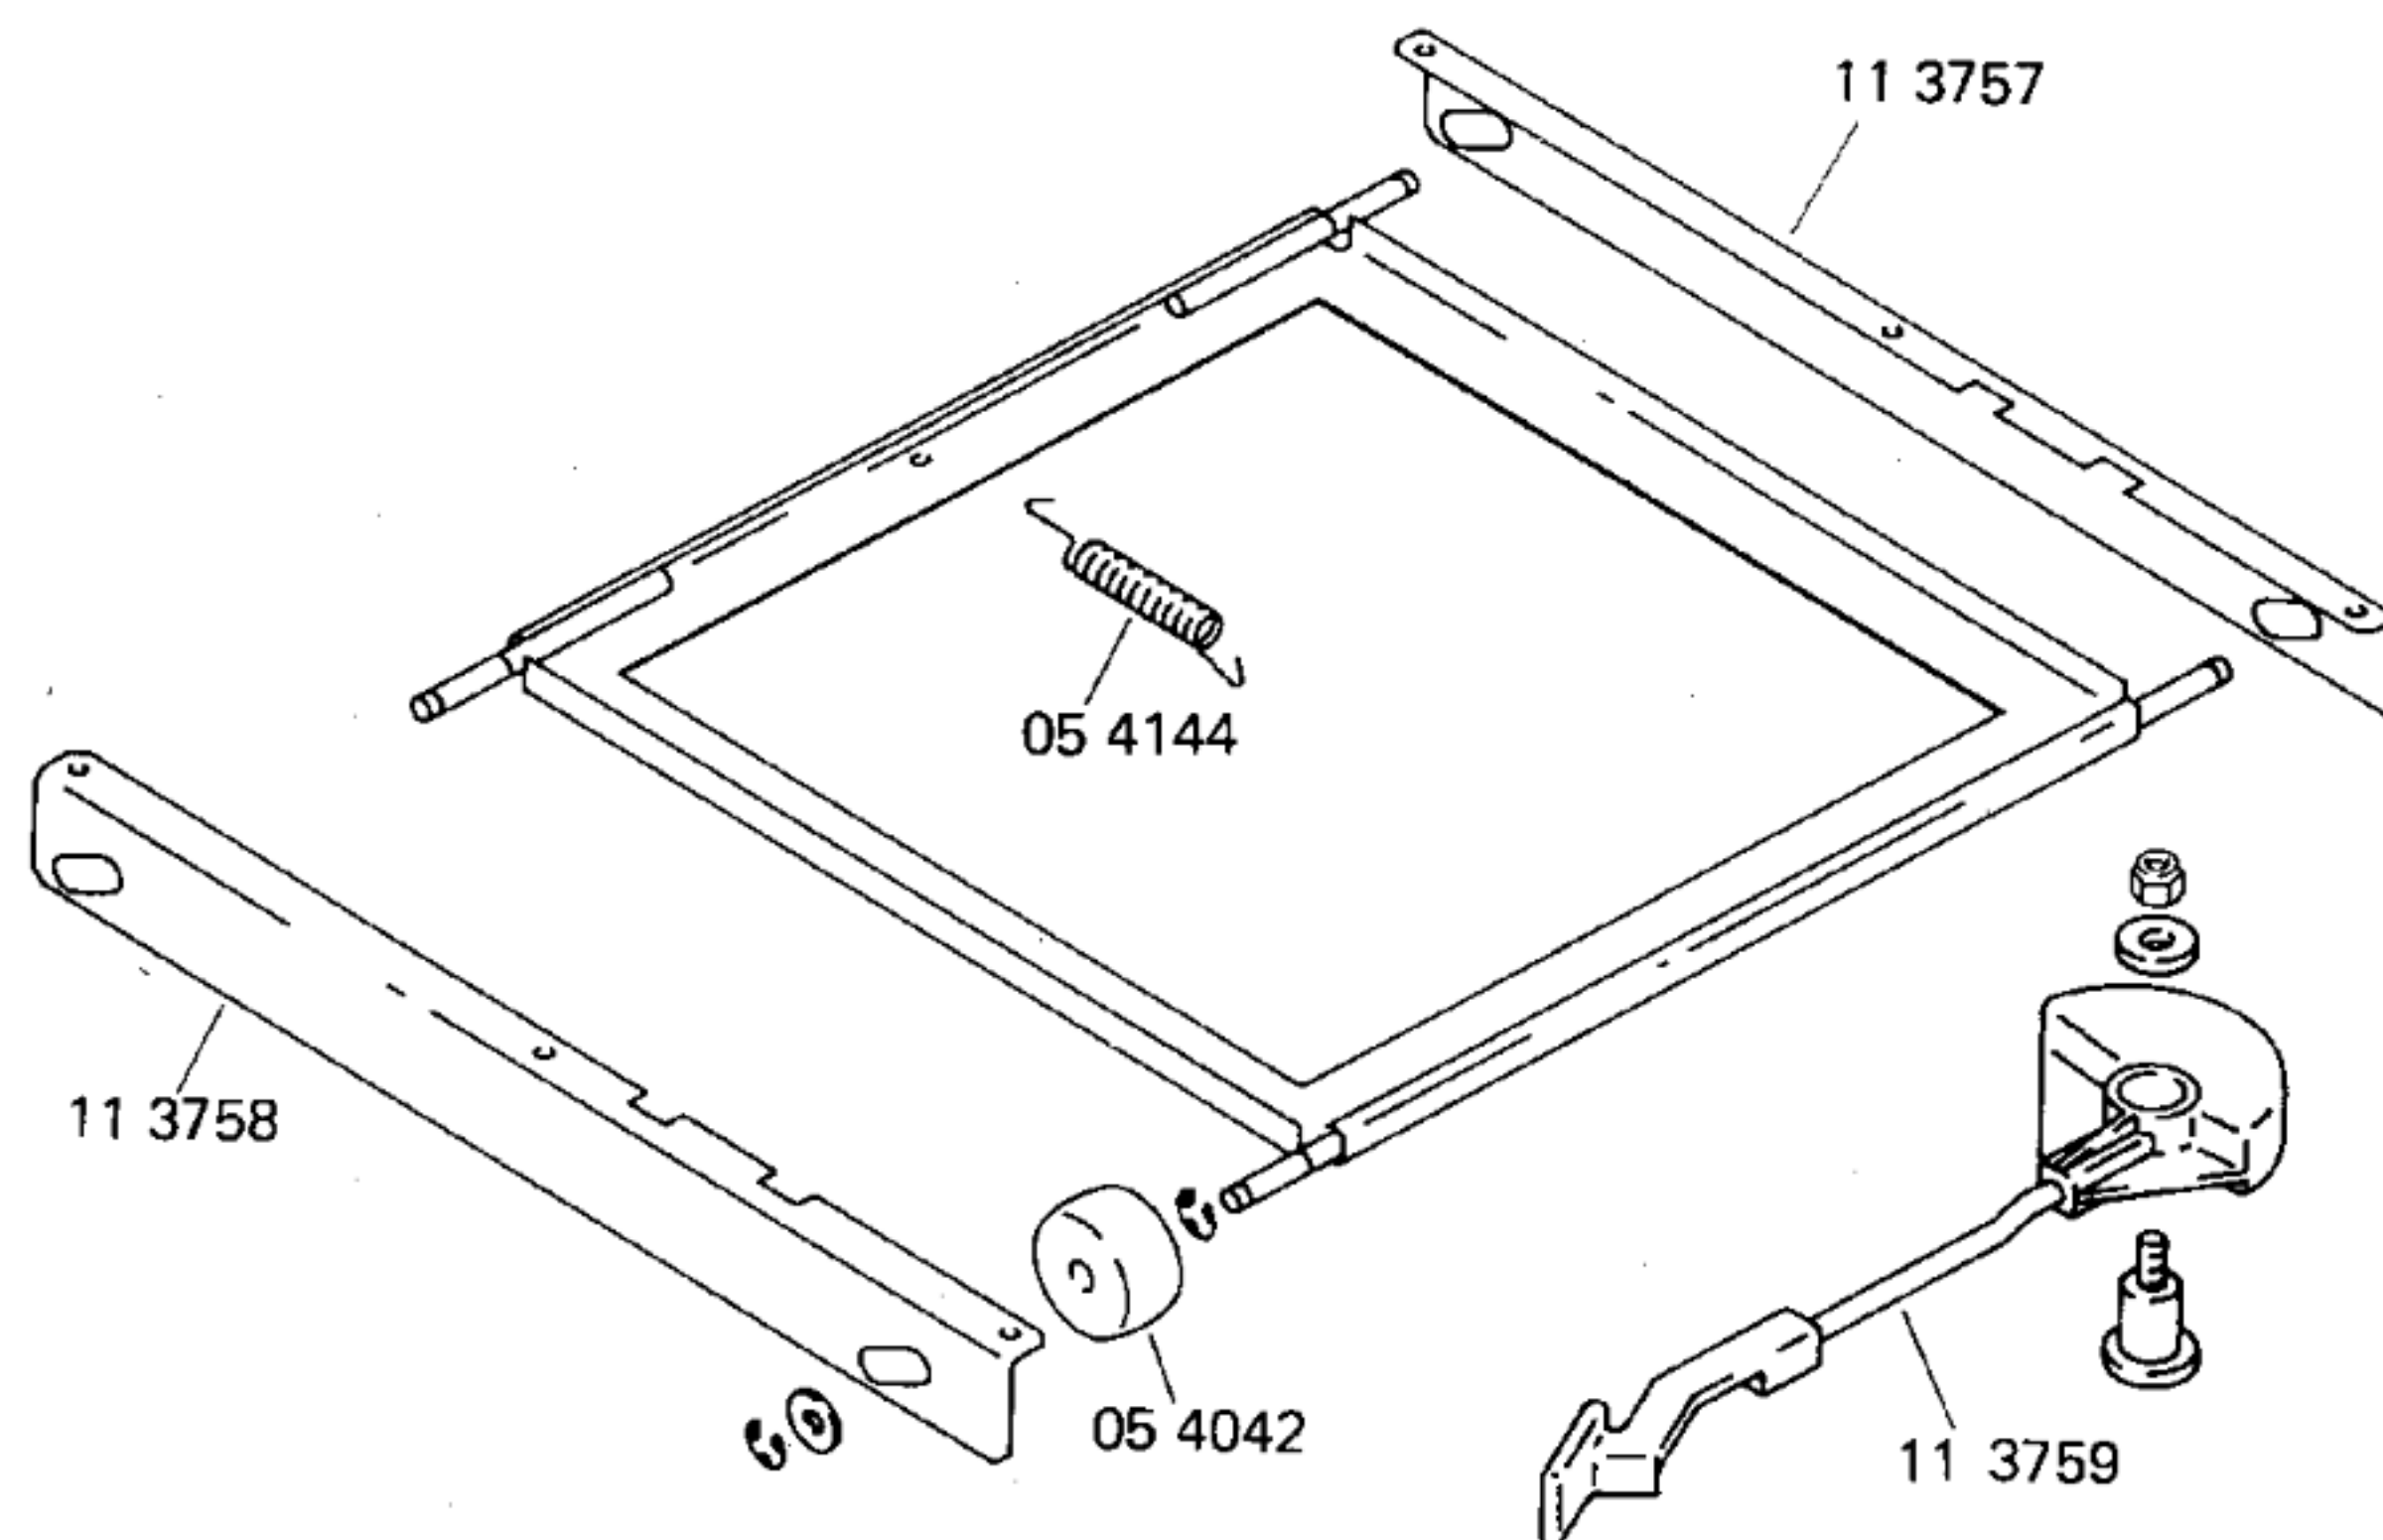

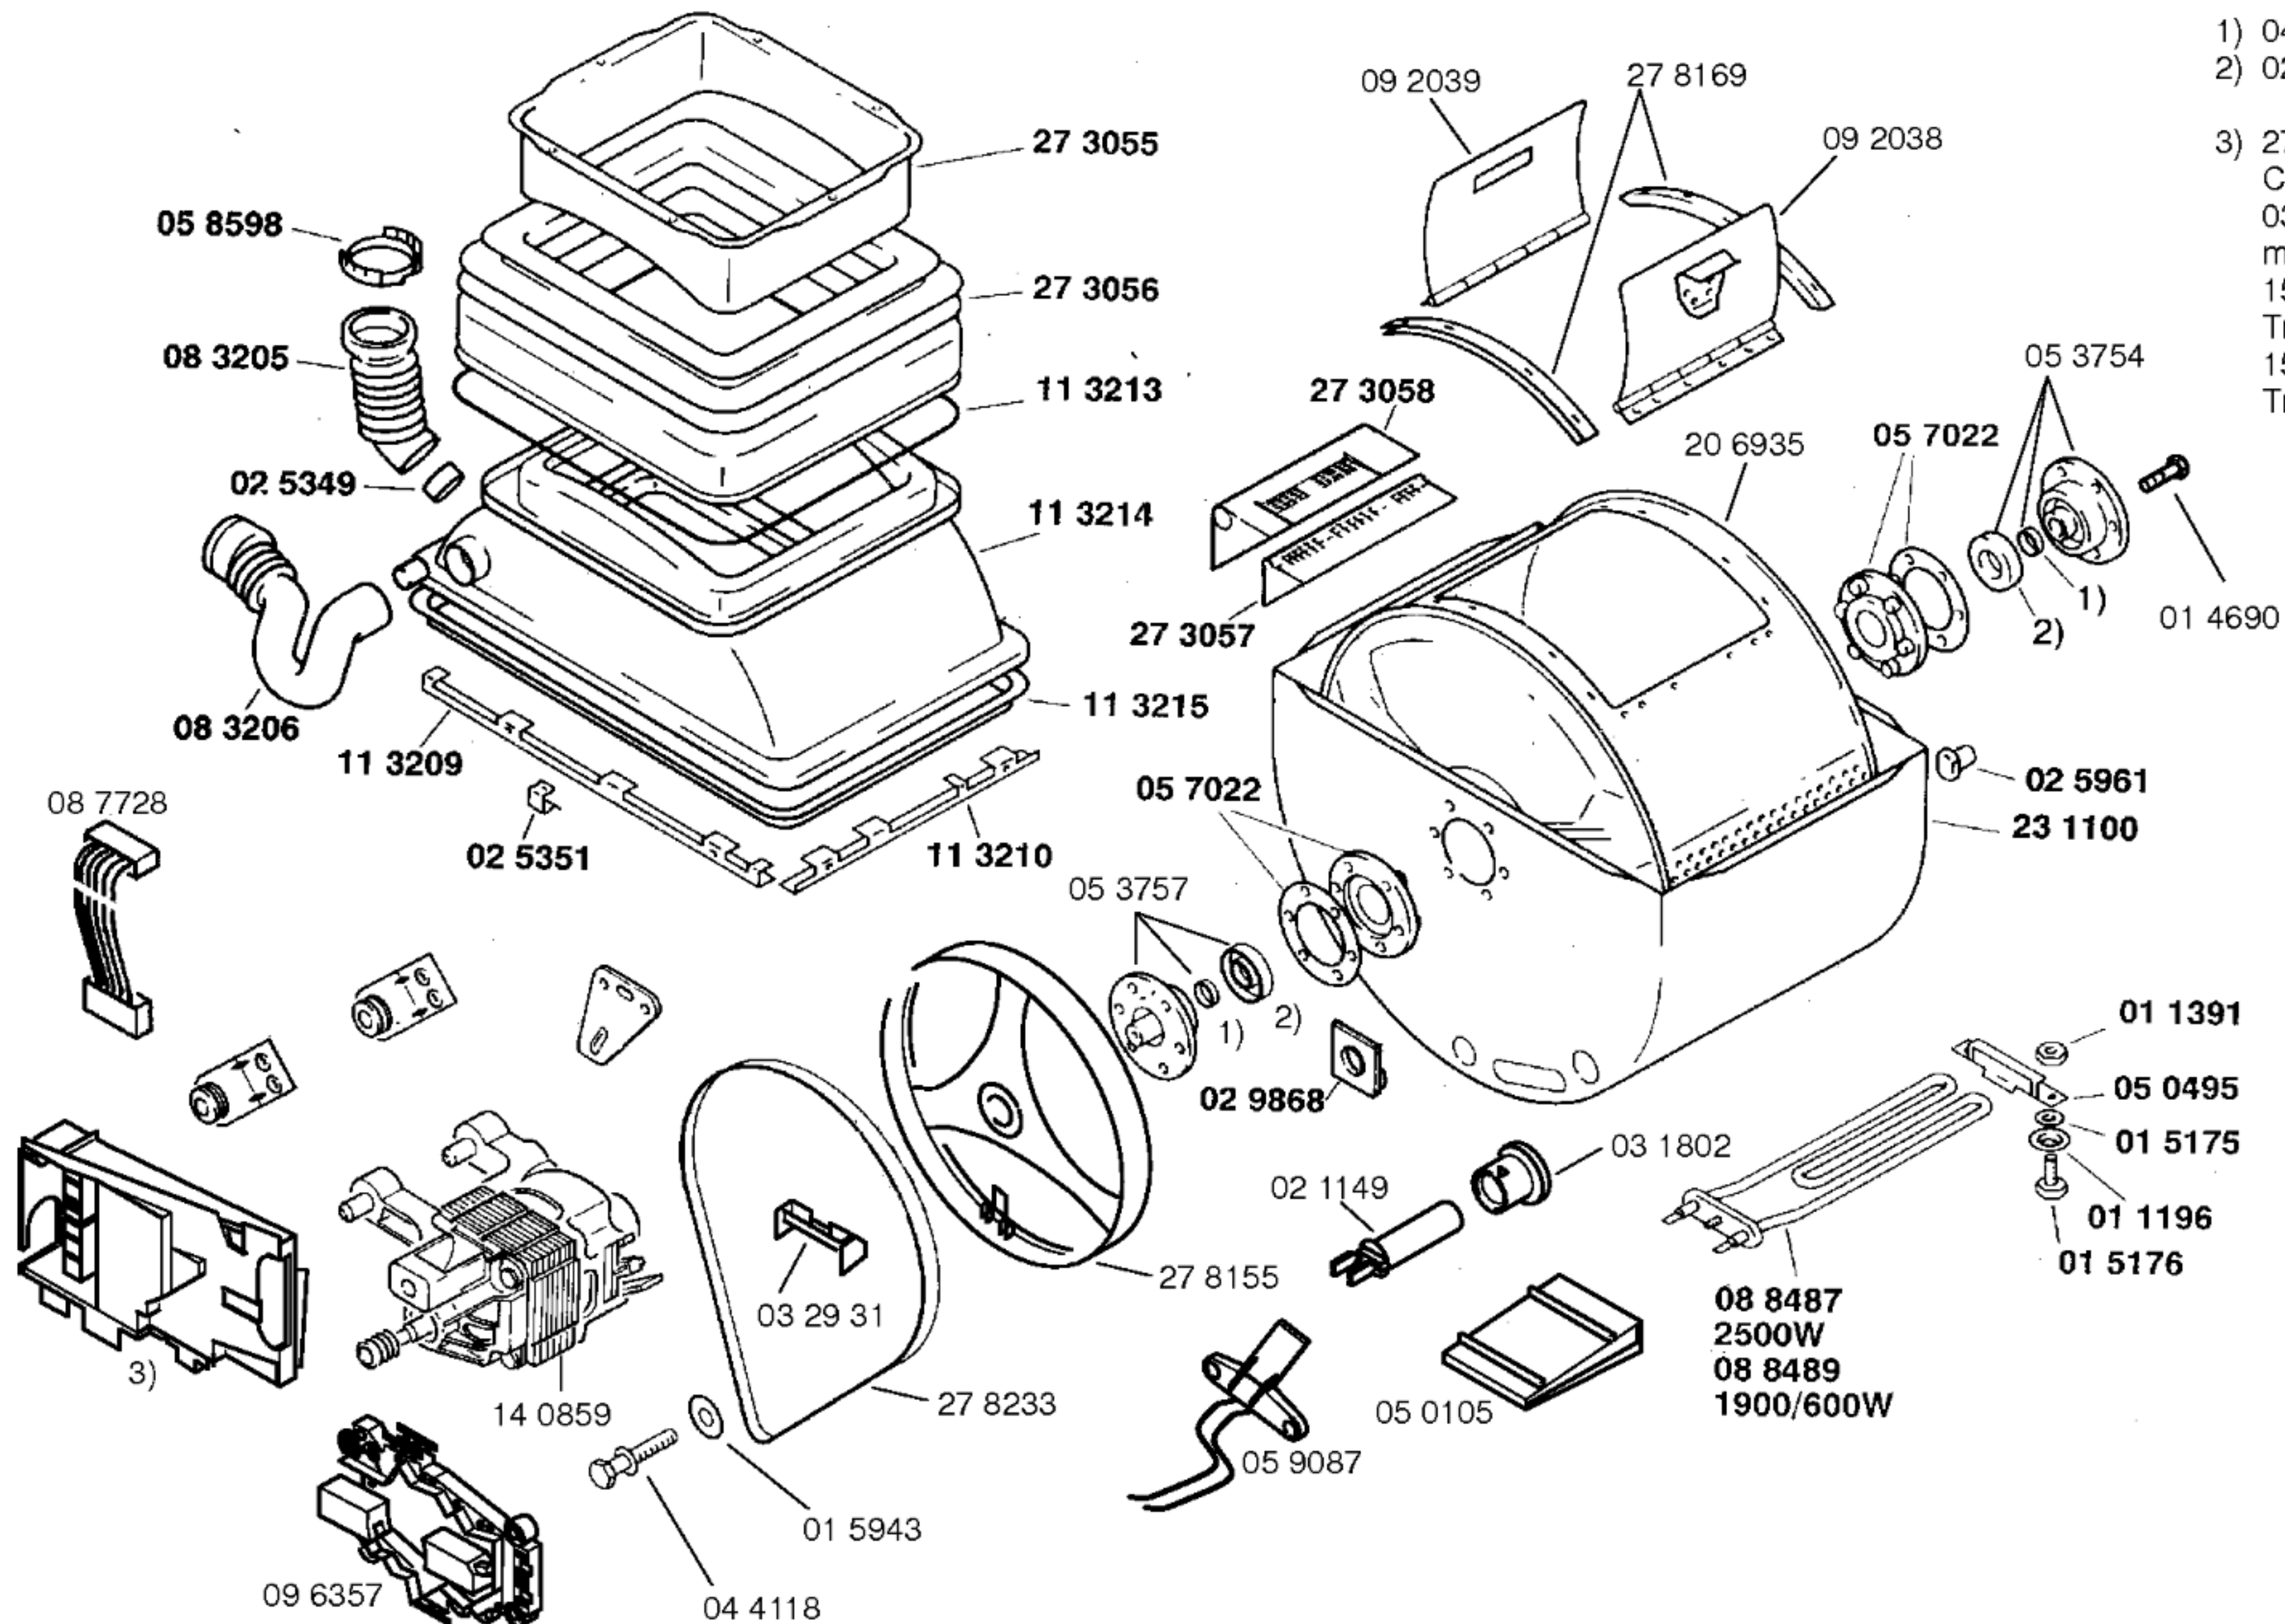

- 1) 04 2309
- 2) 02 5350
- 3) 27 8046
Codierstecker
03 2880
mitbestellen
15 5272
Triac-Motorleistung
15 5273
Triac-Kleinleistung

