





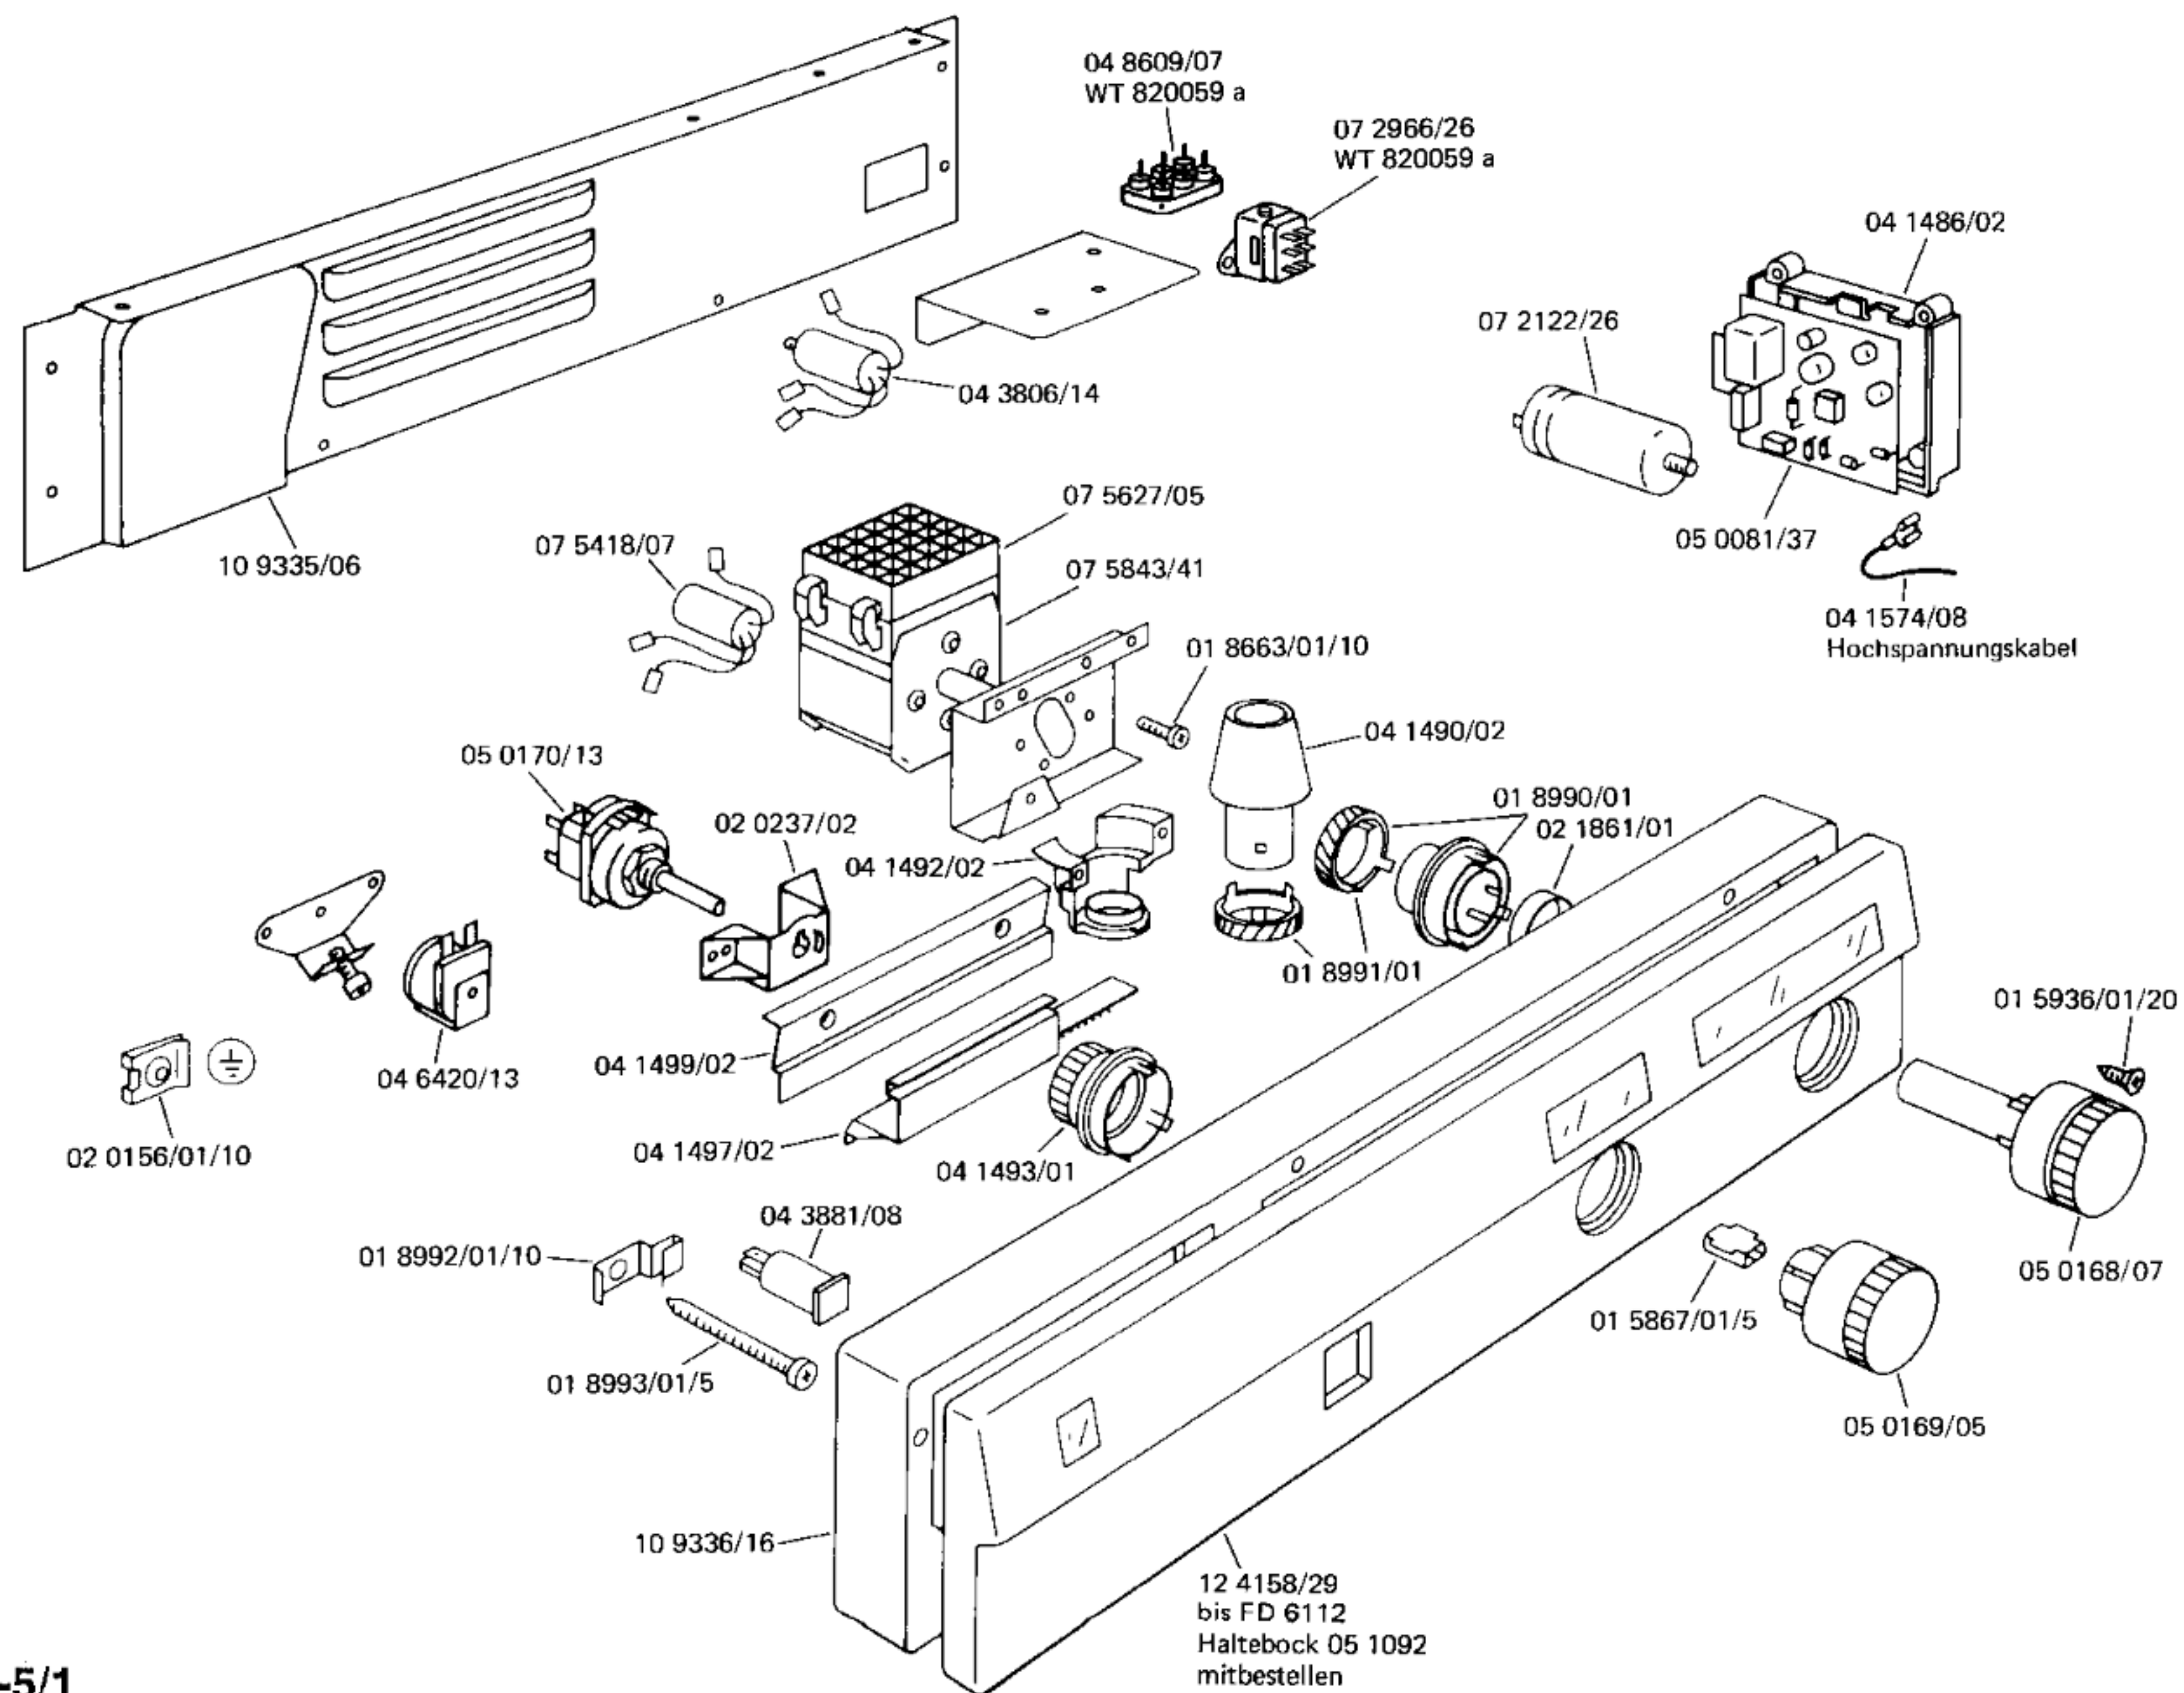

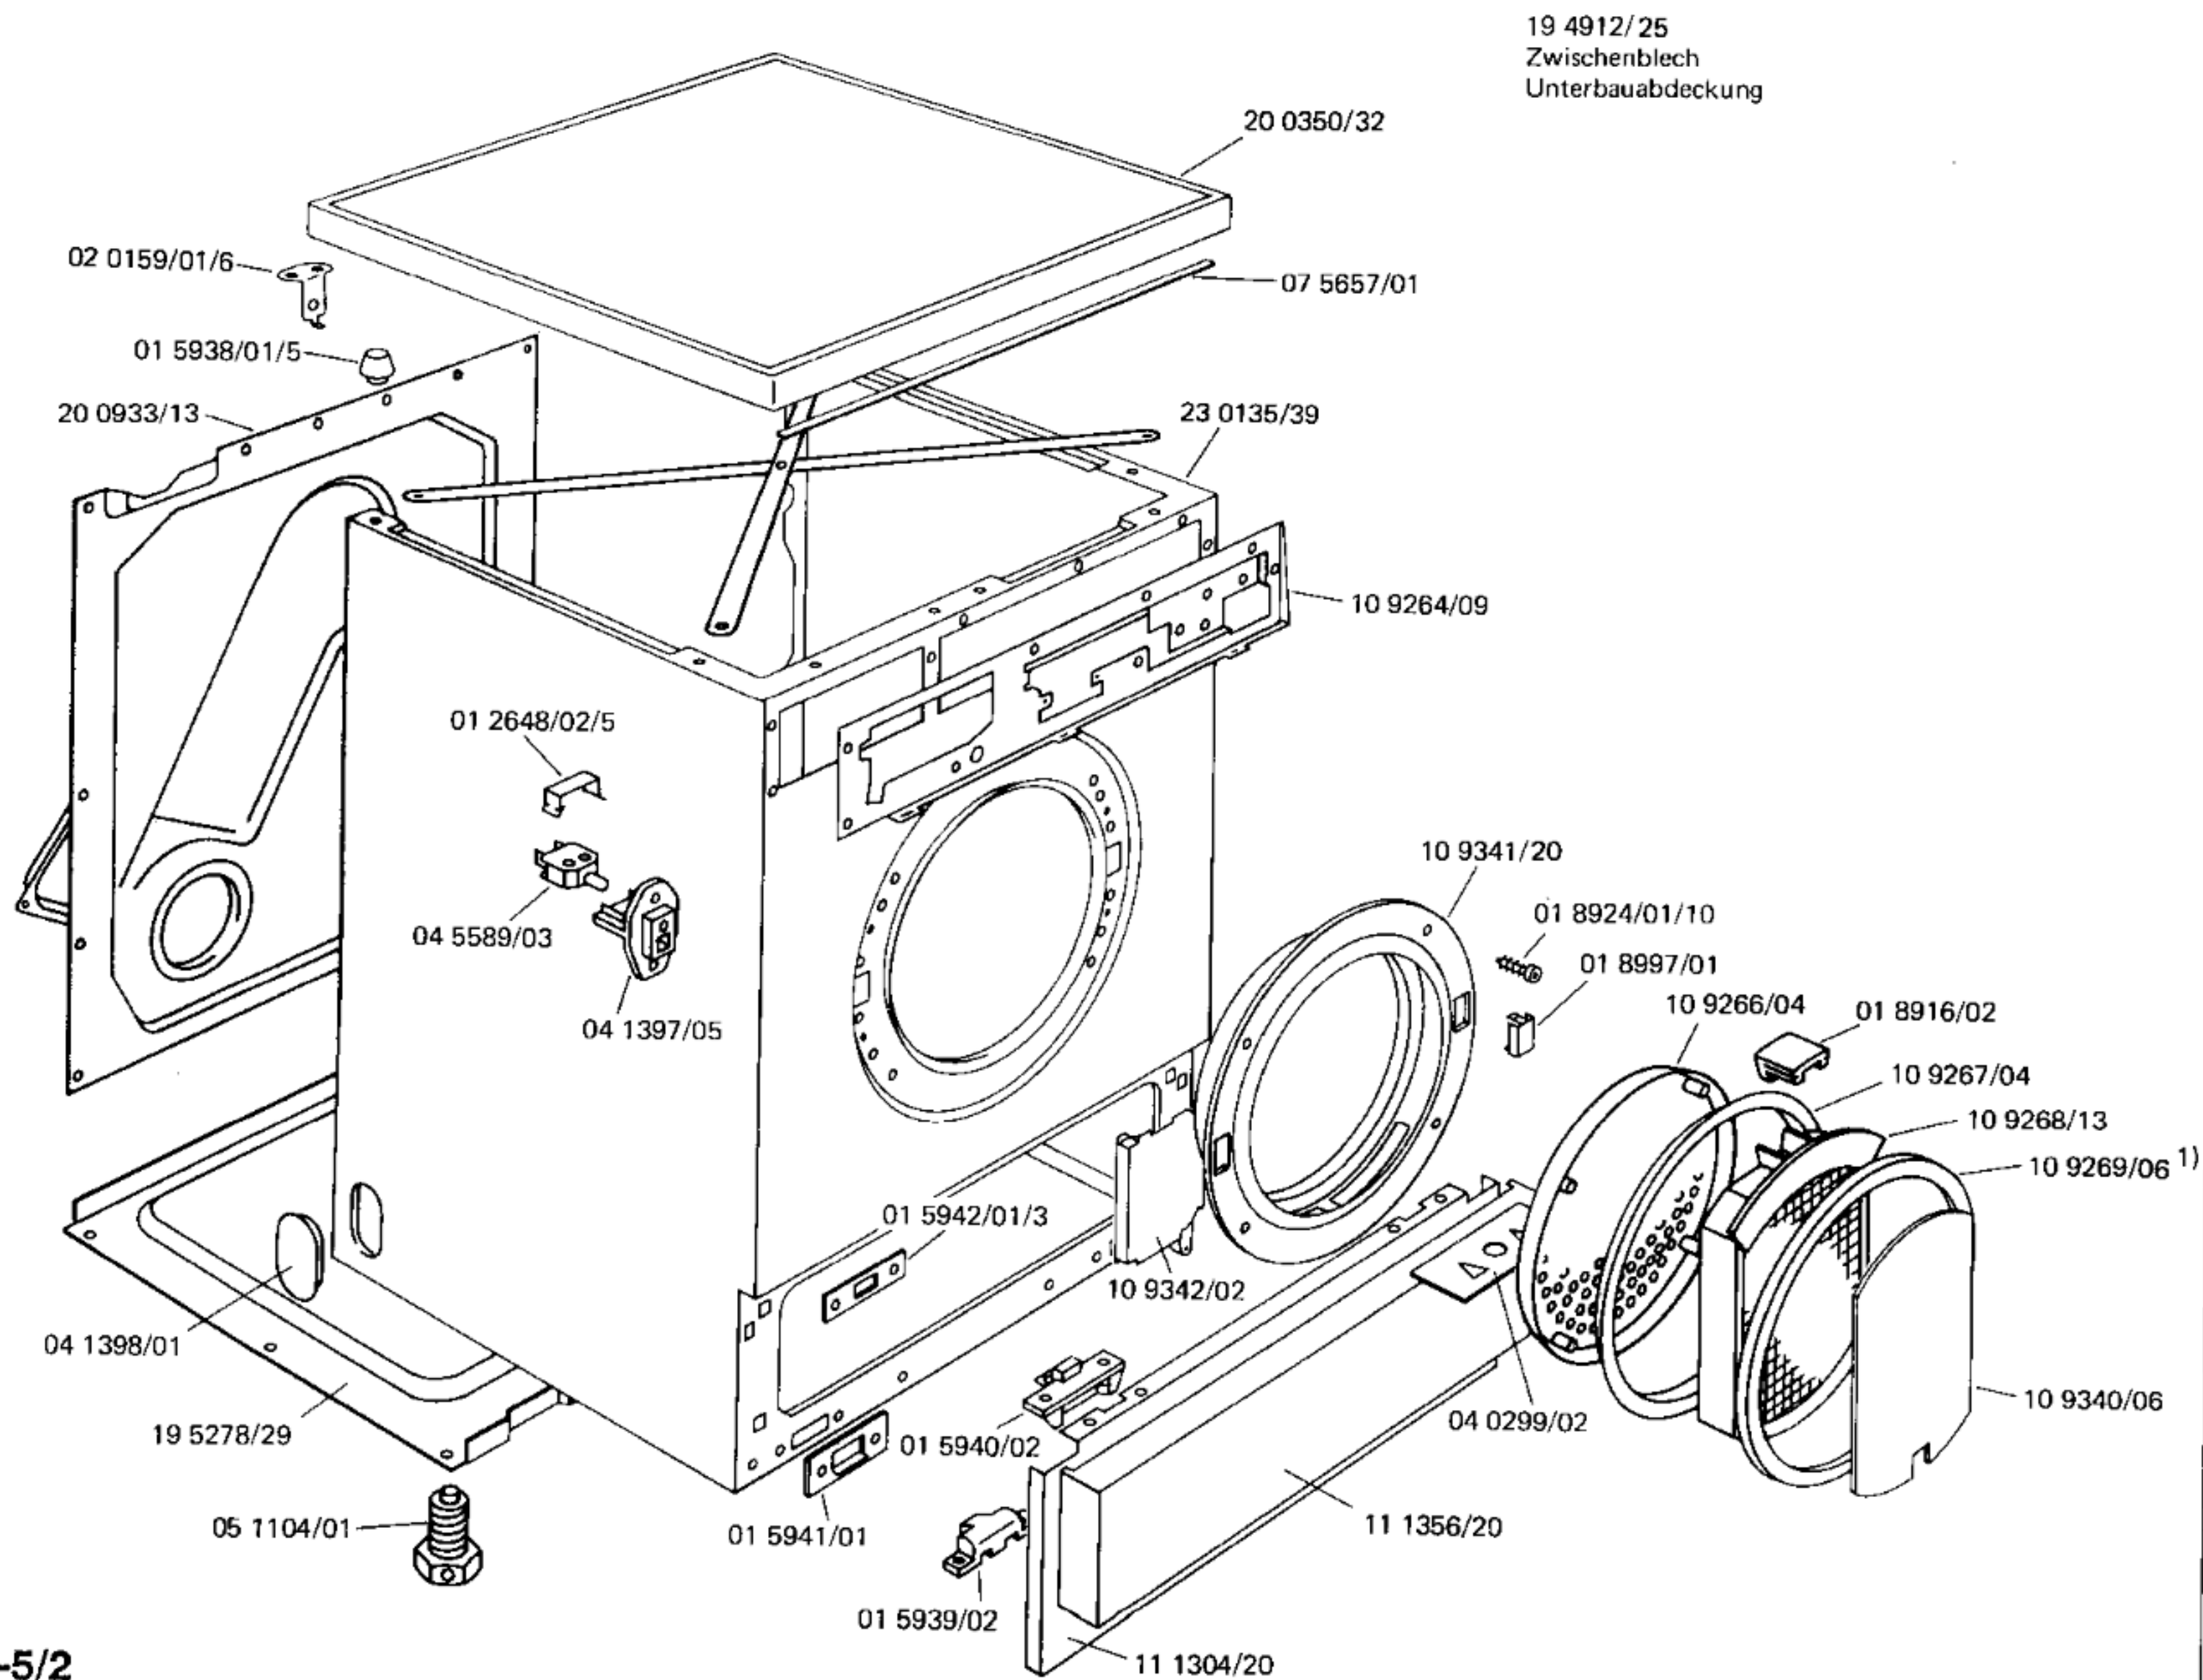


1) bis FD 6108
10 9341 Bausatz
aus Dichtung
und Ringeinsatz
einbauen

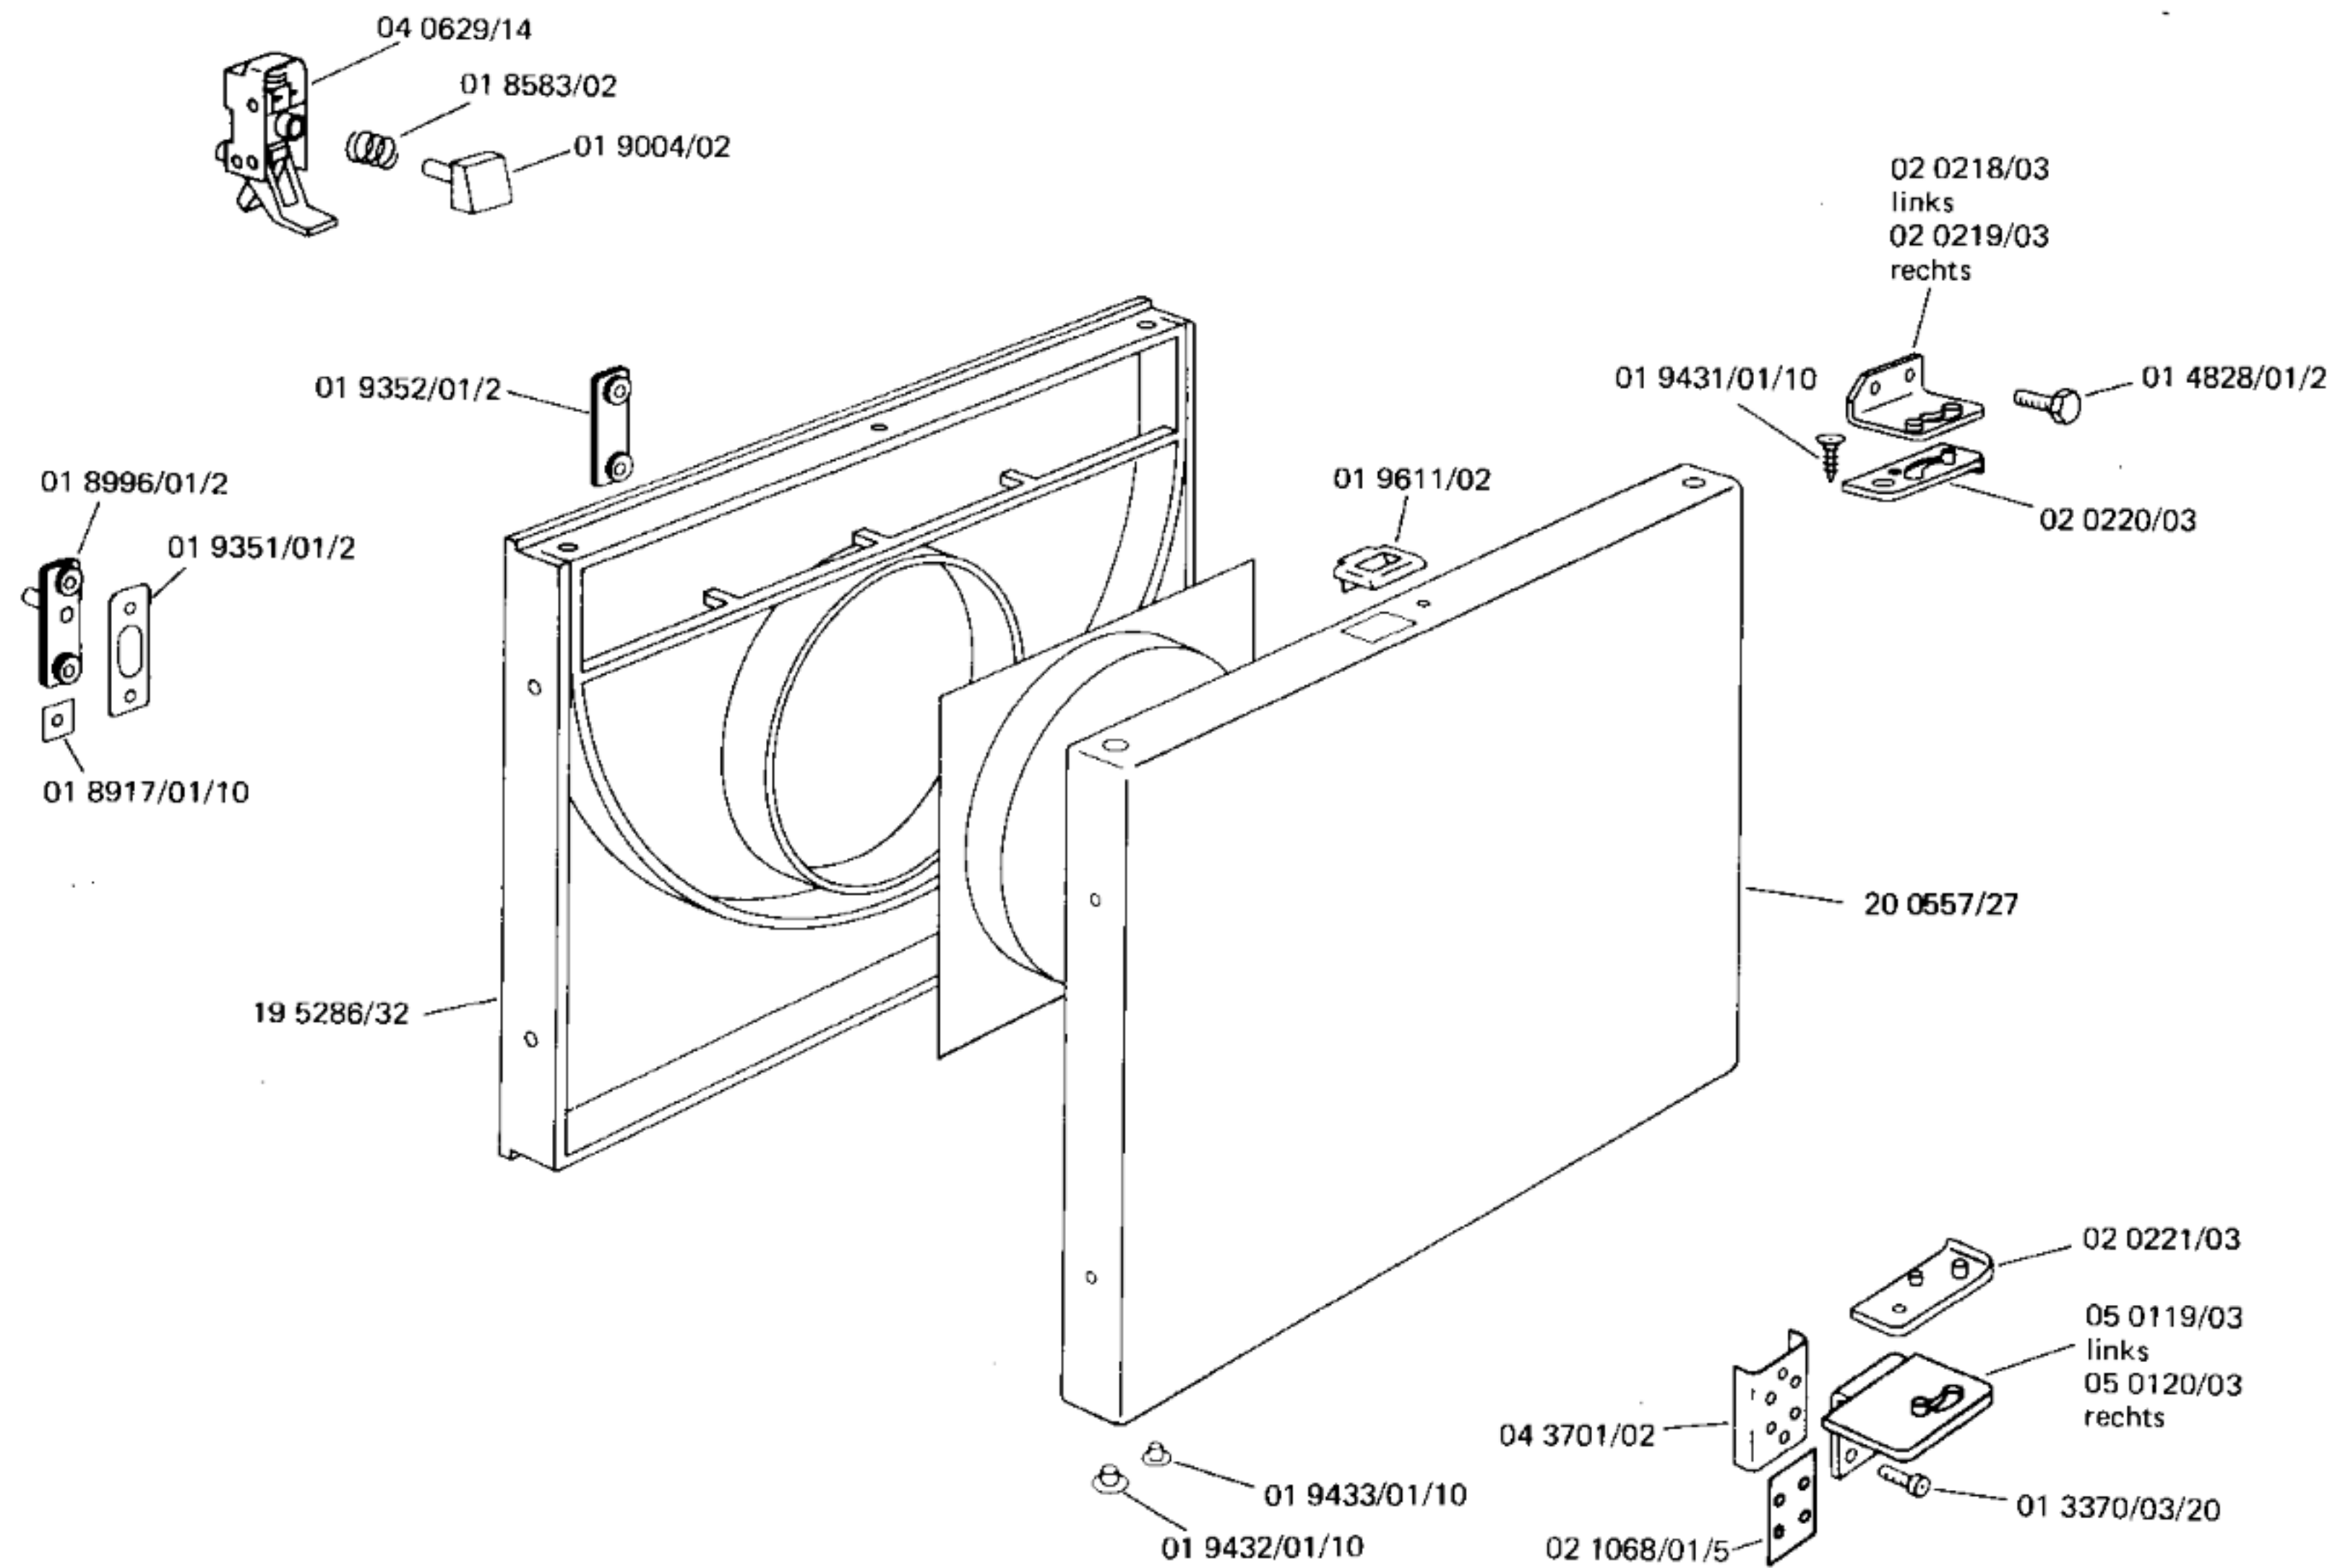

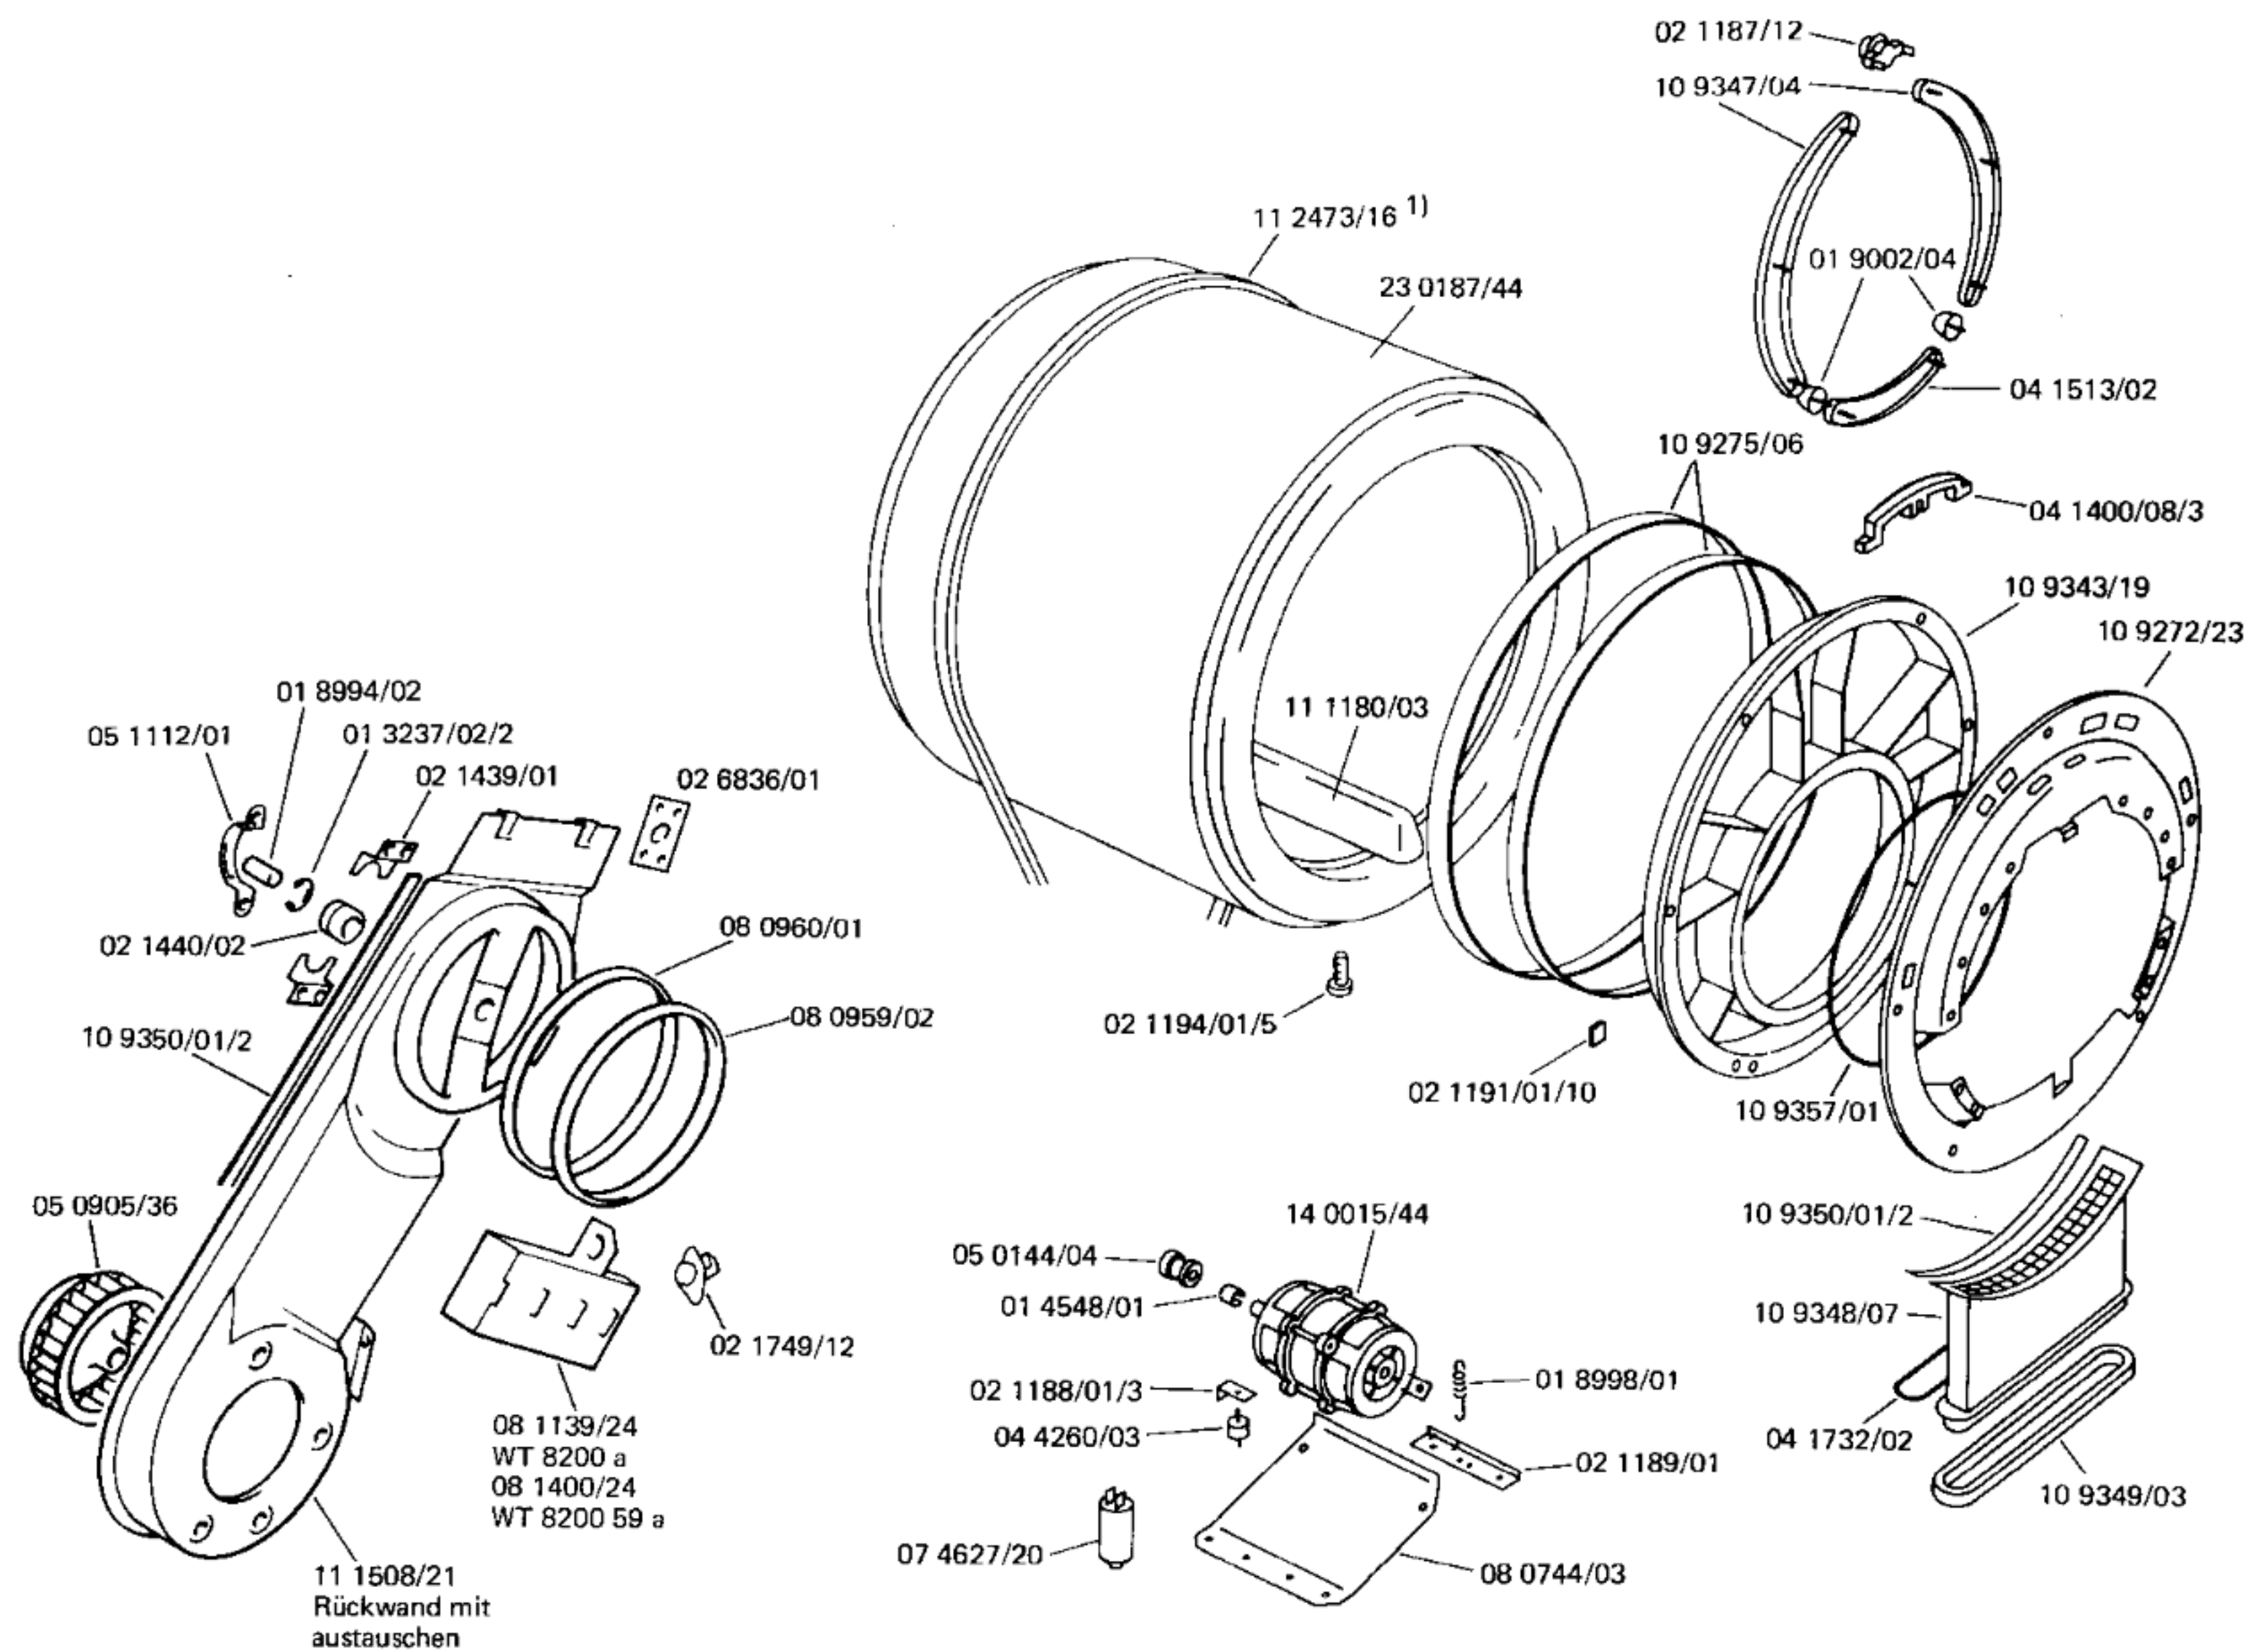

1) bis FD 6208
05 0144 und 02 1188
mitbestellen

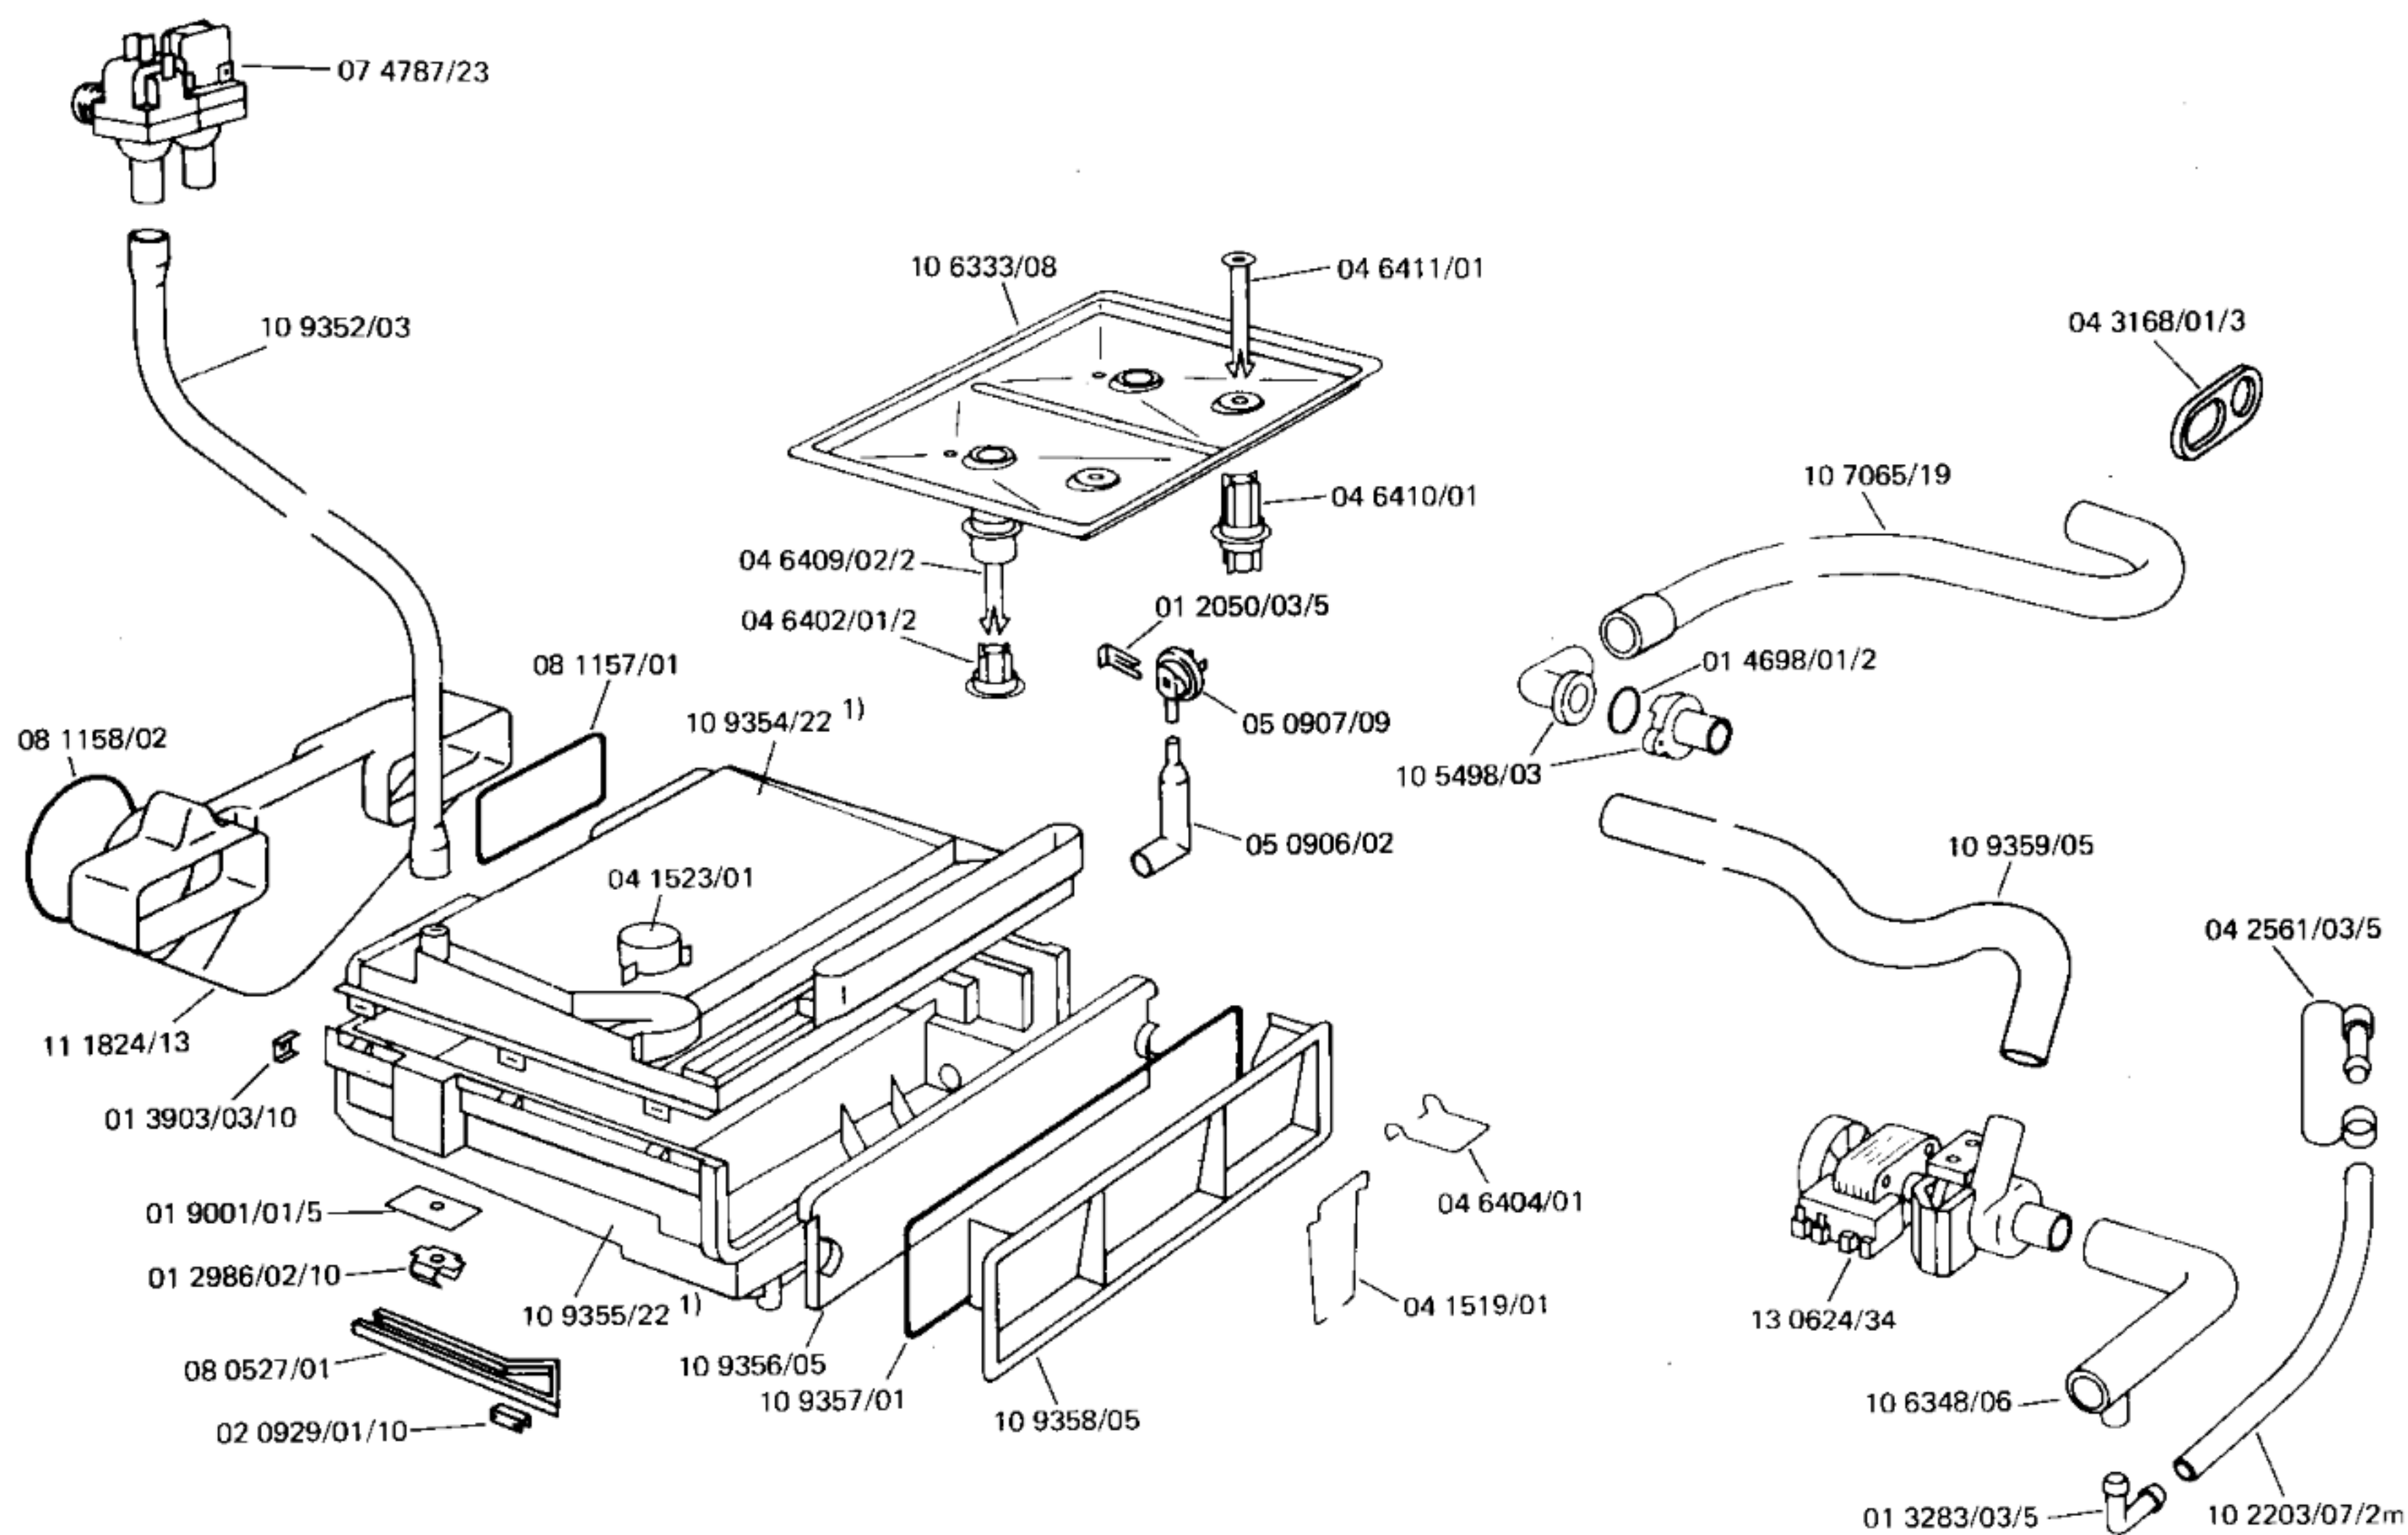

50 7571/00
D, GB, F, I, NL
WT 8200 a
51 1077/00
DK, S
WT 820059
Gebrauchsanweisung
und Aufstell-Anw.

51 0792/00
D, GB, F, I, NL
WT 8200 a
51 0819/00
DK, S
WT 820059
Programmtabelle

1) bis FD 6111
10 9354 und
10 9355
zusammen
austauschen