


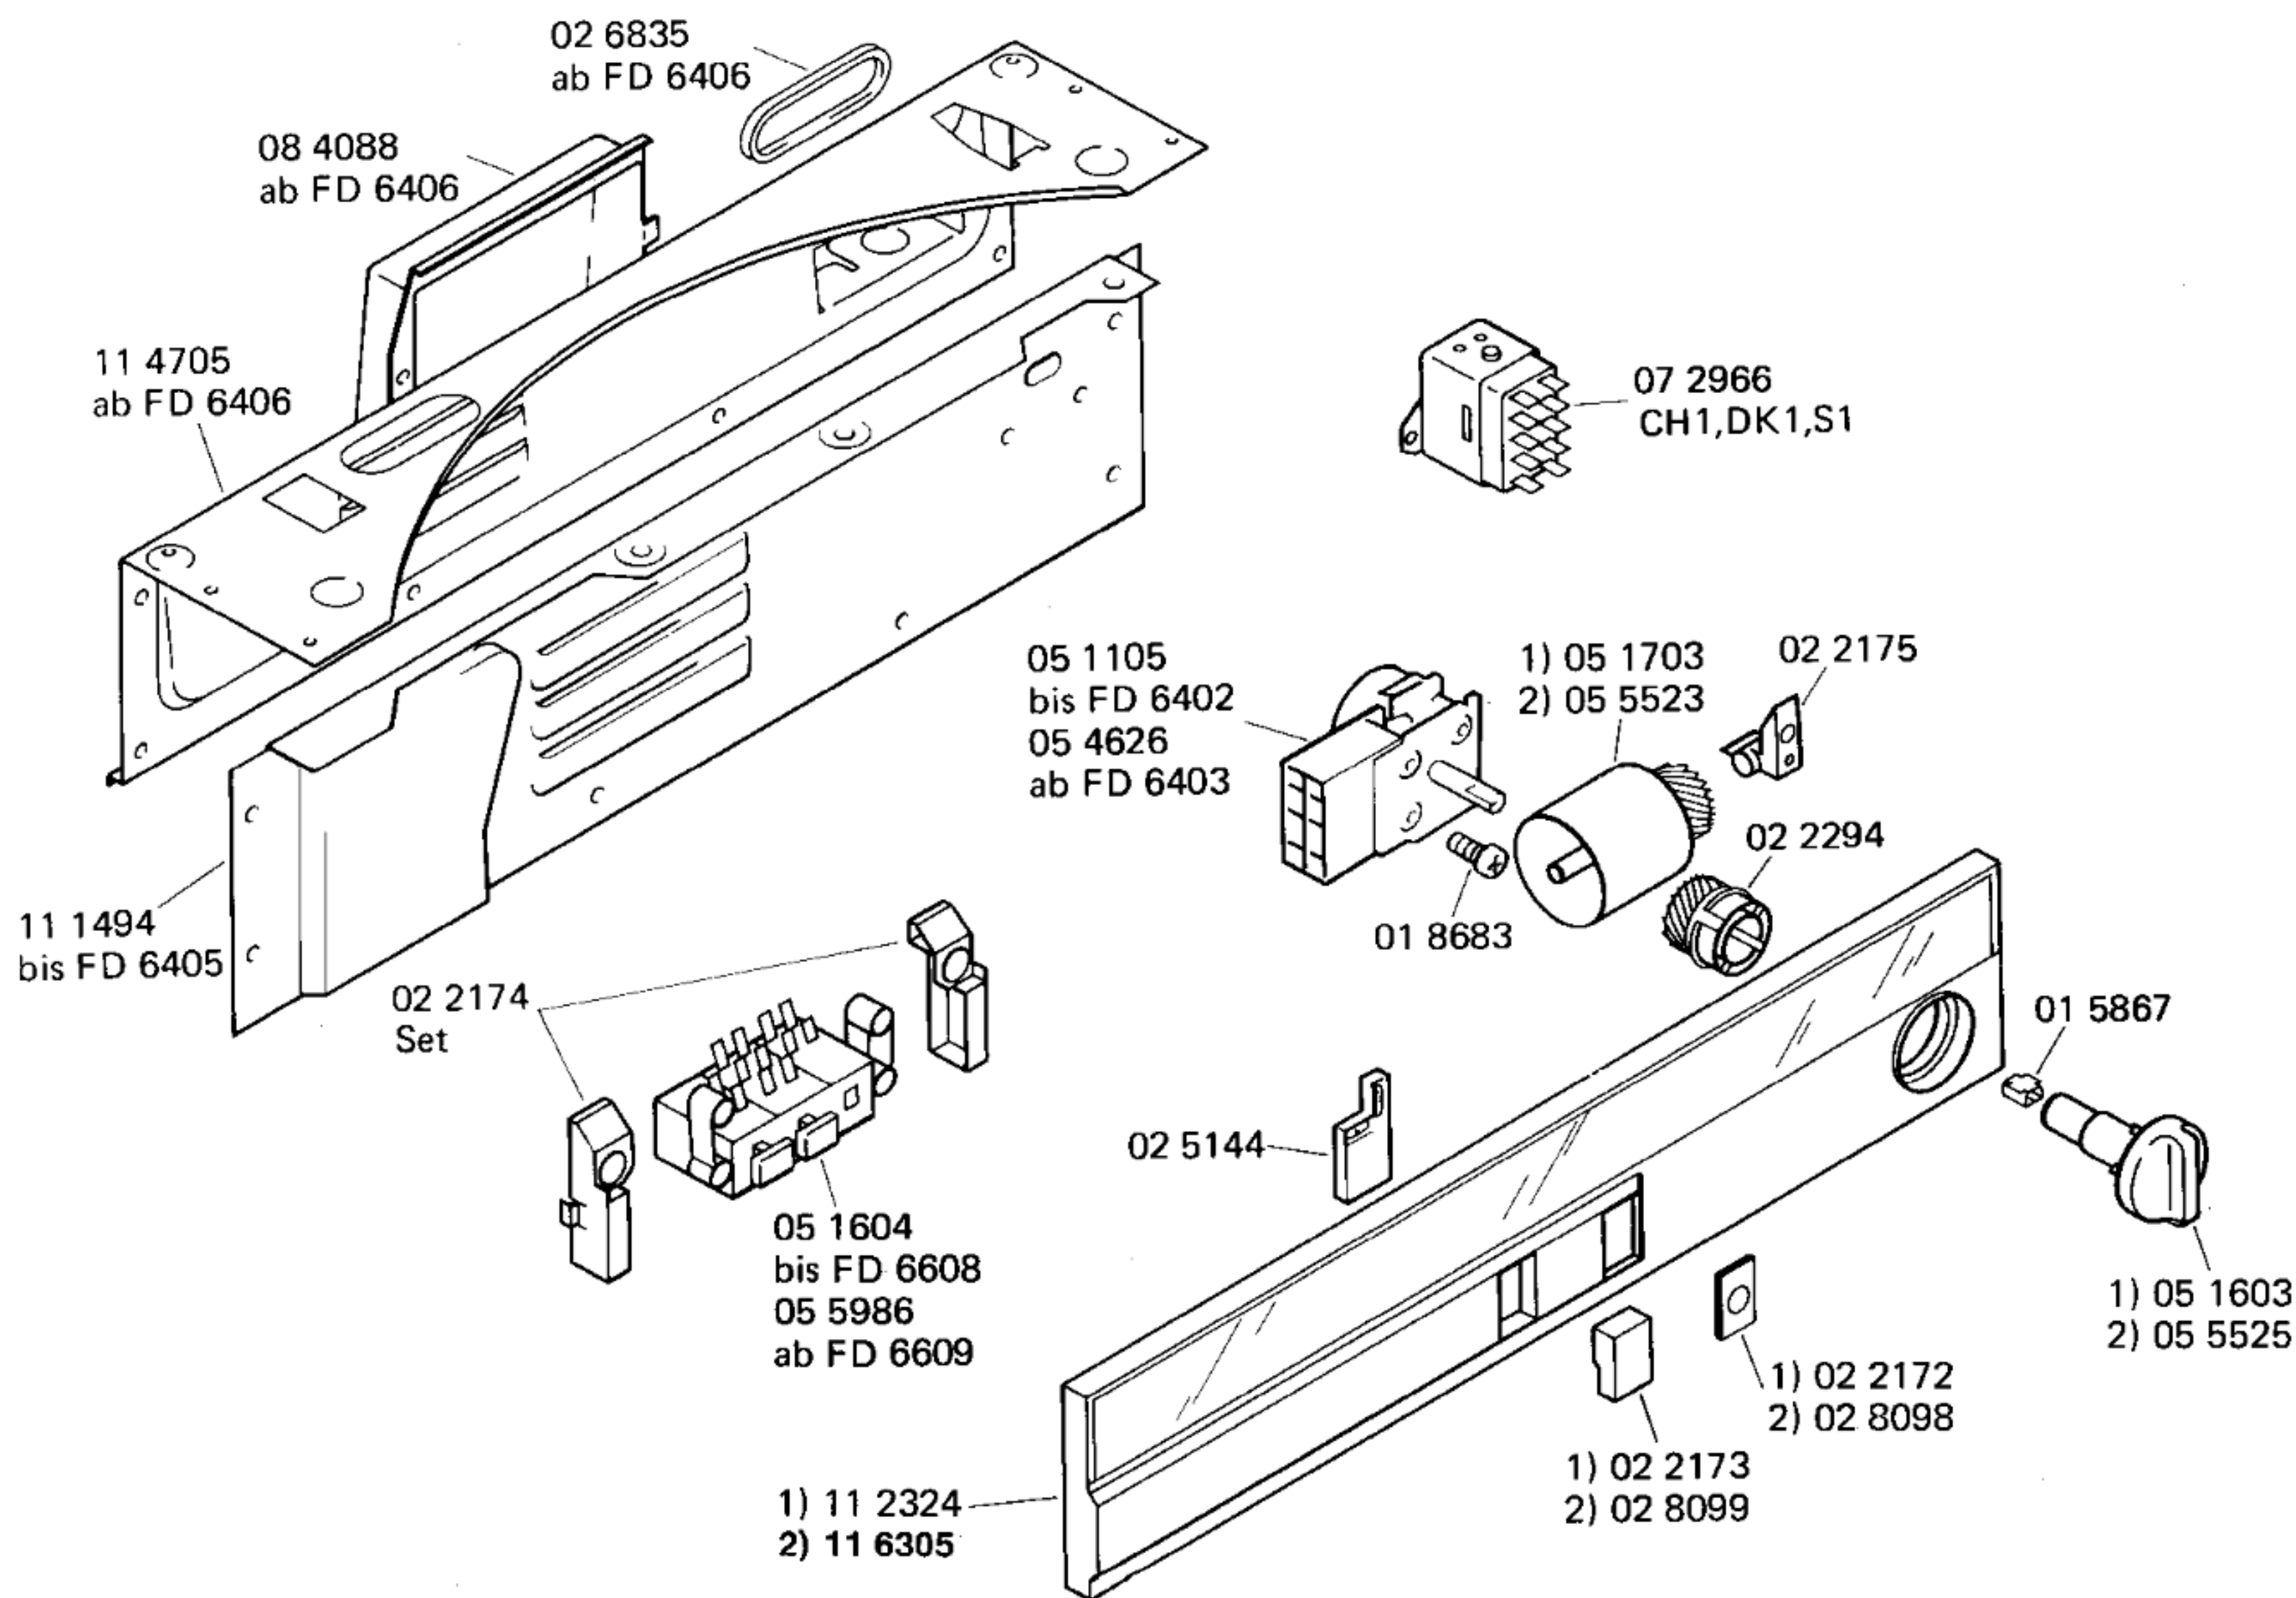

Gebrauchsanweisungen
 51 1189
 (D,GB,F,I,NL)
 51 1190
 (D,S,DK,I,F)
Aufstellanweisungen
 51 1191
 (D,GB,F,I,NL,E)
 51 1186
 (D,S,DK,I,F)

1) bis FD 6603
 2) ab FD 6604

SIEMENS

SIWAMAT-FLAUSCHTROCKNER 270-WT27000021-D1
SIWAMAT-FLAUSCHTROCKNER 270-WT27000591-CH1,DK1,S1
SIWAMAT-FLAUSCHTROCKNER 270-WT2700/01-D2

SIWAMAT-FLAUSCHTROCKNER 270-WT270059/01-CH2

WASCHGERÄTE
Trockner

