



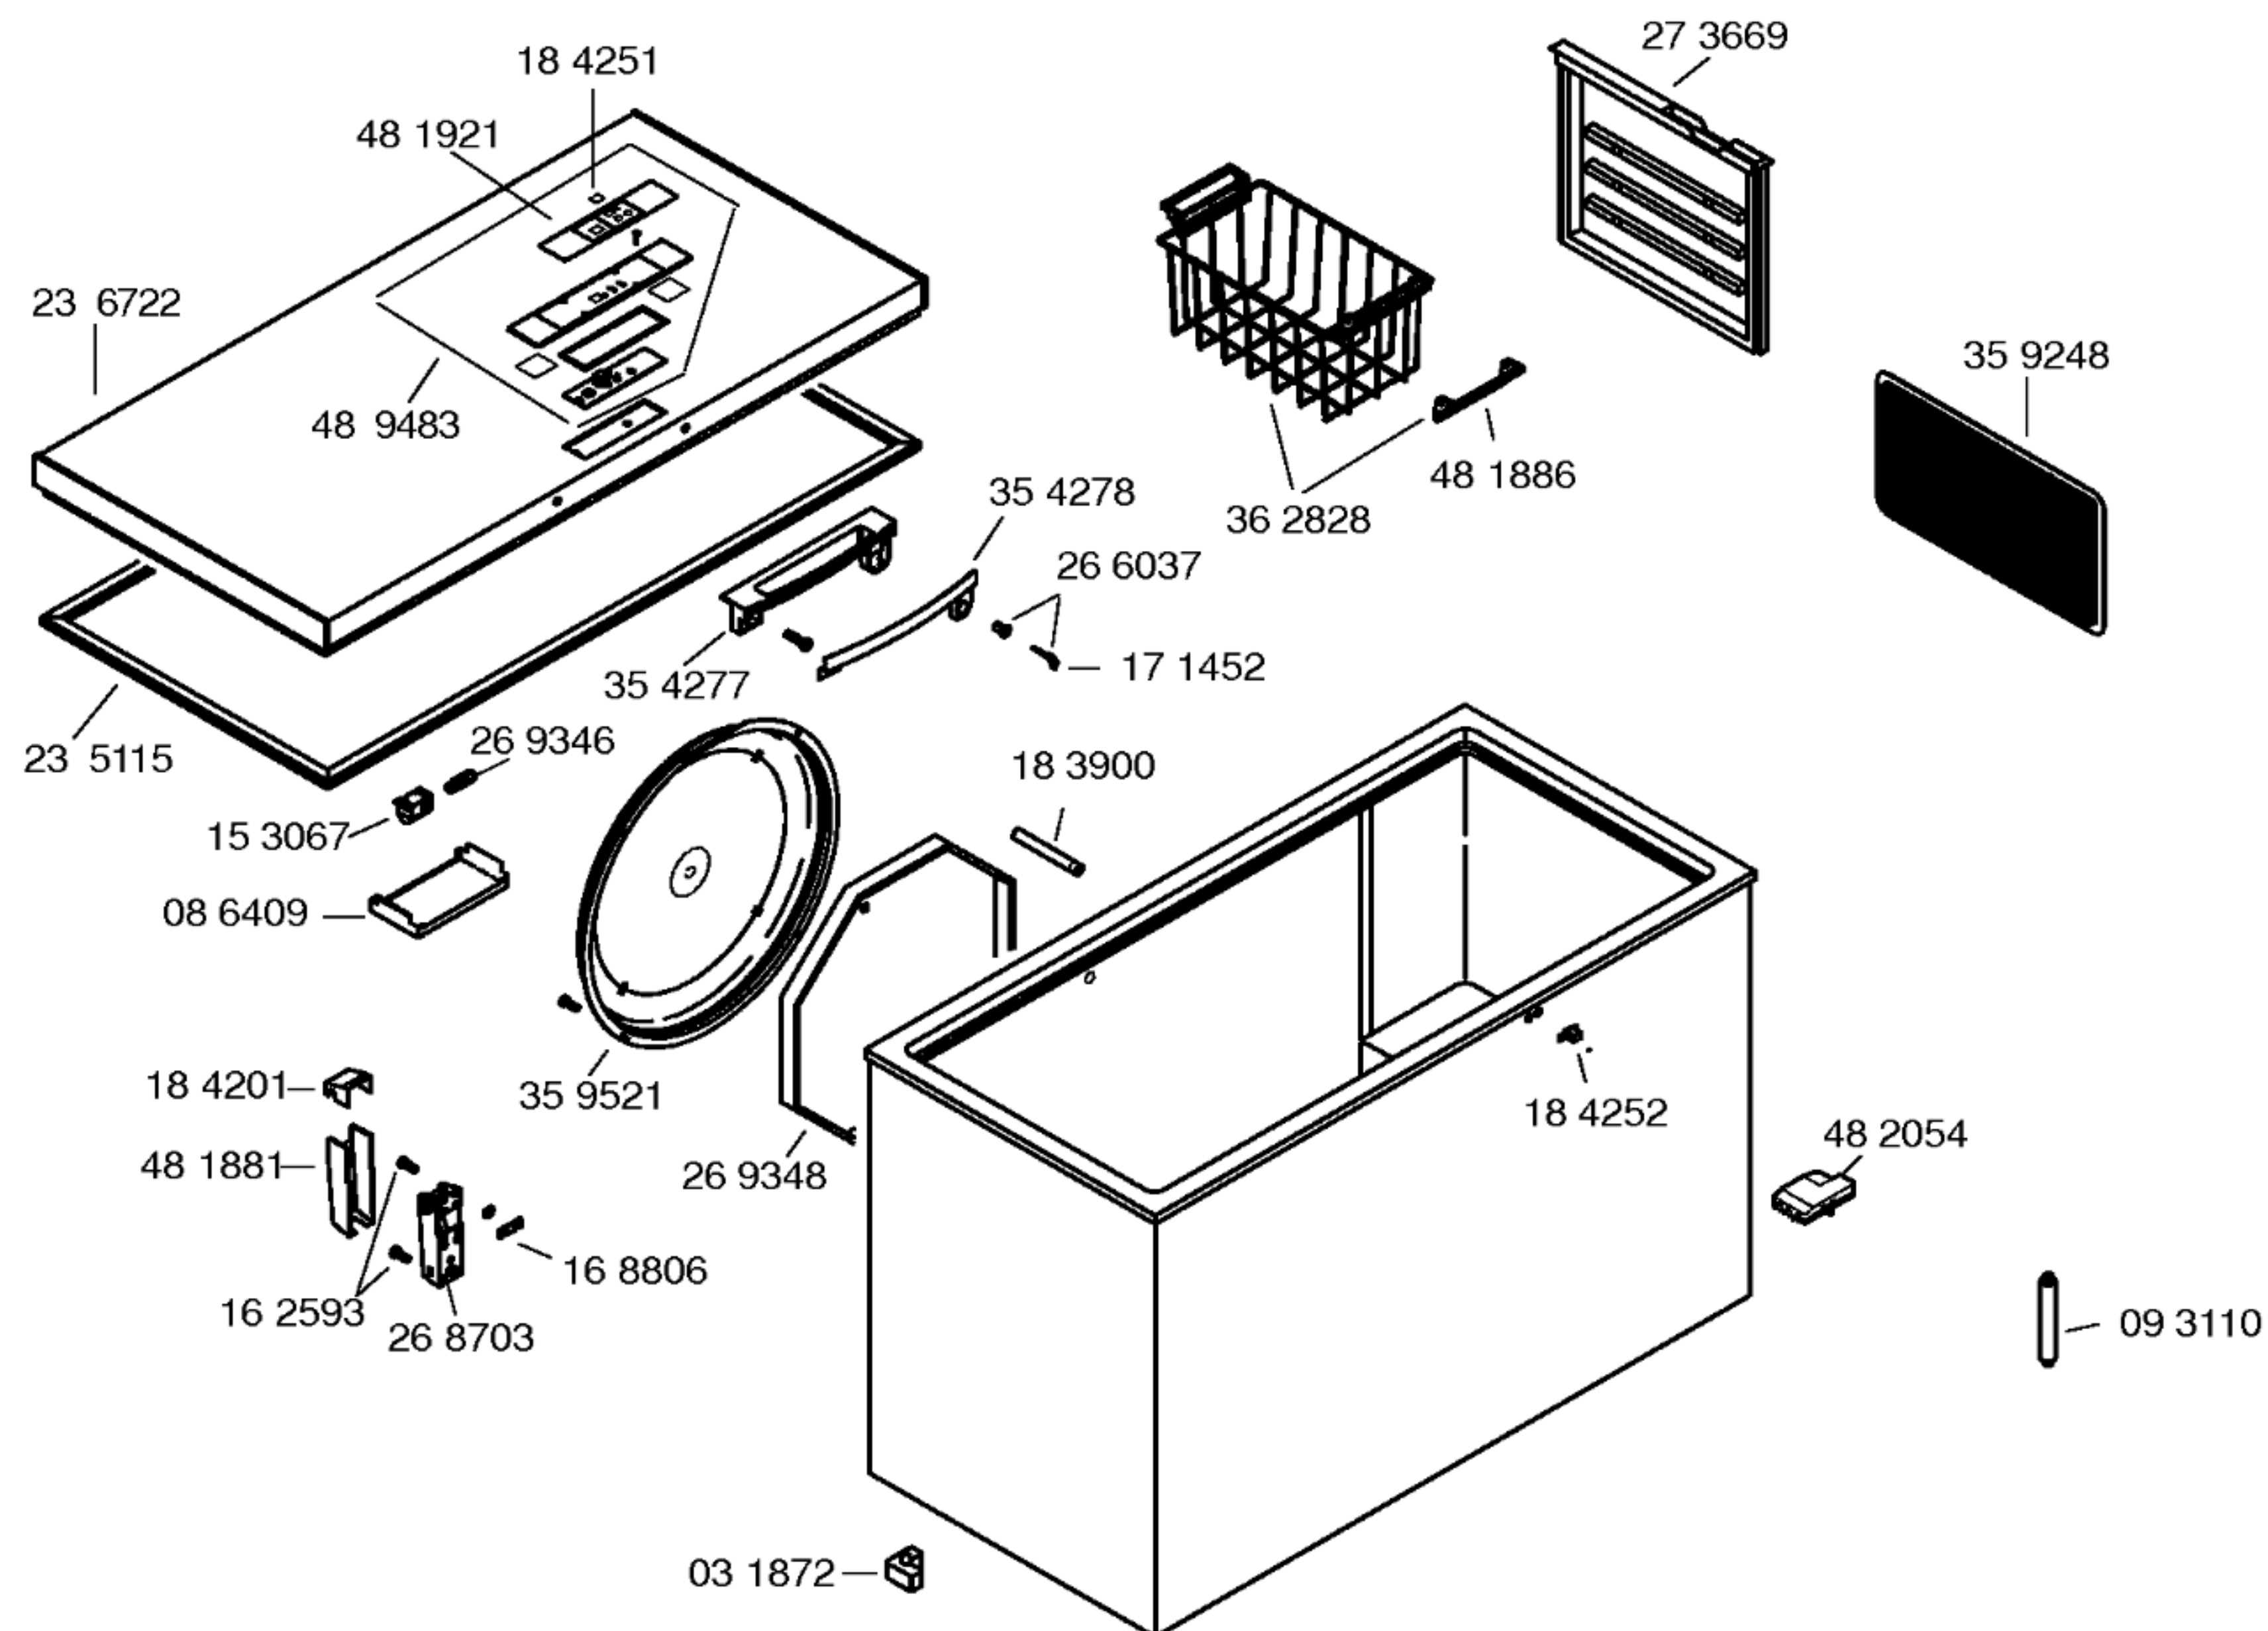

Mat. – Nr. – Konstante
3740

Gebrauchsanleitung
52 9306

Mat. – Nr. – Konstante
3740

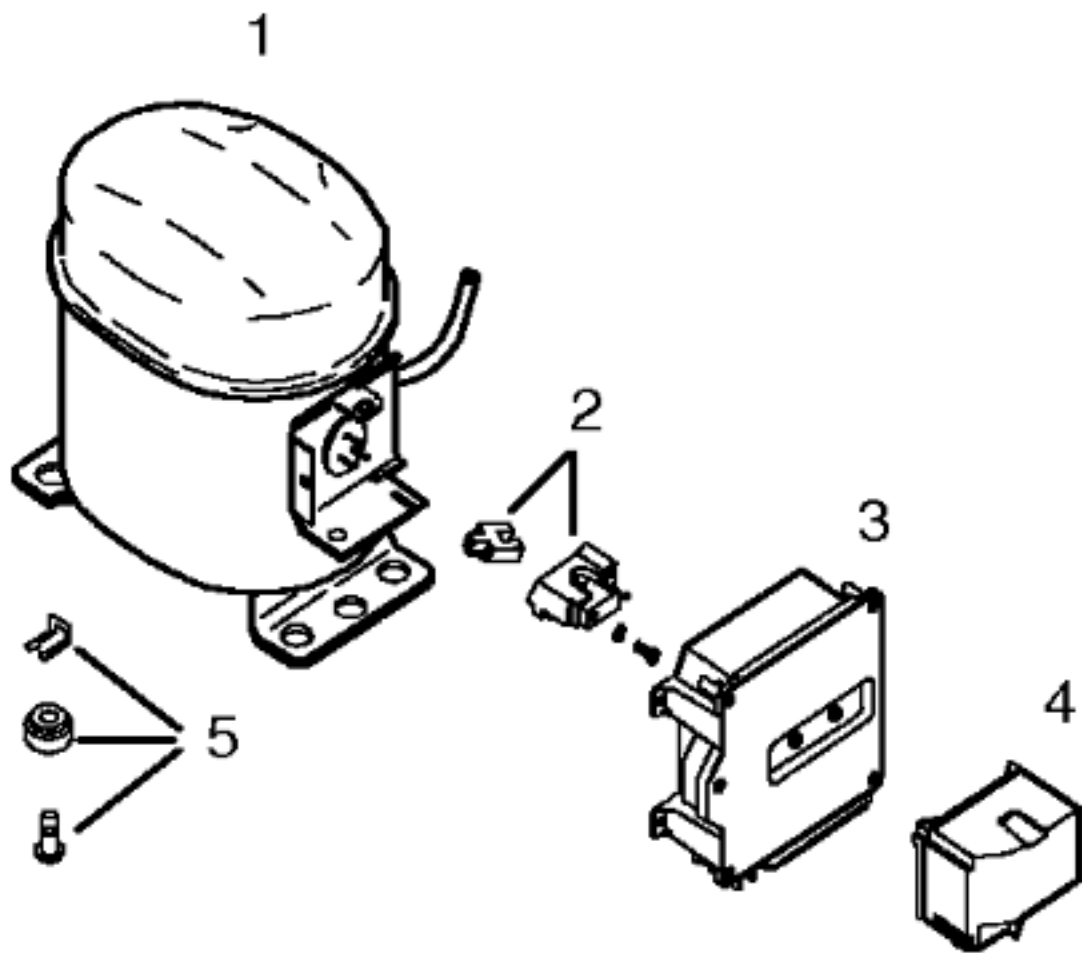

Pos.	V01		
	Zanussi		
	HLT 99RSB		
1	36 3197		
2			
3	48 2053		
4	18 4466		
5	15 3069		
6			
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Zanussi		
Typ/Type	HLT 99RSB		
Förderleistung/Delivery/Débit			
Anlaufstrom/Starting current/Cour de démarrage			
Widerstand/Resistance/Résistance			
Temp.-Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/	„ein“	°C	
Valeurs de commutation	„aus“		
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W		
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild