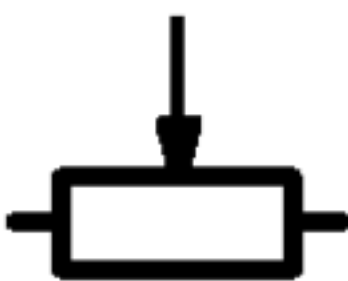


Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		ELEKTRISCHE TEILE	ELECTRICAL PARTS PIECES ELECTRIQUE
			
	75 8840		
	75 8837	Lautsprecher 4 Ohm	speaker haut parleur
	75 8652	Teleskopantenne	telescope antenna telescopique antenne
			
	79 3842	Lautstärke	volume
	79 3843	Balance	balance
	79 3859	Klang	EQ
		GEHÄUSETEILE	CABINET PARTS PARTIE DU BOITIER
	75 8835	Cassettenfachklappe A, ohne Fenster V01	cassette lid A, without window couvercle p. boitier A, sans hublot
	75 9799	Cassettenfachklappe A, kpl. V02	
	75 8836	Cassettenfachklappe B, ohne Fenster V01	cassette lid B, without window couvercle p. boitier B, sans hublot
	75 9800	Cassettenfachklappe B, kpl. V02	
	75 8834	Fenster für Cassettenfachklappe A V01	window for cassette lid A hublot p. couvercle p. boitier A
	75 8845	Fenster für Cassettenfachklappe B V01	window for cassette lid B hublot p. couvercle p. boitier B

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
	75 8841 75 9801	Batteriefachdeckel, groß V01 V02	battery lid couvercle p. boîtier de batterie
	78 3325	Griff ohne Blende	handle without cover poignée sans listeau enjoliveur
	78 3326	Griffblende	handle cover listeau enjoliveur p. poignée
	79 3845	Lautstärkeknopf	volume knob bouton p. volume
	79 3845	Balanceknopf	balance knob bouton p. balance
		LAUFWERKTEILE	MECHANISM PARTS
	75 8839	Cassettenmechanik	cassette mechanism
	53 0900	Gebrauchsanweisung	instruction manual instruction d'emploi
	53 5524	Service–Anleitung	service booklet brochure service
		Hinweis: V01/V02 keine Schaltplanänderung	Hint: V01/V02 no modification on circuit diagram