 
 
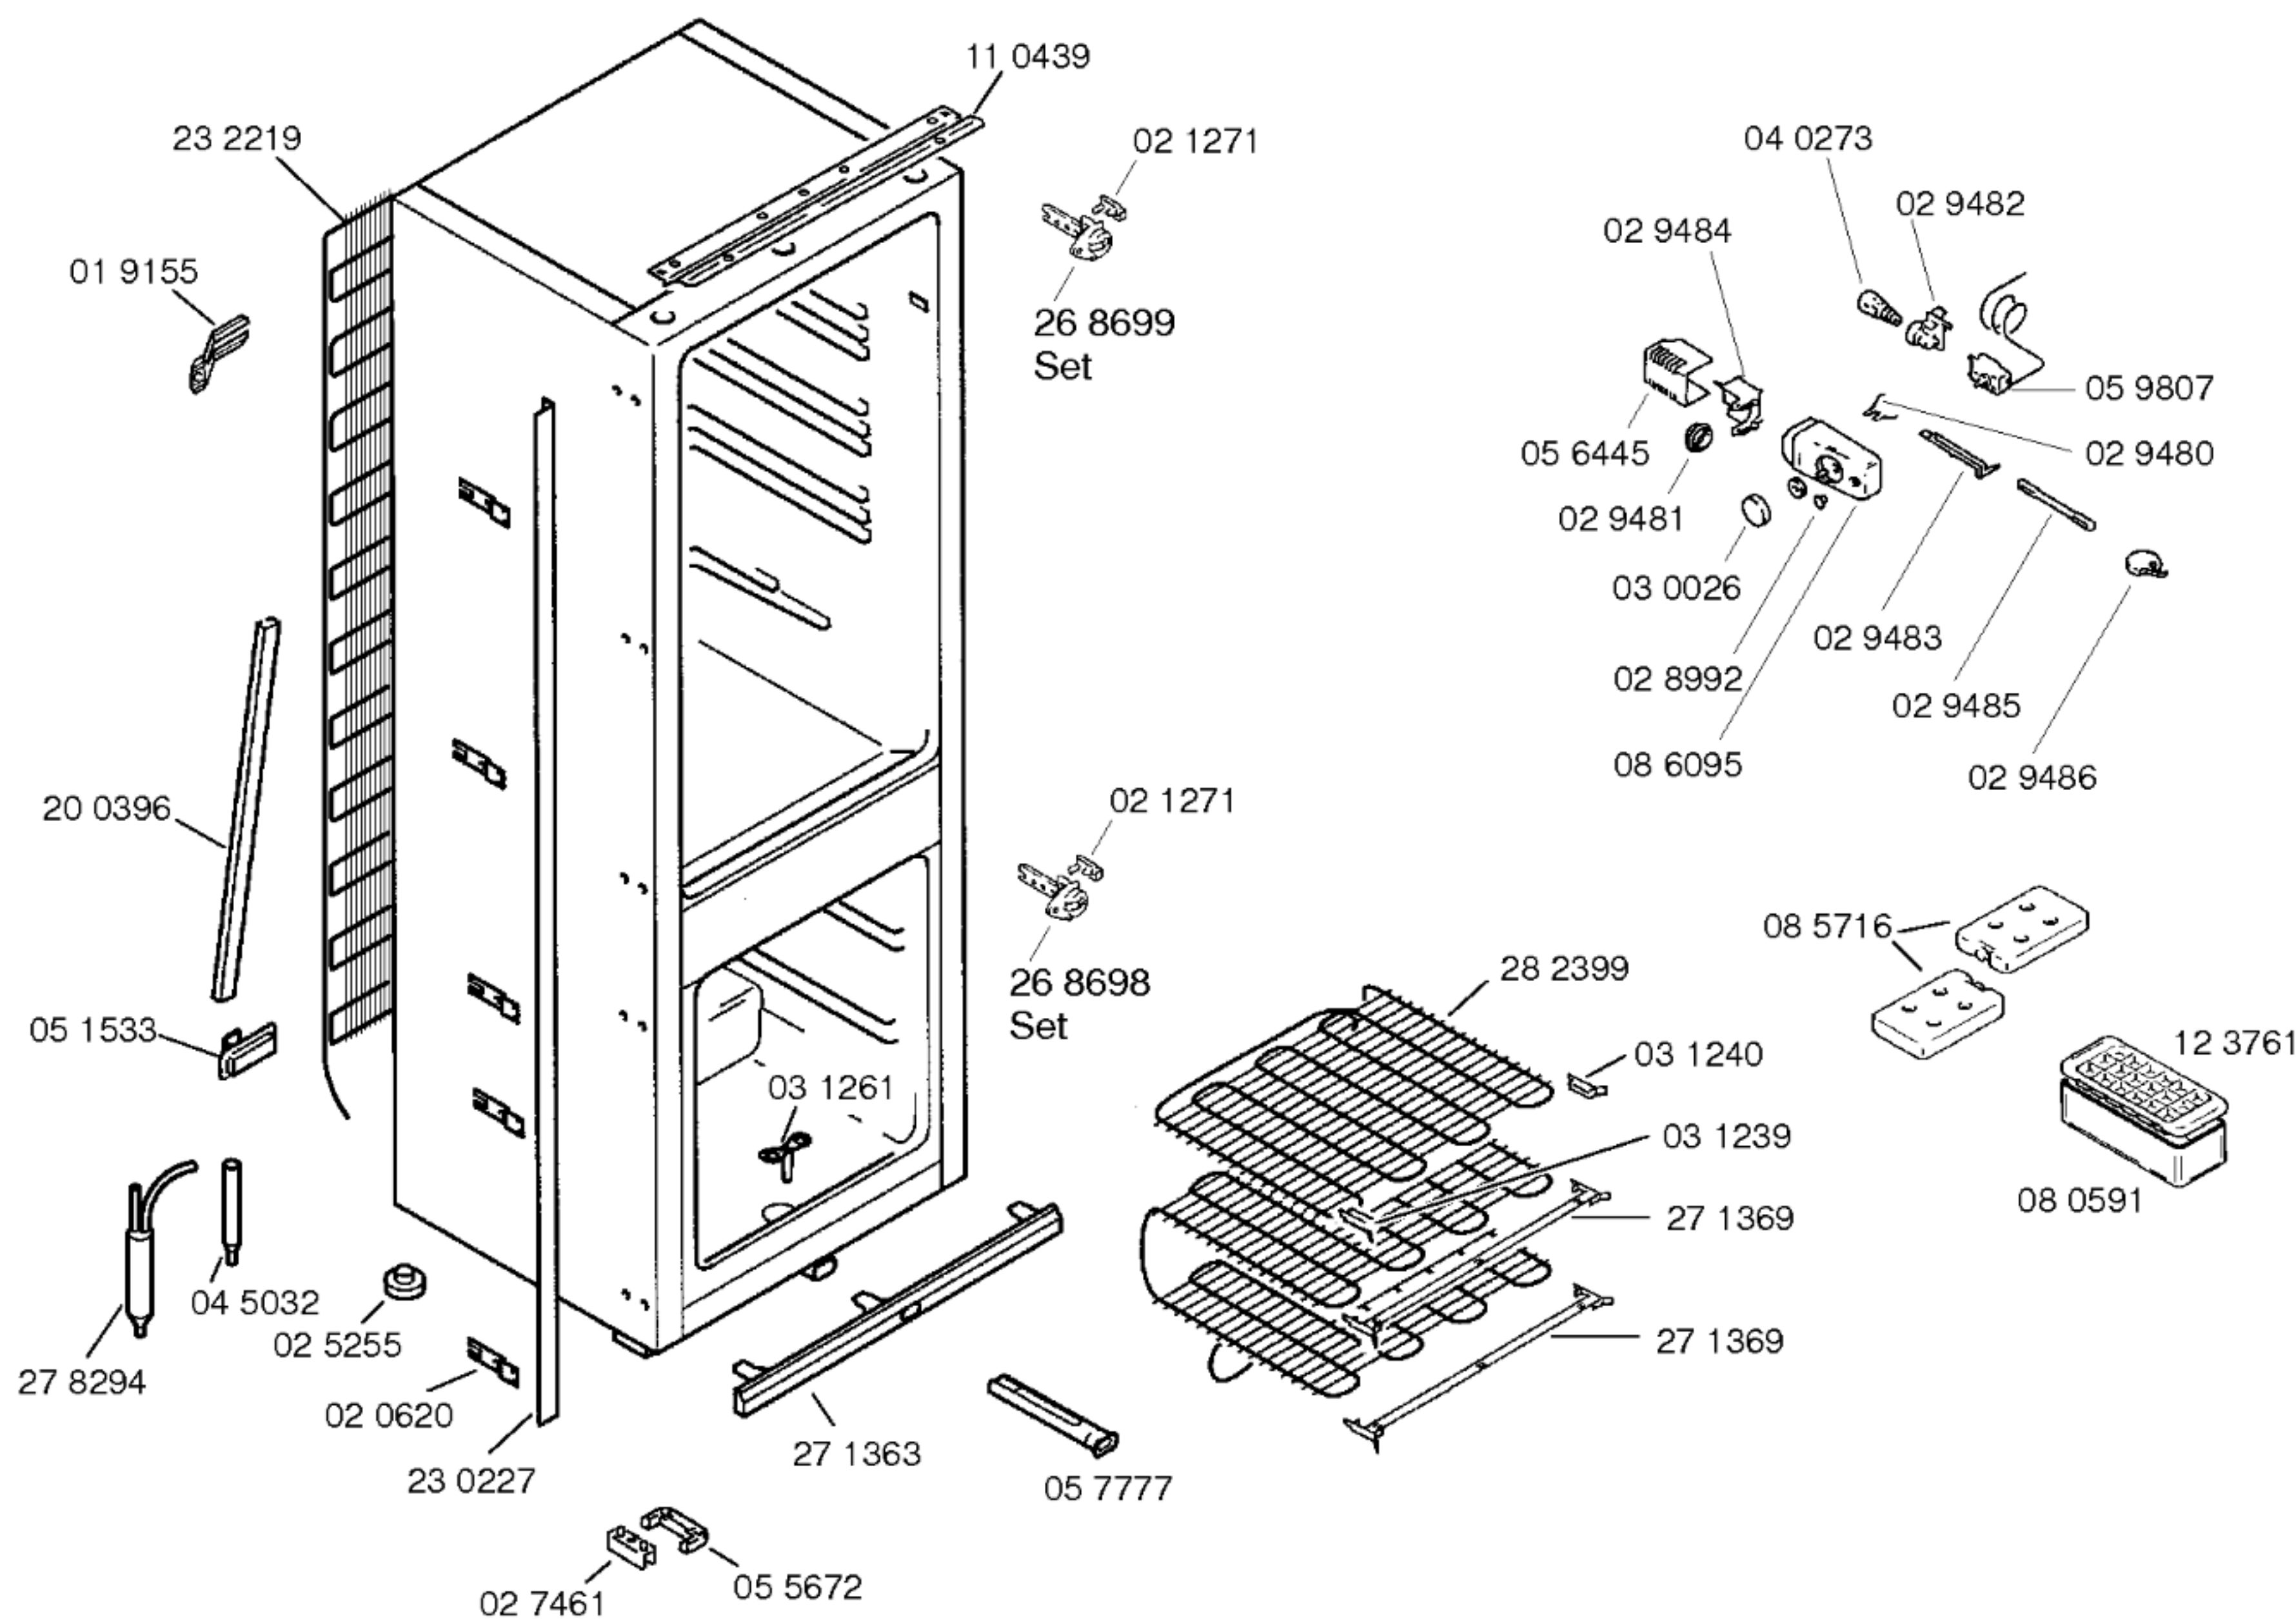 


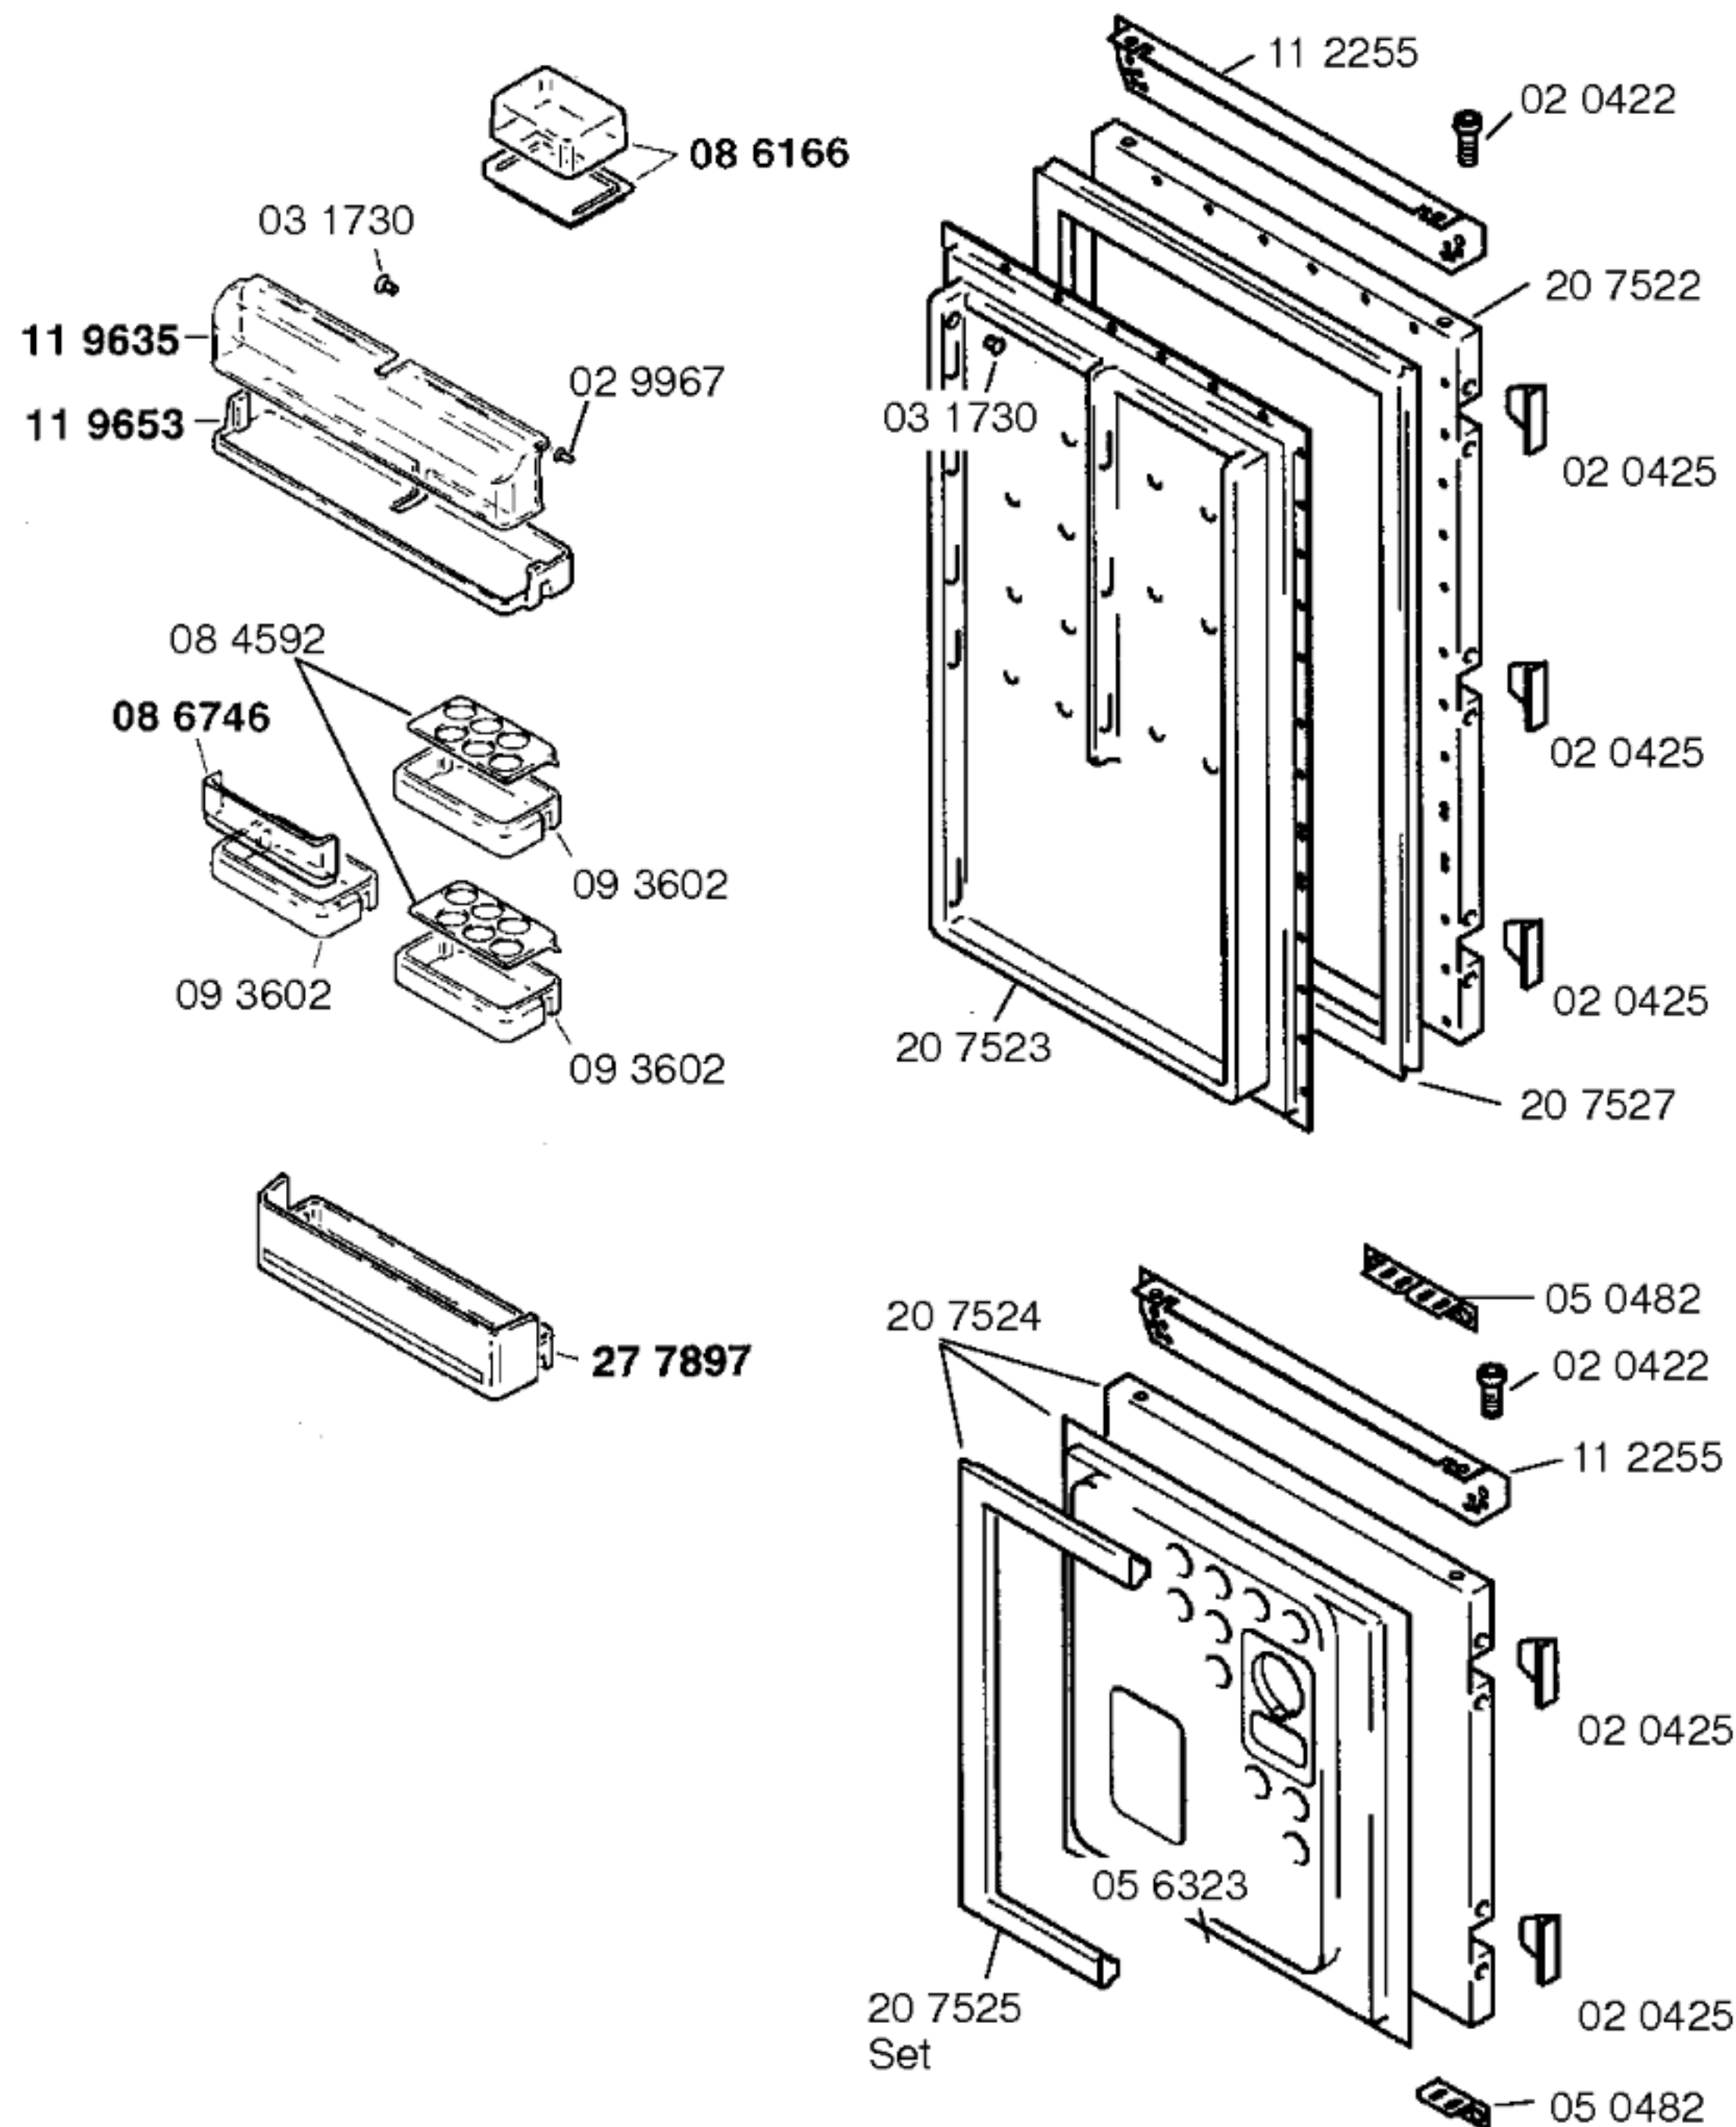 


Gebrauchsanweisung
51 6233
(D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,,SF)

08 4137
Befestigungssatz
08 4136
Schraubensatz

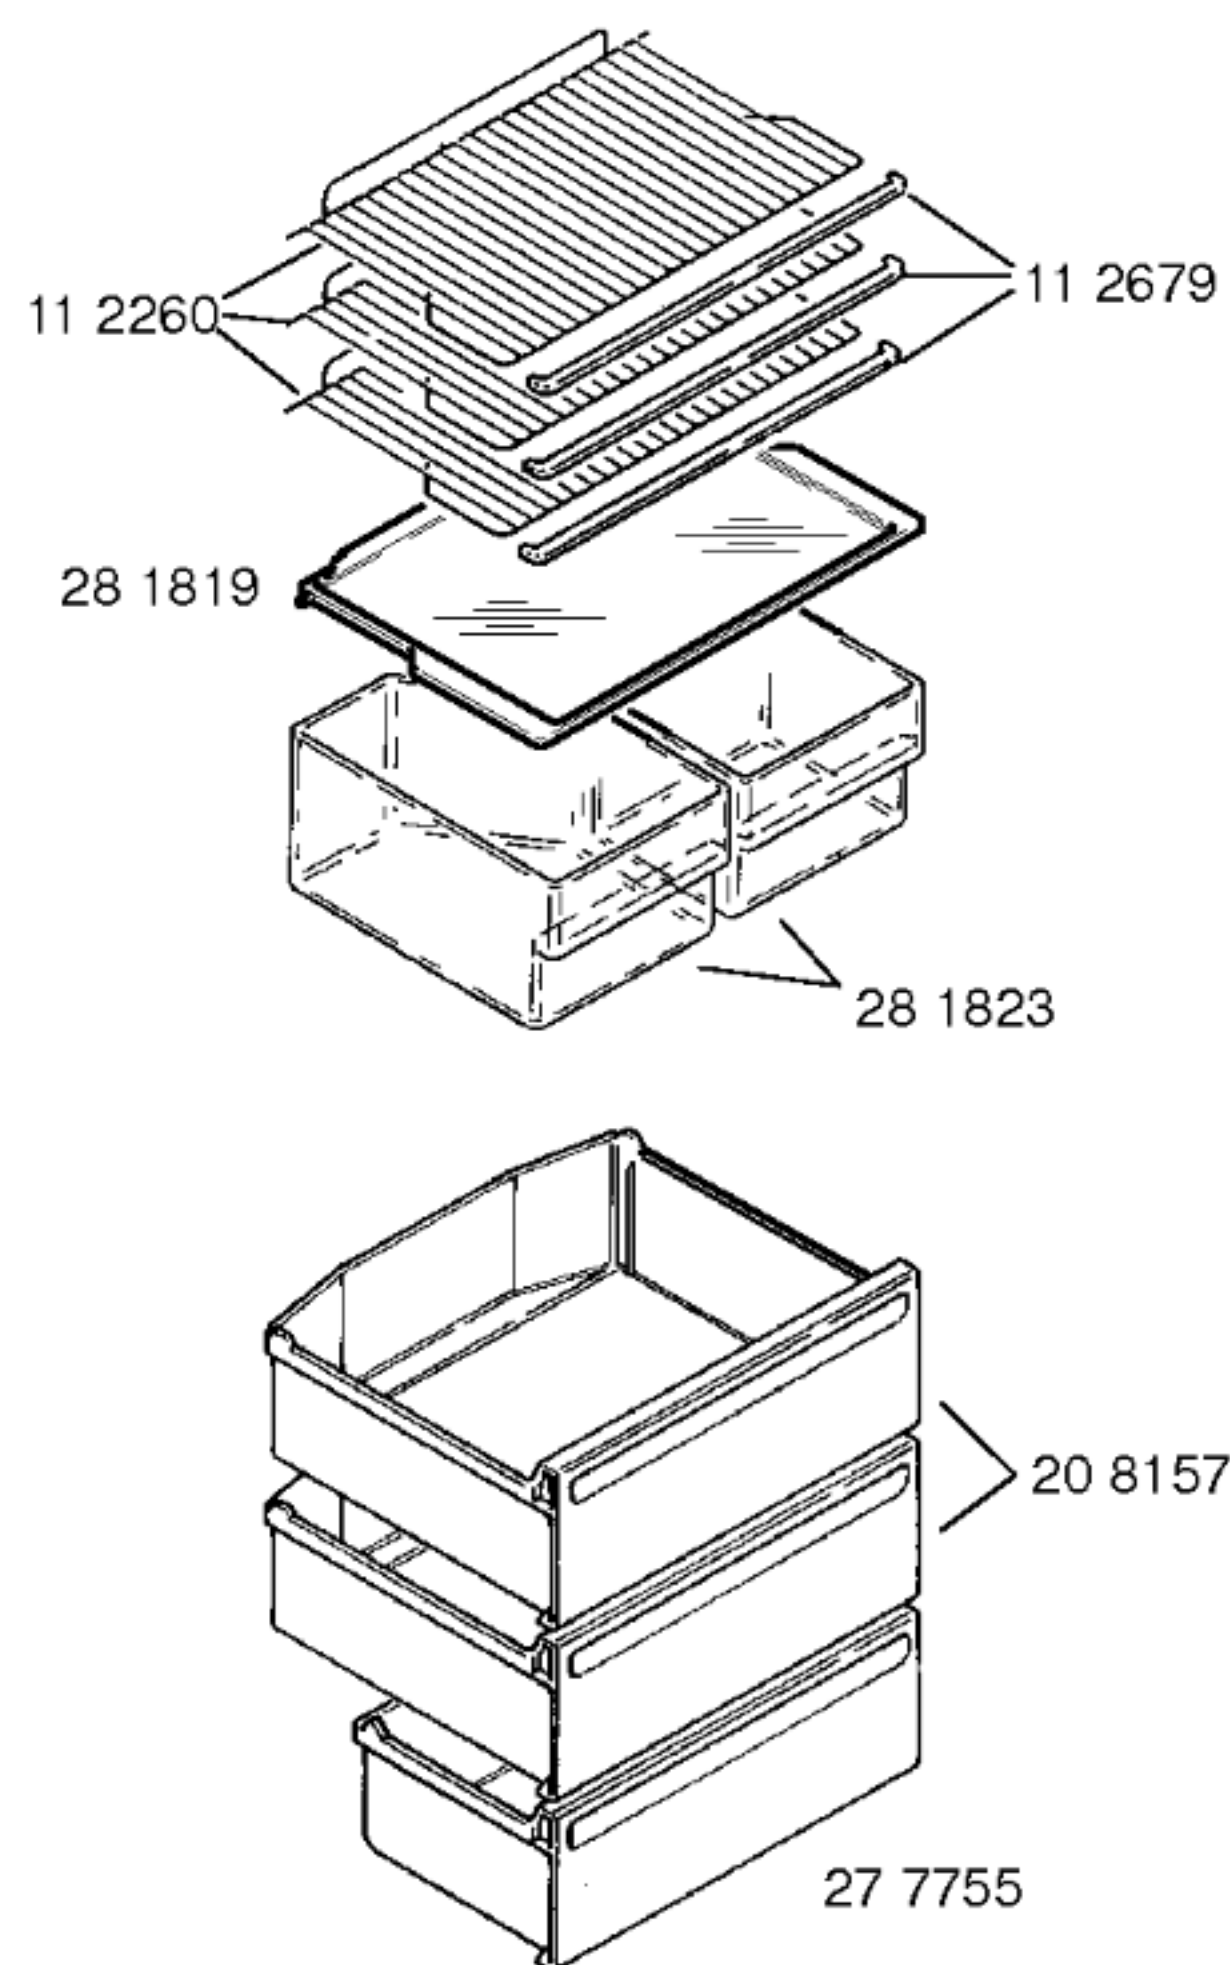

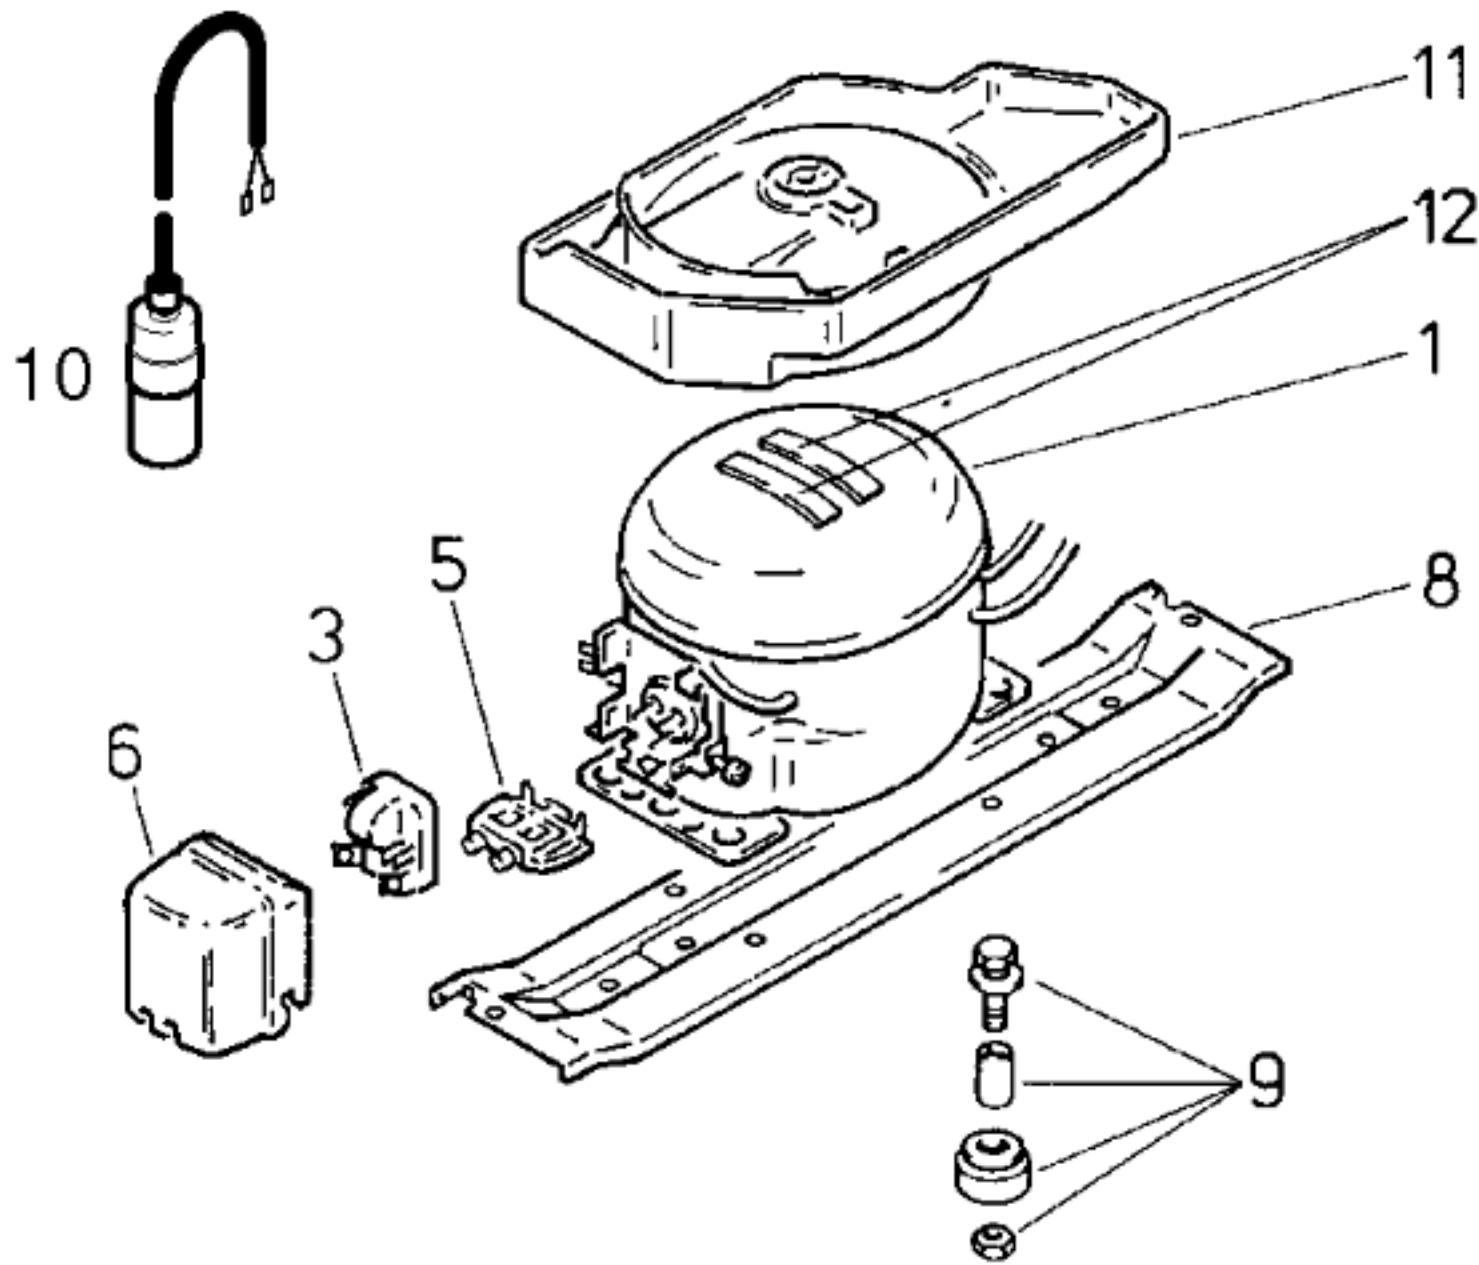

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		NL7A		
Förderleistung/Delivery/Débit		l/h	1314	
Anlaufstrom/Starting current/Cour. de démarrage		A	10,5	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	13,3
		Hi/aux	Ω	16,3
Temp.-Regler/Thermostat		WHF/TPC		
Typ/Type		TF57F1K		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“	°C	+ 5
Valeurs de commutation		„aus“		+ 5
		(„abtauen“ od.)	„alarm“	-20
Füllmenge/Fill.quantity/Charge		R12	g	180
Anschlußwert/Conn.load/Puiss. connectée			W	150
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance			Ω	
Leistung/Power/Puissance			W	
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance			Ω	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance			Ω	
Spannung/Voltage/Tension			V	

Pos.	Danfoss		
	NL7A		
1	14 0908		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 1826		
12	05 6008		