




Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
	53 0988	Bedienungsanleitung	instruction manual instruction d'emploi
	53 5553	Service-Anleitung	service manual brochure service
		TEST-CD YEDS 18	
	75 8983	Fernbedienung	remote control télécommande
	79 4147	Batteriefachdeckel f. Fern- bedienung	battery lid f. remote control couvercle p. batterie de télécommande
	79 5644	CD-Kabel, Laser-Platine 7 x rot, 1 x braun	CD pick-up, cables 7 x red, 1 x brown
	79 5645	7 x weiß, 1 x braun	7 x white, 1 x brown
J401	79 4130	Kopfhörerbuchse	headphone socket douille p. récepteur serre-tête
J501	79 4130	Mikrofonbuchse	mic. socket douille p. micro
J901	79 5789	Netzbuchse	AC socket alimentation p. secteur


Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
D001	72 6799	1SS133	
D002	72 6799	1SS133	
D003	72 6799	1SS133	
D004	72 6799	1SS133	
D005	72 6799	1SS133	
D006	72 6799	1SS133	
D007	72 6799	1SS133	
D008	72 6799	1SS133	
D009	72 6799	1SS133	
D010	72 6799	1SS133	
D011	72 6799	1SS133	
D012	72 6799	1SS133	
D013	72 6799	1SS133	
D014	72 6799	1SS133	
D015	72 6799	1SS133	
D016	72 6799	1SS133	
D017	72 6799	1SS133	
D018	72 6799	1SS133	
D019	72 6799	1SS133	
D020	72 6799	1SS133	
D101	72 6799	1SS133	
D102	79 2105	1N60	
D201	72 6799	1SS133	
D221	72 6799	1SS133	
D301	72 6799	1SS133	
D302	72 6799	1SS133	
D303	72 6799	1SS133	
D401	72 6799	1SS133	
D402	72 6799	1SS133	
D403	72 6799	1SS133	
D404	72 6799	1SS133	

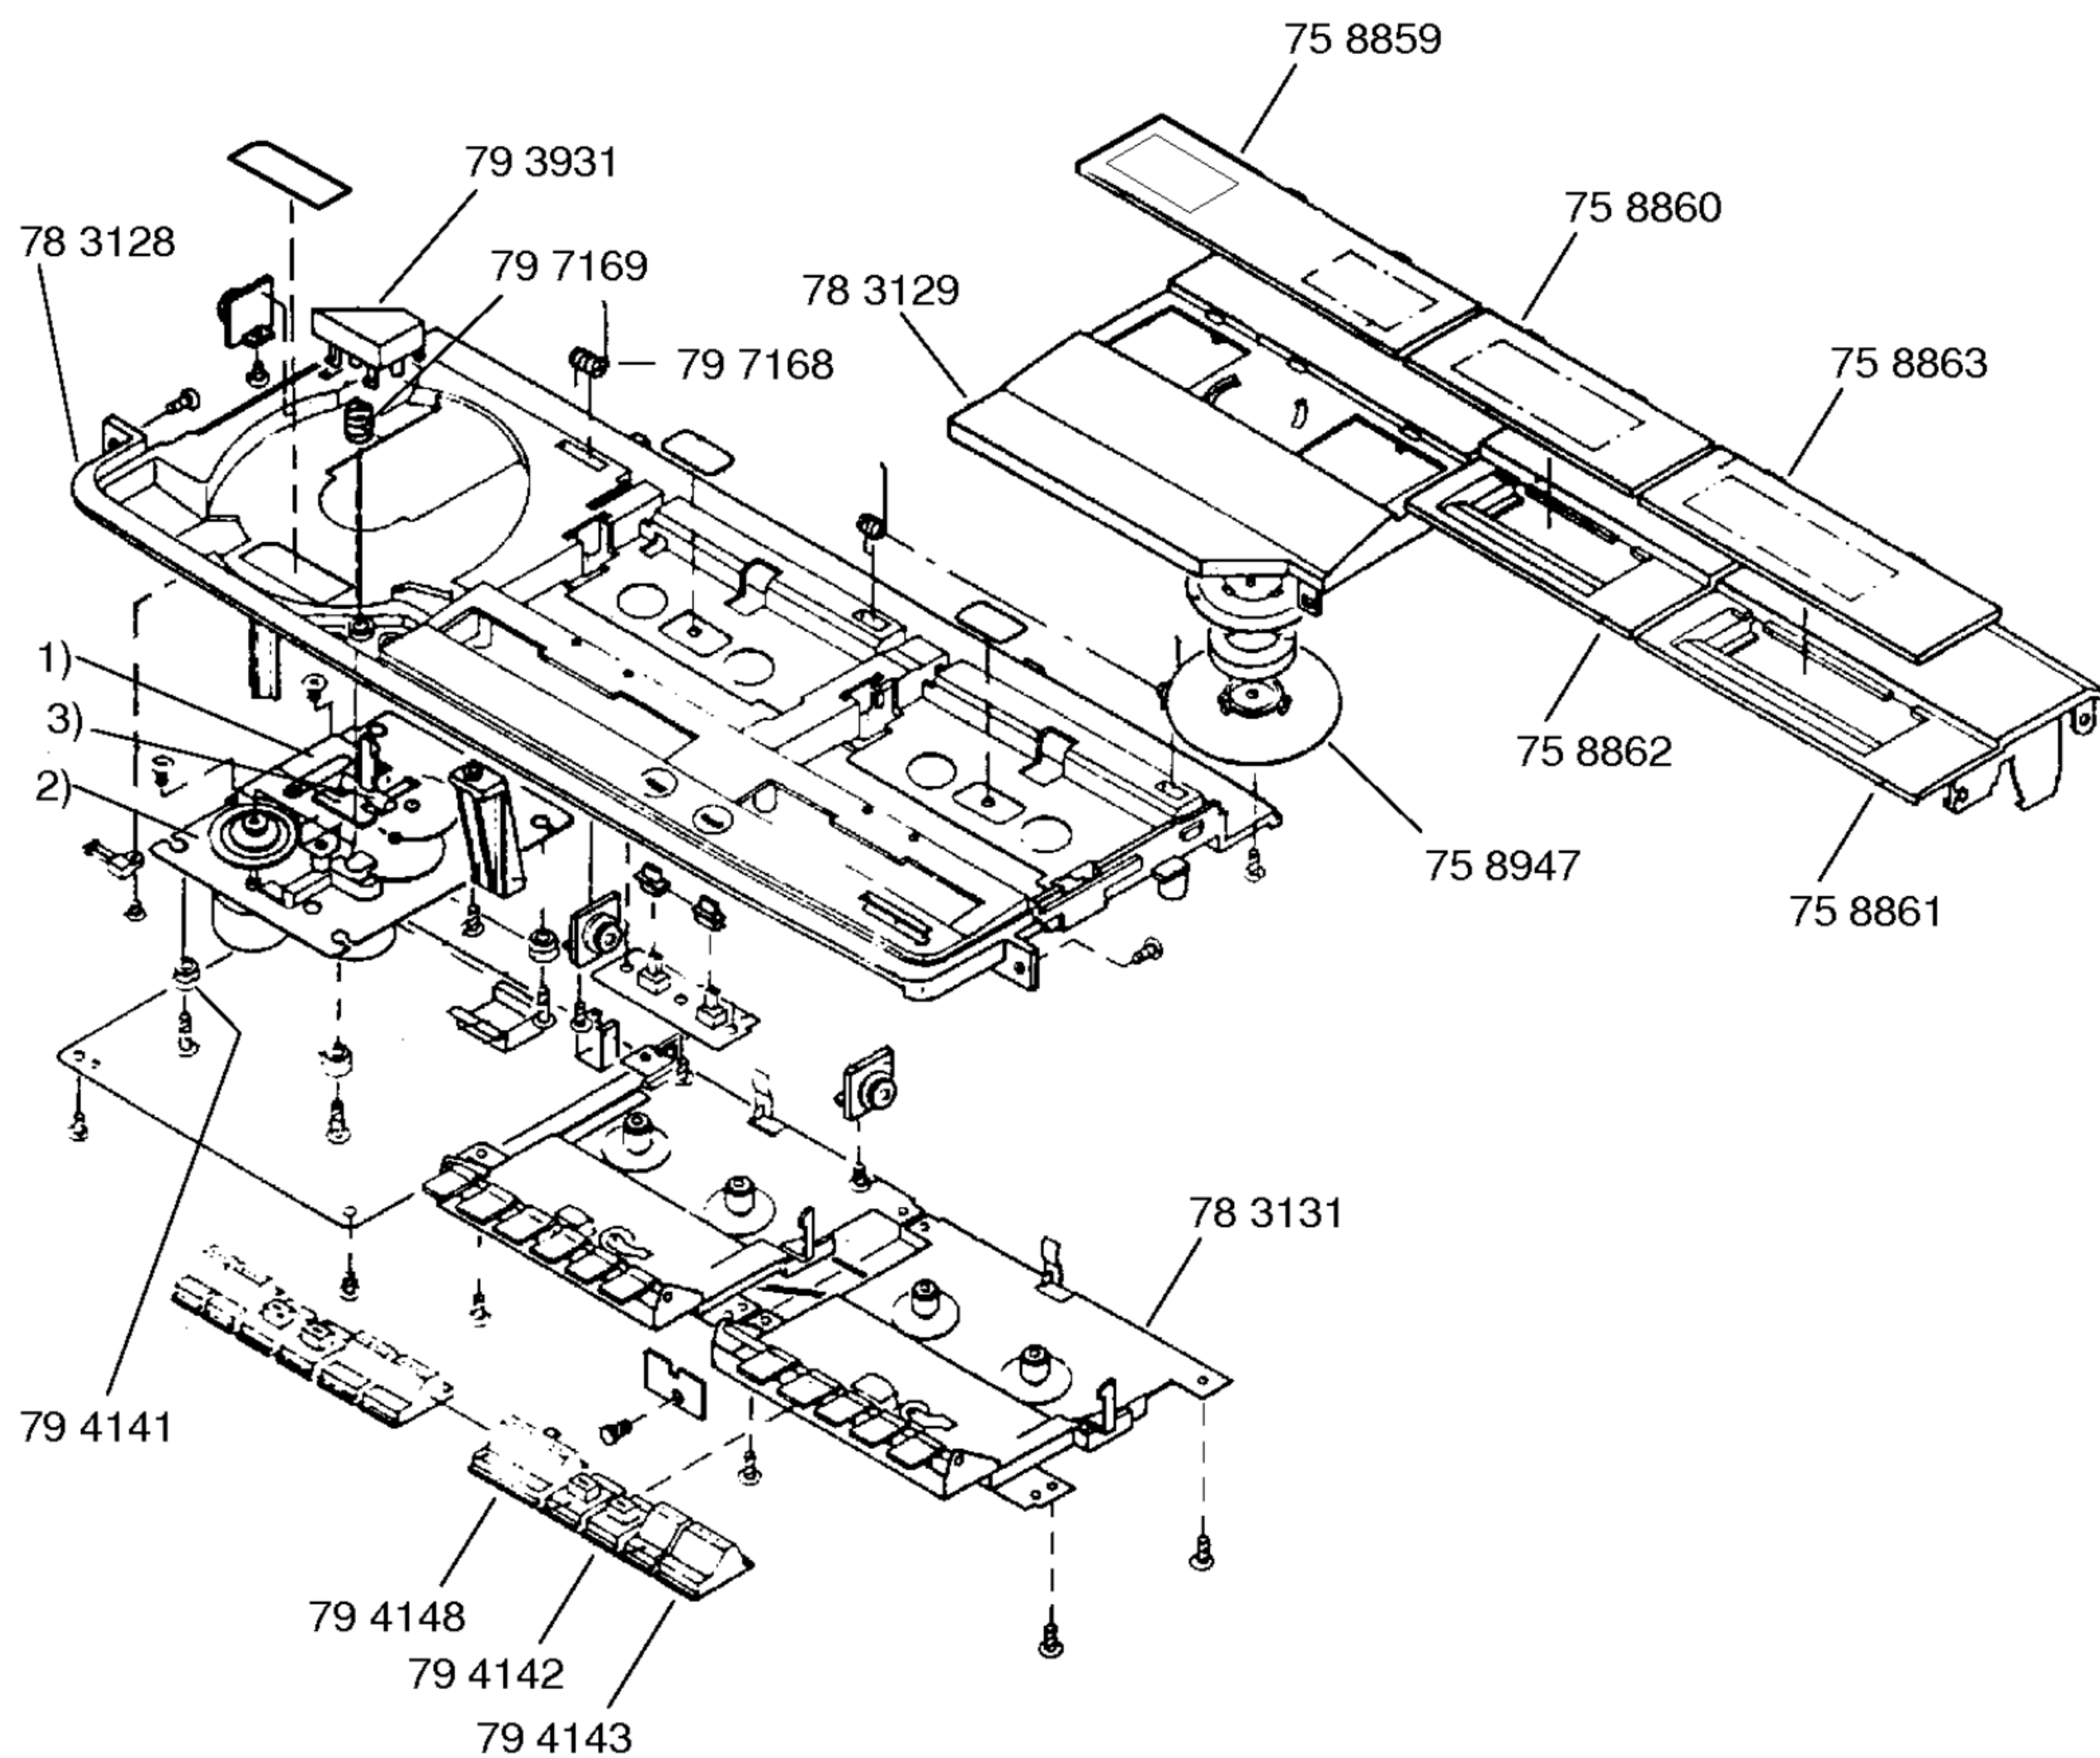

- 1) 75 8948
- 2) 75 8865
- 3) 79 5247

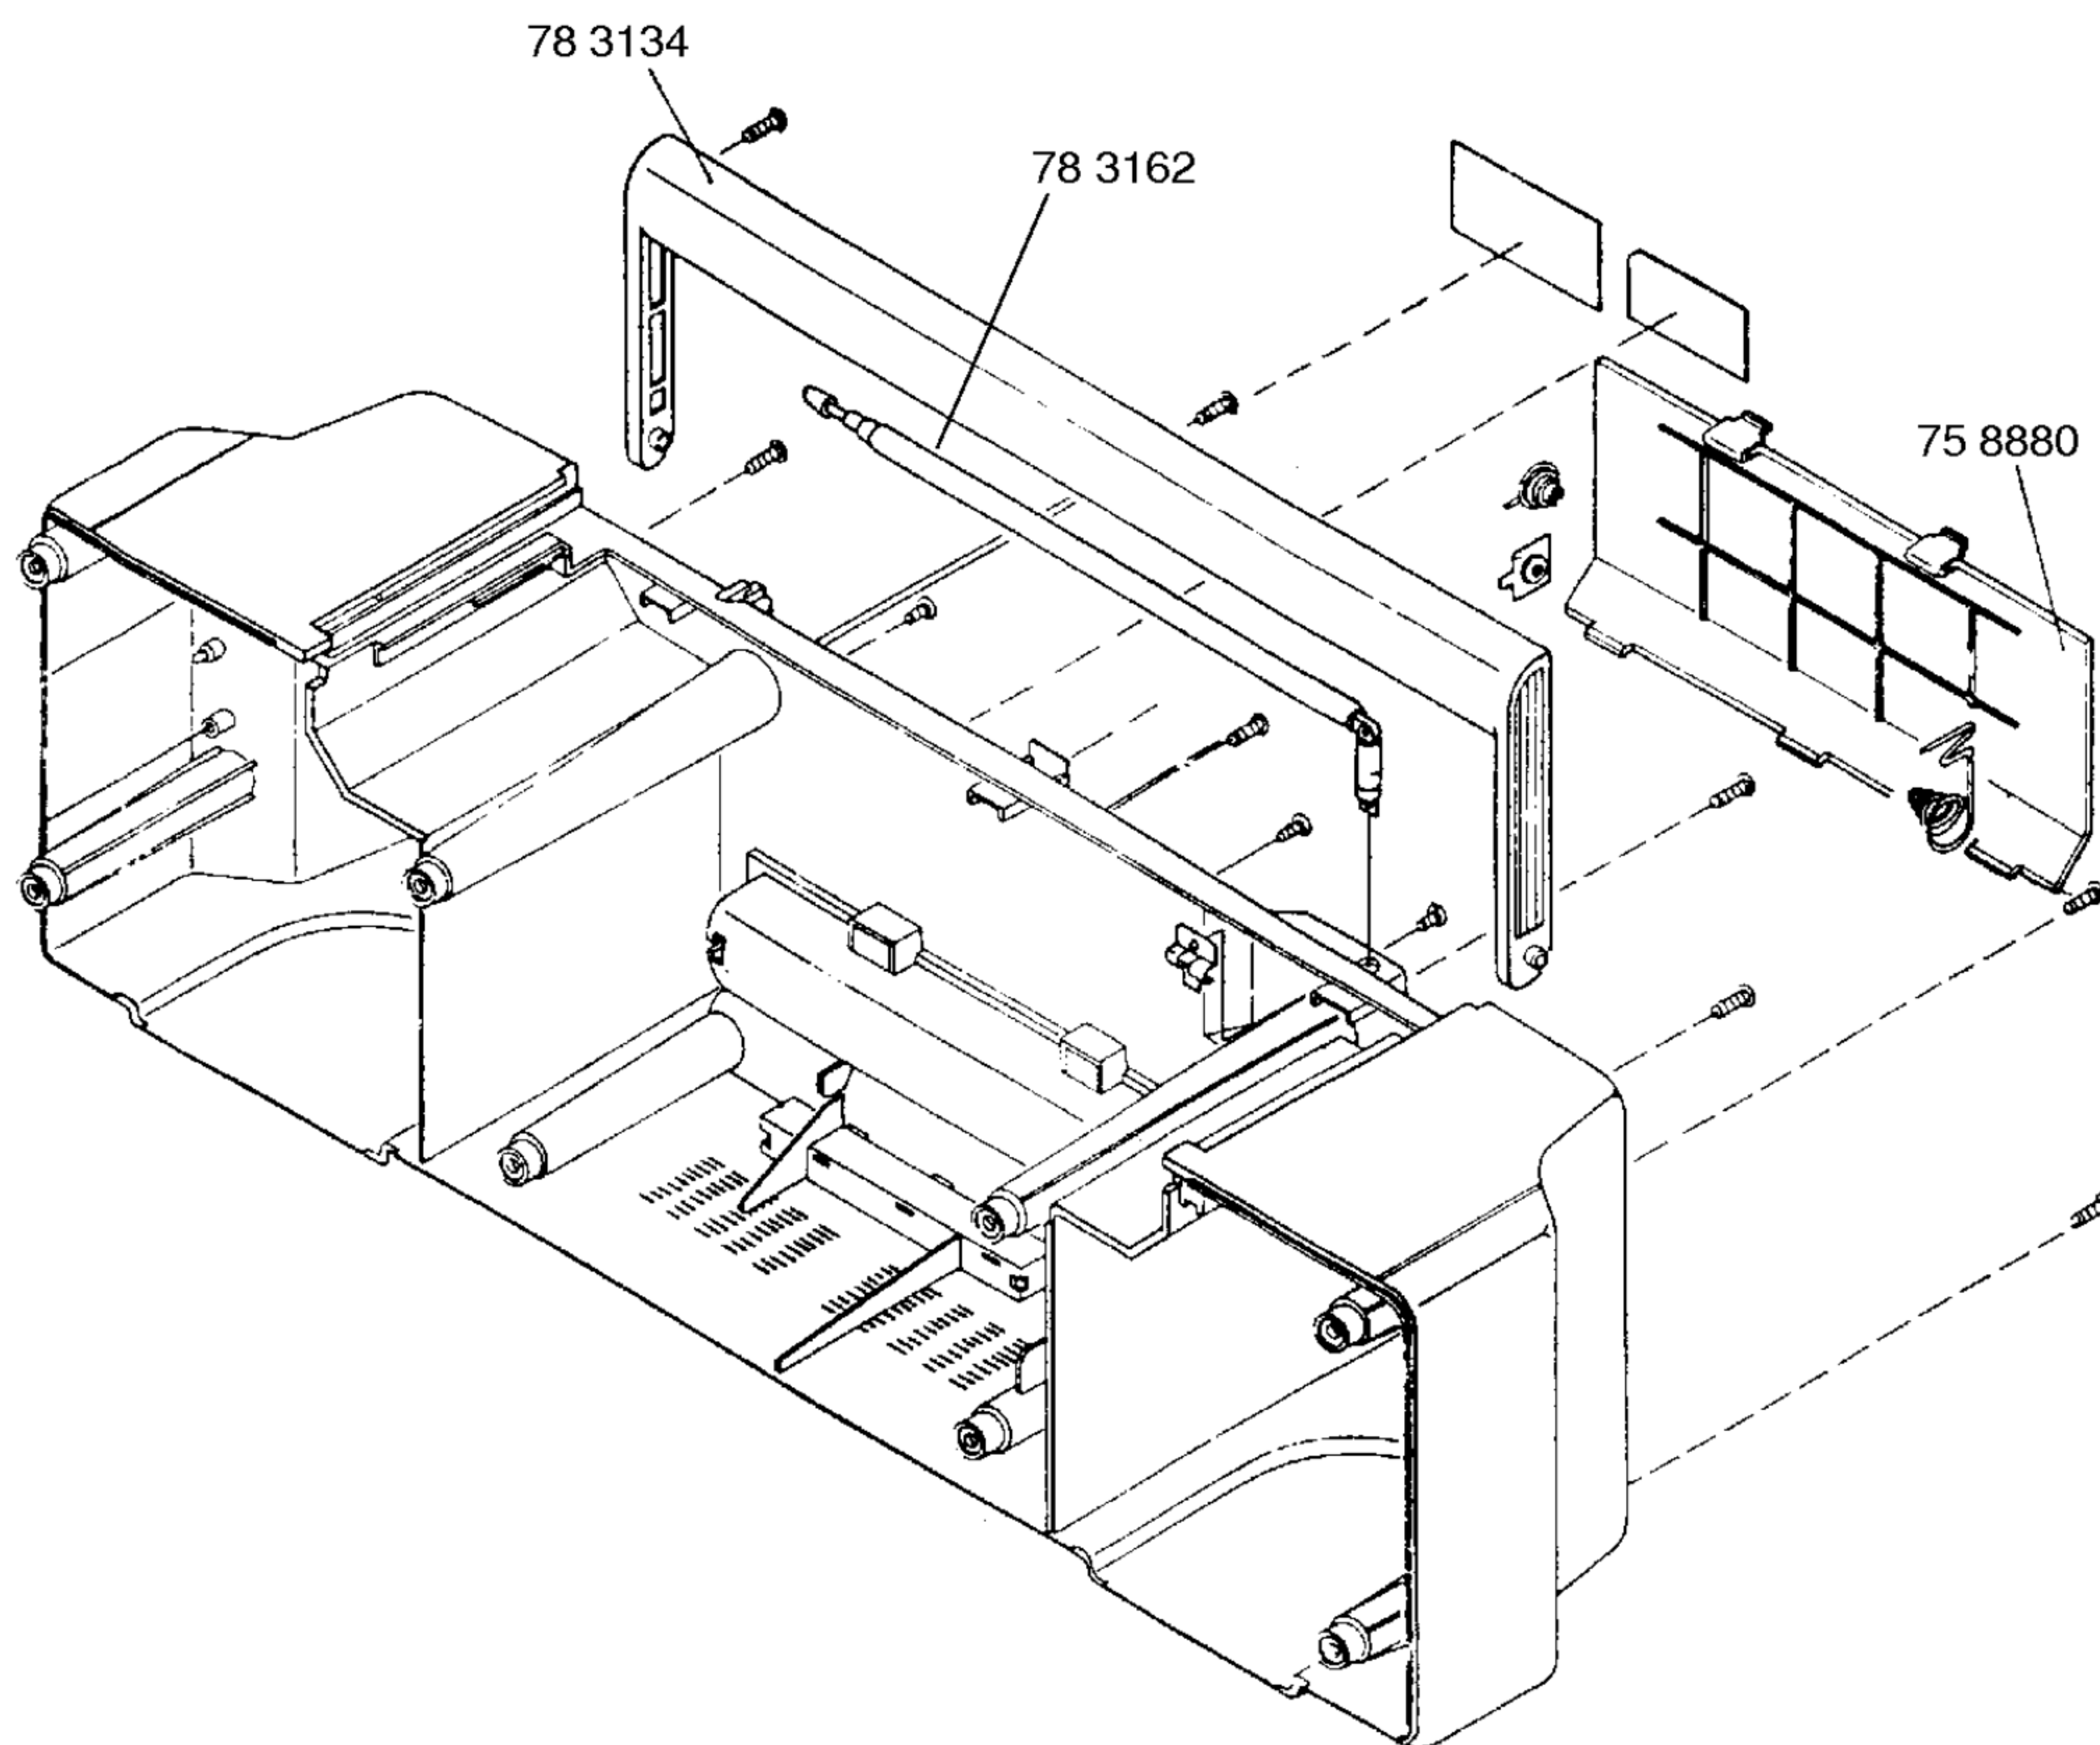


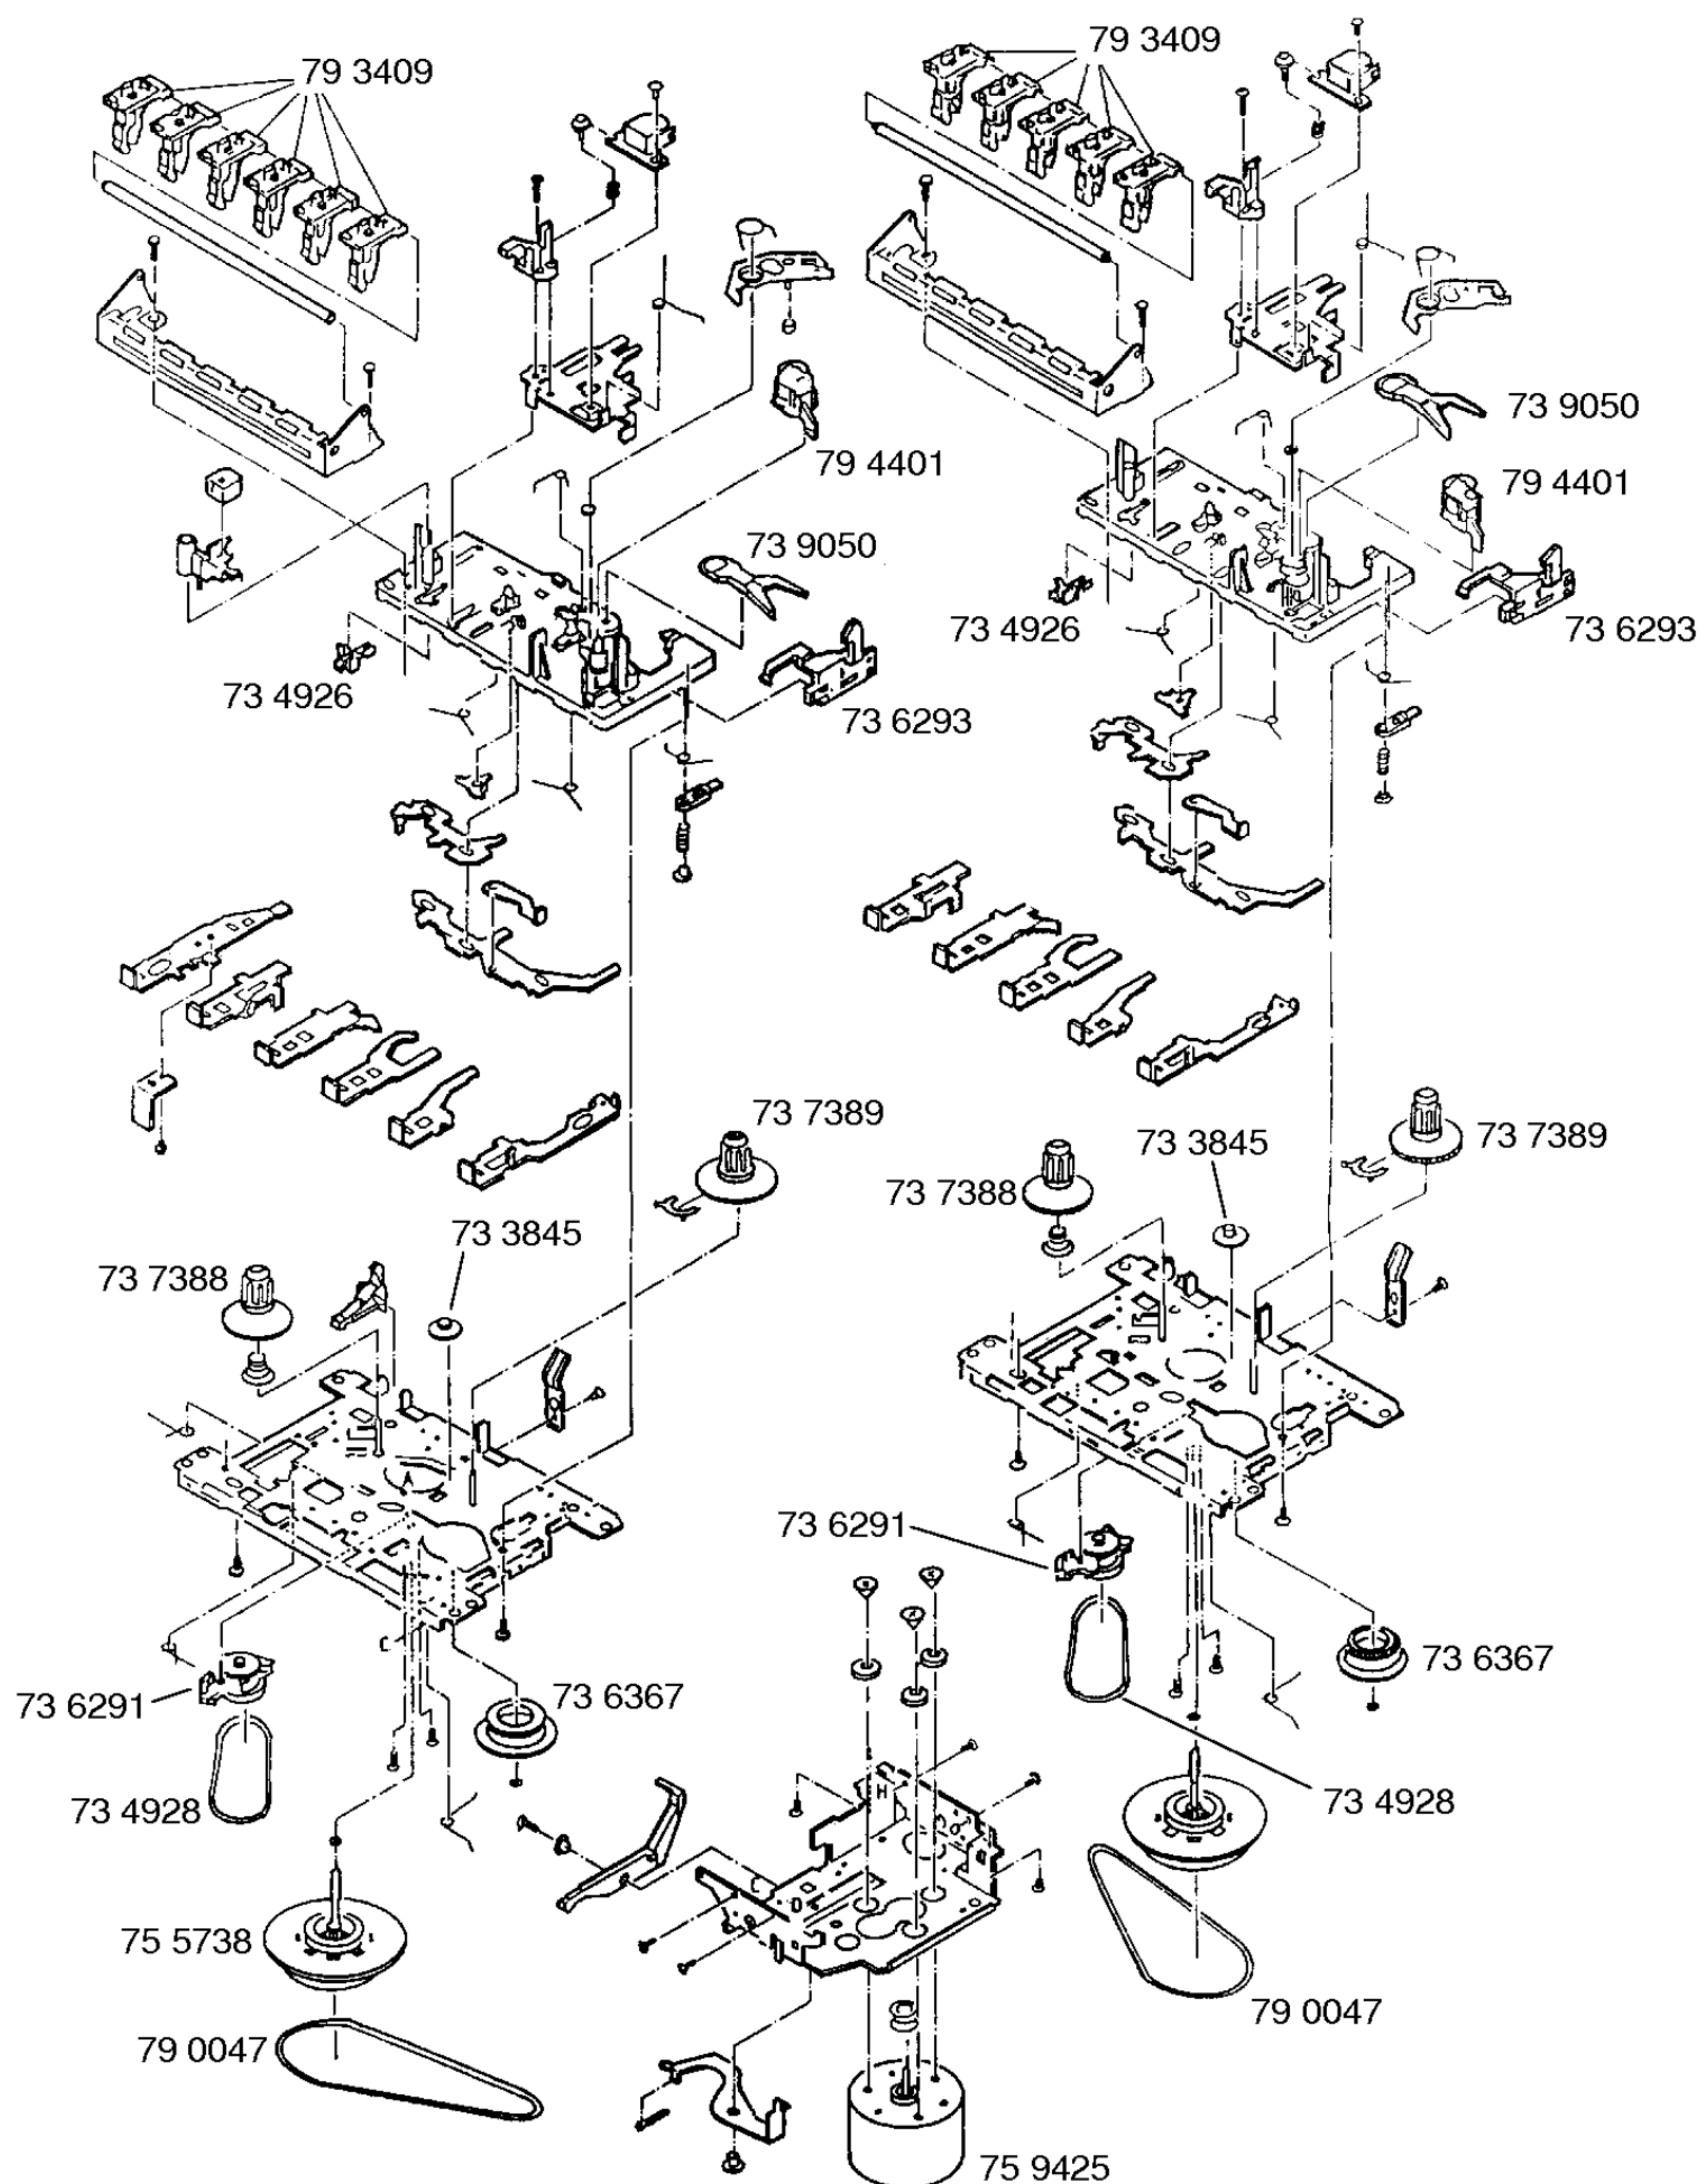

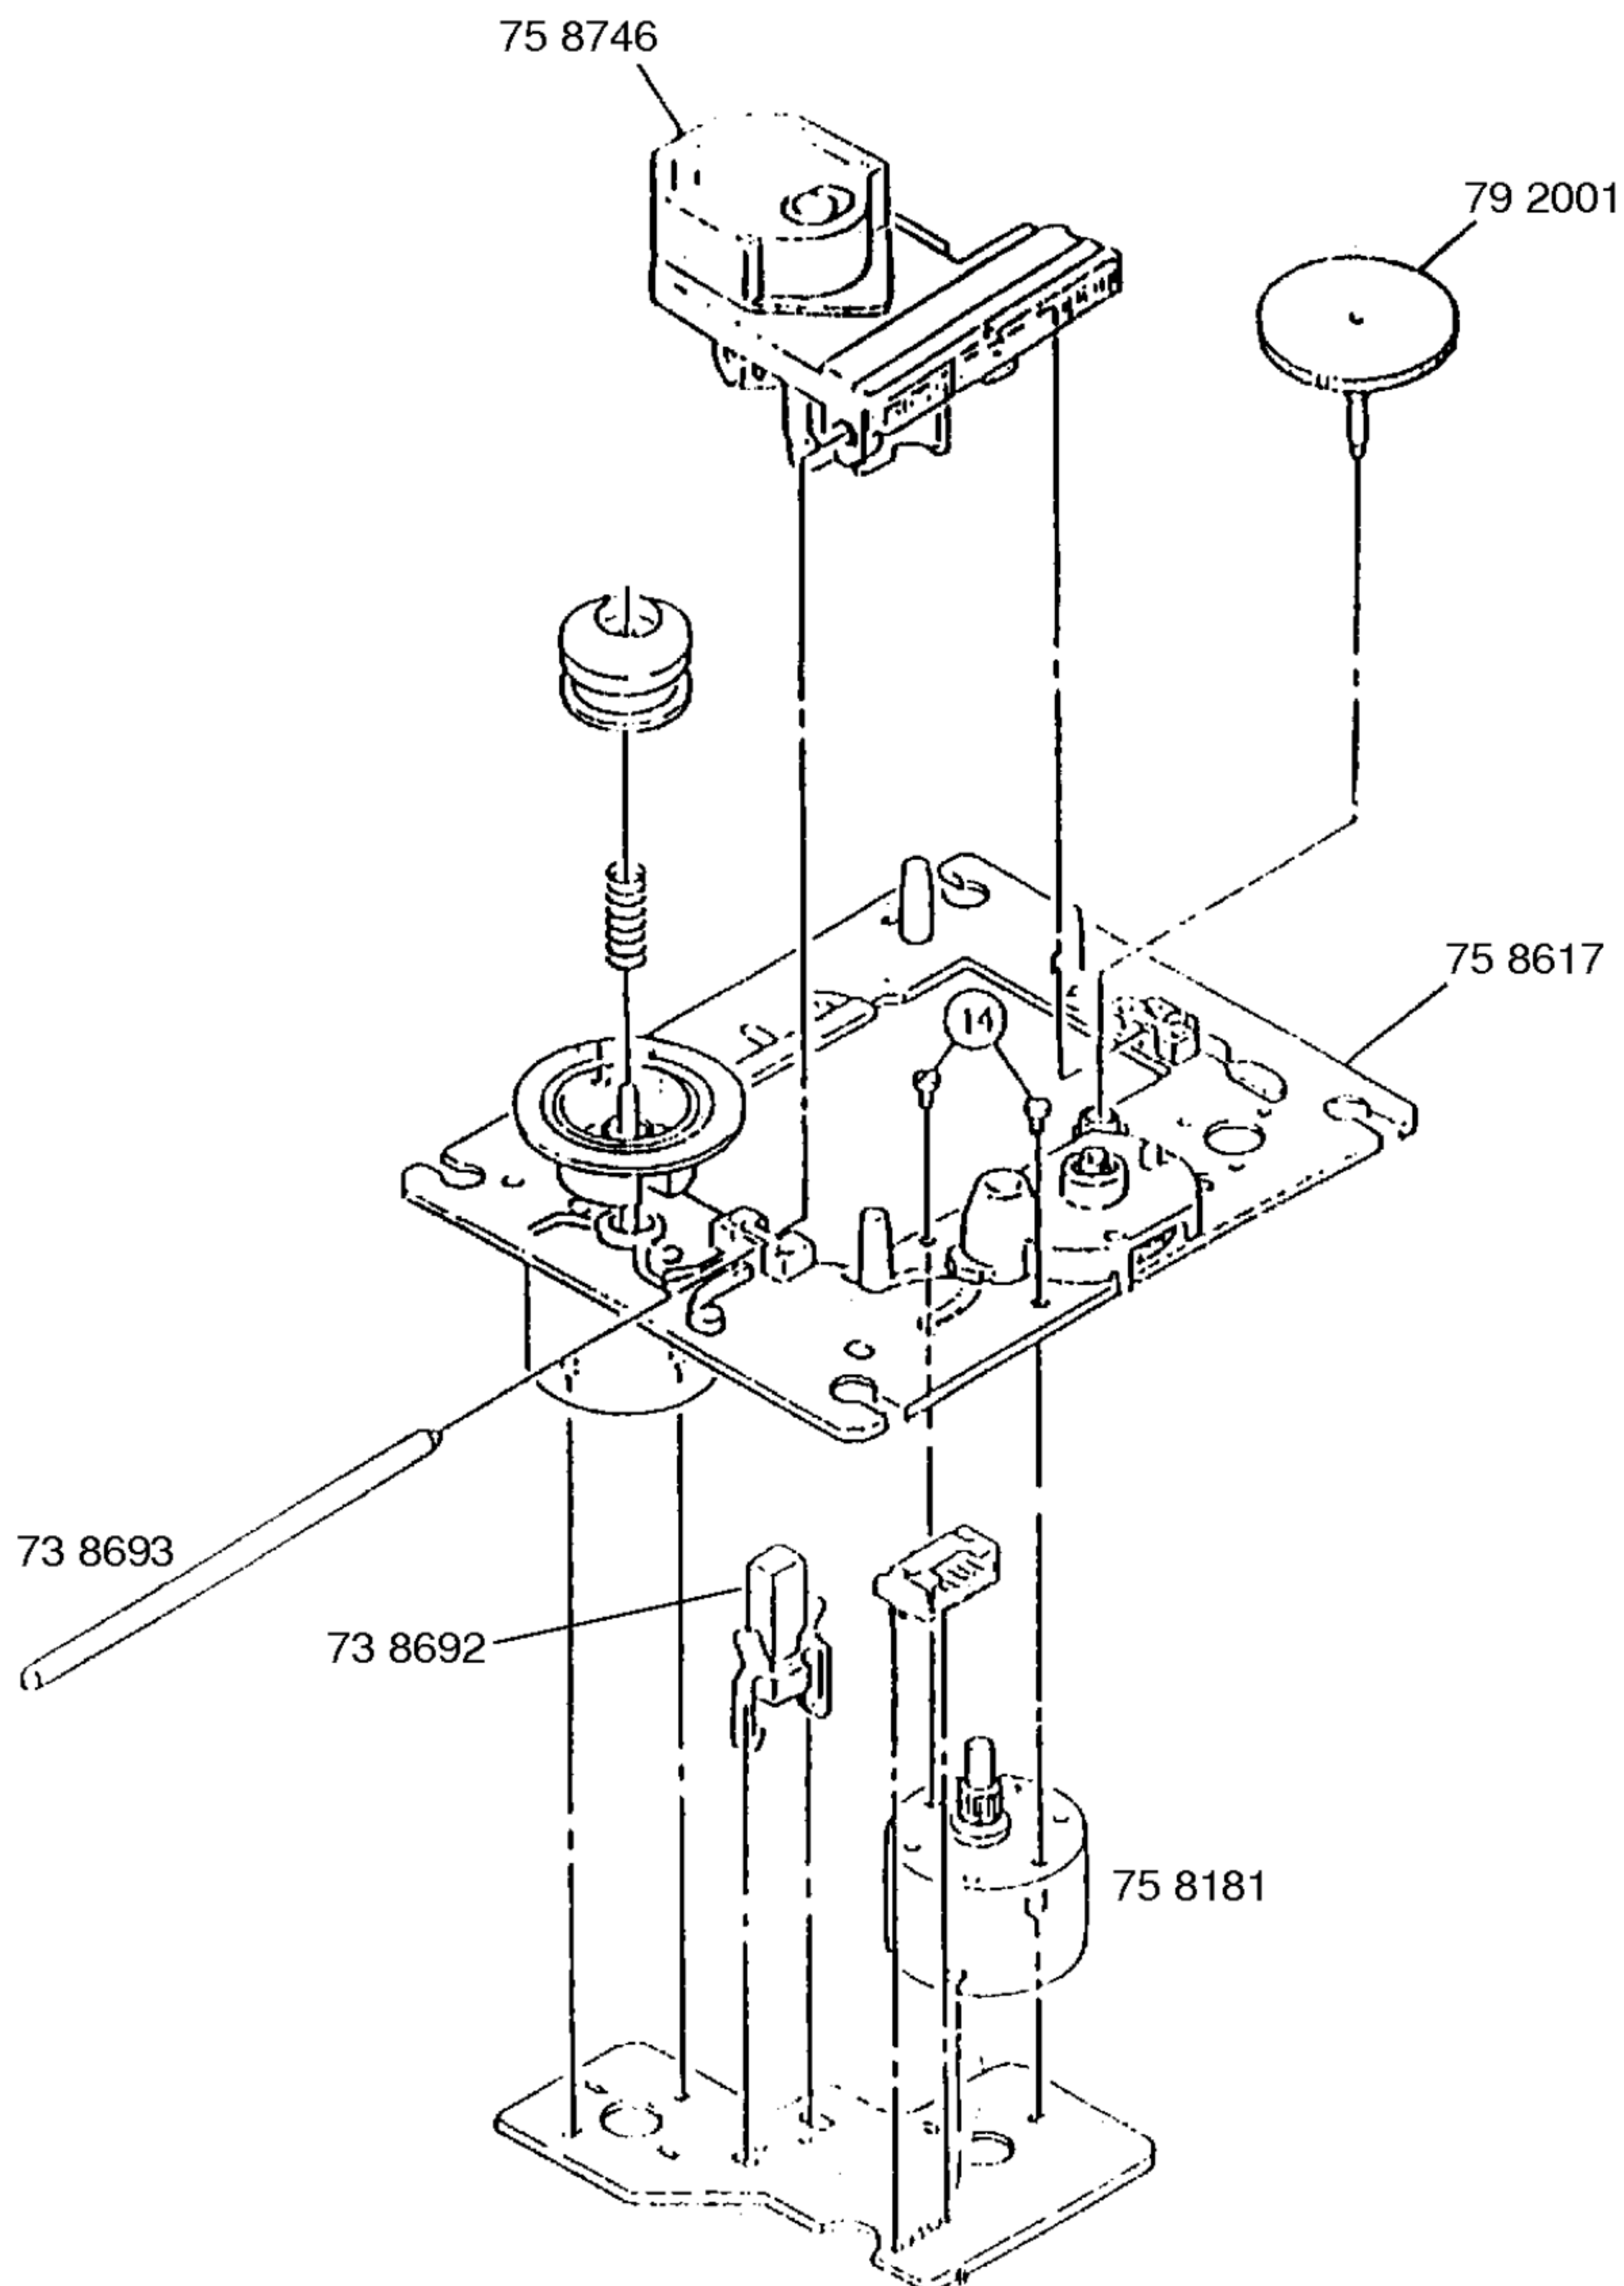

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
D405	72 6799	1SS133	
D406	72 6799	1SS133	
D521	72 6799	1SS133	
D531	72 6799	1SS133	
D532	72 6799	1SS133	
D541	72 6799	1SS133	
D542	72 6799	1SS133	
D543	72 6799	1SS133	
D571	72 6799	1SS133	
D572	72 6799	1SS133	
D573	72 6799	1SS133	
D701	79 3873	UZ9.1BC	
D702	73 9970	UZ5.6B	
D703	72 6799	1SS133	
D901	79 3925	FR202	
D902	79 3925	FR202	
D903	79 3925	FR202	
D904	79 3925	FR202	
D906	72 6799	1SS133	
D907	72 6799	1SS133	
D908	72 6799	1SS133	
VD101	73 6187	1SV101	
VD102	73 6187	1SV101	
VD201	79 3922	1SV149	
VD202	79 3922	1SV149	
VD221	79 3922	1SV149	
VD222	79 3922	1SV149	
ZD303	73 9970	5,6 V	
ZD801	73 3304	6,2 V	
ZD901	79 0574	MTZ6.8	
ZD902	73 4283	MTZ9.1	
ZD903	73 4283	MTZ9.1	

 
Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
D01	79 3926	SLR34UR5, Fernbed.	inside remote control en télécommande
D02	79 3927	CL2(F), Fernbed. infrarot	inside remote control en télécommande
LD401	79 3883	Rec	
LD501		Stand by	
LD701	79 3917	SLV31MC3	
LD702	79 3917	SLV31MC3	
LD703	79 3917	SLV31MC3	
LD704	79 3917	SLV31MC3	
LD705	79 3917	SLV31MC3	
LD706	79 3917	SLV31MC3	
LD707	79 3917	SLV31MC3	
LD901	79 3882	LTL–3211A (Mute)	
LD902	79 3917	SLV31MC3	
LD903	79 3917	SLV31MC3	
LD904	79 3917	SLV31MC3	
LD905	79 3917	SLV31MC3	
LD906	79 3917	SLV31MC3	
LD907	79 3917	SLV31MC3	
LD908	79 3917	SLV31MC3	
			
CF101	79 3921	SFE10.7MS2–A	
CF301	79 3921	SFE10.7MS2–A	
CF302	79 4092	SFZ450HL	
CF303	79 3919	CDA10.7MG–18, Diskrim.	
CF304	79 4092	SFZ450HL	
RC001	79 3928	CSR455EB (IR–Empf.) (Geber)	inside remote control en télécommande
RS301	79 3920	CSB456F18	

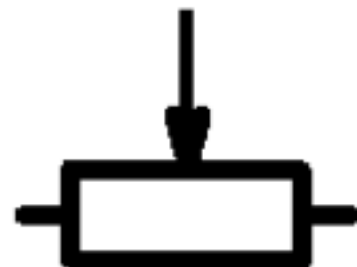Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
IC701	79 2773	KA9201	
IC702	79 3862	KA9258D	
IC703	79 2772	KA8309	
IC704	79 3865	KS9211	
IC705	79 3861	CXP-5024H062Q	
IC706	79 3864	MC3403	
IC707	79 3863	KDA0316	
U001	79 3911	LC7232-8492	
U002	75 8876	DHR38N, IR-Empfänger	remote sensor IR-destinaire
U003	79 3910	KIA7209	
U101	79 3875	KA22495	
U301	79 3916	TA8132AN	
U401	79 3878	TA8189N	
U801	79 3930	BA6209N	
U901	79 3877	TA8207K	
			
VR401	79 4091	Motordrehzahl (Cass) 2 K	f. motor speed (cass) p. nombre de tours (moteur de cass.)
VR601	79 3929	Klang 50 K, Tiefen	EQ bass
VR602	79 3929	Klang 50 K, Höhen	EQ treble
VR801	75 8949	Lautst. (Motor) 2 x 100 K	volume with motor avec moteur
			
CF001	79 3914	4.5 MHz (HC-49K)	
XL701	79 3871	16.9344 MHz (HC-49K)	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
Q01	72 7287	KTC1815GR (Fernbedienung)	inside remote control
Q02	72 7287	KTC1815GR (Fernbedienung)	en télécommande
Q001	73 7373	SS9014C	
Q002	73 7373	SS9014C	
Q003	73 7373	SS9014C	
Q101	72 0292	2SC19230	
Q102	72 0292	2SC19230	
Q103	79 2646	SS9015C	
Q104	73 7373	SS9014C	
Q201	72 0292	2SC19230	
Q202	79 0983	2SC2878B	
Q203	79 2646	SS9015C	
Q204	73 7373	SS9014C	
Q221	72 0292	2SC19230	
Q222	79 0983	2SC2878B	
Q223	79 2646	SS9015C	
Q224	73 7373	SS9014C	
Q301	79 0983	2SC2878B	
Q302	79 0983	2SC8278B	
Q303	73 7373	SS9014C	
Q304	73 7373	SS9014C	
Q305	73 7373	SS9014C	
Q401	73 7373	SS9014C	
Q402	79 0983	2SC2878B	
Q403	73 7373	SS9014C	
Q404	79 0983	2SC2878B	
Q405	79 0983	2SC8278B	
Q406	79 0983	2SC8278B	
Q407	79 0983	2SC2878B	
Q408	79 0983	2SC2878B	
Q409	79 2646	SS9015C	
Q410	73 7373	SS9014C	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
Q411	73 7373	SS9014C	
Q412	79 2646	SS9015C	
Q413	73 7373	SS9014C	
Q414	79 2646	SS9015C	
Q415	73 7373	SS9014C	
Q416	79 2646	SS9015C	
Q417	73 7373	SS9014C	
Q418	73 7373	SS9014C	
Q419	73 7373	SS9014C	
Q501	73 7373	SS9014C	
Q502	73 7373	SS9014C	
Q521	73 7373	SS9014C	
Q522	73 7373	SS9014C	
Q523	73 7373	SS9014C	
Q571	79 2646	SS9015C	
Q572	73 7373	SS9014C	
Q601	73 7373	SS9014C	
Q602	73 7373	SS9014C	
Q603	73 7373	SS9014C	
Q604	73 7373	SS9014C	
Q701	73 8613	KTA950-Y	
Q702	73 8613	KTA950-Y	
Q703	73 8611	2SA1815GR	
Q704	73 9126	KTA1015Y	
Q705	73 8609	KTD2058Y	
Q706	73 7369	SS8050C	
Q707	79 3909	KSR1208	
Q708	79 3868	2KSR1007	
Q709	79 3868	2KSR1007	
Q710	73 8611	2SA1815Y	
Q711	79 3869	2KSR1207	
Q712	79 3870	2KSR2208	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
Q713	73 8611	2SA1815Y	
Q714	73 8611	2SA1815Y	
Q715	73 8611	2SA1815Y	
Q716	73 8611	2SA1815Y	
Q901	73 7373	SS9014C	
Q902	79 2646	SS9015C	
Q903	73 7373	SS9014C	
Q905	73 7369	SS8050C	
Q906	73 7373	SS9014C	
Q907	—	2SB1015	
Q908	73 7369	SS8050C	
Q909	73 7369	SS8050C	
Q910	73 7373	SS9014C	
Q911	73 7373	SS9014C	
Q912	79 2646	SS9015C	
			
SW1	79 4145	M1	
SW2	79 4145	M2	
SW3	79 4145	M3	
SW4	79 4145	M4	
SW5	79 4145	M5	
SW6	79 4145	M6	
SW7	79 4145	M7	
SW8	79 4145	M8	
SW9	79 4145	M9	
SW10	79 4145	M10	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
SW11	79 4145	Band select	
SW12	79 4145	Menostore	
SW13	79 4145	Tune down	
SW14	79 4145	Auto/Manual	
SW15	79 4145	Tun up	
SW301	79 4146	Mono/Stereo	
SW401	79 4144	Hi/Normal	
SW402	79 4144	CrO2/Normal/Beat cut	
SW501	79 4132	Funktion CD/TA/RA	
SW701	79 4137	Blattschalter CD-in	leaf switch CD in interrupteur à lames p. CD-roder
SW701	79 4145	Tact, CD, Play/Pause	
SW702	79 4145	Tact, CD, Stop	
SW703	79 4145	Tact, CD, Random play	
SW704	79 4145	Tact, CD, Repeat	
SW705	79 4145	Tact, CD, Skip Search 	
SW706	79 4145	Tact, CD, Skip Search 	
SW707	79 4145	Tact, CD, Program	
SW901	79 4144	Netz ein-aus	power on-off secteur
			
T901	75 8878	Netz	power/secteur
L403	79 3923	Vormagnetisierung	bias/effacement

