


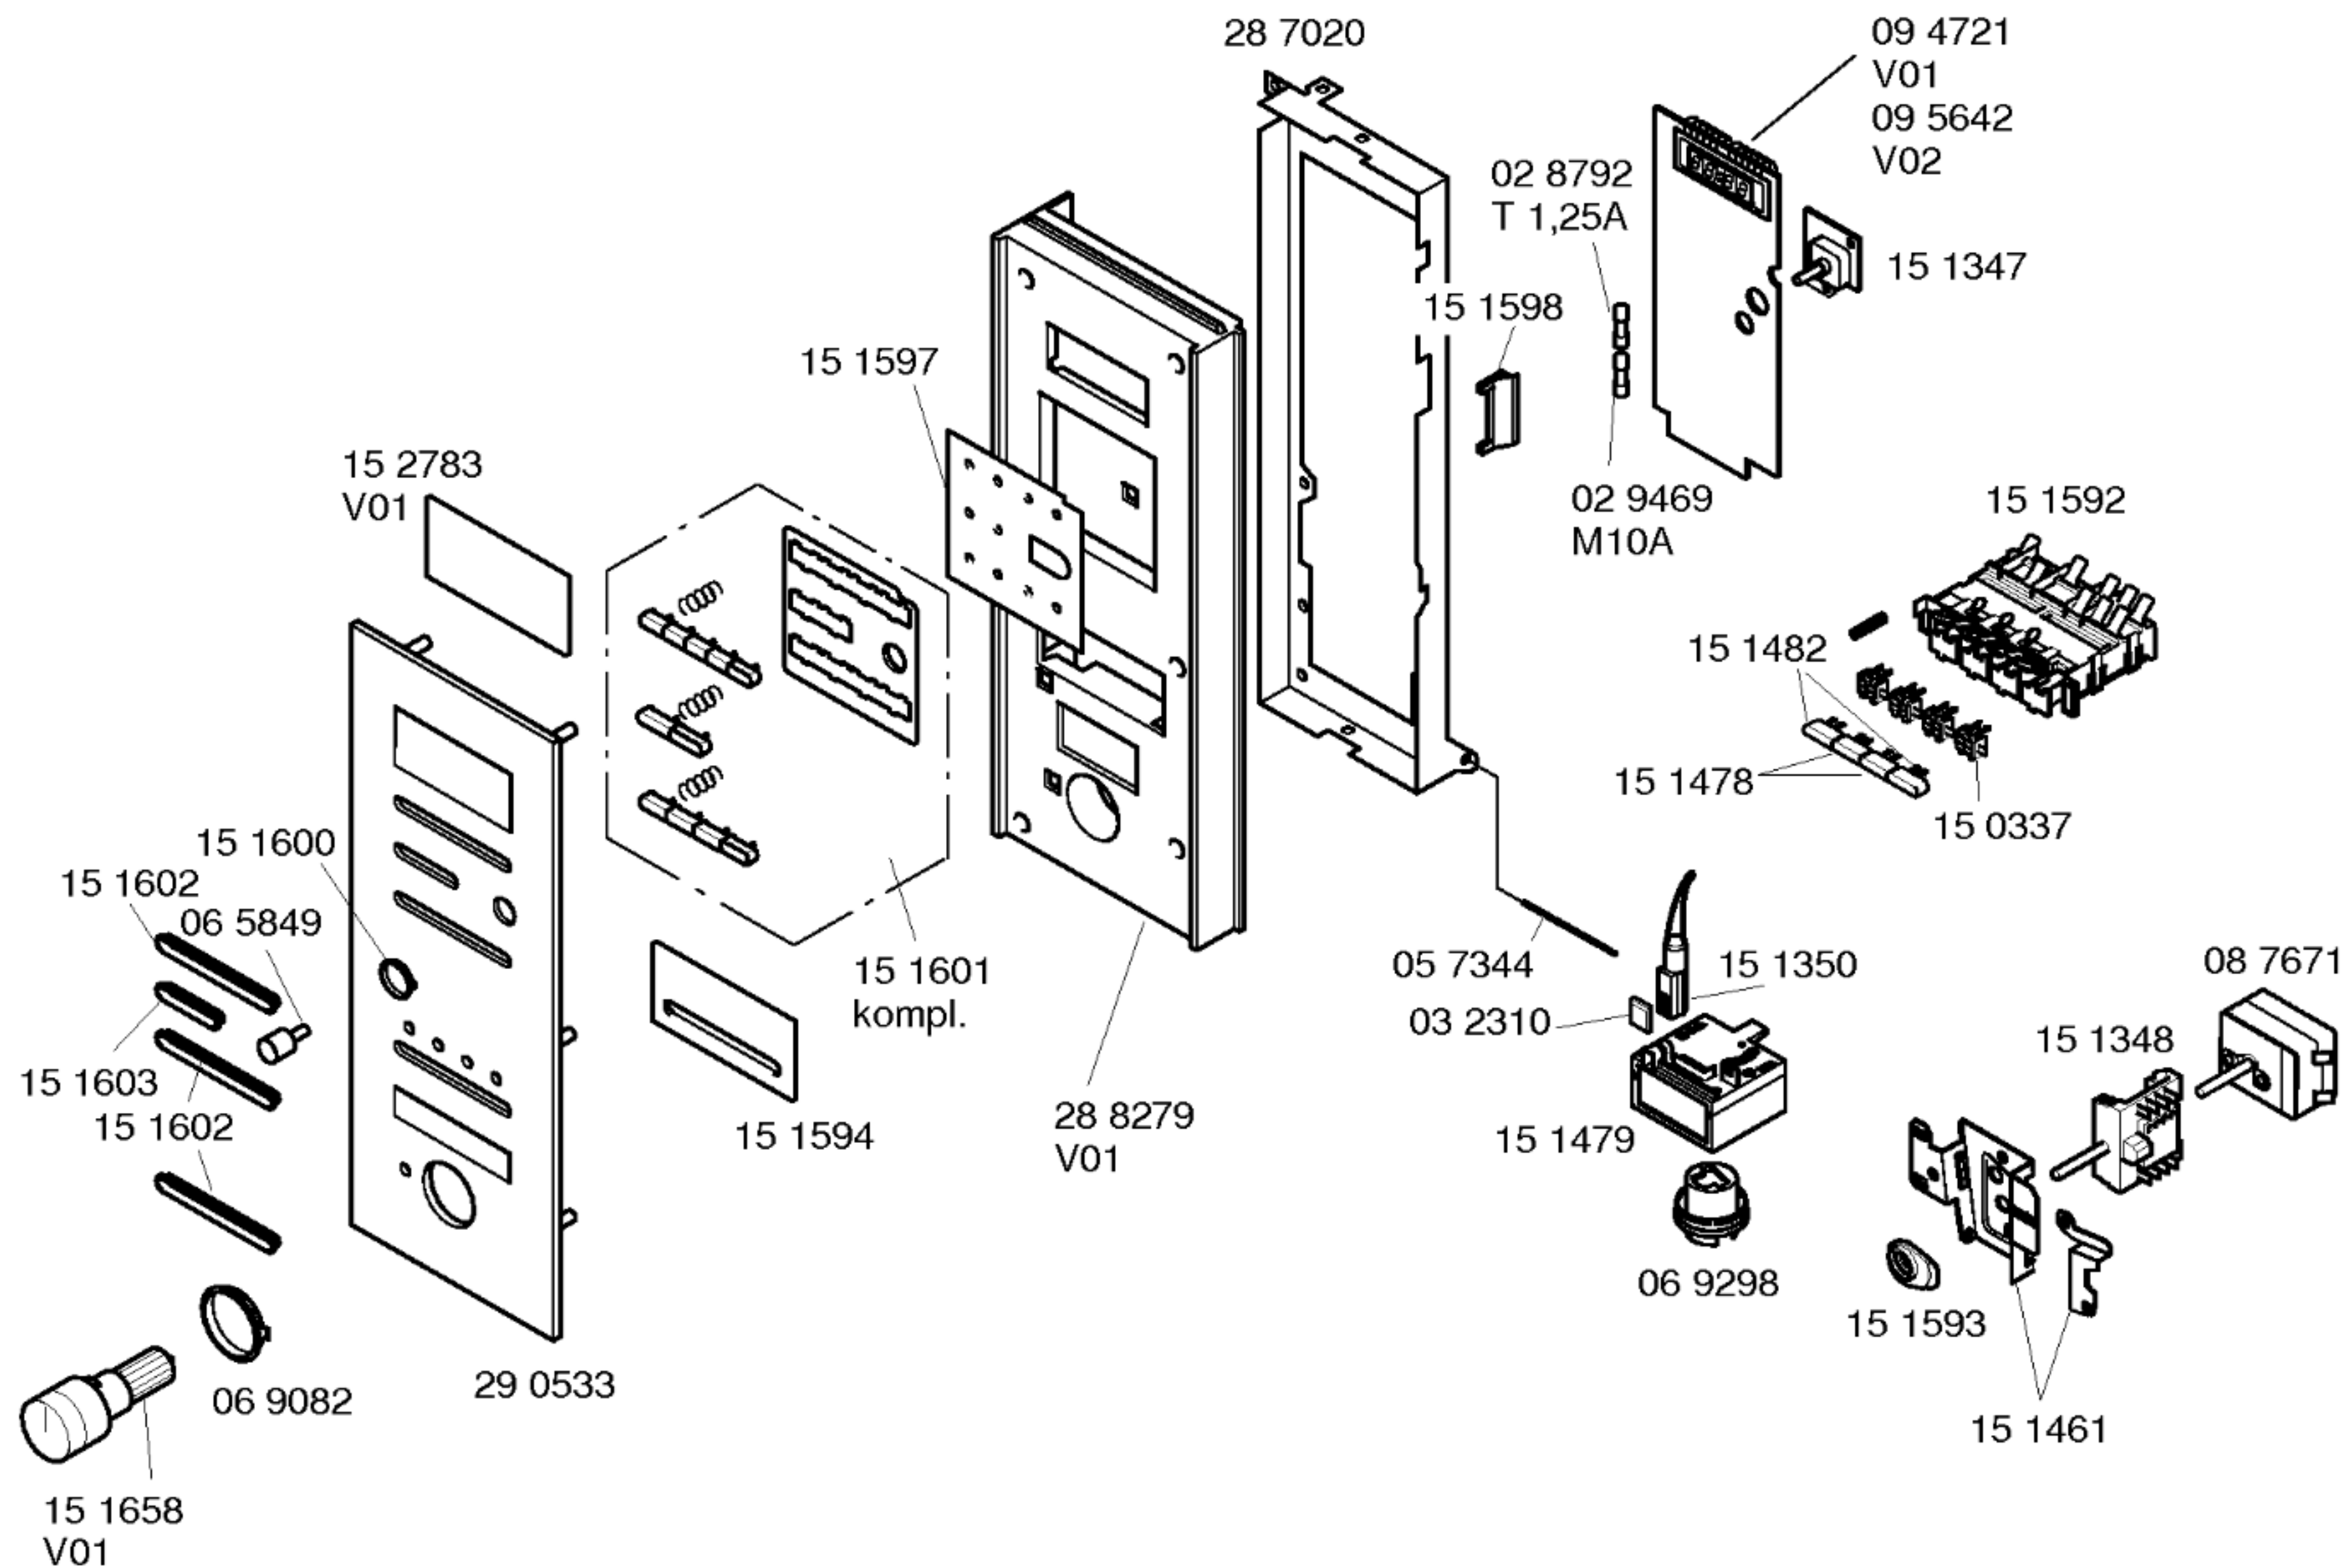

Gebrauchsanweisung  
51 7420  
(D,F,GB,I,NL,E)  
V01  
51 9779  
(NL)  
V02

Programmtabelle  
51 7579  
(D,GB,F,I,NL,E)

Montageanleitung  
51 6089  
(D,GB,F,I,NL)


Kochbuch  
51 5849  
V01  
(NL)

Zubehör:

Alu-Backblech  
HZ 8055


Glaspfanne  
HZ 8056

Glasbräter  
HZ 9150

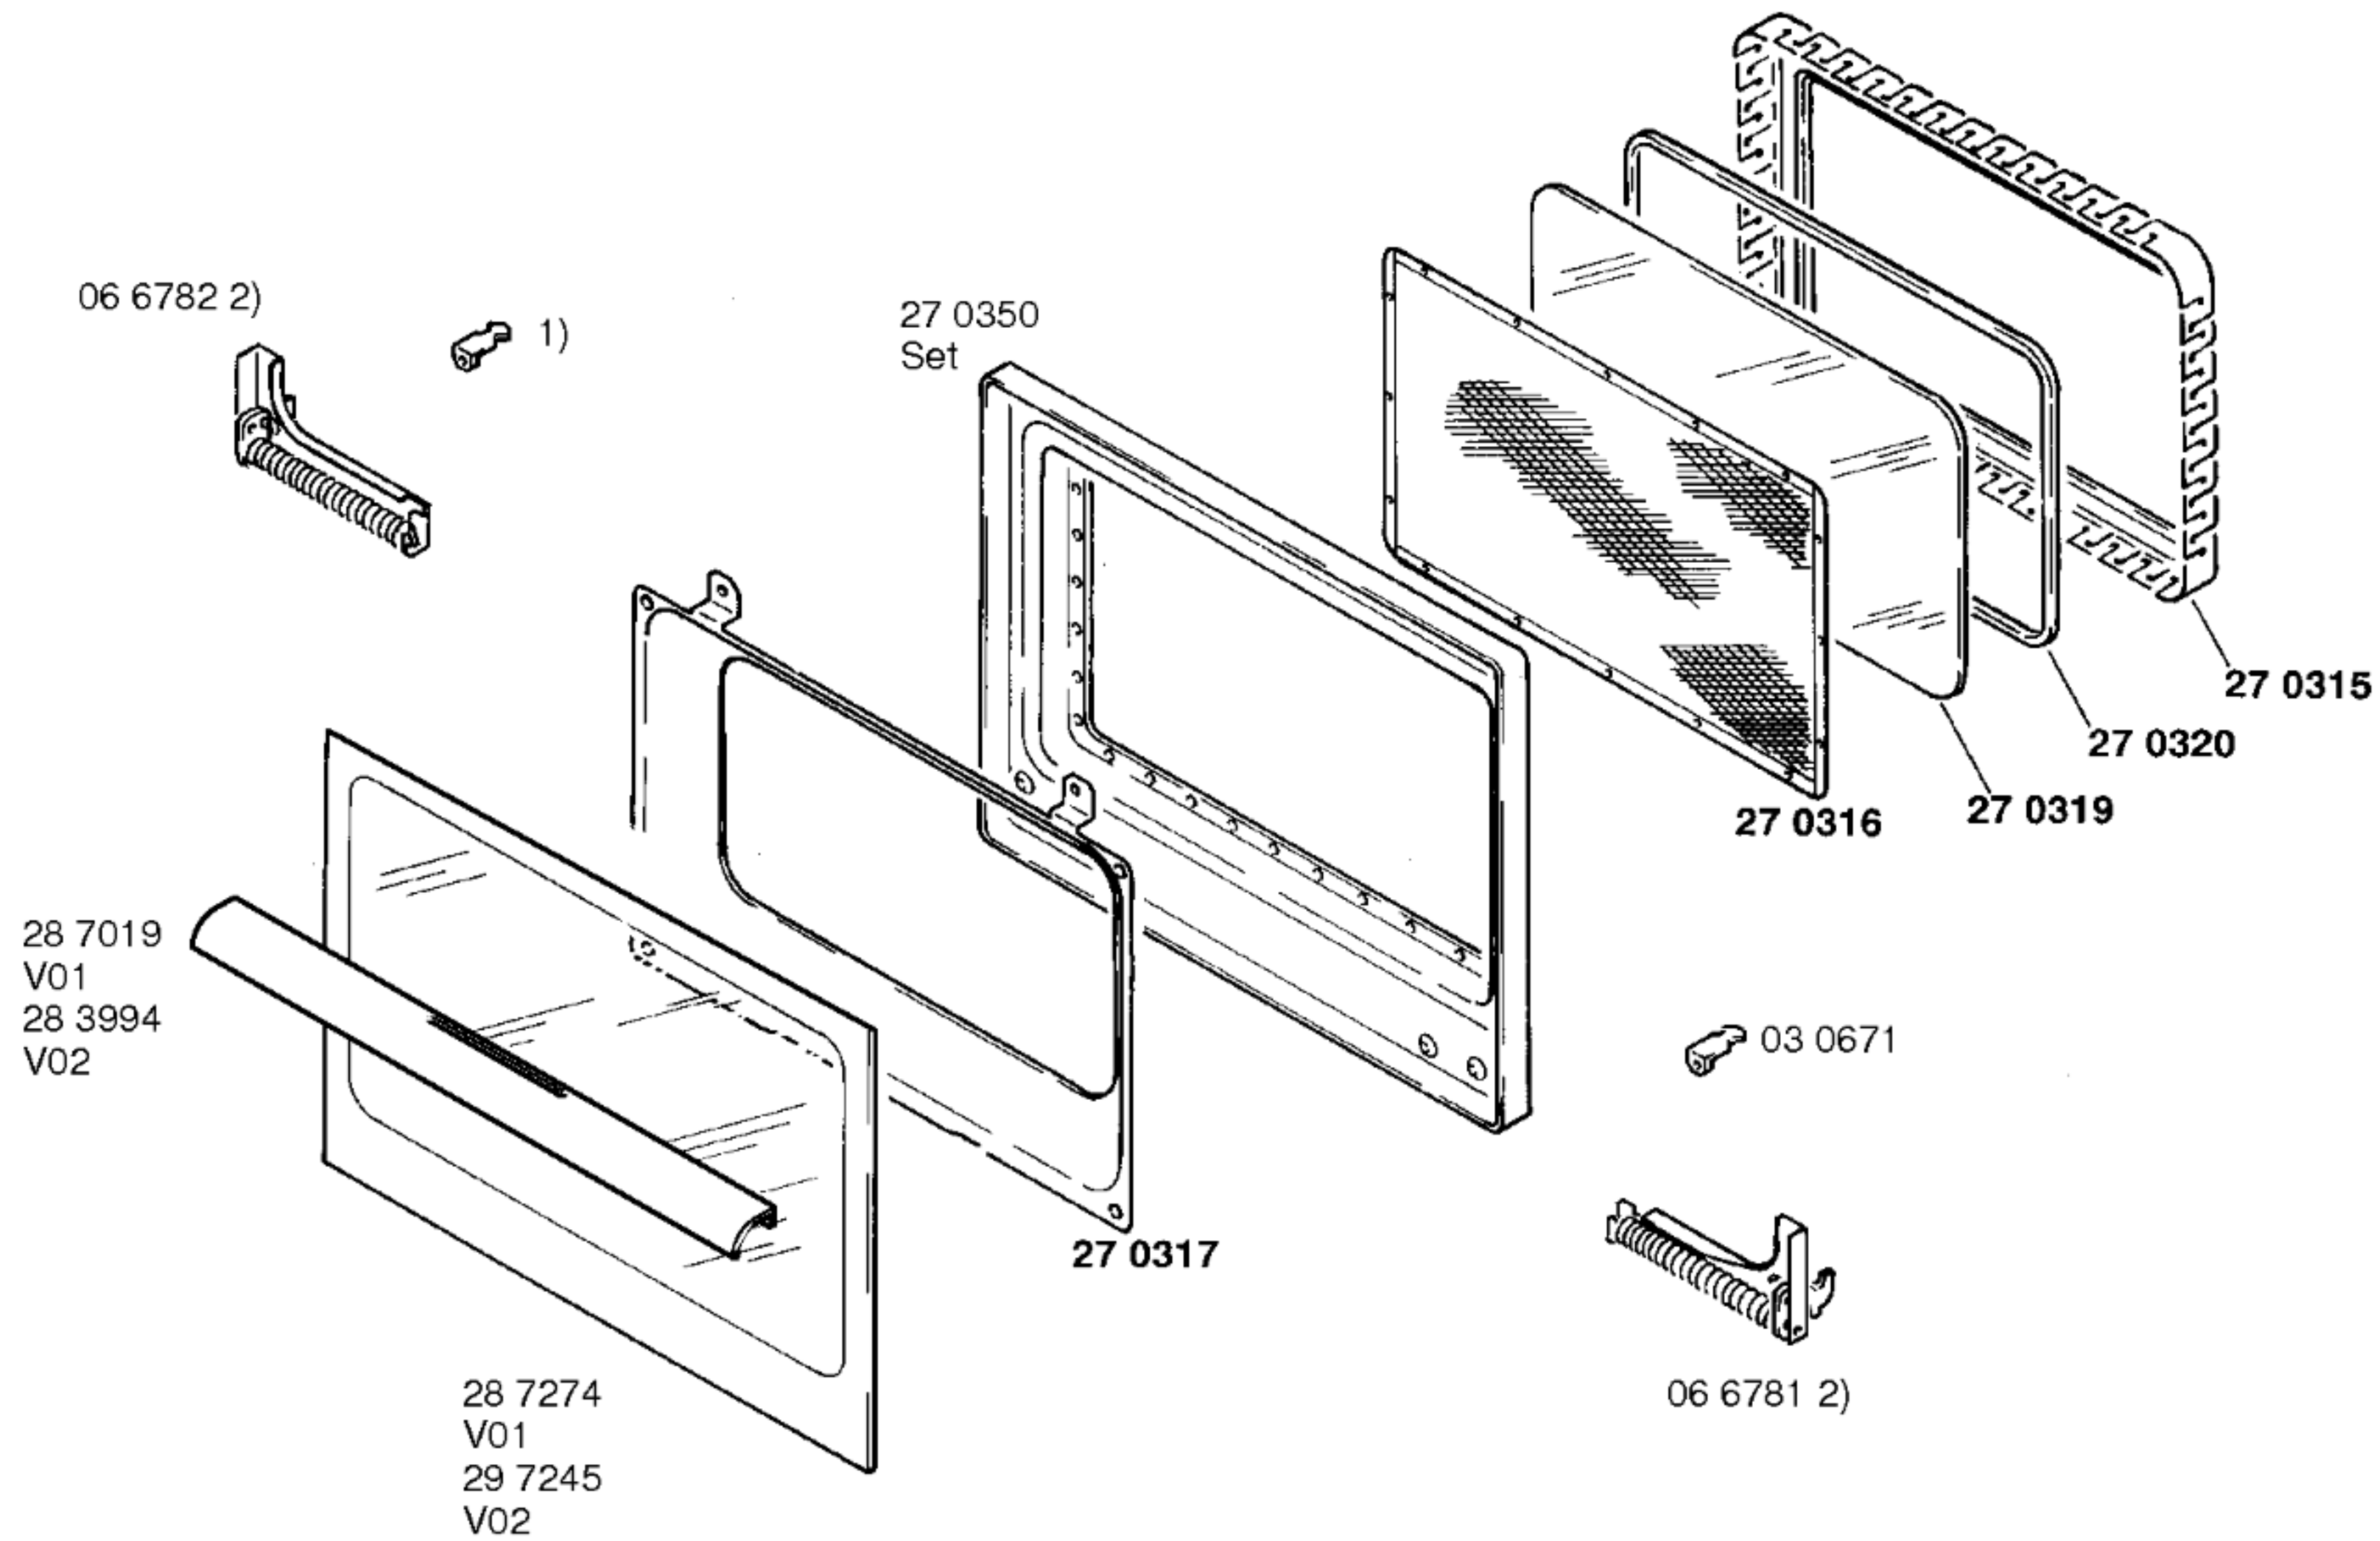


- 1) 03 0671  
Stössel
- 2) 03 0813  
Arretierstift



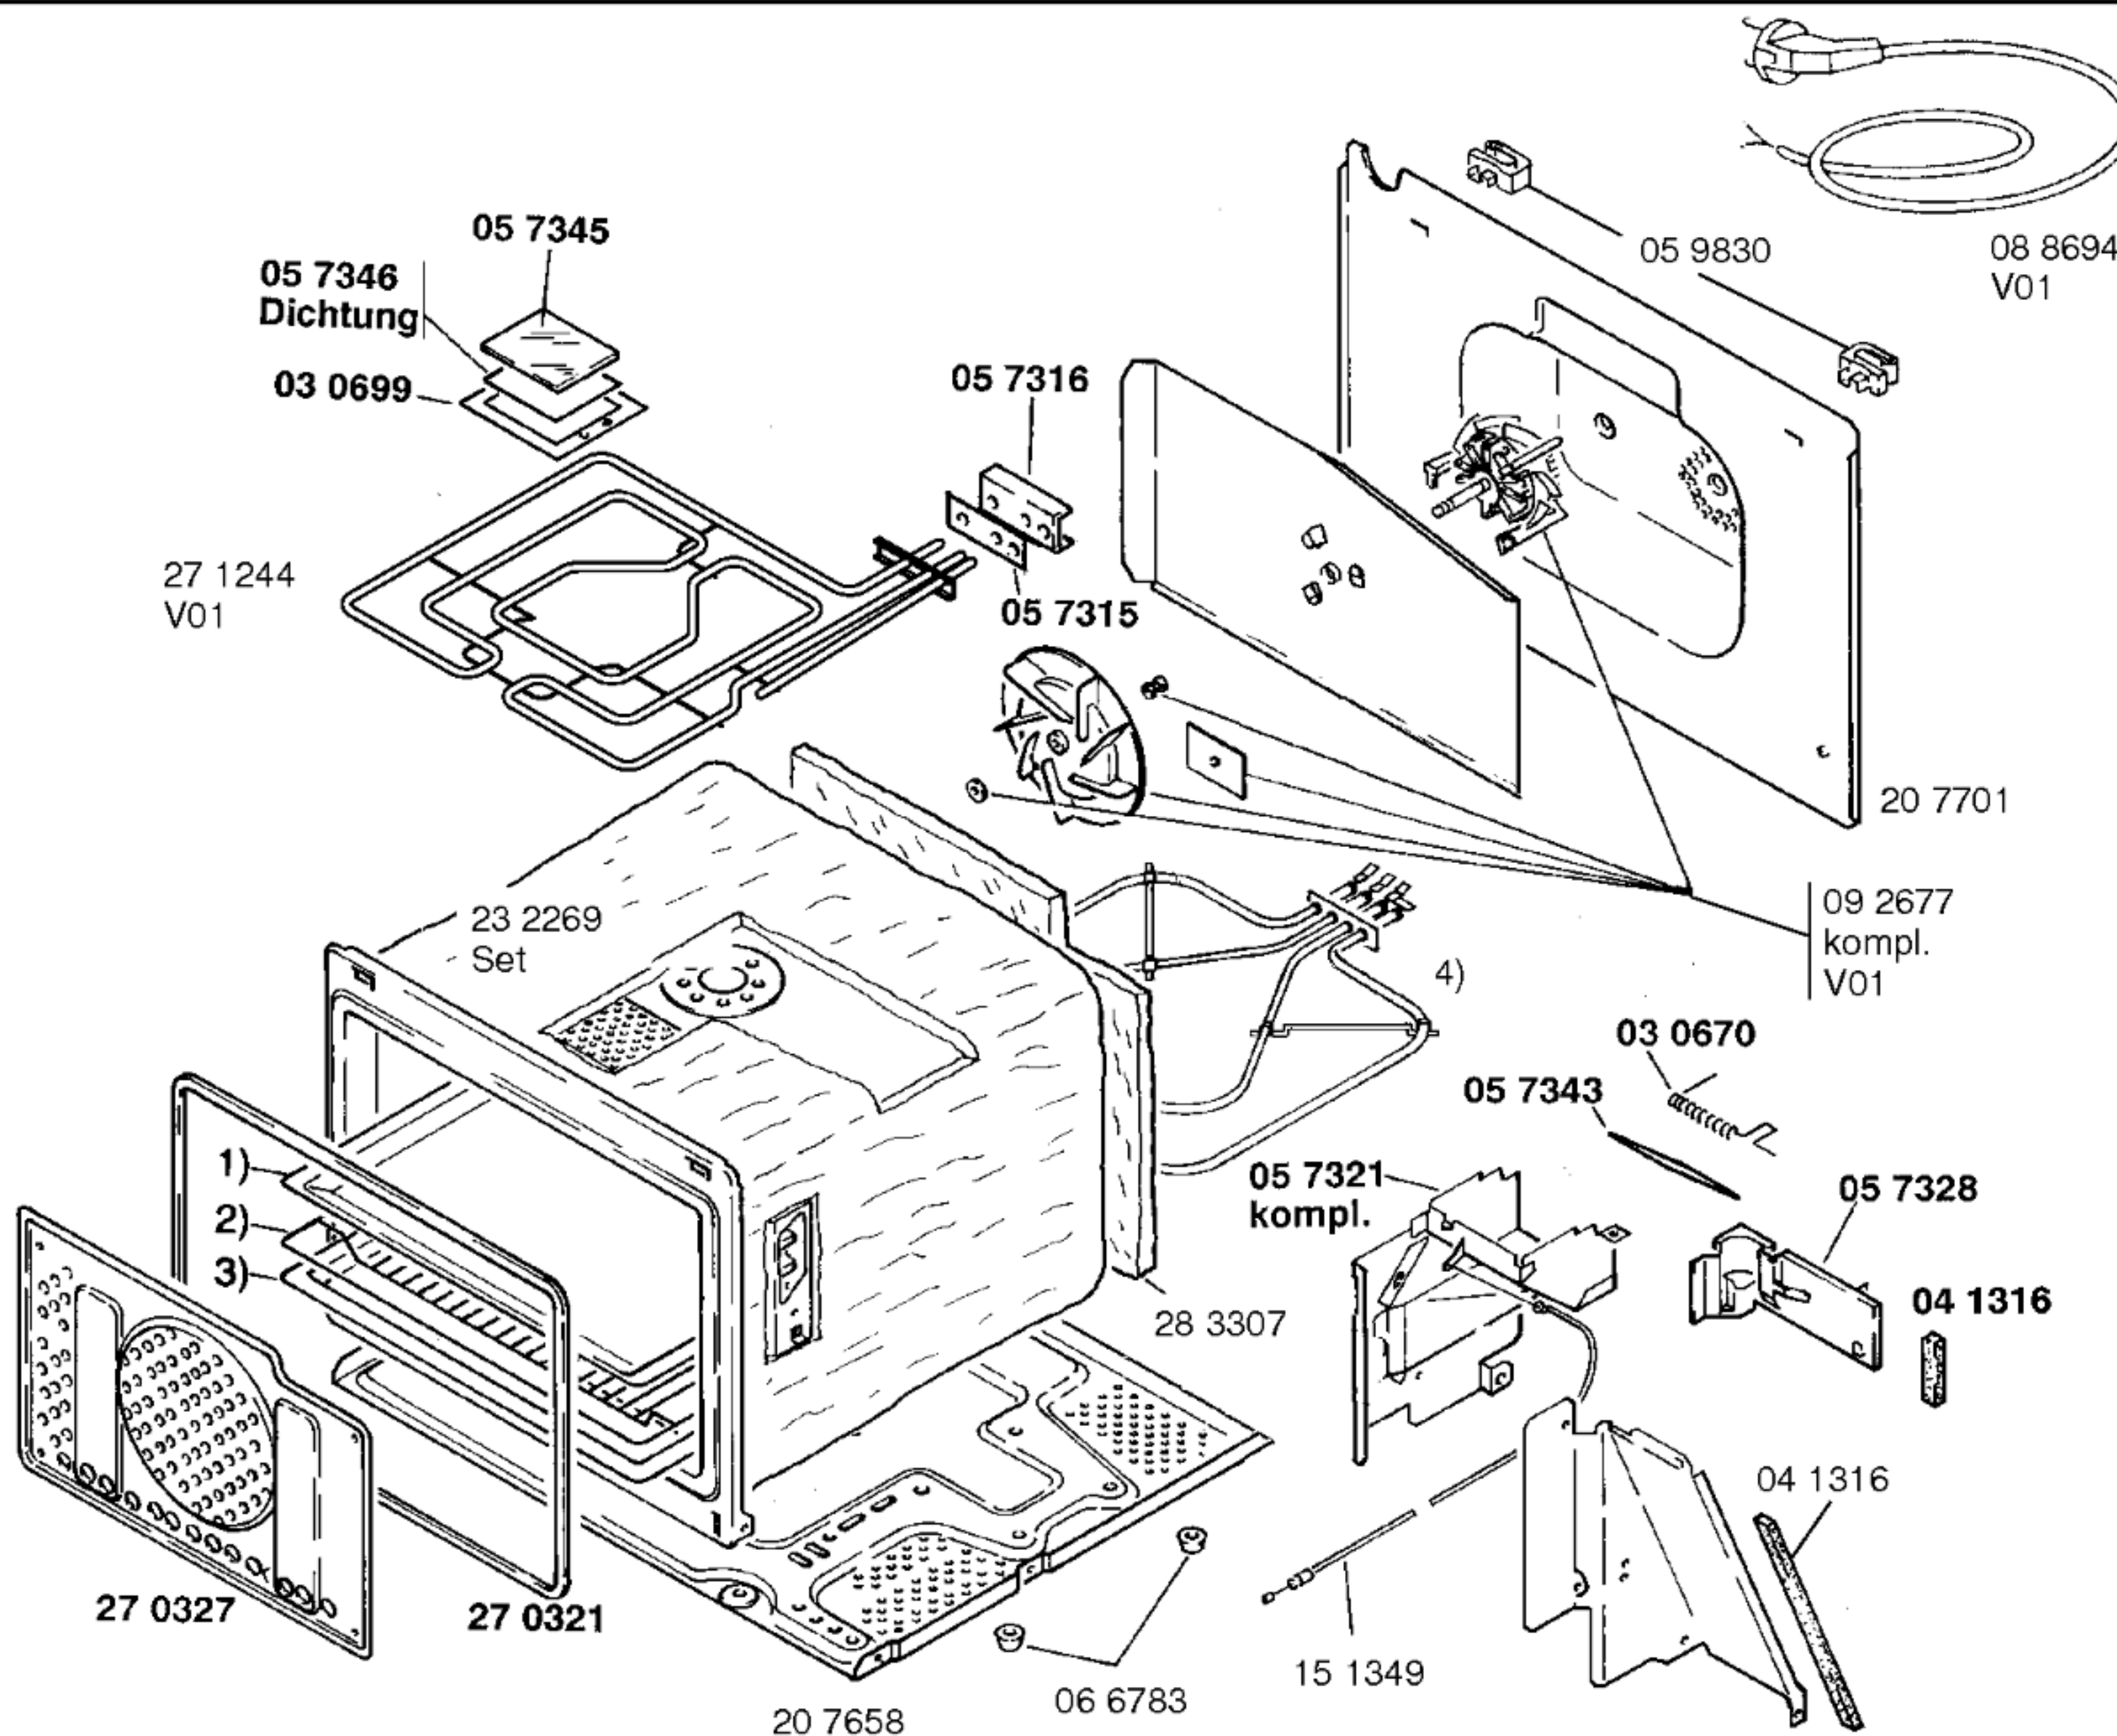

- 1) 11 4538  
Backblech
  - 2) 11 4539  
Rost
  - 3) 11 4537  
Glasschale
  - 4) 27 0323  
V01
- 02 8732  
Anschlag für Backblech

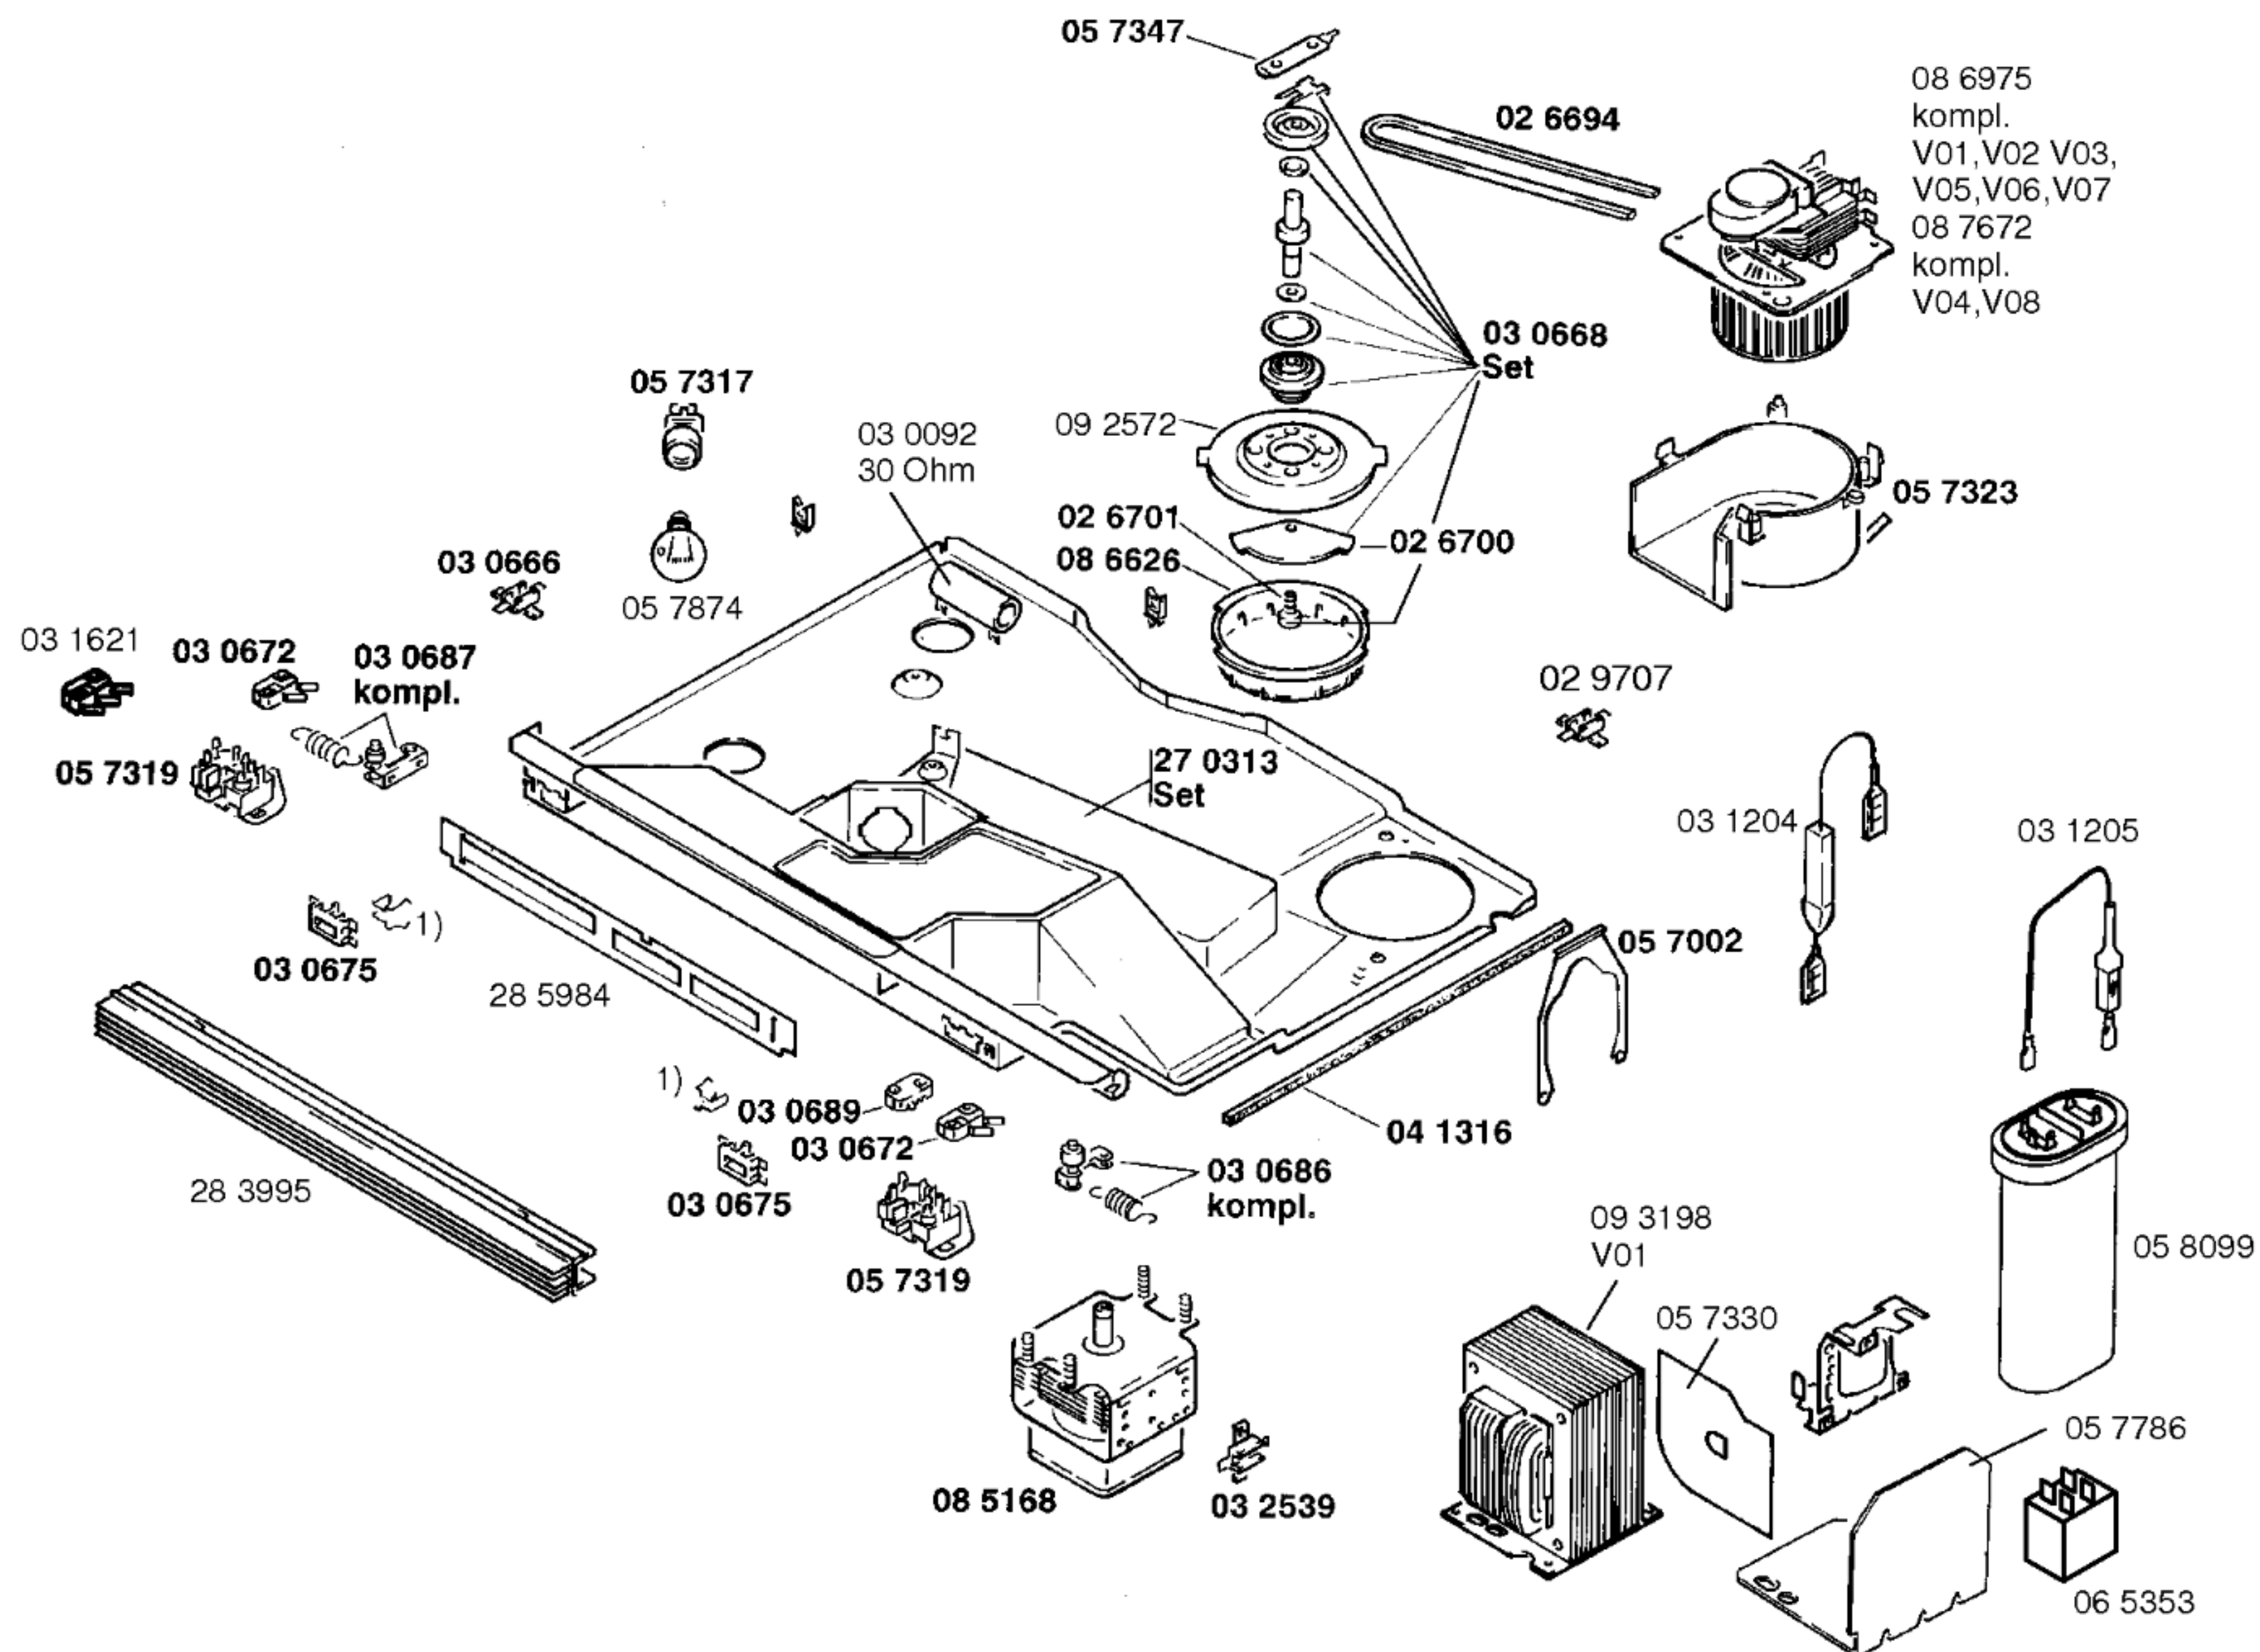

1) 06 6760



1) 06 6979

