
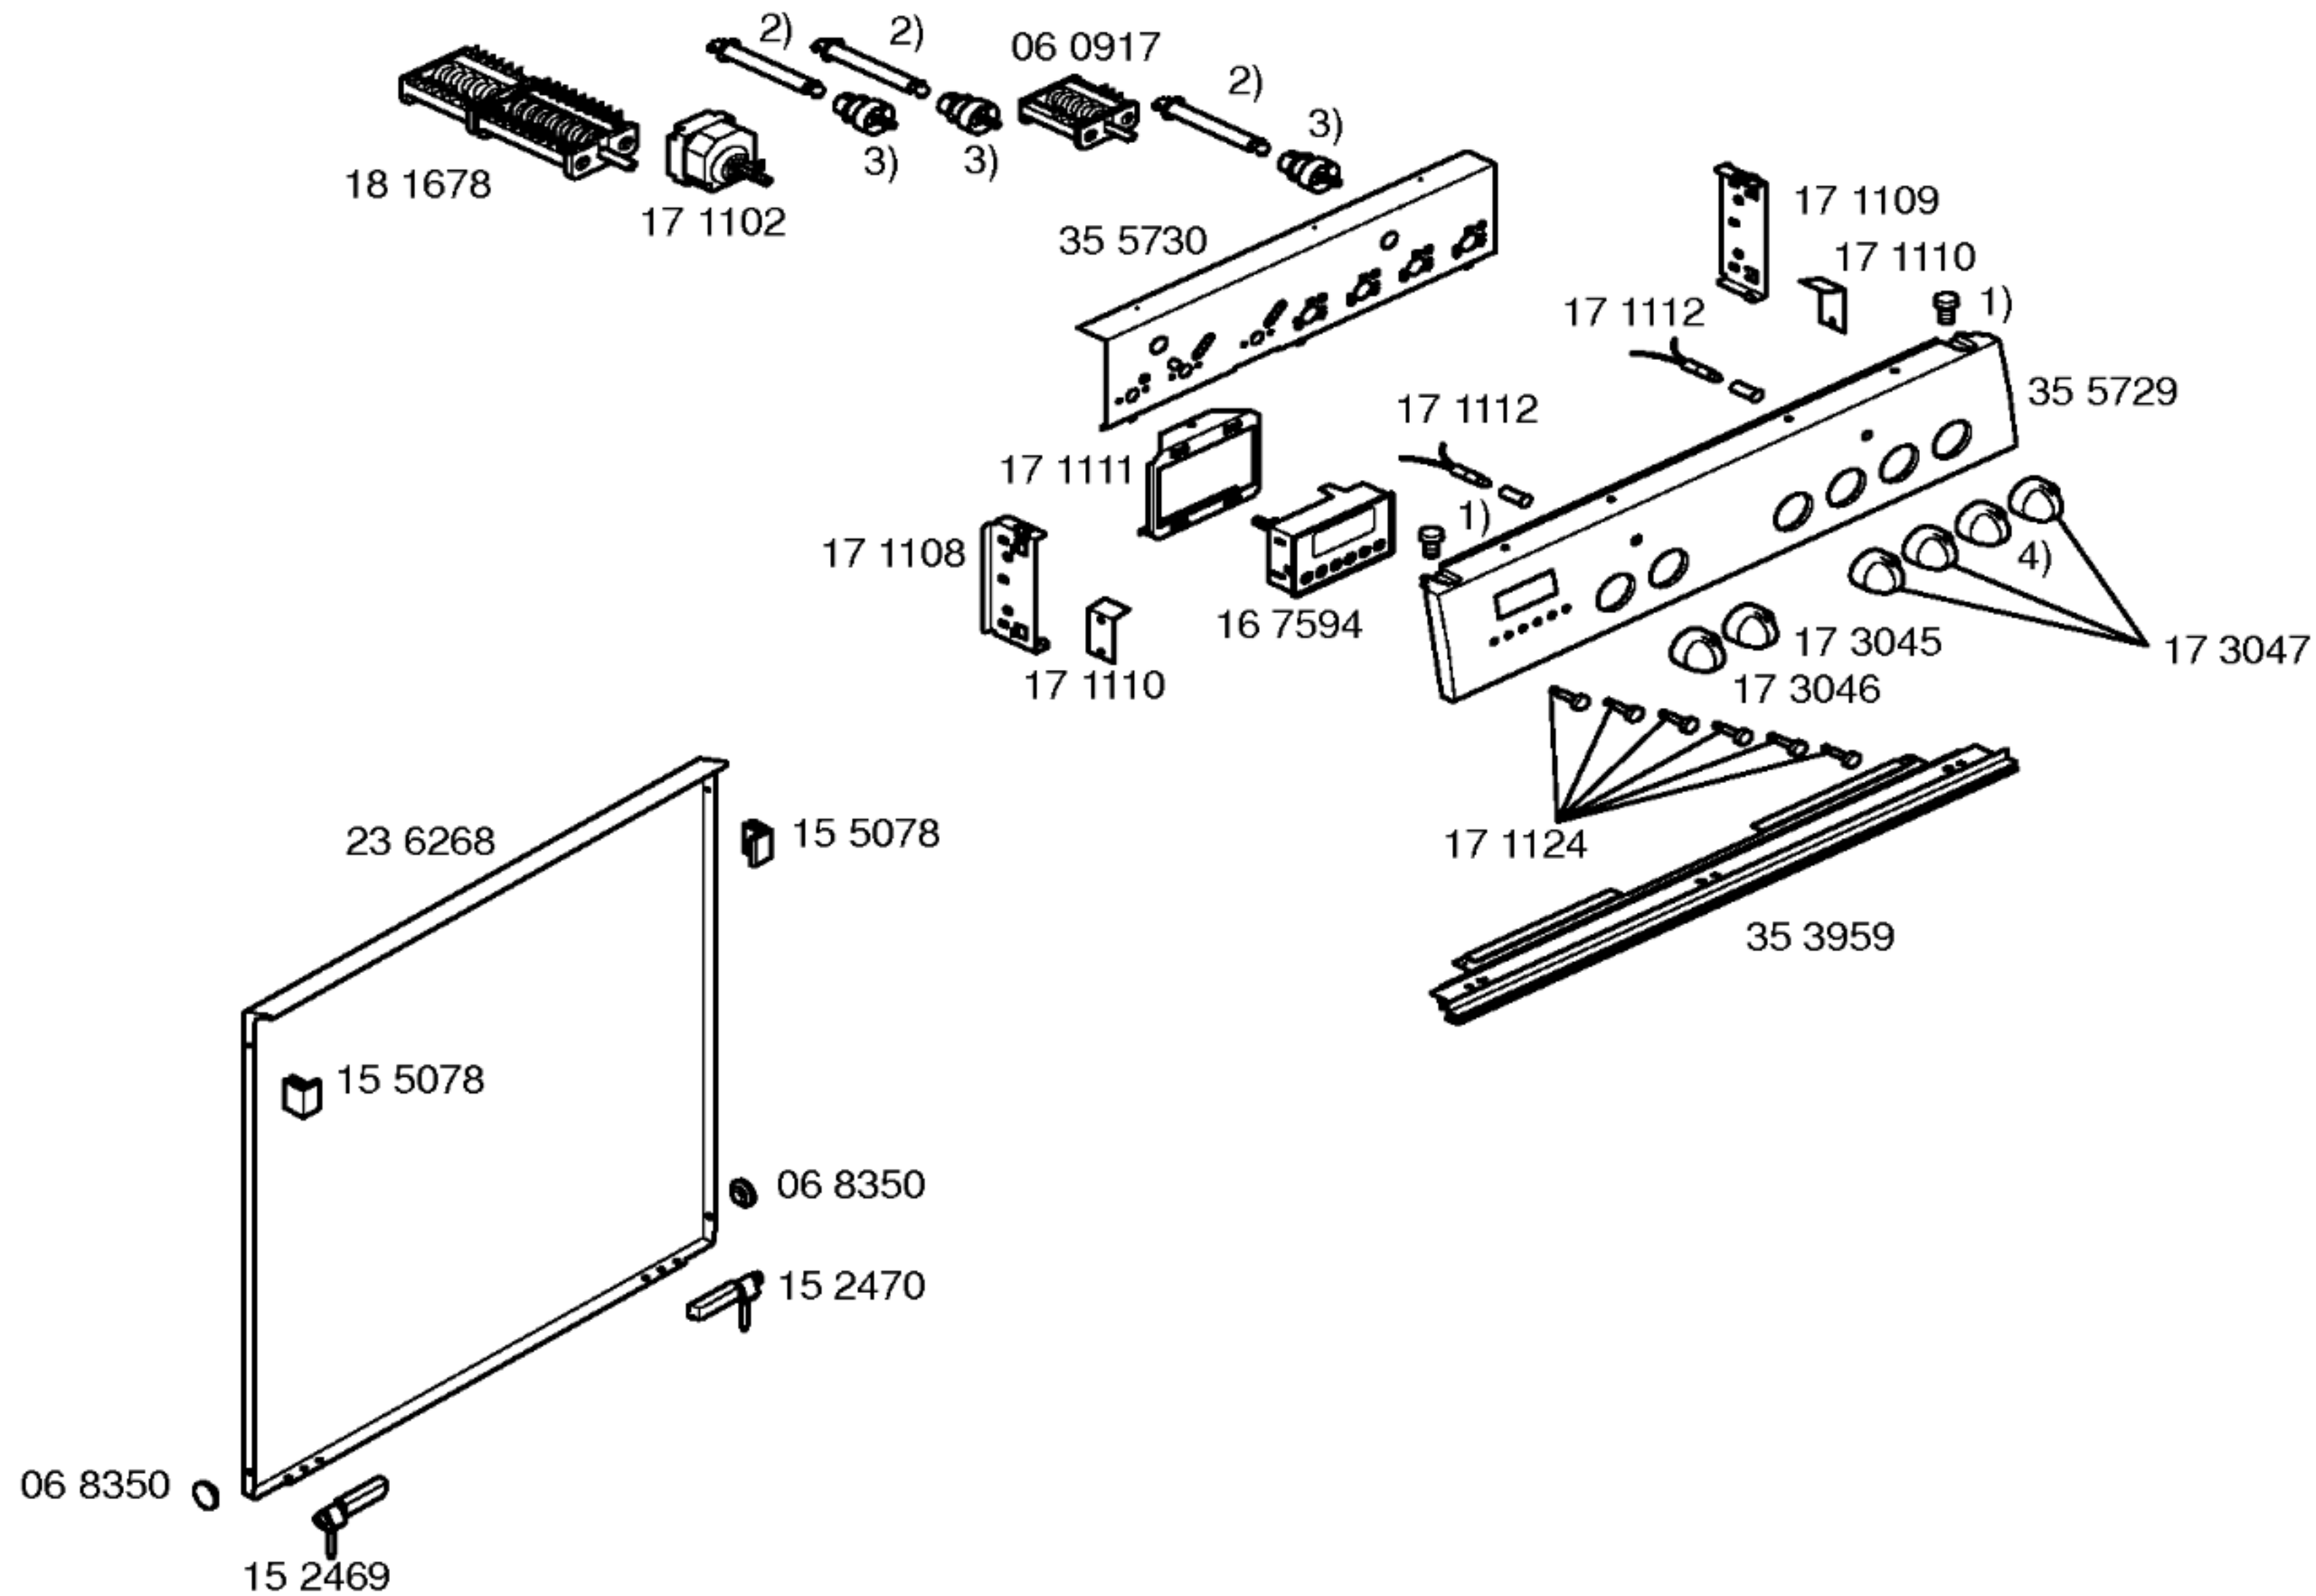


Mat. – Nr. – Konstante
3740Gebrauchsanweisung
52 3661
(fr)

- 1) 16 5697
2) 41 7743
3) 15 4972
4) 17 1341

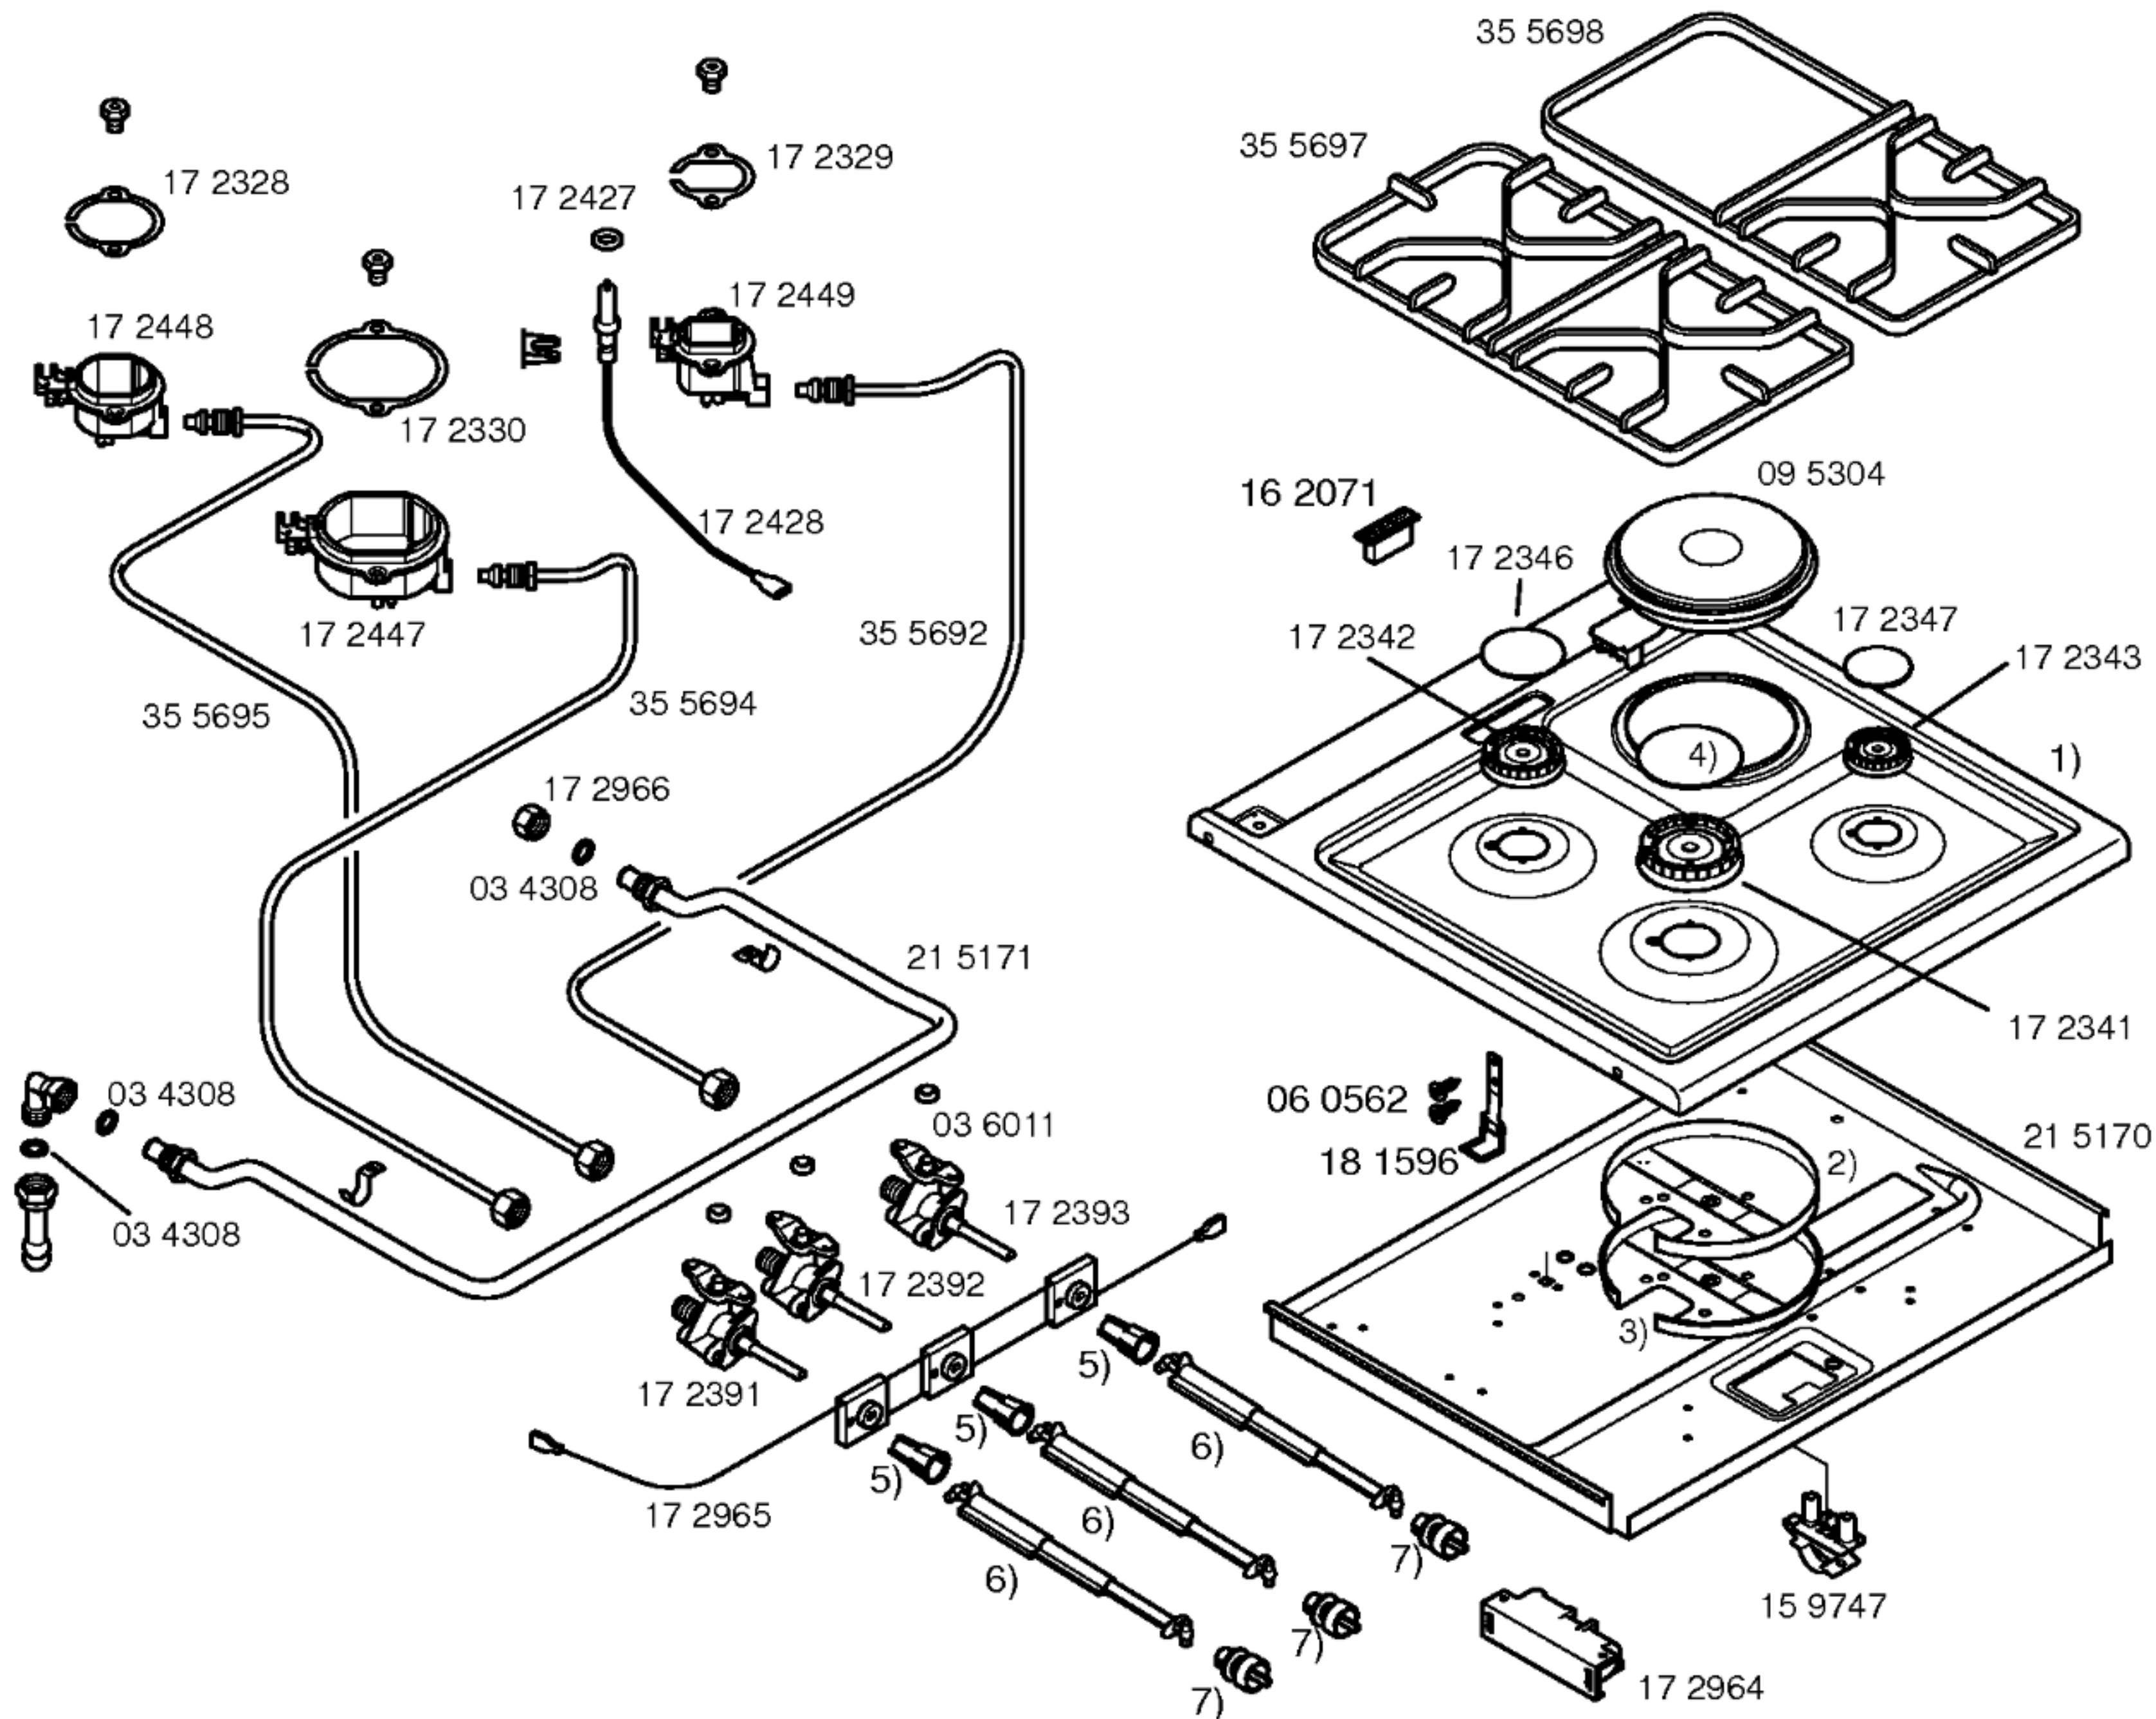


Mat. – Nr. – Konstante
3740

- | | |
|----|---------|
| 1) | 21 5172 |
| 2) | 26 6881 |
| 3) | 26 6883 |
| 4) | 17 2345 |
| 5) | 167044 |
| 6) | 159799 |
| 7) | 154972 |

Erdgas G-20
17 2390
Flussiggas
G-30
15 9769

Mat. – Nr. – Konstante	
3740	


1) 15 1774

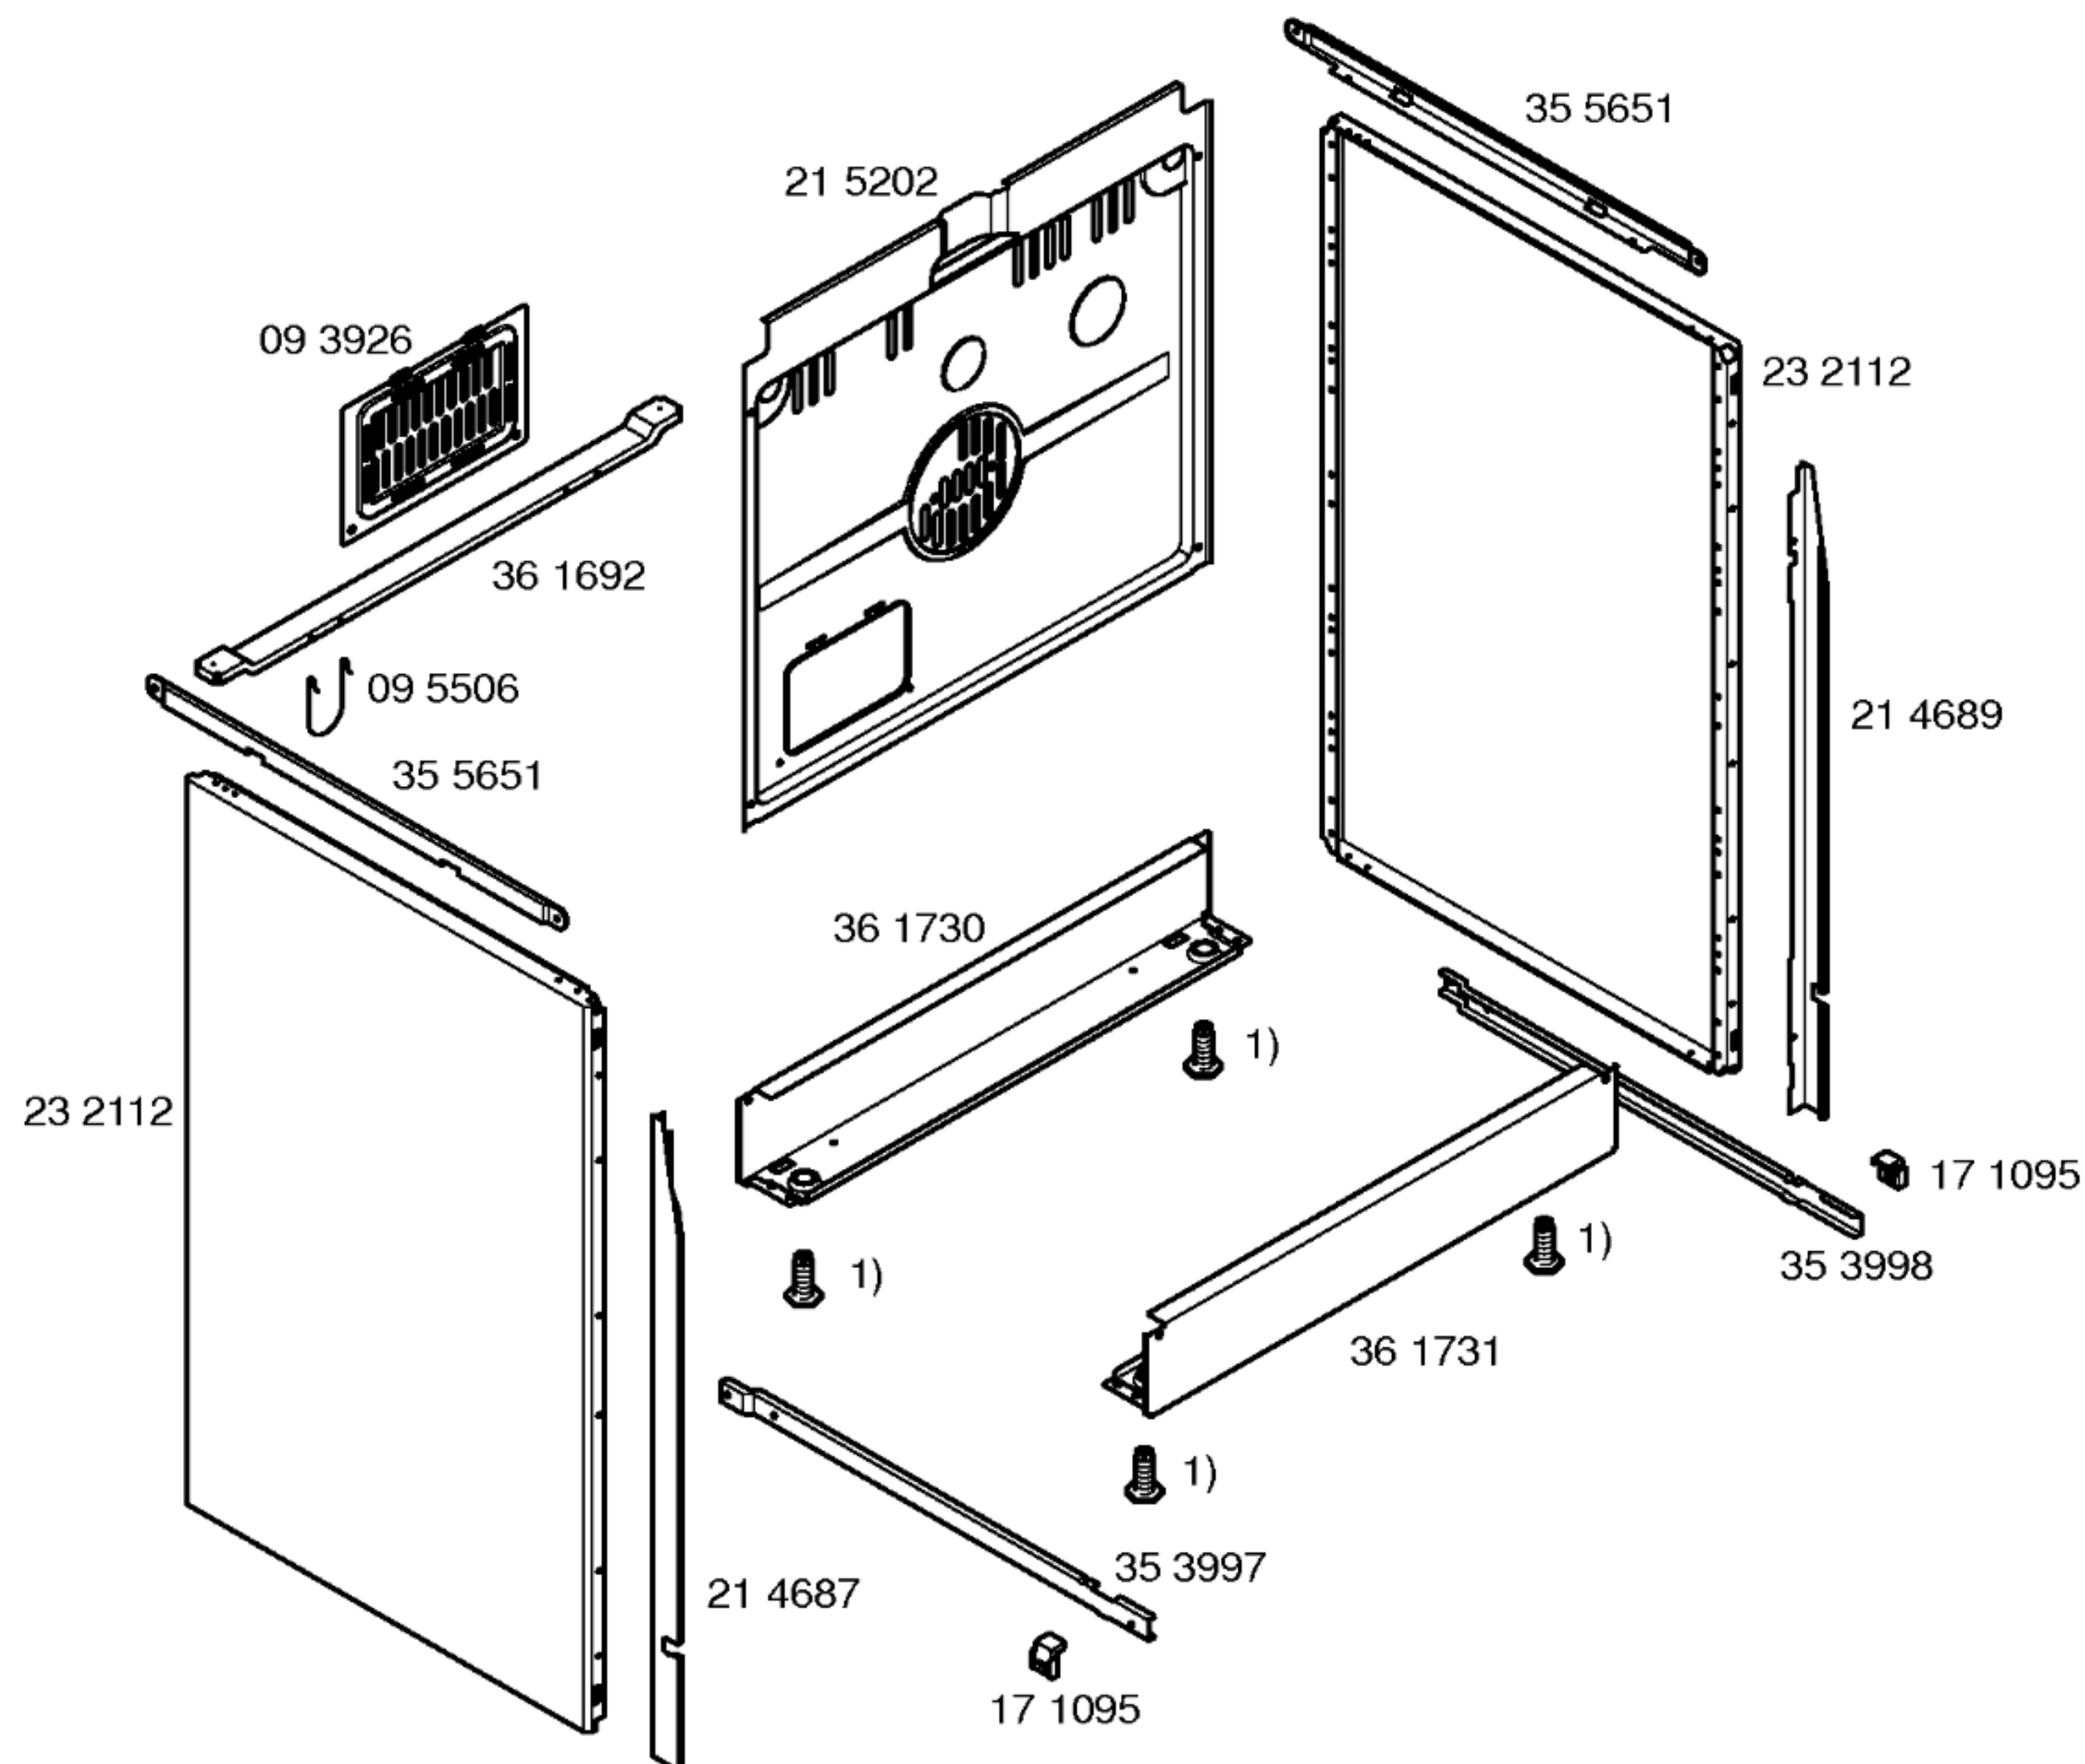




Mat. – Nr. – Konstante
3740


1) 16 5685

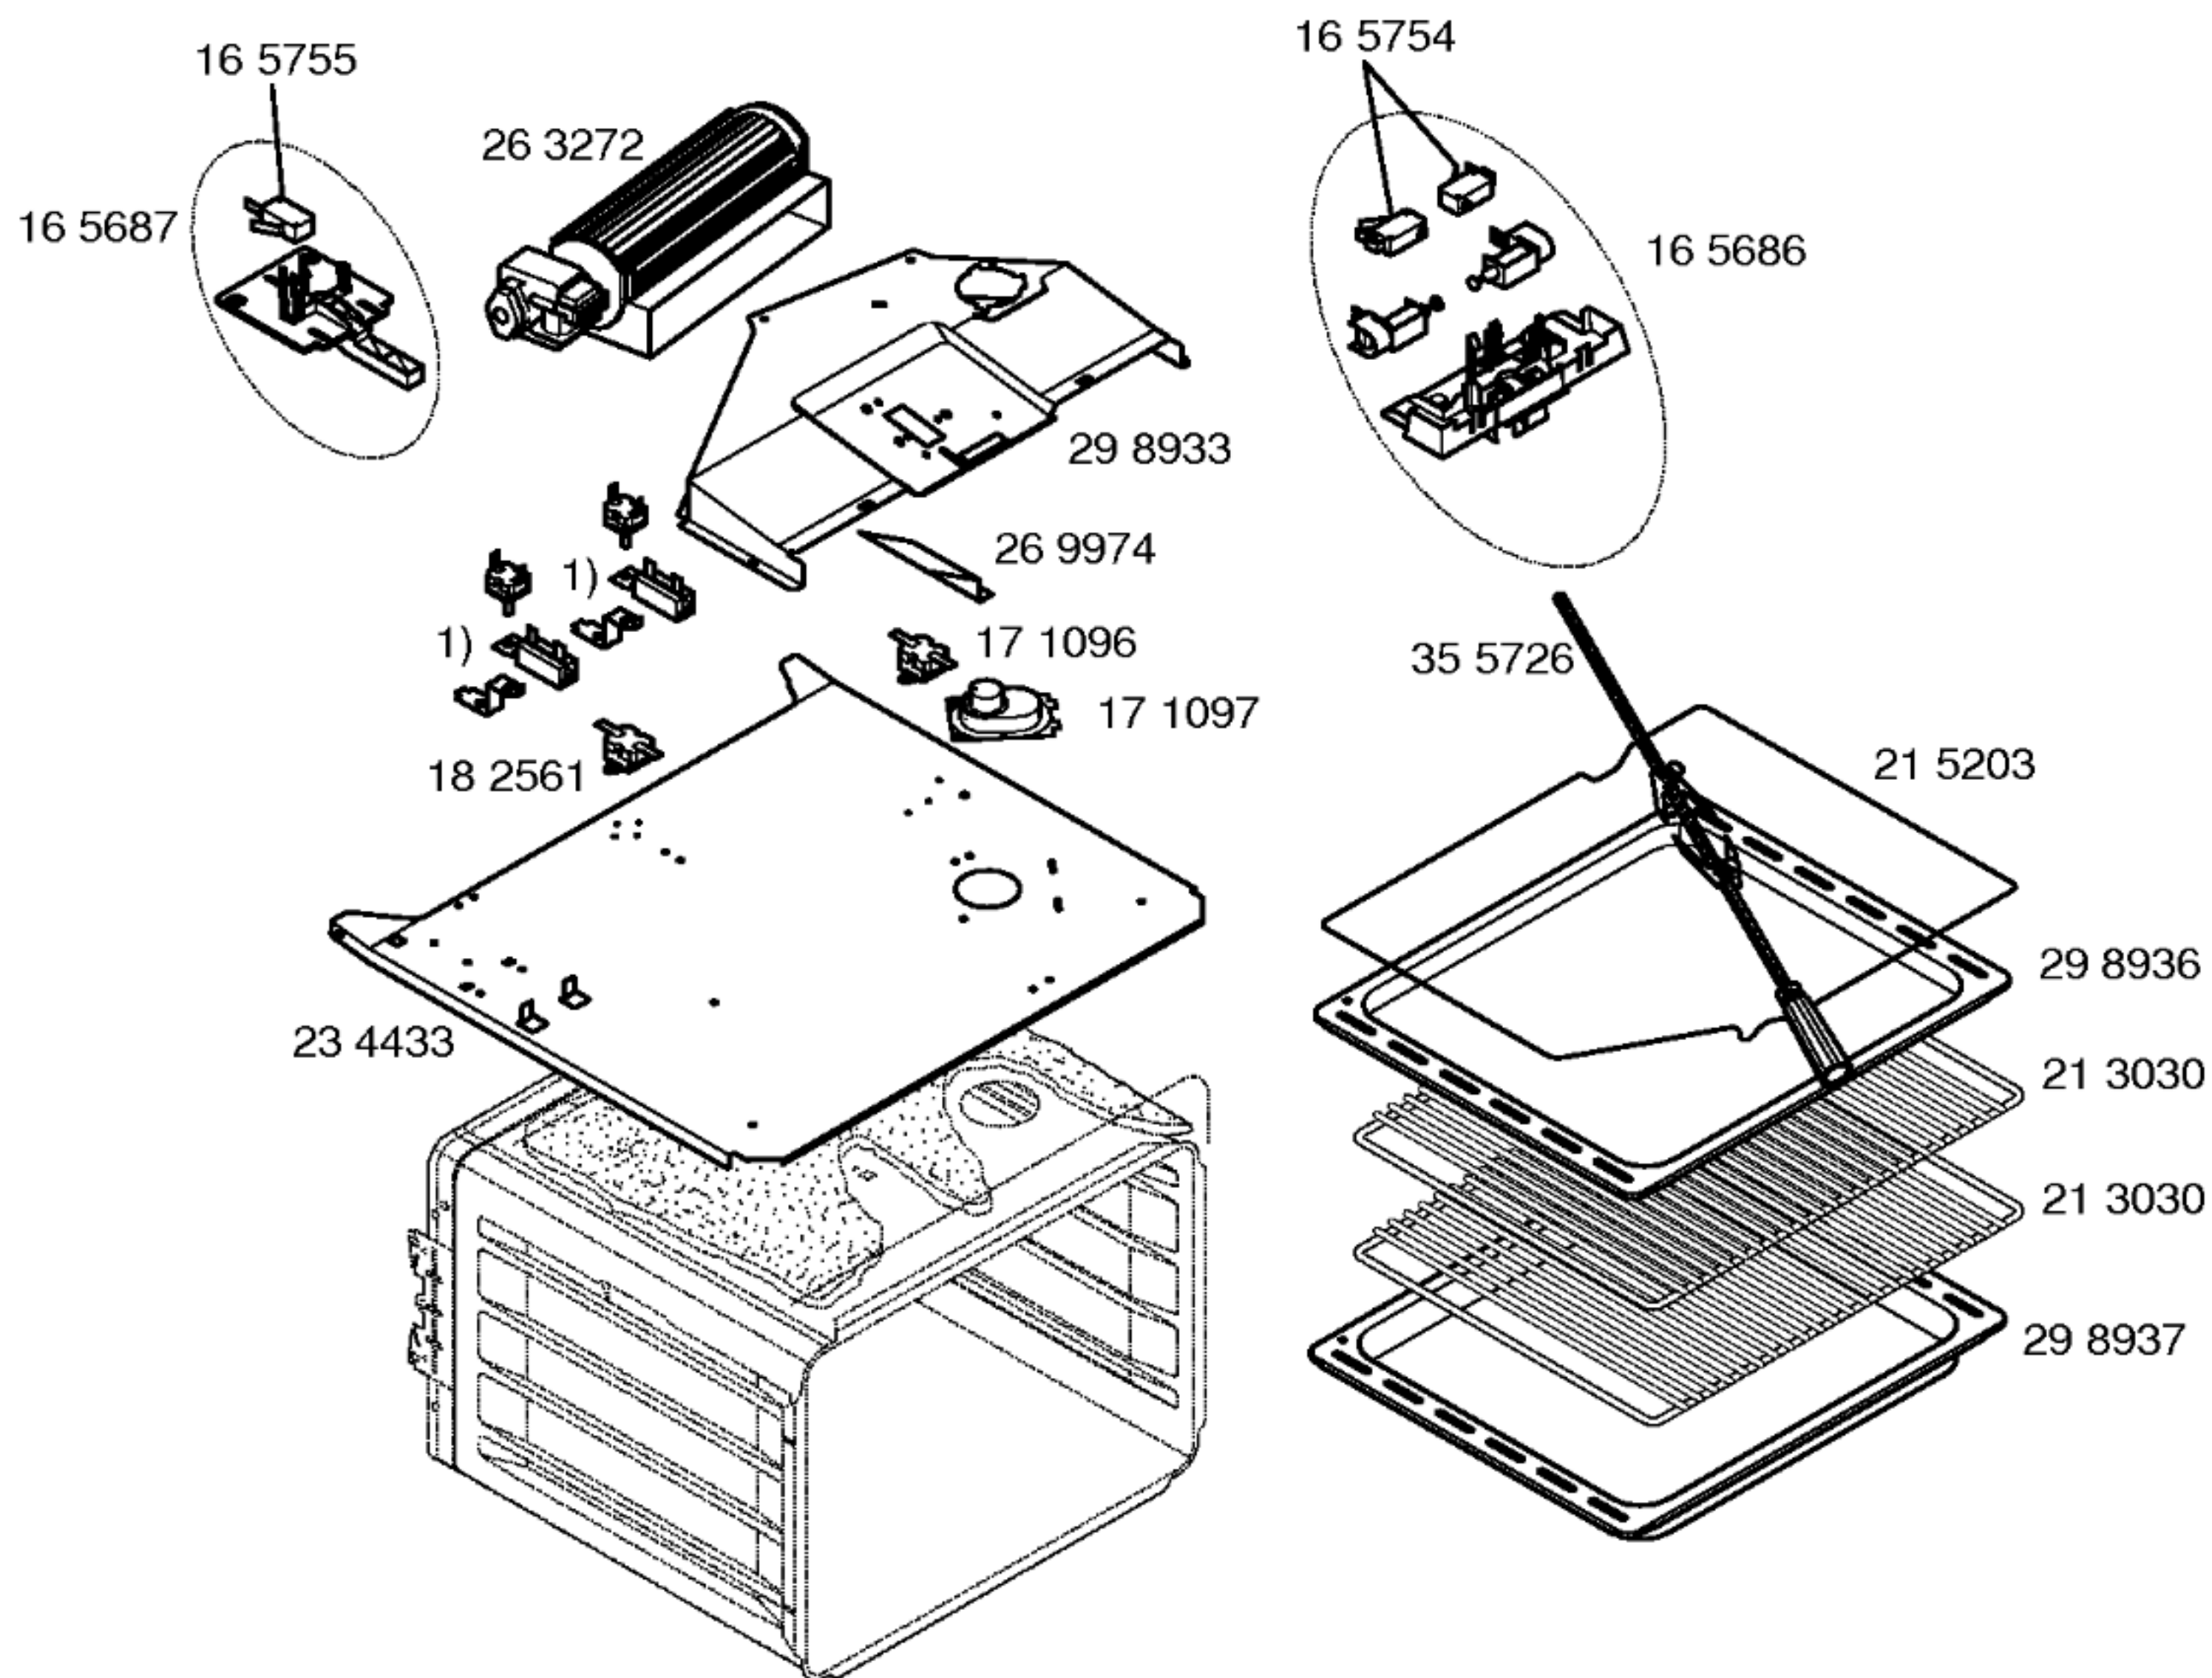

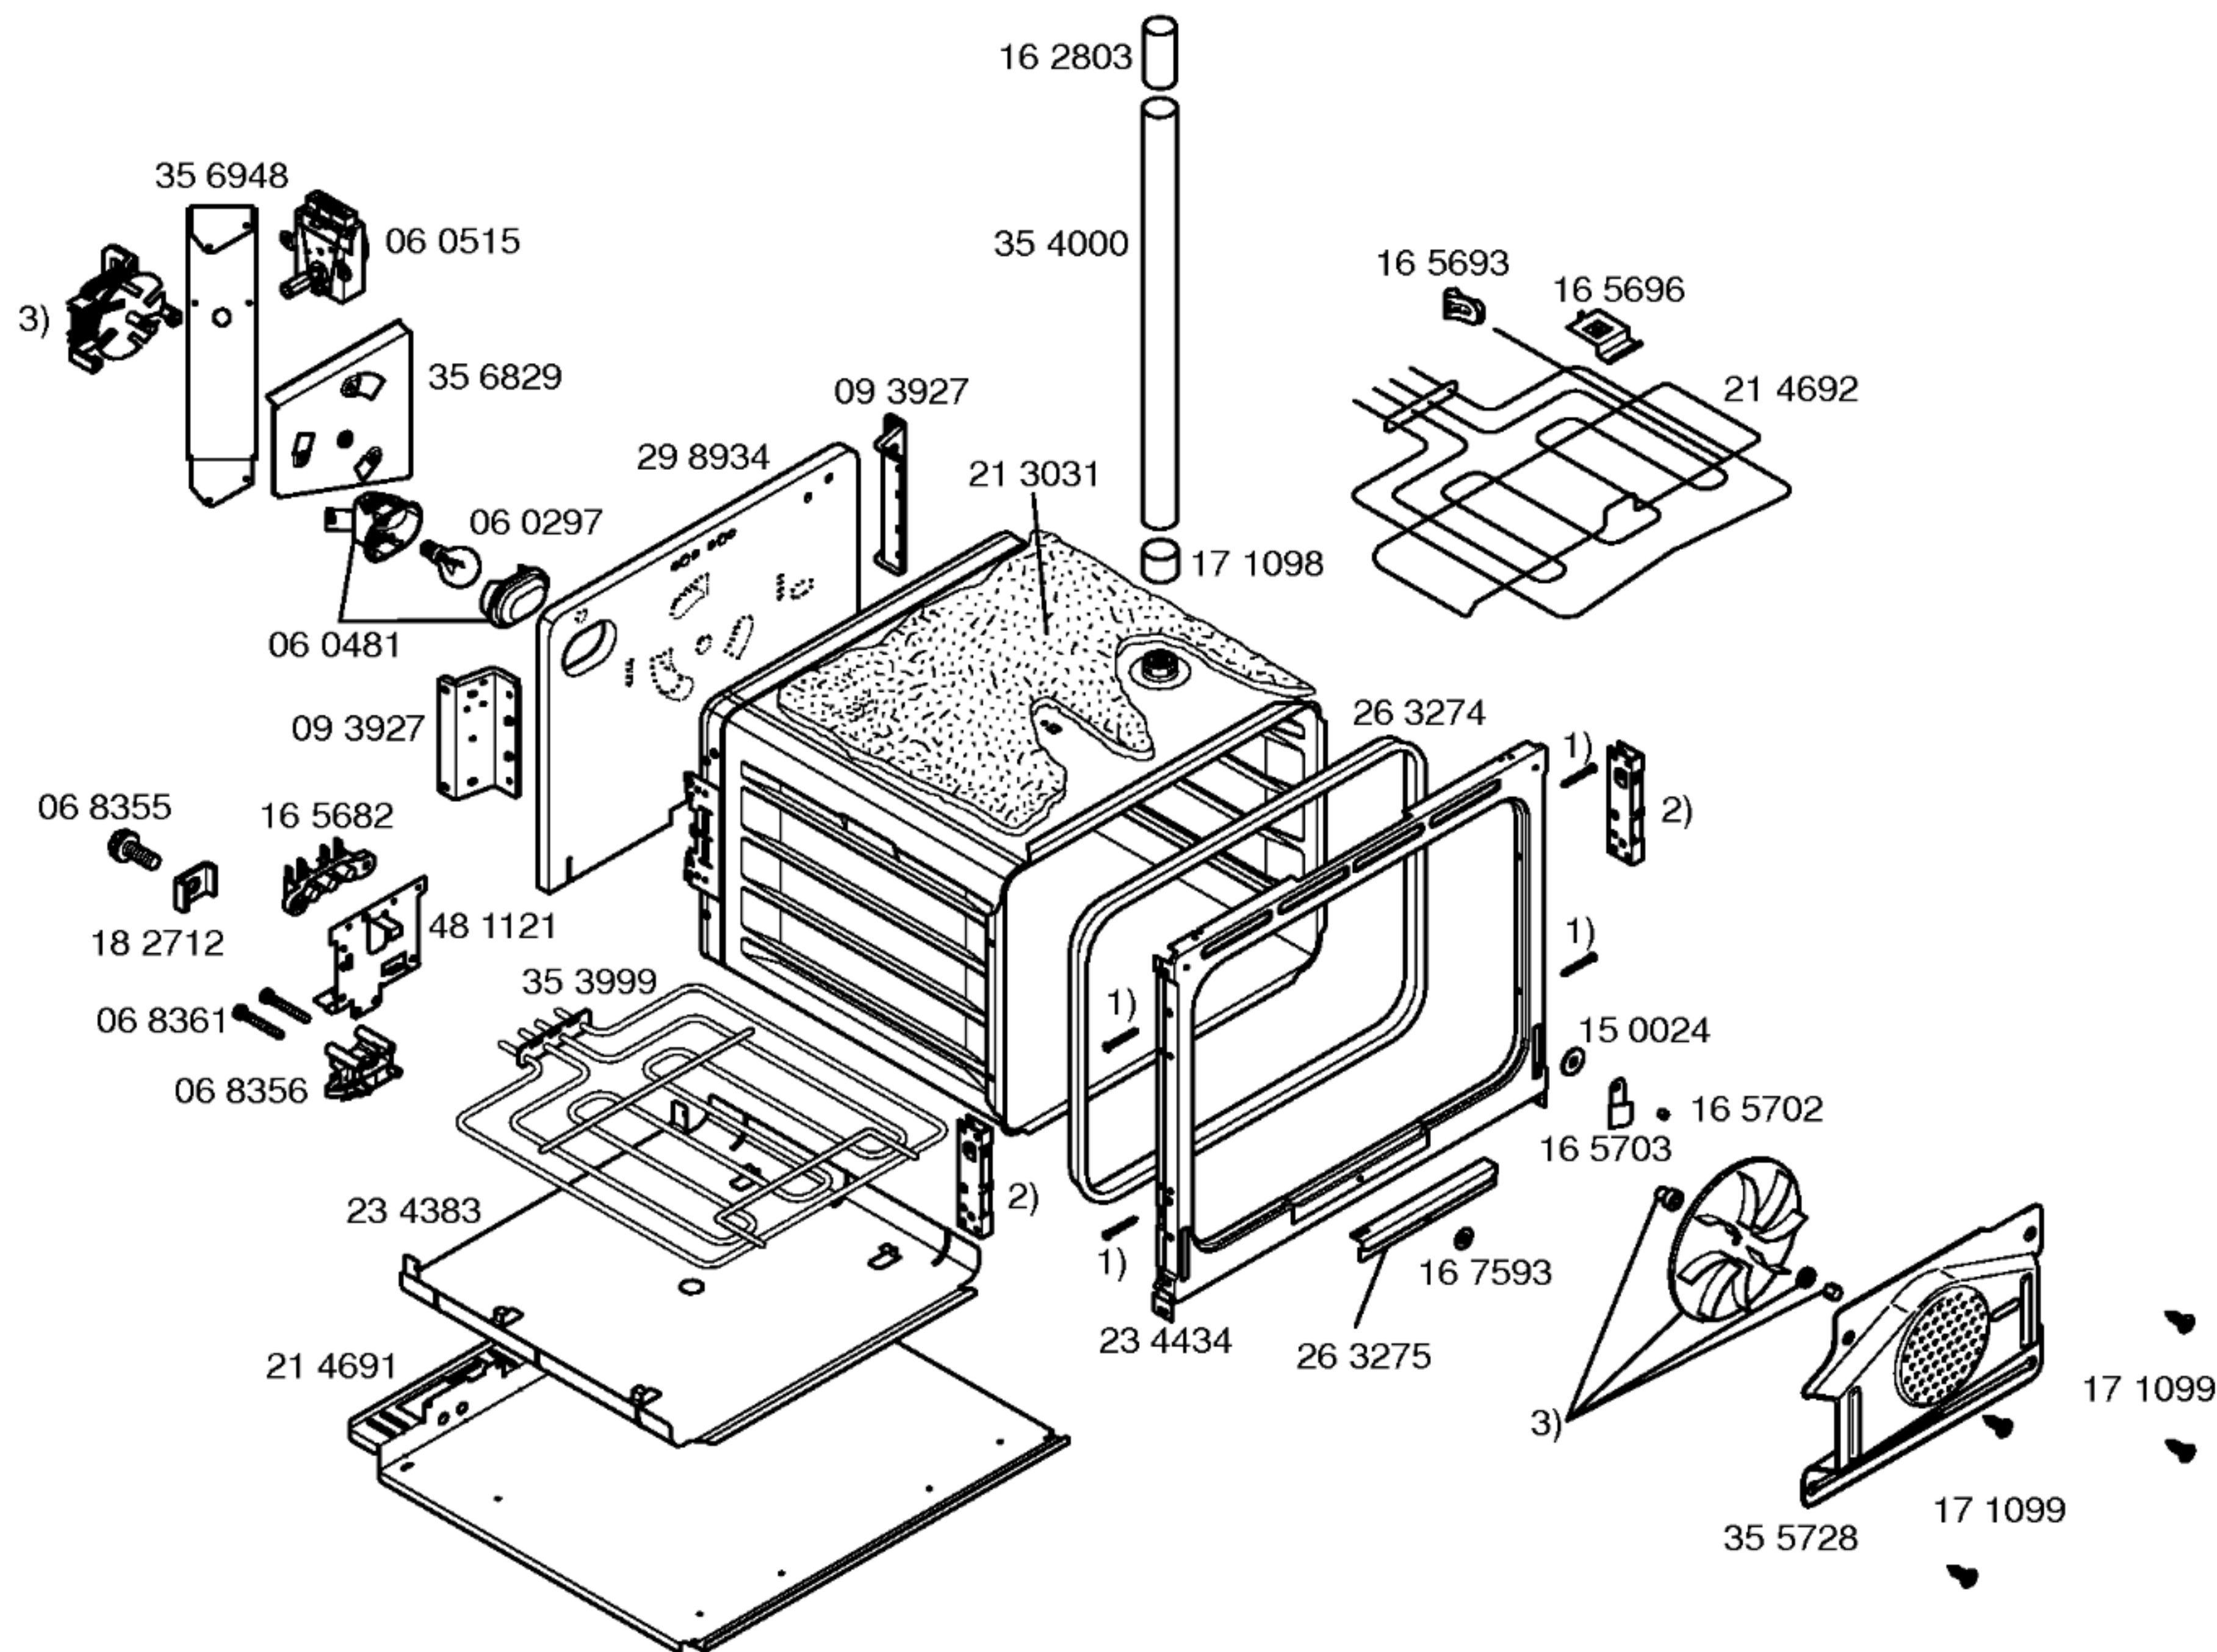

Mat. – Nr. – Konstante
3740

- 1) 16 5758
- 2) 16 5684
- 3) 26 3273

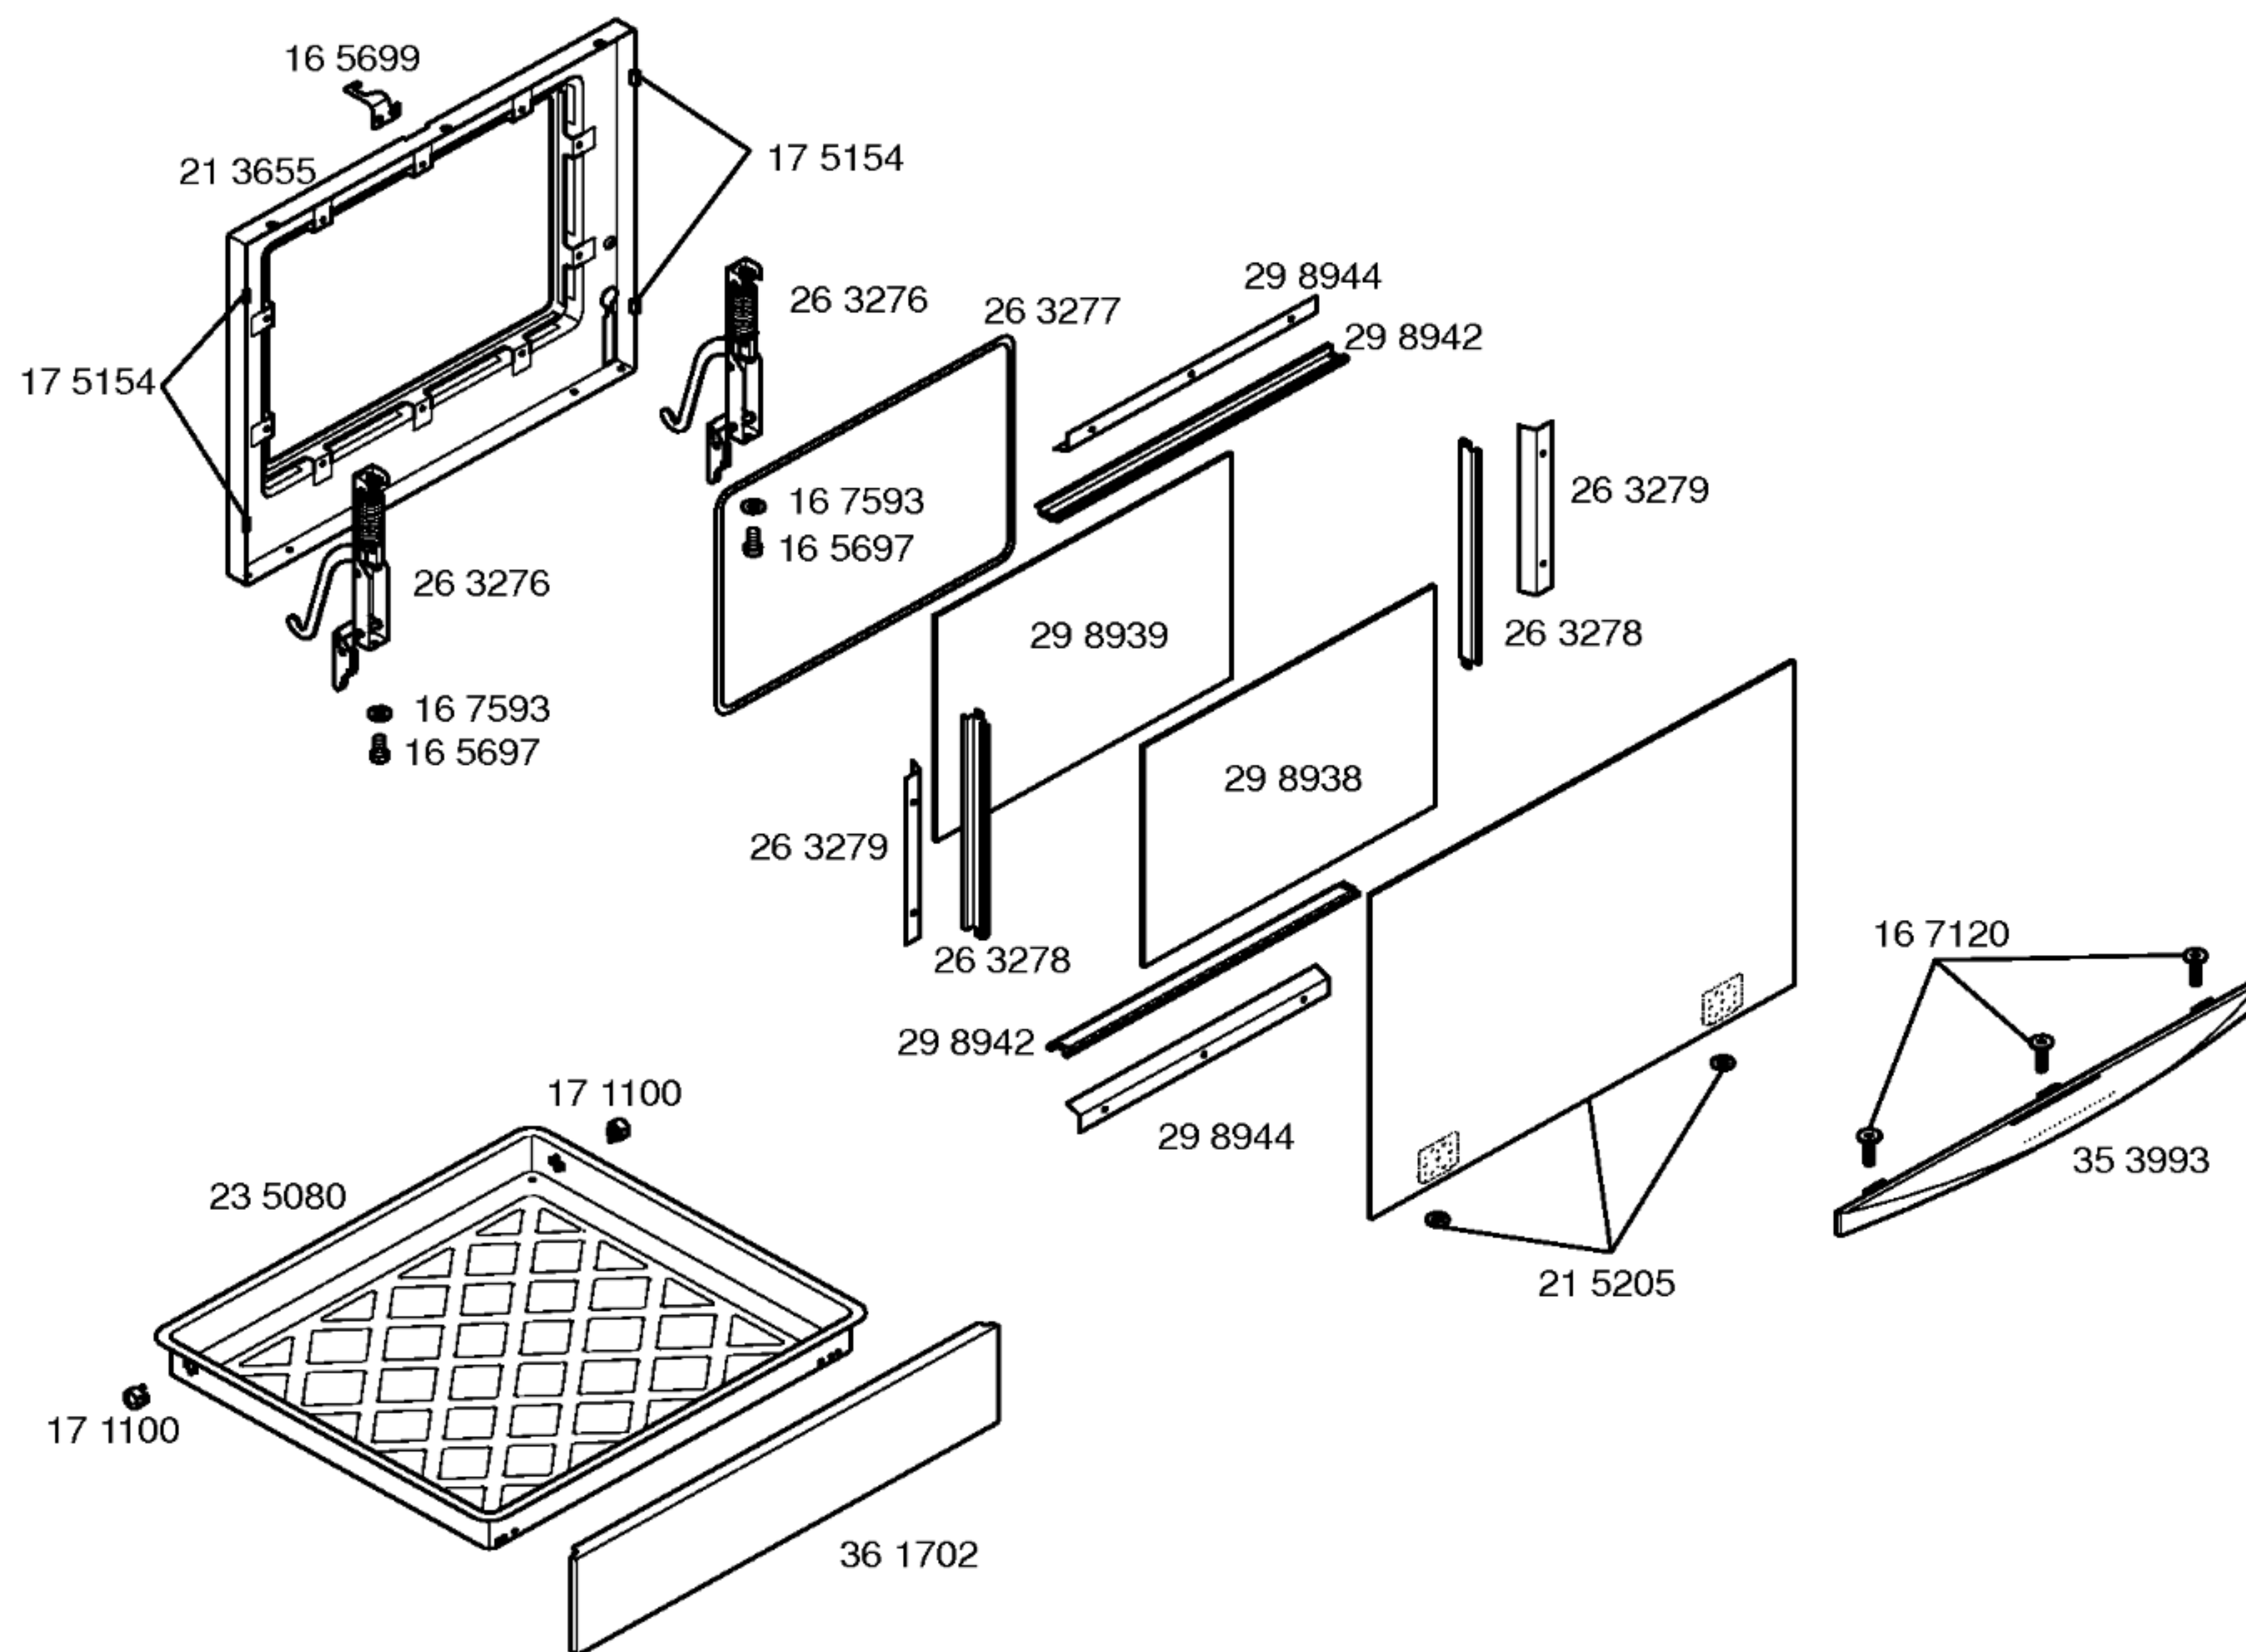Mat. – Nr. – Konstante
3740