


Mat. - Nr. - Konstante
3740

Gebrauchsanleitung:
52 9765
(de,fr,nl)

Montageanleitung:
52 8756
(de,en,fr,it,nl,da,es,fi
no,ru,se)


Kochbuch:
52 7079
(nl)

Zubehör:
HZ8056
Glaspfanne
HZ8055
AL-Backblech
HZ67615
Universalpfanne

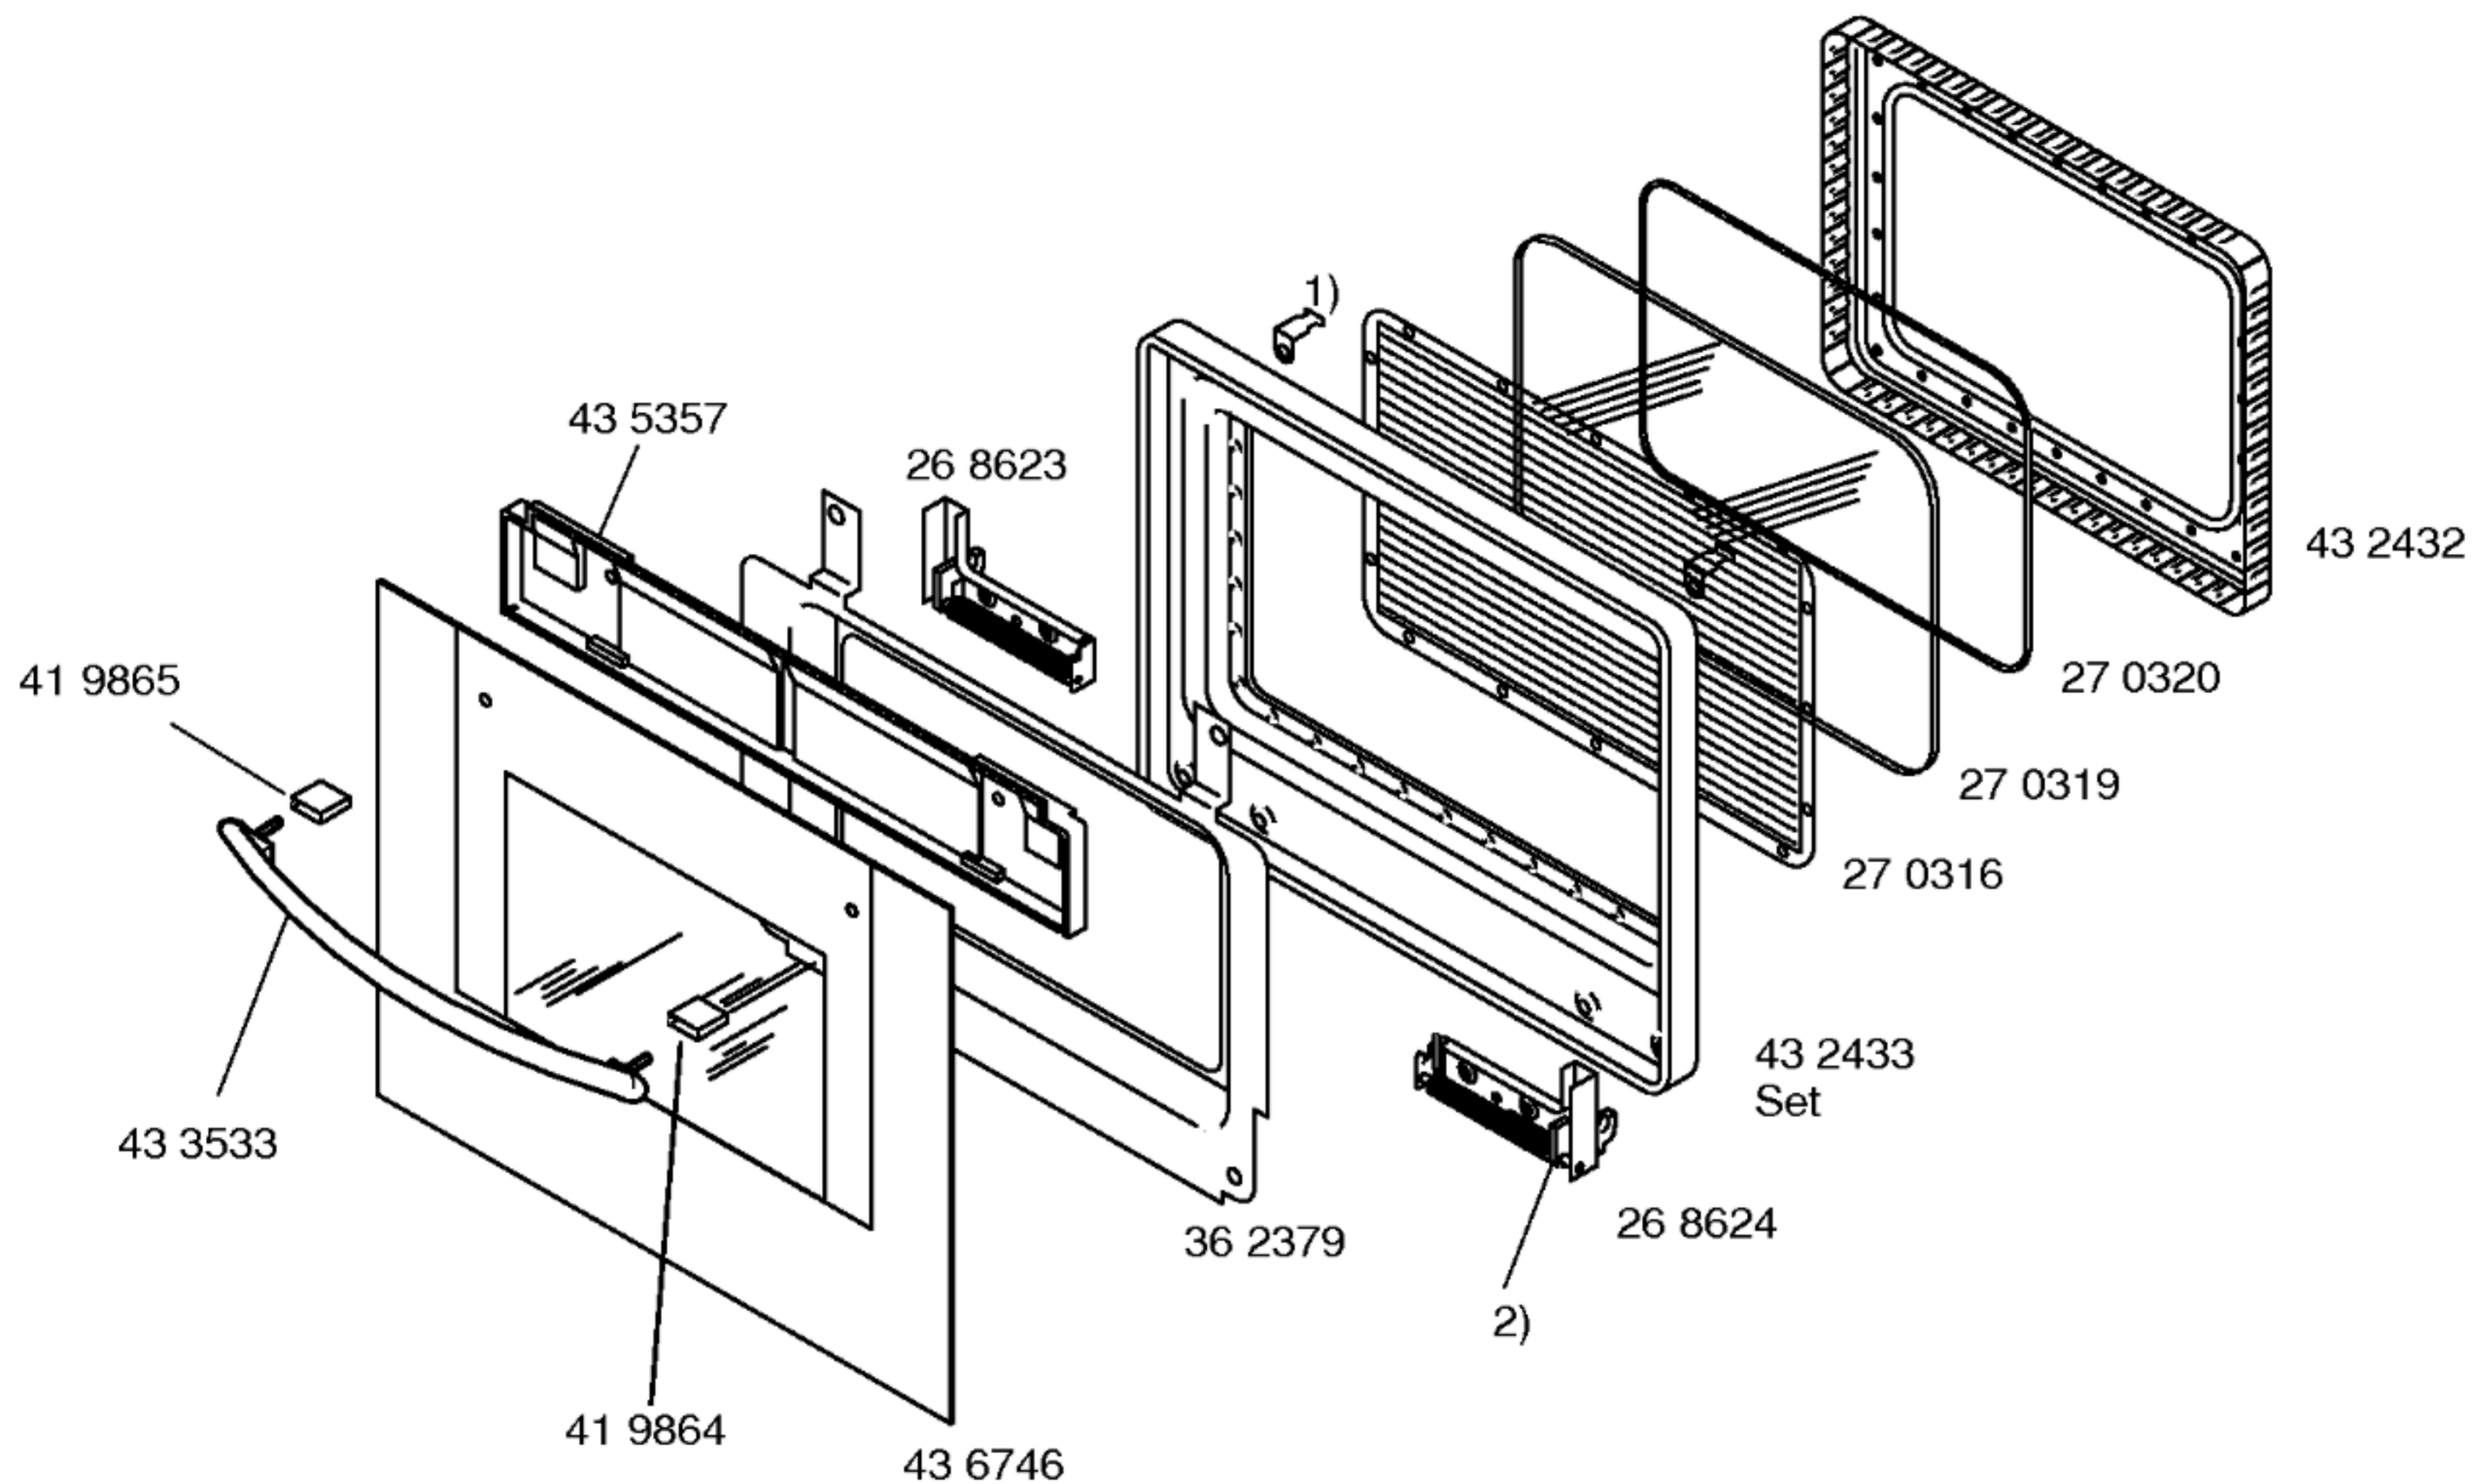


Mat. - Nr. - Konstante
3740

- 1) 03 0671
- 2) 03 0813
Arretierstift)

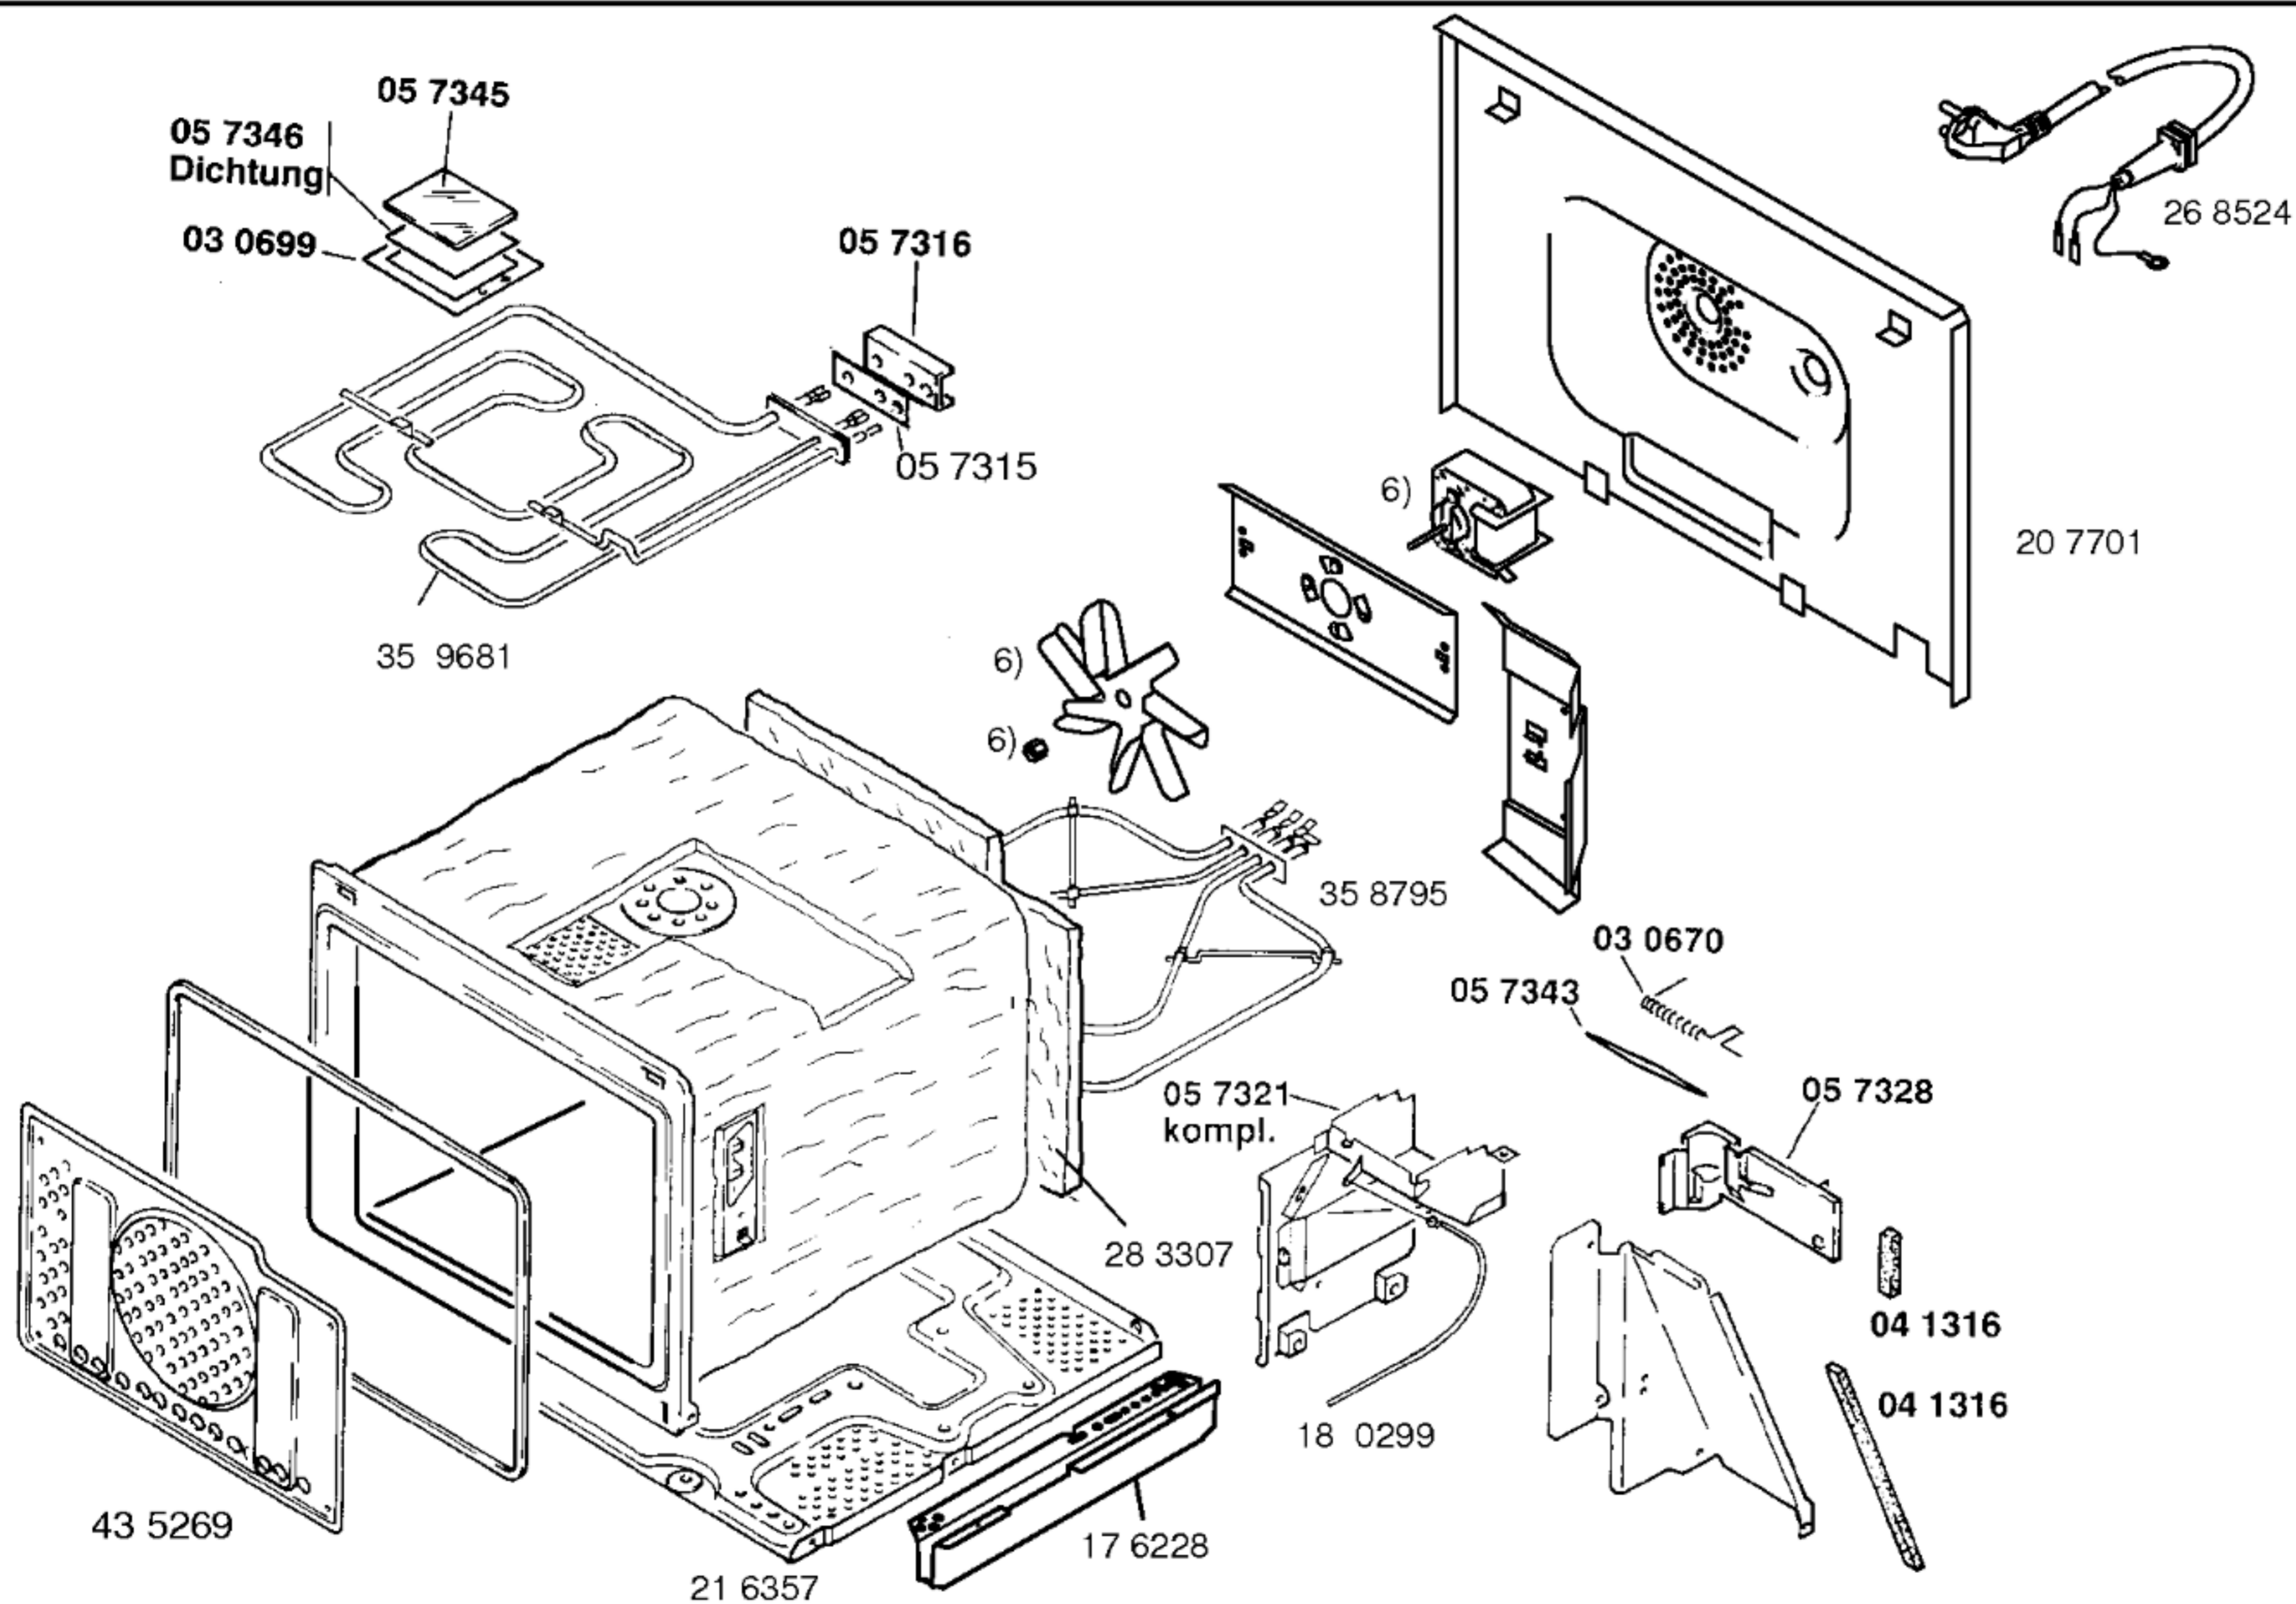

Mat. - Nr. - Konstante
3740

6) 09 2676
kompl.

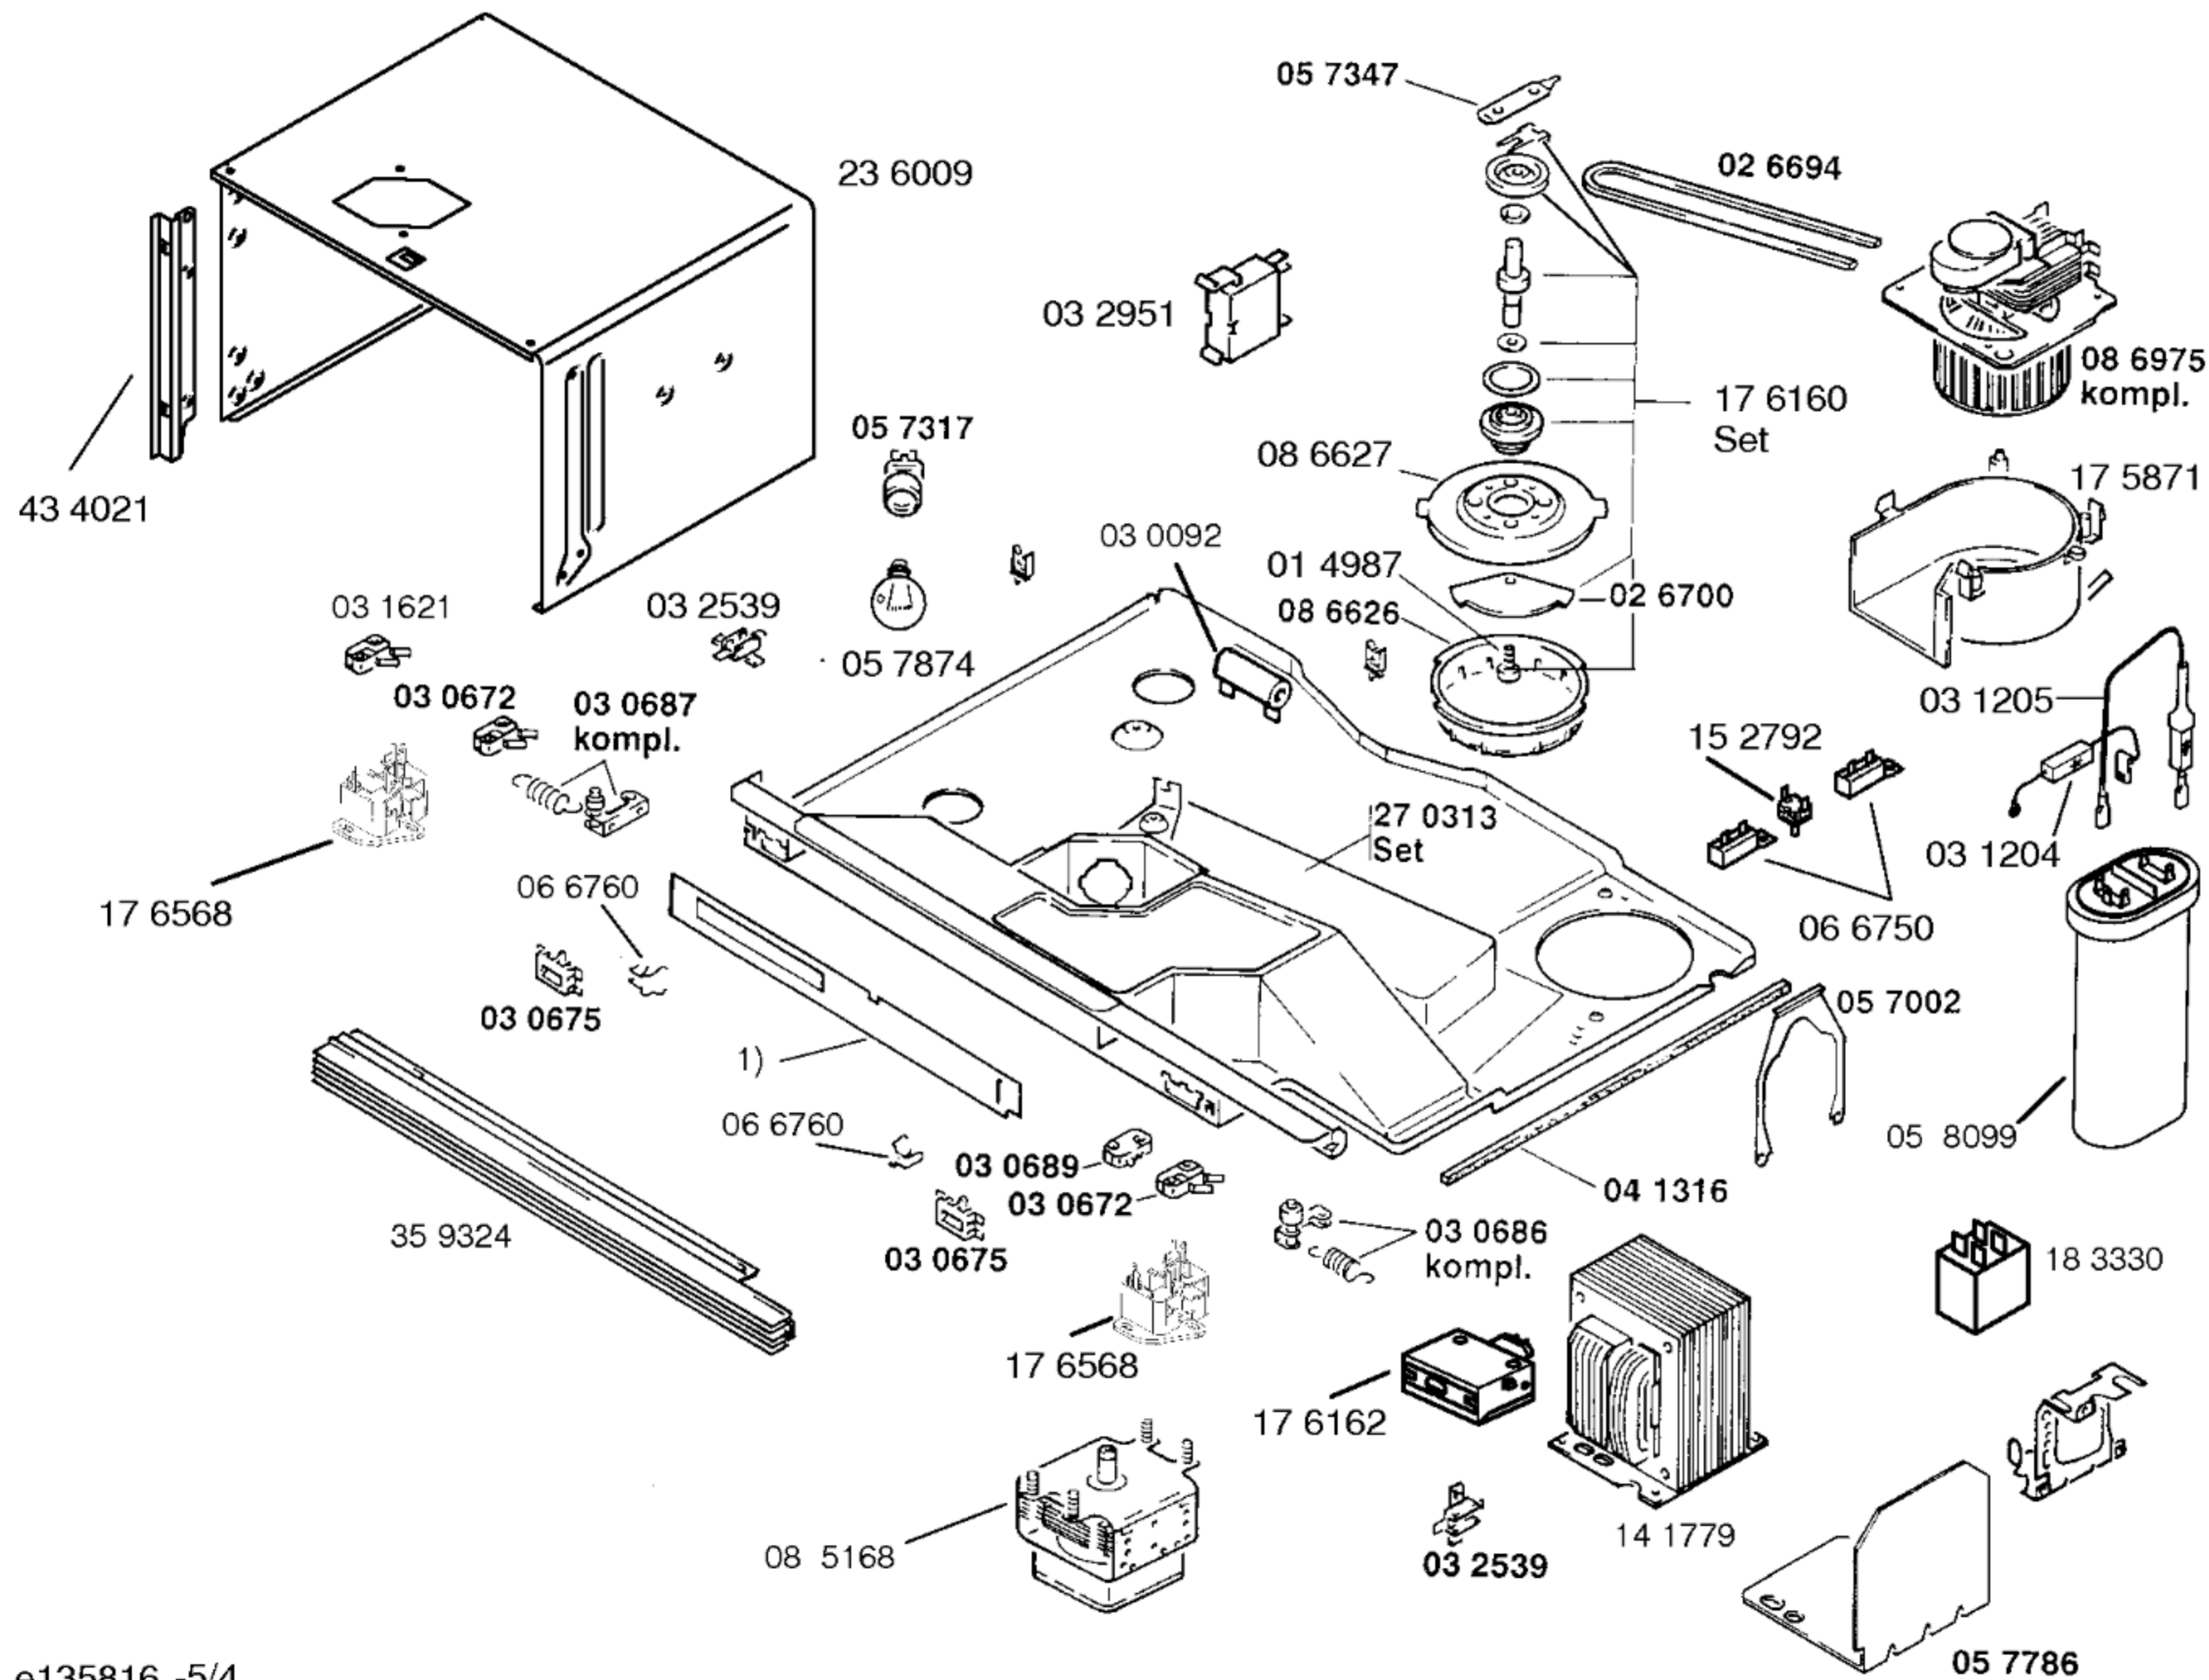

Mat. - Nr. - Konstante
3740

1) 28 5984

Mat. - Nr. - Konstante
3740
1) 17 5720

