



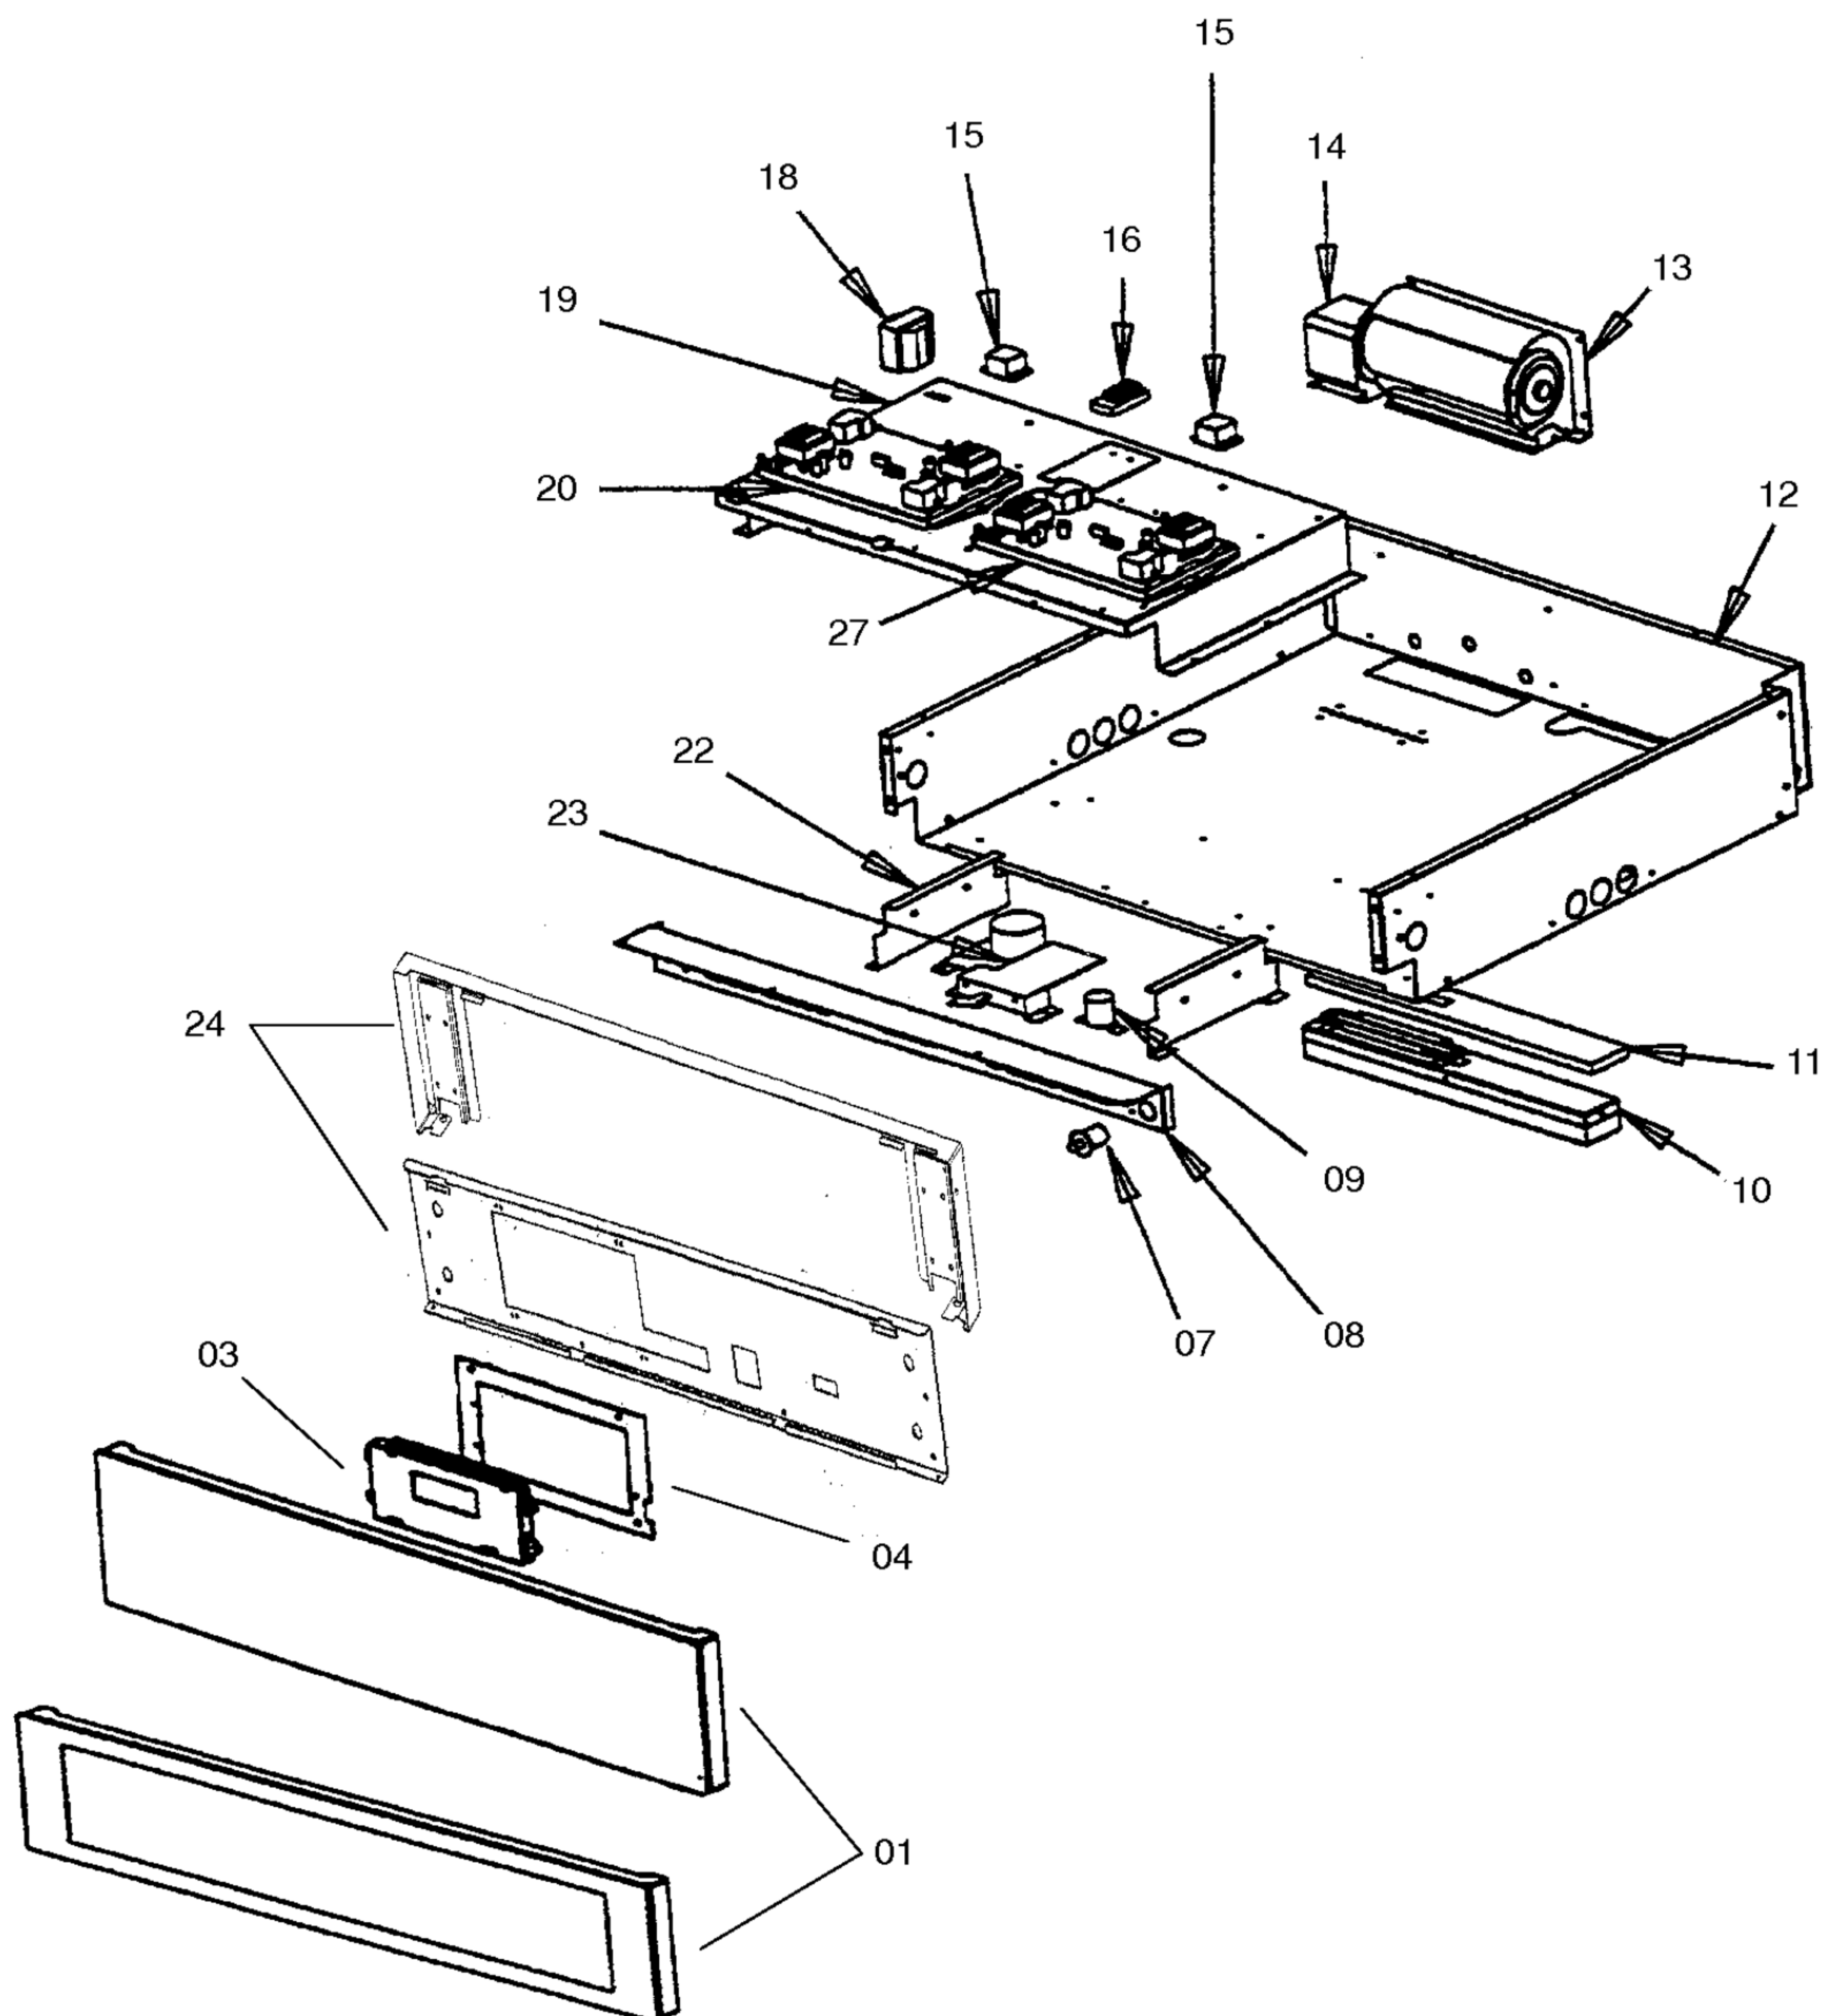


Page/Item	Part No.	Image	Part Discription
01 01	36 8754 V01,	PUSHBUTTON SWITCH	TOUCH CTRL GLASS W/FLTR S
01 01	36 8755 V02,	PUSHBUTTON SWITCH	TOUCH CONTRL GLS W/FLTR S
01 01	36 8772 V03,	PUSHBUTTON SWITCH	TOUCH CONTRL GLS W/FLTR S
01 03	41 5619	PANEL	CONTROL HEAD DBL OVN
01 04	48 5994	PLATE	PLATE, DISPLAY MOUNT
01 07	41 5422	SWITCH	SWITCH, SHUTTER INTERLOCK
01 08	41 6800	PLATE	PLATE, UPPER LATCH 27 BLK
01 09	41 4633	FUSE-THERMAL	HTC M2
01 10	36 8437	DUCT	CHANNEL, VENT TOP ASSY
01 11	48 6004	INSULATING PART	INSULATION, VENT
01 12	36 8381	FRAME	BODY, CTRL PLENUM 27"
01 13	41 3587	BRACKET	BRACKET, BLOWER MTG UPPER
01 14	43 1744	MOTOR-FAN	Kit, Blower crossflow
01 15	41 5761	RELAY	RELAY, STALL FAN
01 16	48 4615	TERMINAL	BLOCK, TERMINAL
01 18	41 4209	INSTALLATION SET	KIT, LIGHT TRANSFORMER
01 19	36 8275	PANEL	PARTITION, UPPER PLENUM
01 20	48 6792	MODULE-POWER	KIT, S-OVEN RELAY BOARD
01 21	36 9123	PLATE	PASTRY BOARD-SIERRA AUROR
01 22	41 3118	PLATE	SHIELD, LATCH
01 23	48 9102	LOCK-MECHANICAL	latch assy, motorized
01 24	43 4192	FIXING KIT	KIT,CONTROL FRAME ASSY 27
01 24	43 4190 V01, V02,V03,	FIXING KIT	KIT,CONTROL FRAME ASSY 27
* 01 25	41 5191	CONNECTION	TAIL, MEMBRANE (TOUCH CON
* 01 26	41 1036	SPRING	SPRING, CATCH
* 01 27	41 1007	STUD	BALL STUD
* 01 28	41 1059	SUPPORT	BUMPER, DOOR

* Not illustrated

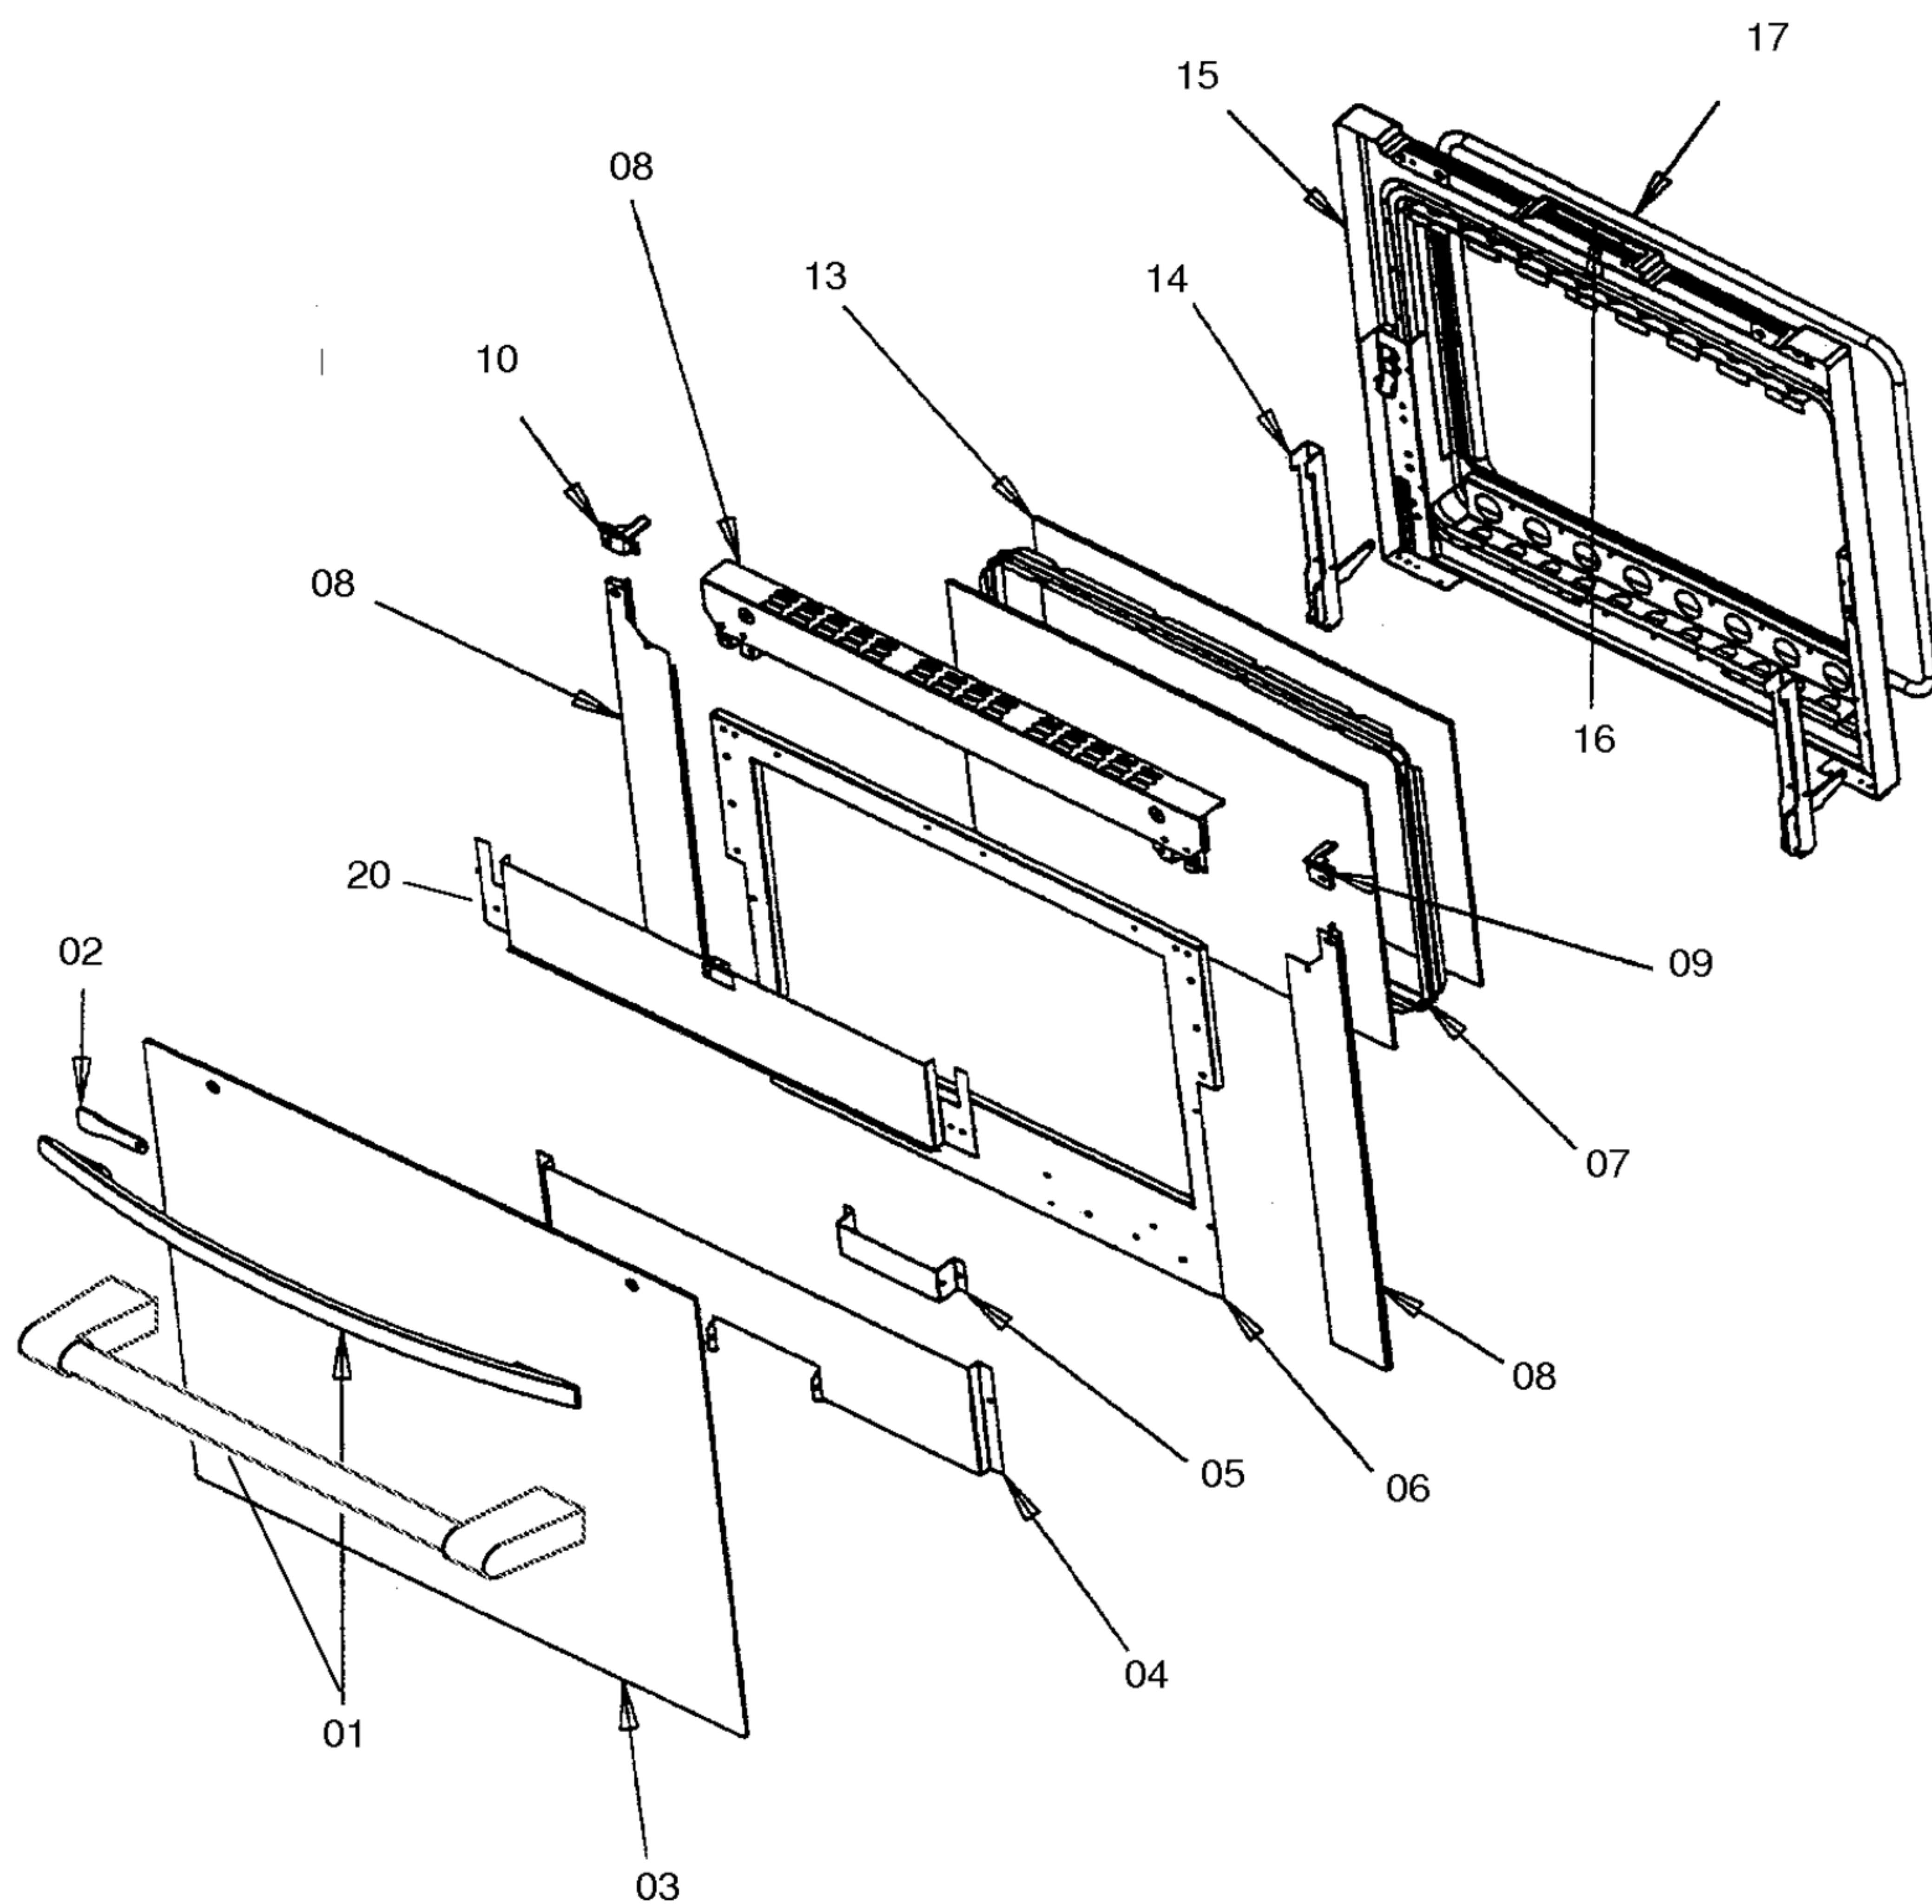


Page/Item	Part No.	Image	Part Discription
11 01	41 4392	HANDLE	HANDLE, DOOR 27" WHT
11 01	48 6867	HANDLE	HANDLE, DOOR 27" BLK
11 01	48 6002	HANDLE	ASSEMBLED 27" PRO HANDLE
11 02	41 4817	SPACER	SPACER, DOOR HANDLE
11 03	14 2737	GLASS PANEL	ASSY, DOOR GLASS 27"WHT
11 03	14 2830	GLASS PANEL	ASSY, DOOR GLASS 27"BLK
11 03	14 2757	GLASS PANEL	ASSY, DR GLASS & SS PNL 2
11 03	23 9017	DOOR-OUTER	KIT, DOOR PANEL 27" SS (P
11 04	48 6000	AIR CHANNEL	BAFFLE, DOOR LWR 27" BLK
11 05	41 3120	BRACKET	BRACKET, BTM GLASS SUPT
11 06	36 8287	INSULATING PART	COVER, DR INSULATION 27"B
11 07	36 9152	SPACER	SPACER, INNER WINDOW
11 09	41 4390	COVER	ENDCAP, DR GLASS SUPT RH
11 10	41 4391	COVER	ENDCAP, DR GLASS SUPT LH
11 12	49 0522	FIXING KIT	Kit,Door Glass Support BL
11 13	21 9357	GLASS PANEL	GLASS,INNER WINDOW 4MM 2S
11 14	48 7746	HINGE	HINGE, DOOR 30"
11 14	41 4511	HINGE	HINGE, DOOR 30" (S/S)
11 15	47 0537	DOOR-INNER	DOOR, LINER W/STRIKE ASSY
11 16	41 2838	LOCK	STRIKE, DOOR (BLK OXIDE)
11 17	48 6768	SEAL-DOOR	GASKET, 27" OVEN DOOR KIT
* 11 18	14 2740	DOOR	DOOR ASSY, S/SC/SCD 27" W
* 11 18	14 2739	DOOR	DOOR ASSY, S/SC/SCD 27"BL
* 11 18	14 2741	DOOR	DOOR ASSY, S/SC/SCD 27" S
11 20	48 5992	AIR CHANNEL	BAFFLE, DOOR AIR UPPER 27

* Not illustrated

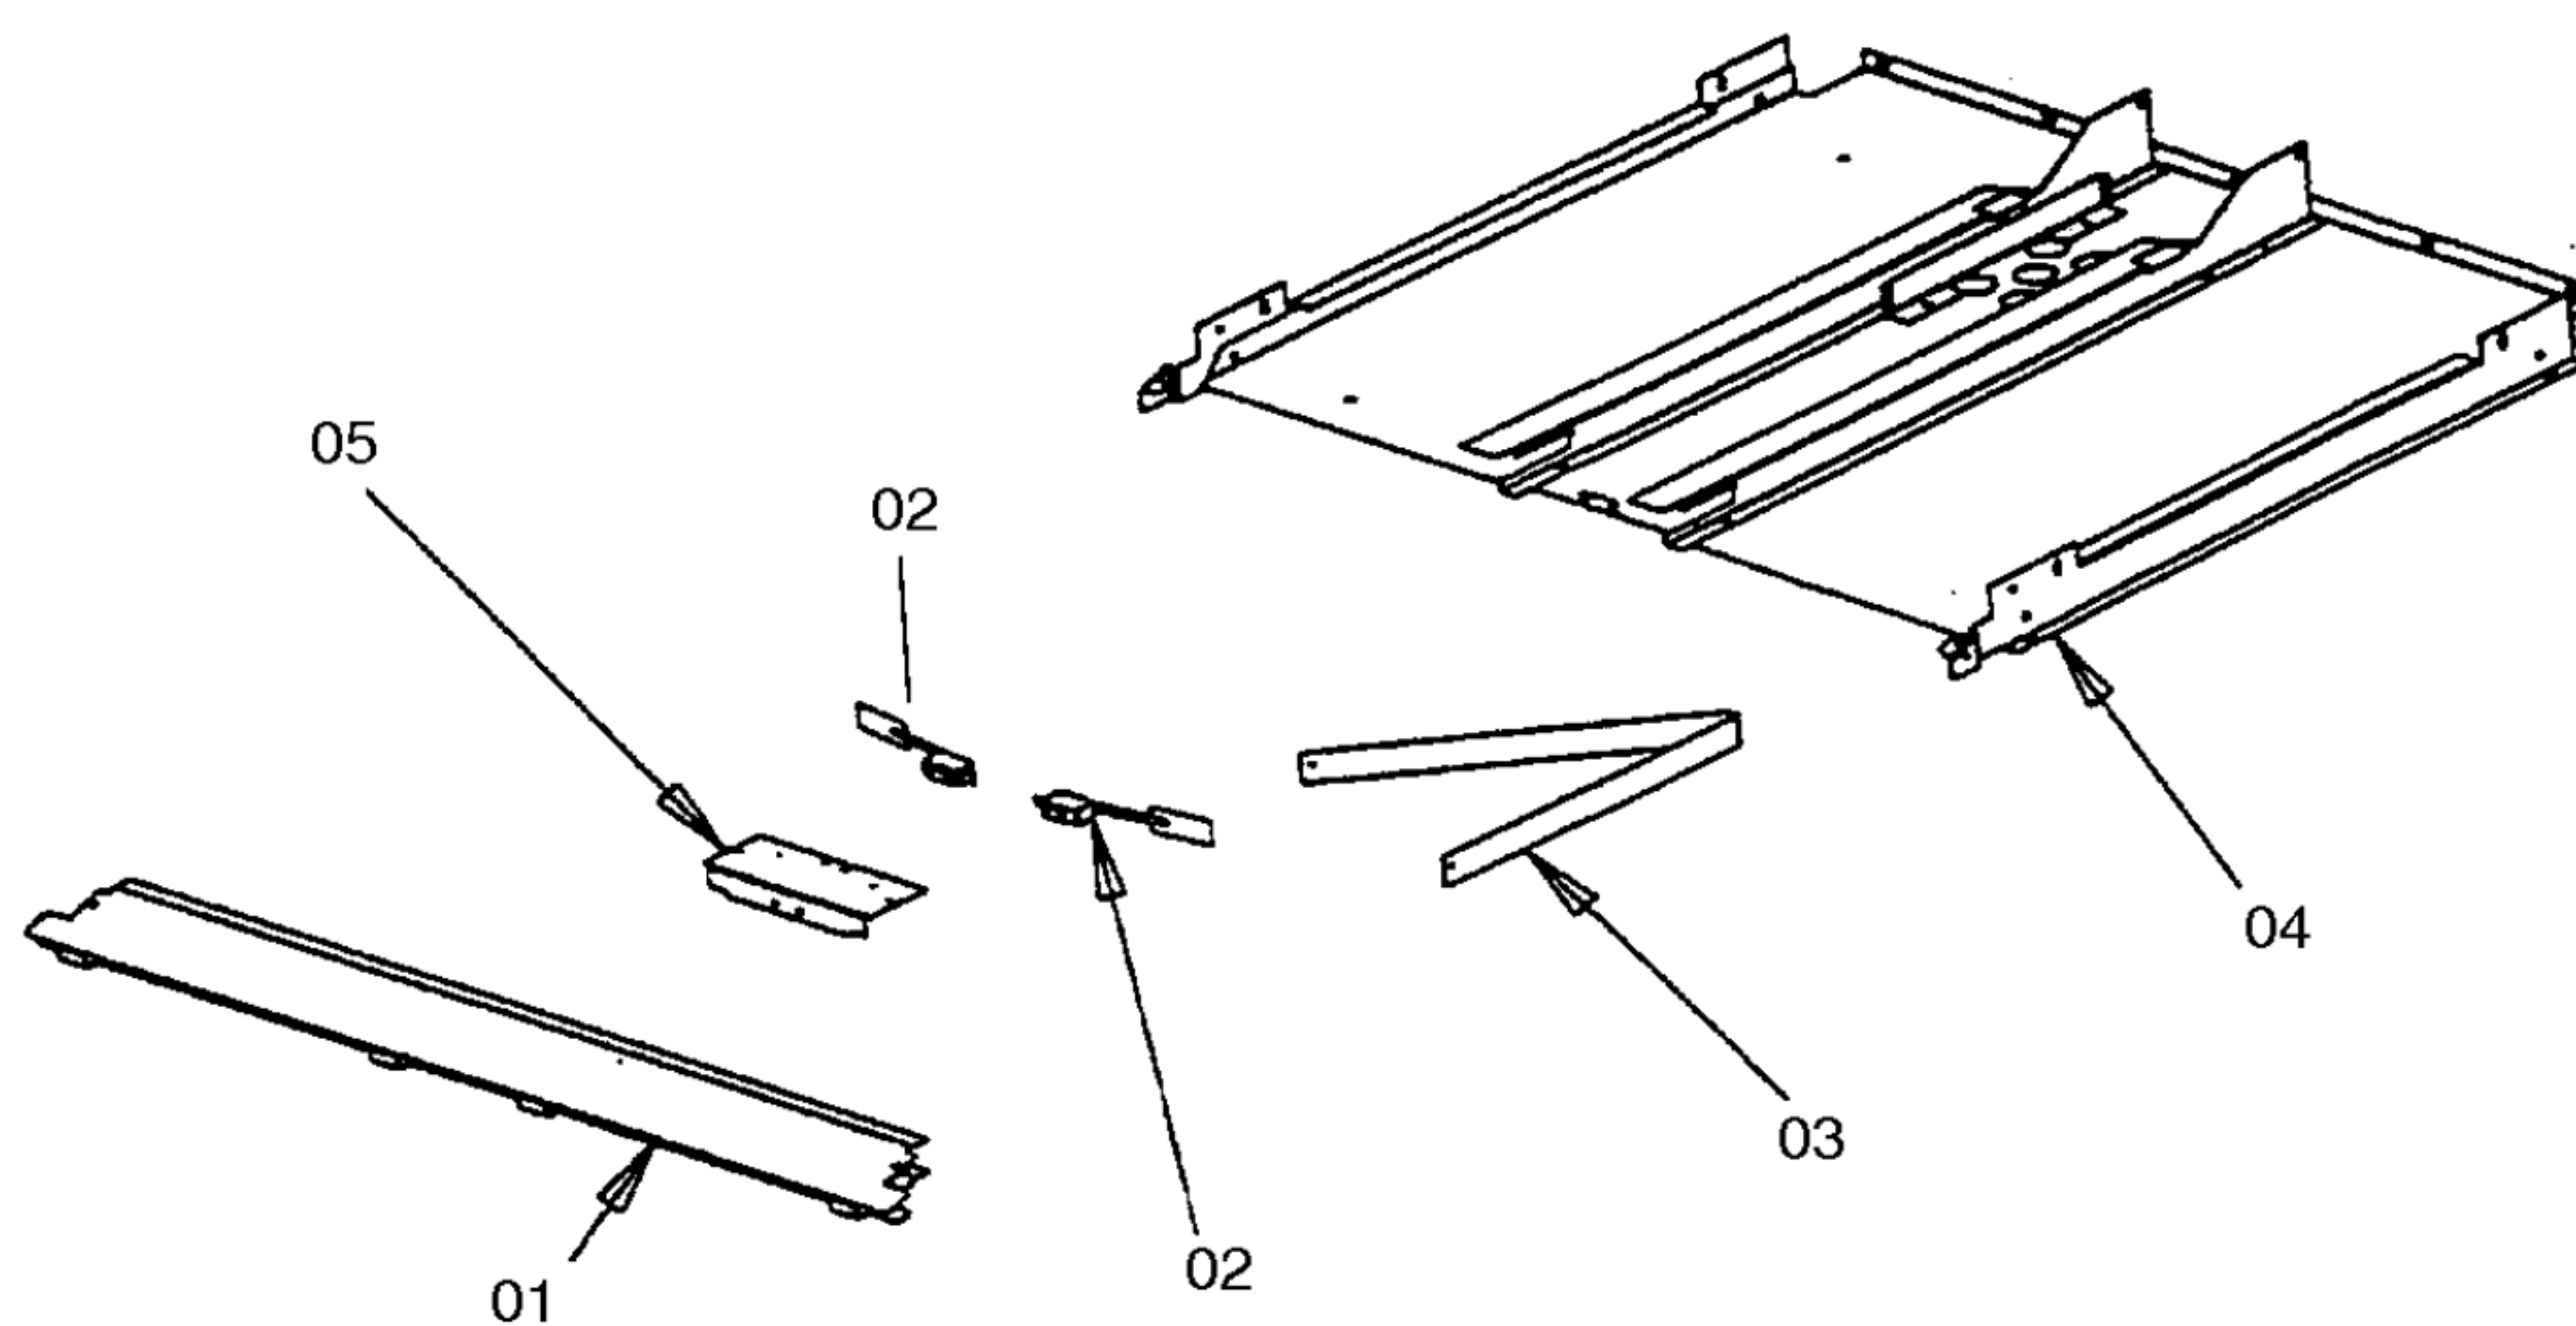


Page/Item	Part No.	Image	Part Discription
13 01	36 8502	FRAME	TRIM, BOTTOM 27" WHT
13 01	48 6325	FRAME	TRIM, BOTTOM 27" BLK
13 02	48 8400	SWITCH	SWITCH, SAIL
13 03	48 6258	DISTRIBUTOR	DIVERter, AIR FLOW
13 04	21 9354	BASE	BASE ASSY 27"
13 05	41 3122	BRACKET	BRACKET, AIR SWITCH

* Not illustrated

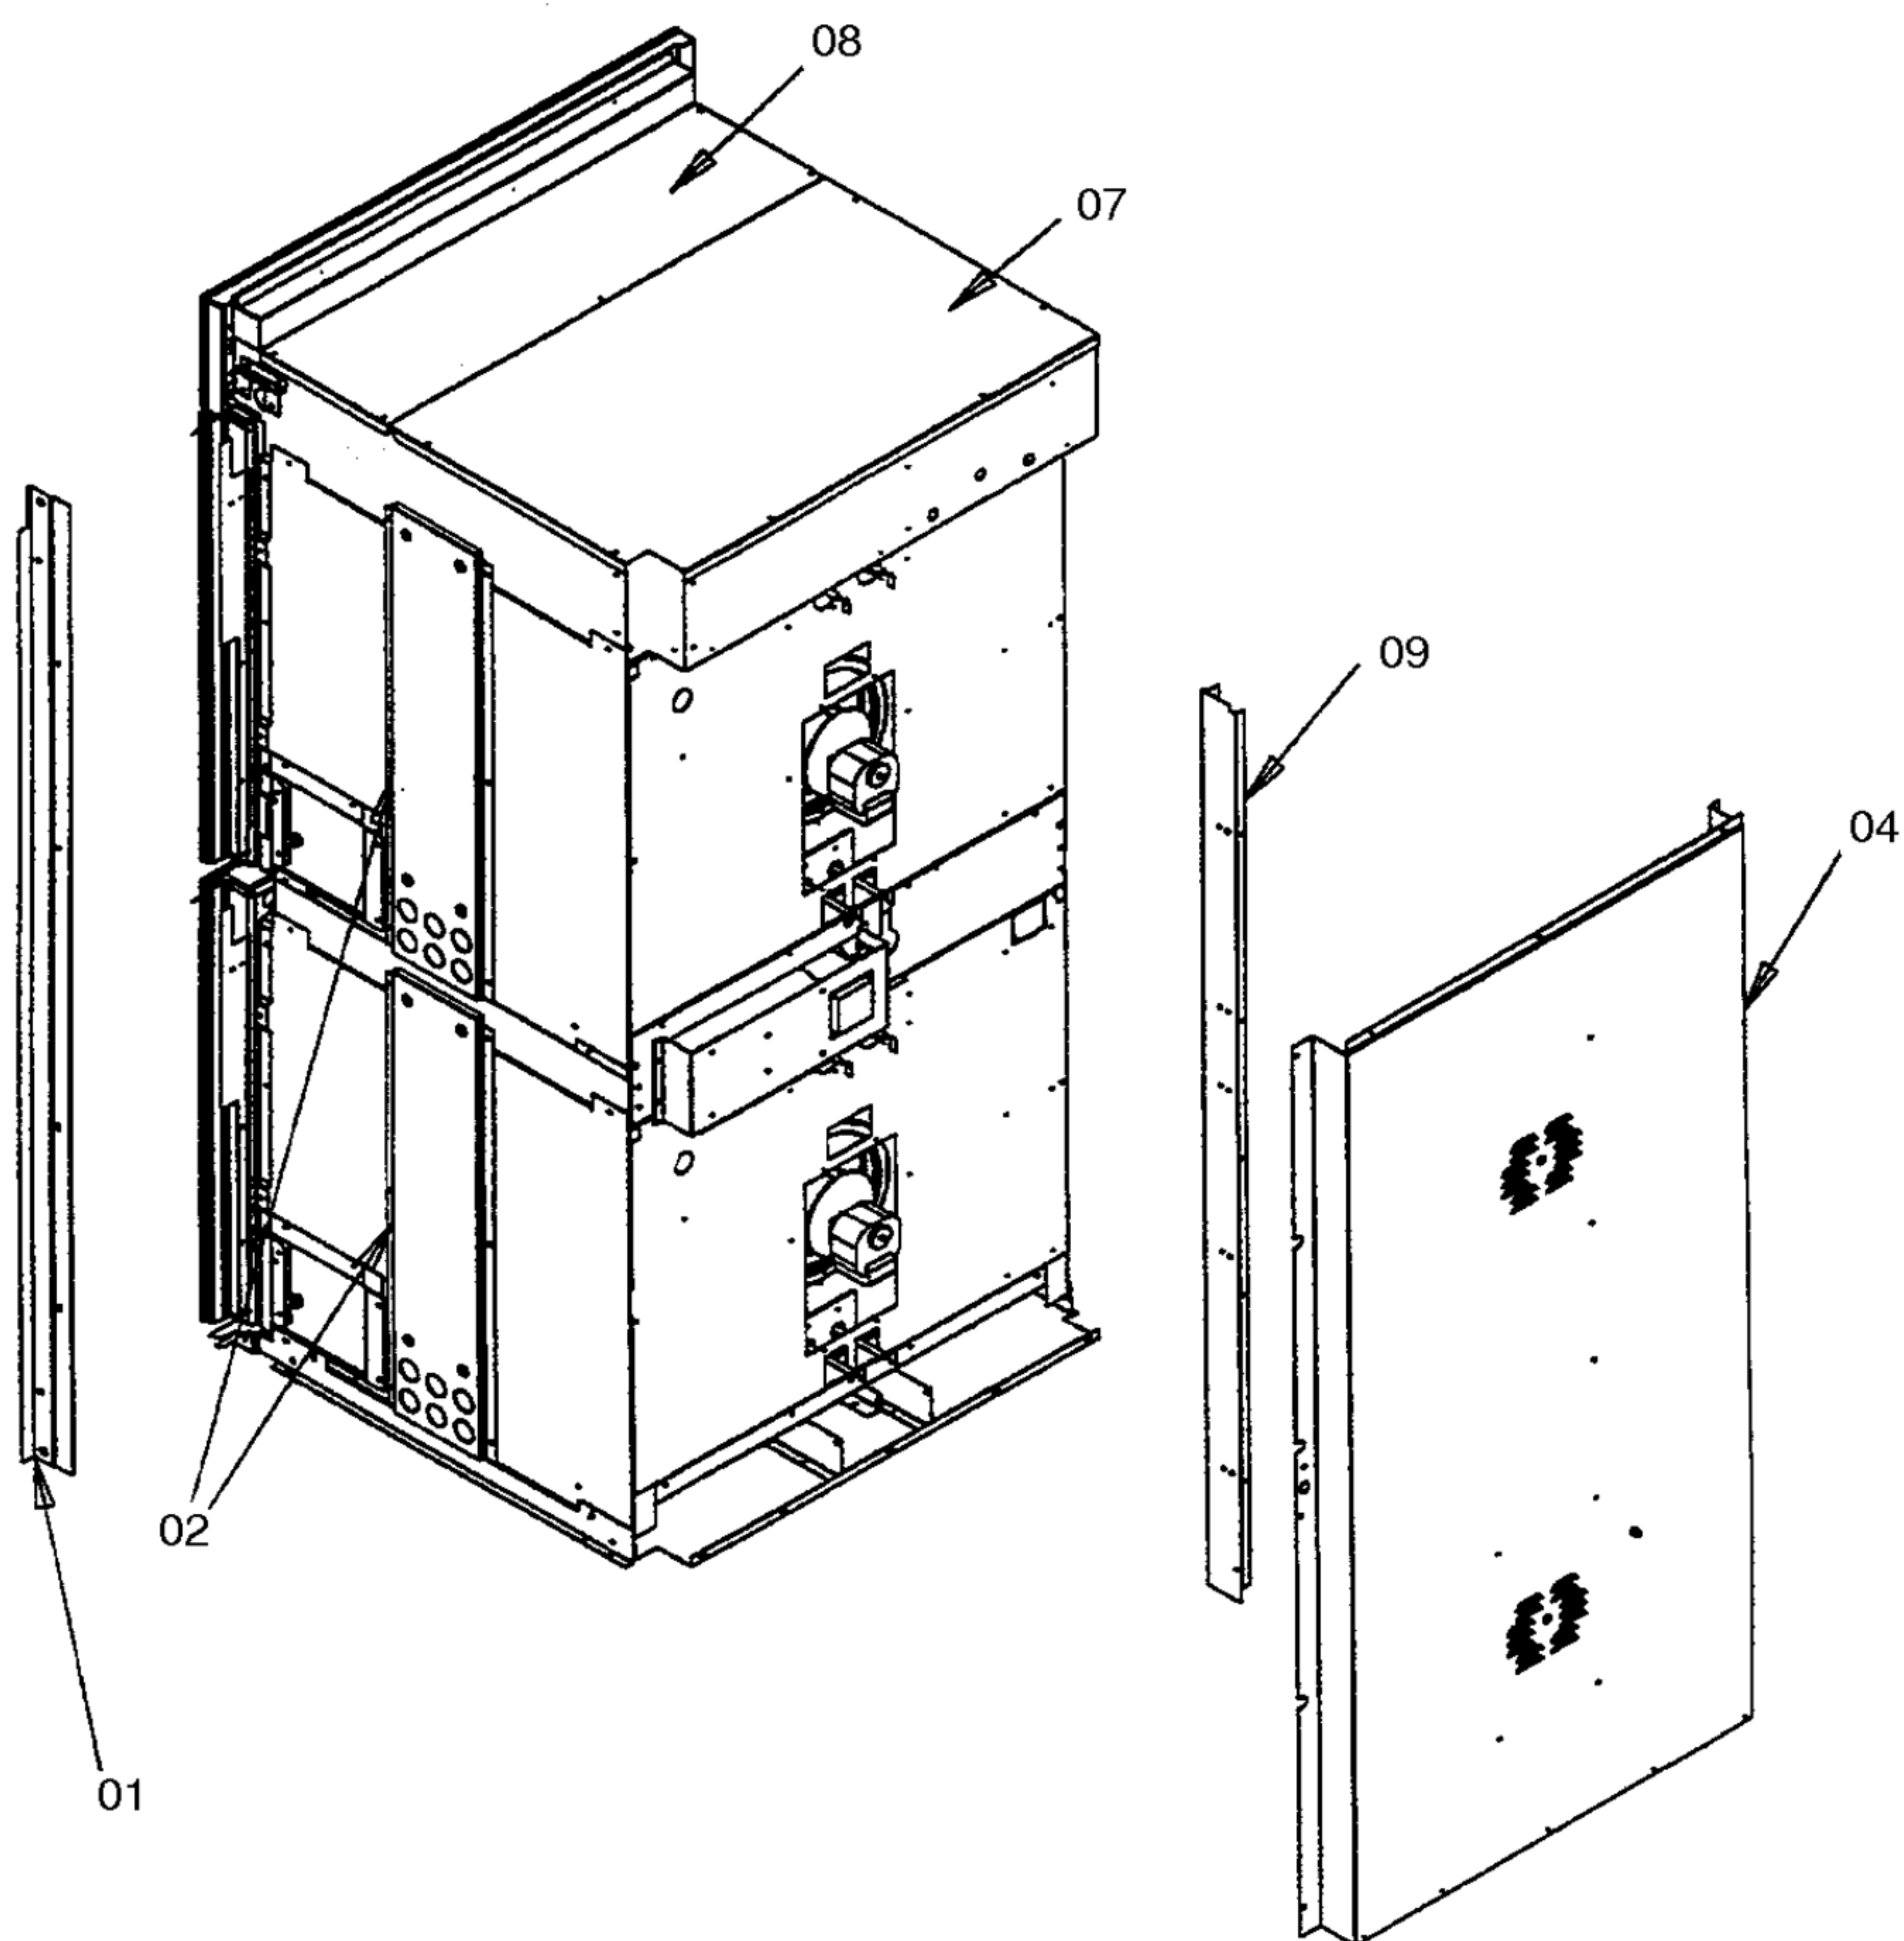


Page/Item	Part No.	Image	Part Discription
15 01	48 8397	PANEL–SIDE	TRIM, SIDE DBL S–OVEN BLA
15 02	36 8450	DUCT	DUCT, SIDE
15 04	14 2865	COVER	COVER, BACK DBL 27"
15 07	48 5975	COVER	COVER, TOP REAR 27"
15 08	14 2733	COVER	COVER, TOP FRONT 27"
15 09	36 9118	FRAME	TRIM, SIDE DBL LH WHT
* 17 01	18 9944	CABLE HARNESS	HARNESS, KEYPAD POWER
* 17 01	18 9944	CABLE HARNESS	HARNESS, KEYPAD POWER
* 17 02	18 9945	CABLE HARNESS	HARNESS, KEYPAD SIGNAL
* 17 03	18 9946	CABLE HARNESS	HARNESS, DISPLAY SIGNAL
* 17 04	18 9947	CABLE HARNESS	HARNESS, COMMUNICATION SI
* 17 05	18 9948	CABLE HARNESS	HARNESS, LATCH SGL/UPPER
* 17 06	18 9949	CABLE HARNESS	HARNESS, DLB SGL/UPR OVEN
* 17 07	18 9950	CABLE HARNESS	HARNESS, DLB LOWER OVEN
* 17 08	48 4534	CABLE HARNESS	HARNESS, MAIN SGL/UPPER O
* 17 09	48 4537	CABLE HARNESS	HARNESS, LIGHT DBL OVEN
* 17 10	48 8401	CABLE HARNESS	HARNESS, MAIN AIR DBL S–O
* 17 11	48 4536	CABLE HARNESS	HARNESS, MAIN LOWER OVEN
* 17 12	48 4537	CABLE HARNESS	HARNESS, LIGHT DBL OVEN
* 17 13	18 9953	CABLE HARNESS	HARNESS, INTERCONNECT TOU
* 17 14	18 9955	CABLE HARNESS	HARNESS, LATCH LOWER DOOR
* 17 15	48 4533	WIRE	WIRES PRSE304
* 40 01	SH–30/0005E		DIAGRAM
* 40 02	SH–30/0006E		DIAGRAM
* 50 01	RH30001E	Repair manual	

* Not illustrated

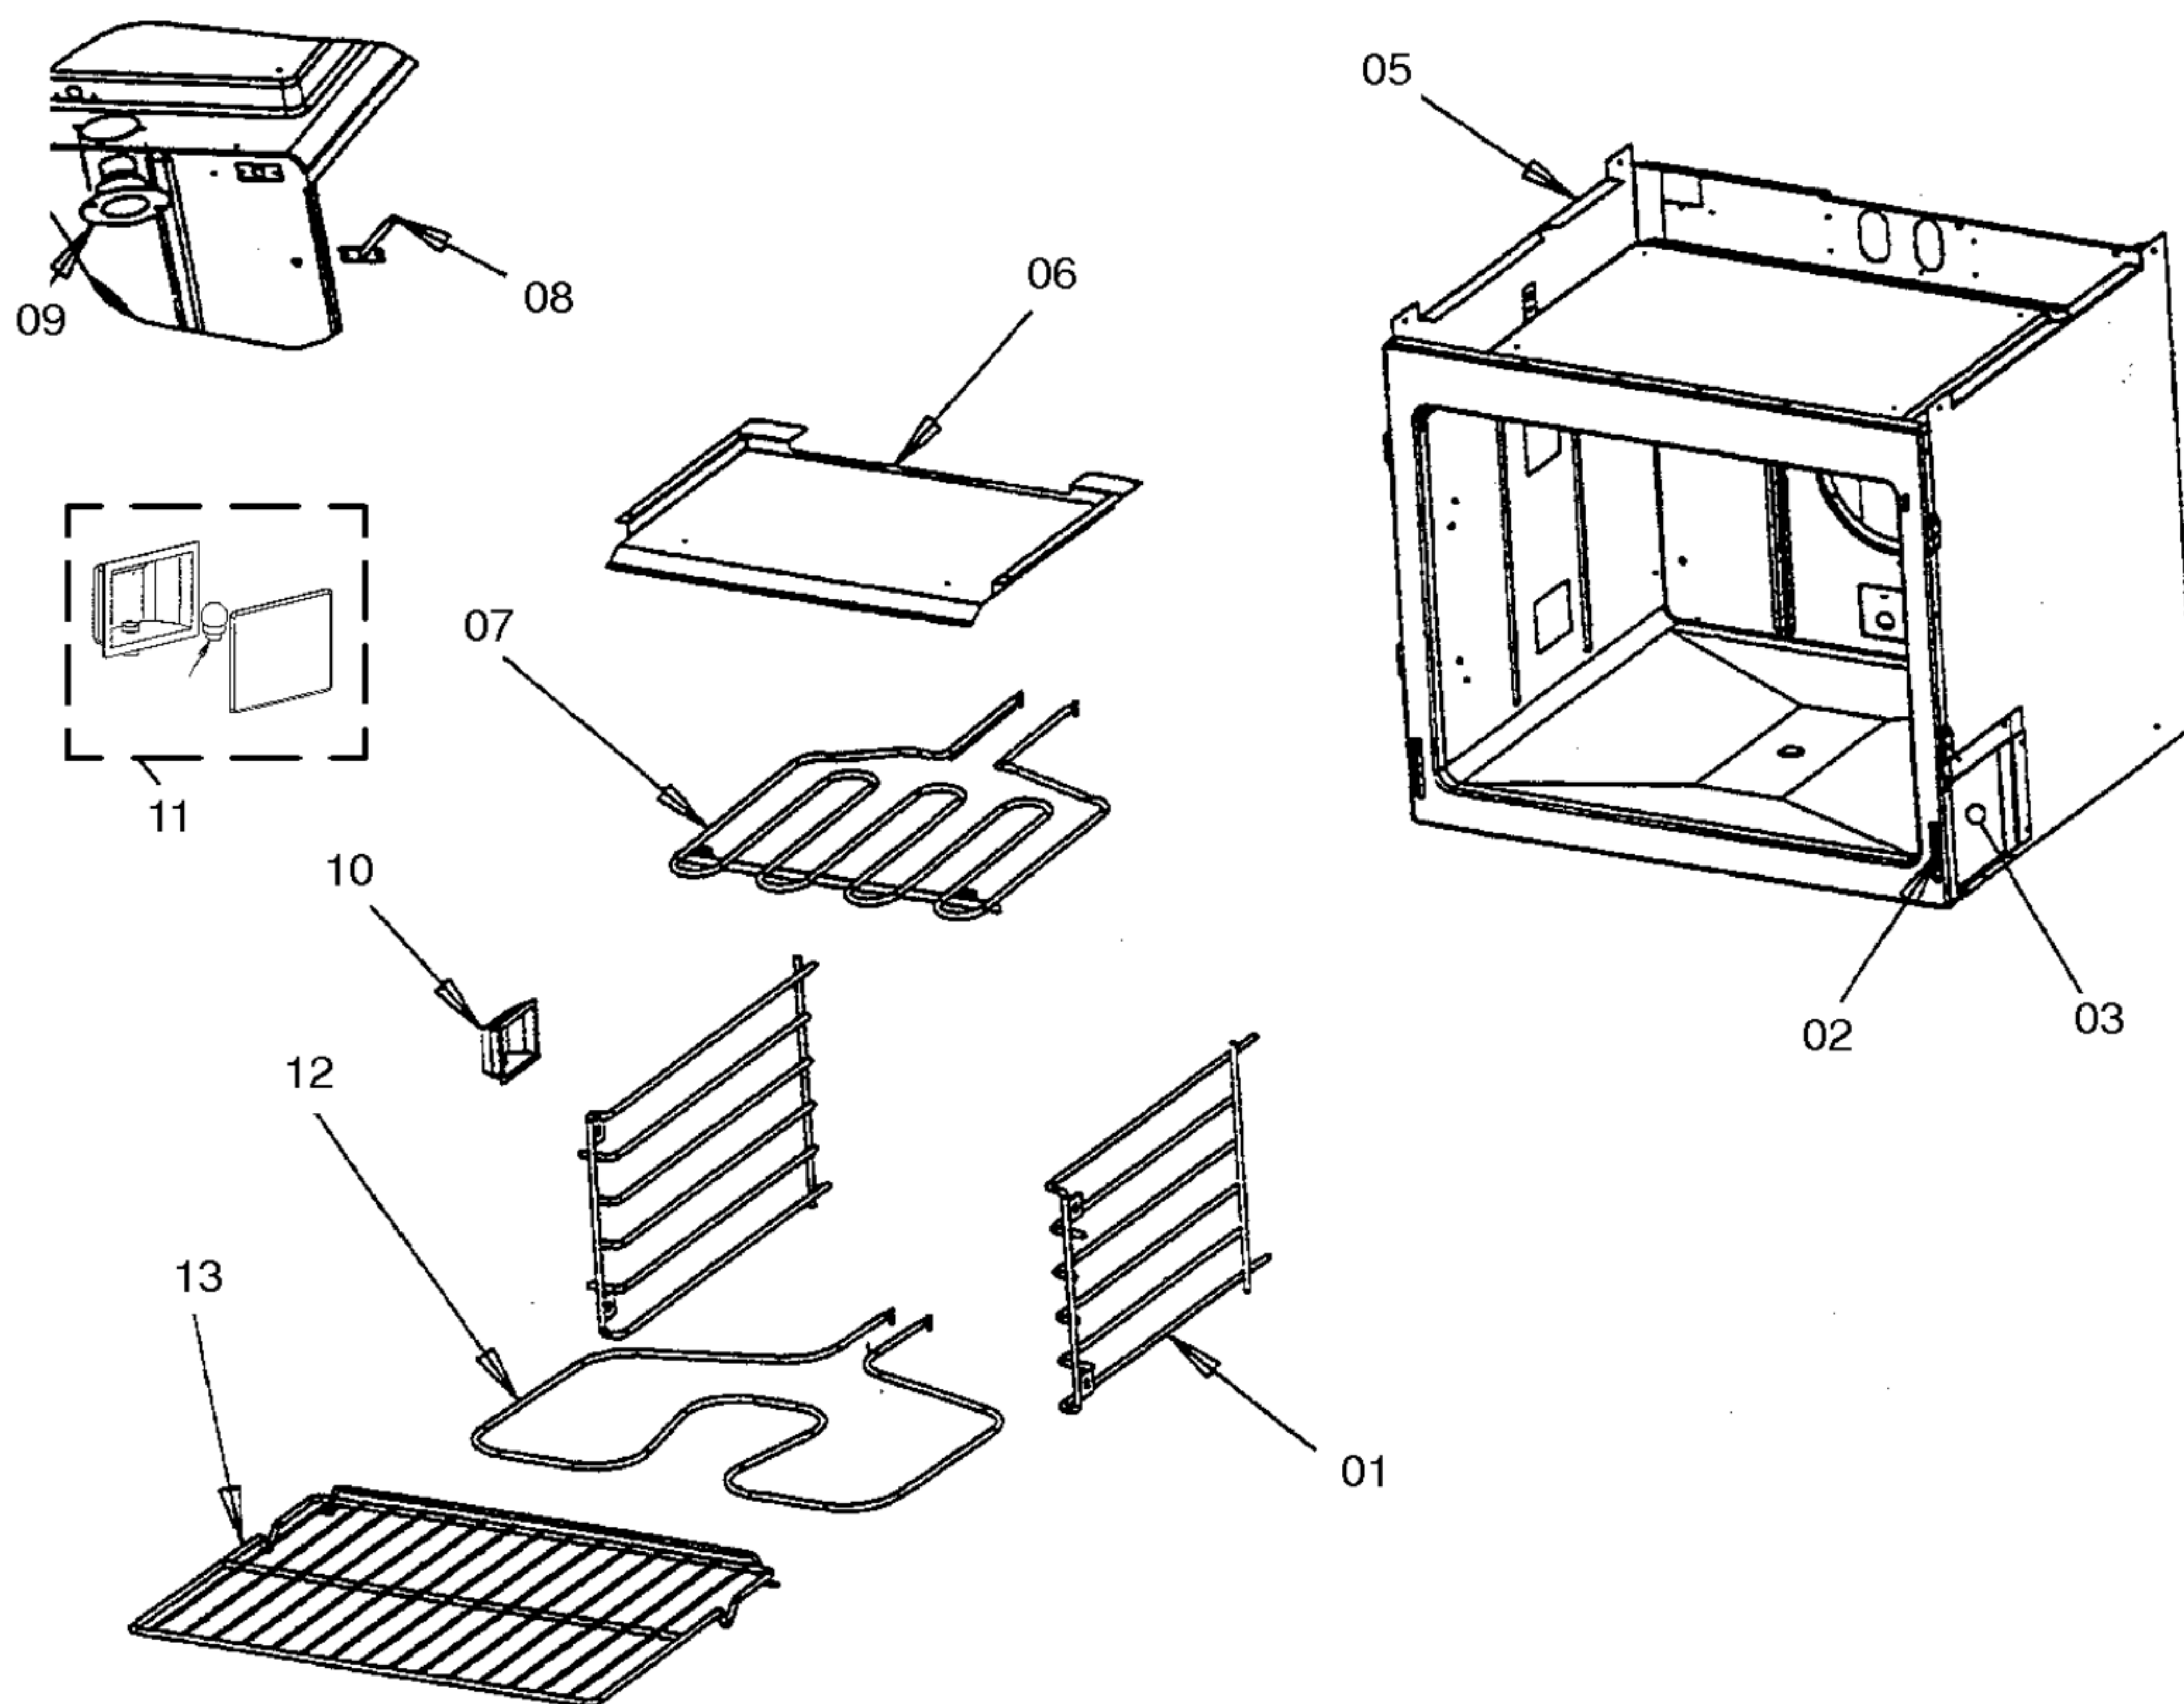


Page/Item	Part No.	Image	Part Discription
03 01	36 7553	SUPPORT	SUPPORT, RACK (NON-CONV)
03 02	41 4510	HOLDER	SUPPORT, HINGE COUNTER
03 03	48 5972	BRACKET	BRACKET, COUNTER SUPT RH
03 04	48 5973	BRACKET	BRACKET, COUNTER SUPT LH
03 05	23 8829	OVEN	MODULE, OVEN CAN 27"NON-C
03 06	36 8265	REFLECTOR	REFLECTOR
03 07	36 7647	HEATER-ELEMENT	ELEMENT, BROIL
03 08	41 4152	TEMPERATURE SENSOR	THERMAL SENSOR KIT
03 09	41 1220	catalyzer	CATALYST
03 10	41 4512	LAMP HOUSING	LAMP, OVEN
03 11	41 5813	LAMP-HALOGEN	BULB, HALOGEN 10WATT
03 12	36 7649	HEATER-ELEMENT	ELEMENT, BAKE 27
03 13	36 8828	SHELF	RACK, 27"S (NON-CONVECT)

* Not illustrated

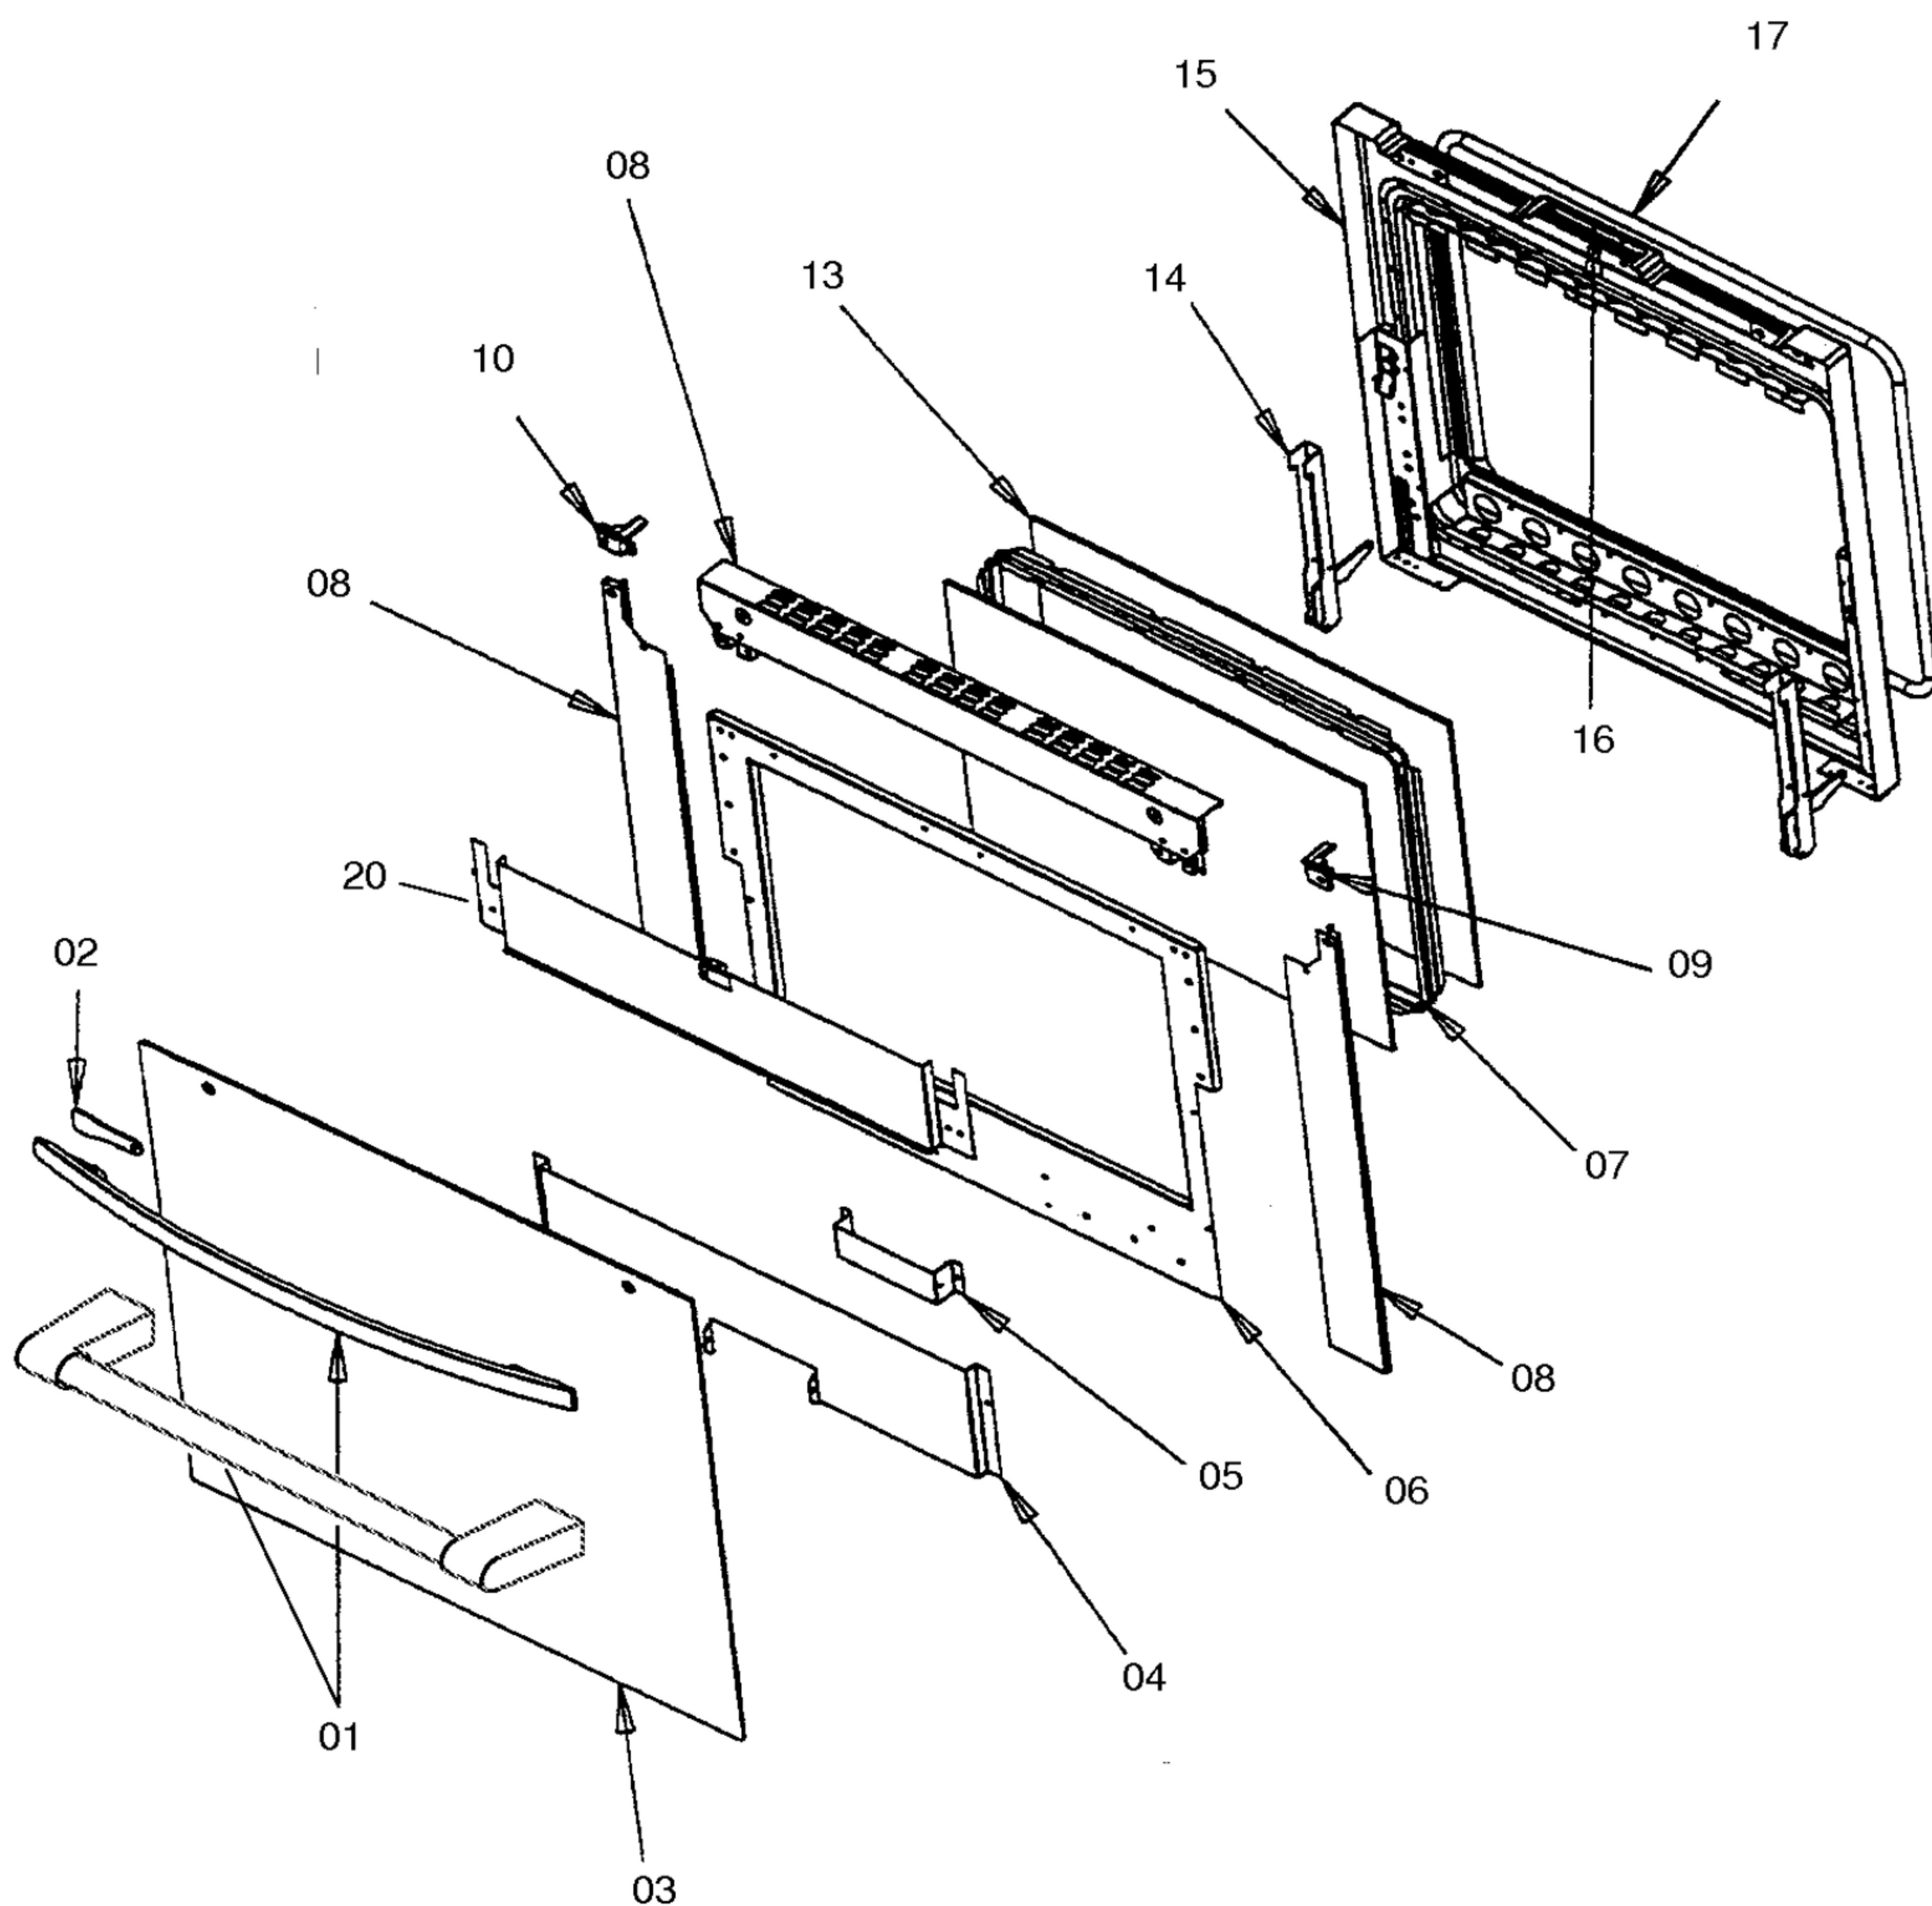


Page/Item	Part No.	Image	Part Discription
05 01	41 4392	HANDLE	HANDLE, DOOR 27" WHT
05 01	48 6867	HANDLE	HANDLE, DOOR 27" BLK
05 01	48 6002	HANDLE	ASSEMBLED 27" PRO HANDLE
05 02	41 4817	SPACER	SPACER, DOOR HANDLE
05 03	14 2737	GLASS PANEL	ASSY, DOOR GLASS 27"WHT
05 03	14 2830	GLASS PANEL	ASSY, DOOR GLASS 27"BLK
05 03	14 2757	GLASS PANEL	ASSY, DR GLASS & SS PNL 2
05 03	23 9017	DOOR-OUTER	KIT, DOOR PANEL 27" SS (P
05 04	48 6000	AIR CHANNEL	BAFFLE, DOOR LWR 27" BLK
05 05	41 3120	BRACKET	BRACKET, BTM GLASS SUPT
05 06	36 8287	INSULATING PART	COVER, DR INSULATION 27"B
05 07	36 9152	SPACER	SPACER, INNER WINDOW
05 09	41 4390	COVER	ENDCAP, DR GLASS SUPT RH
05 10	41 4391	COVER	ENDCAP, DR GLASS SUPT LH
05 12	49 0522	FIXING KIT	Kit,Door Glass Support BL
05 13	21 9357	GLASS PANEL	GLASS,INNER WINDOW 4MM 2S
05 14	48 7747	HINGE	HINGE, DOOR (34.5 lbs.)
05 14	48 7746	HINGE	HINGE, DOOR (37.5 lbs.)
05 14	41 4511	HINGE	HINGE, DOOR (40.0 lbs.)
05 15	47 0537	DOOR-INNER	DOOR, LINER W/STRIKE ASSY
05 16	41 2838	LOCK	STRIKE, DOOR (BLK OXIDE)
05 17	48 6768	SEAL-DOOR	GASKET, 27" OVEN DOOR KIT
* 05 18	14 2740	DOOR	DOOR ASSY, S/SC/SCD 27" W
* 05 18	14 2739	DOOR	DOOR ASSY, S/SC/SCD 27"BL
* 05 18	14 2741	DOOR	DOOR ASSY, S/SC/SCD 27" S
05 20	48 5992	AIR CHANNEL	BAFFLE, DOOR AIR UPPER 27

* Not illustrated

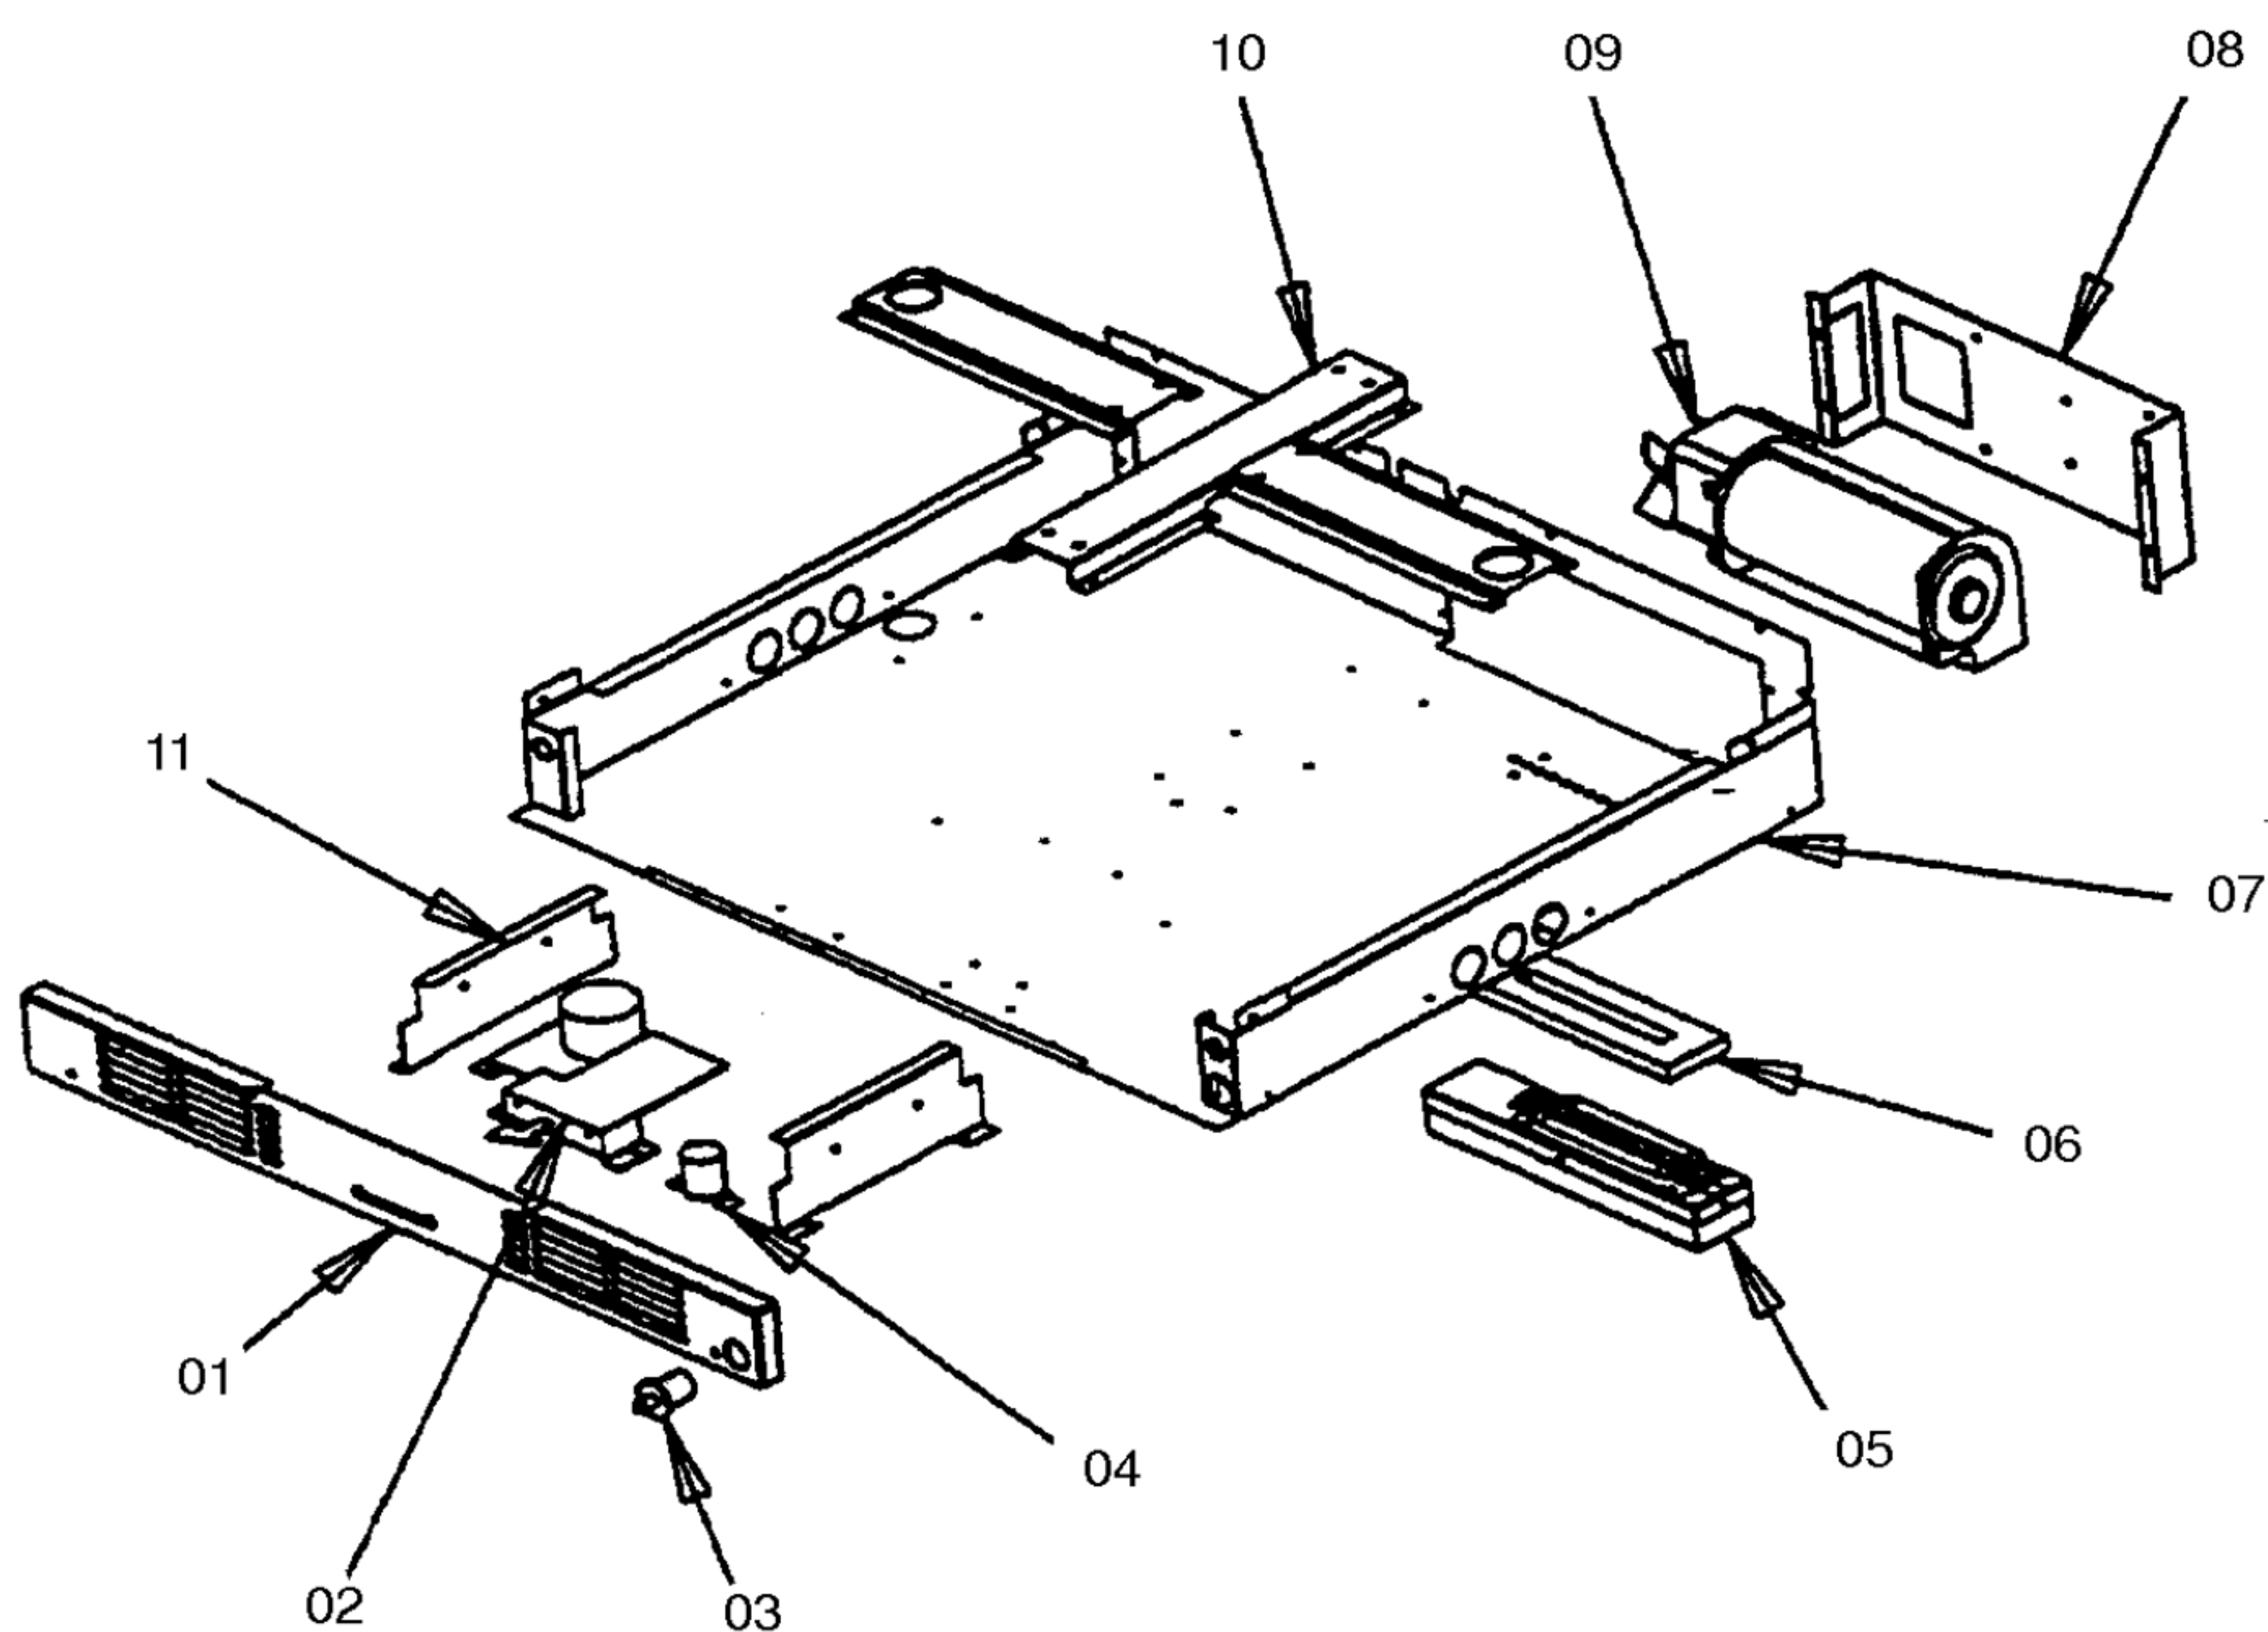

Page/Item	Part No.	Image	Part Discription
07 01	49 0781	FIXING KIT	Kit, Mid-Latch Plate 27"
07 02	48 9102	LOCK-MECHANICAL	latch assy, motorized
07 03	41 5422	SWITCH	SWITCH, SHUTTER INTERLOCK
07 04	41 4633	FUSE-THERMAL	HTC M2
07 05	41 3567	DUCT	CHANNEL, MID VENT ASSY
07 06	48 6004	INSULATING PART	INSULATION, VENT
07 07	36 8271	FRAME	BODY, MID-PLENUM 27
07 08	48 5978	BRACKET	BRACKET, BLWR MTG LOWER
07 09	43 1492	INSTALLATION SET	KIT, BLOWER CROSSFLOW
07 10	36 8285	COVER	COVER, LATCH WIRE MID
07 11	41 3118	PLATE	SHIELD, LATCH
* 07 12	41 1059	SUPPORT	BUMPER, DOOR
* 07 13	41 1007	STUD	BALL STUD
* 07 14	41 7550	SPRING	Spring, catch

* Not illustrated

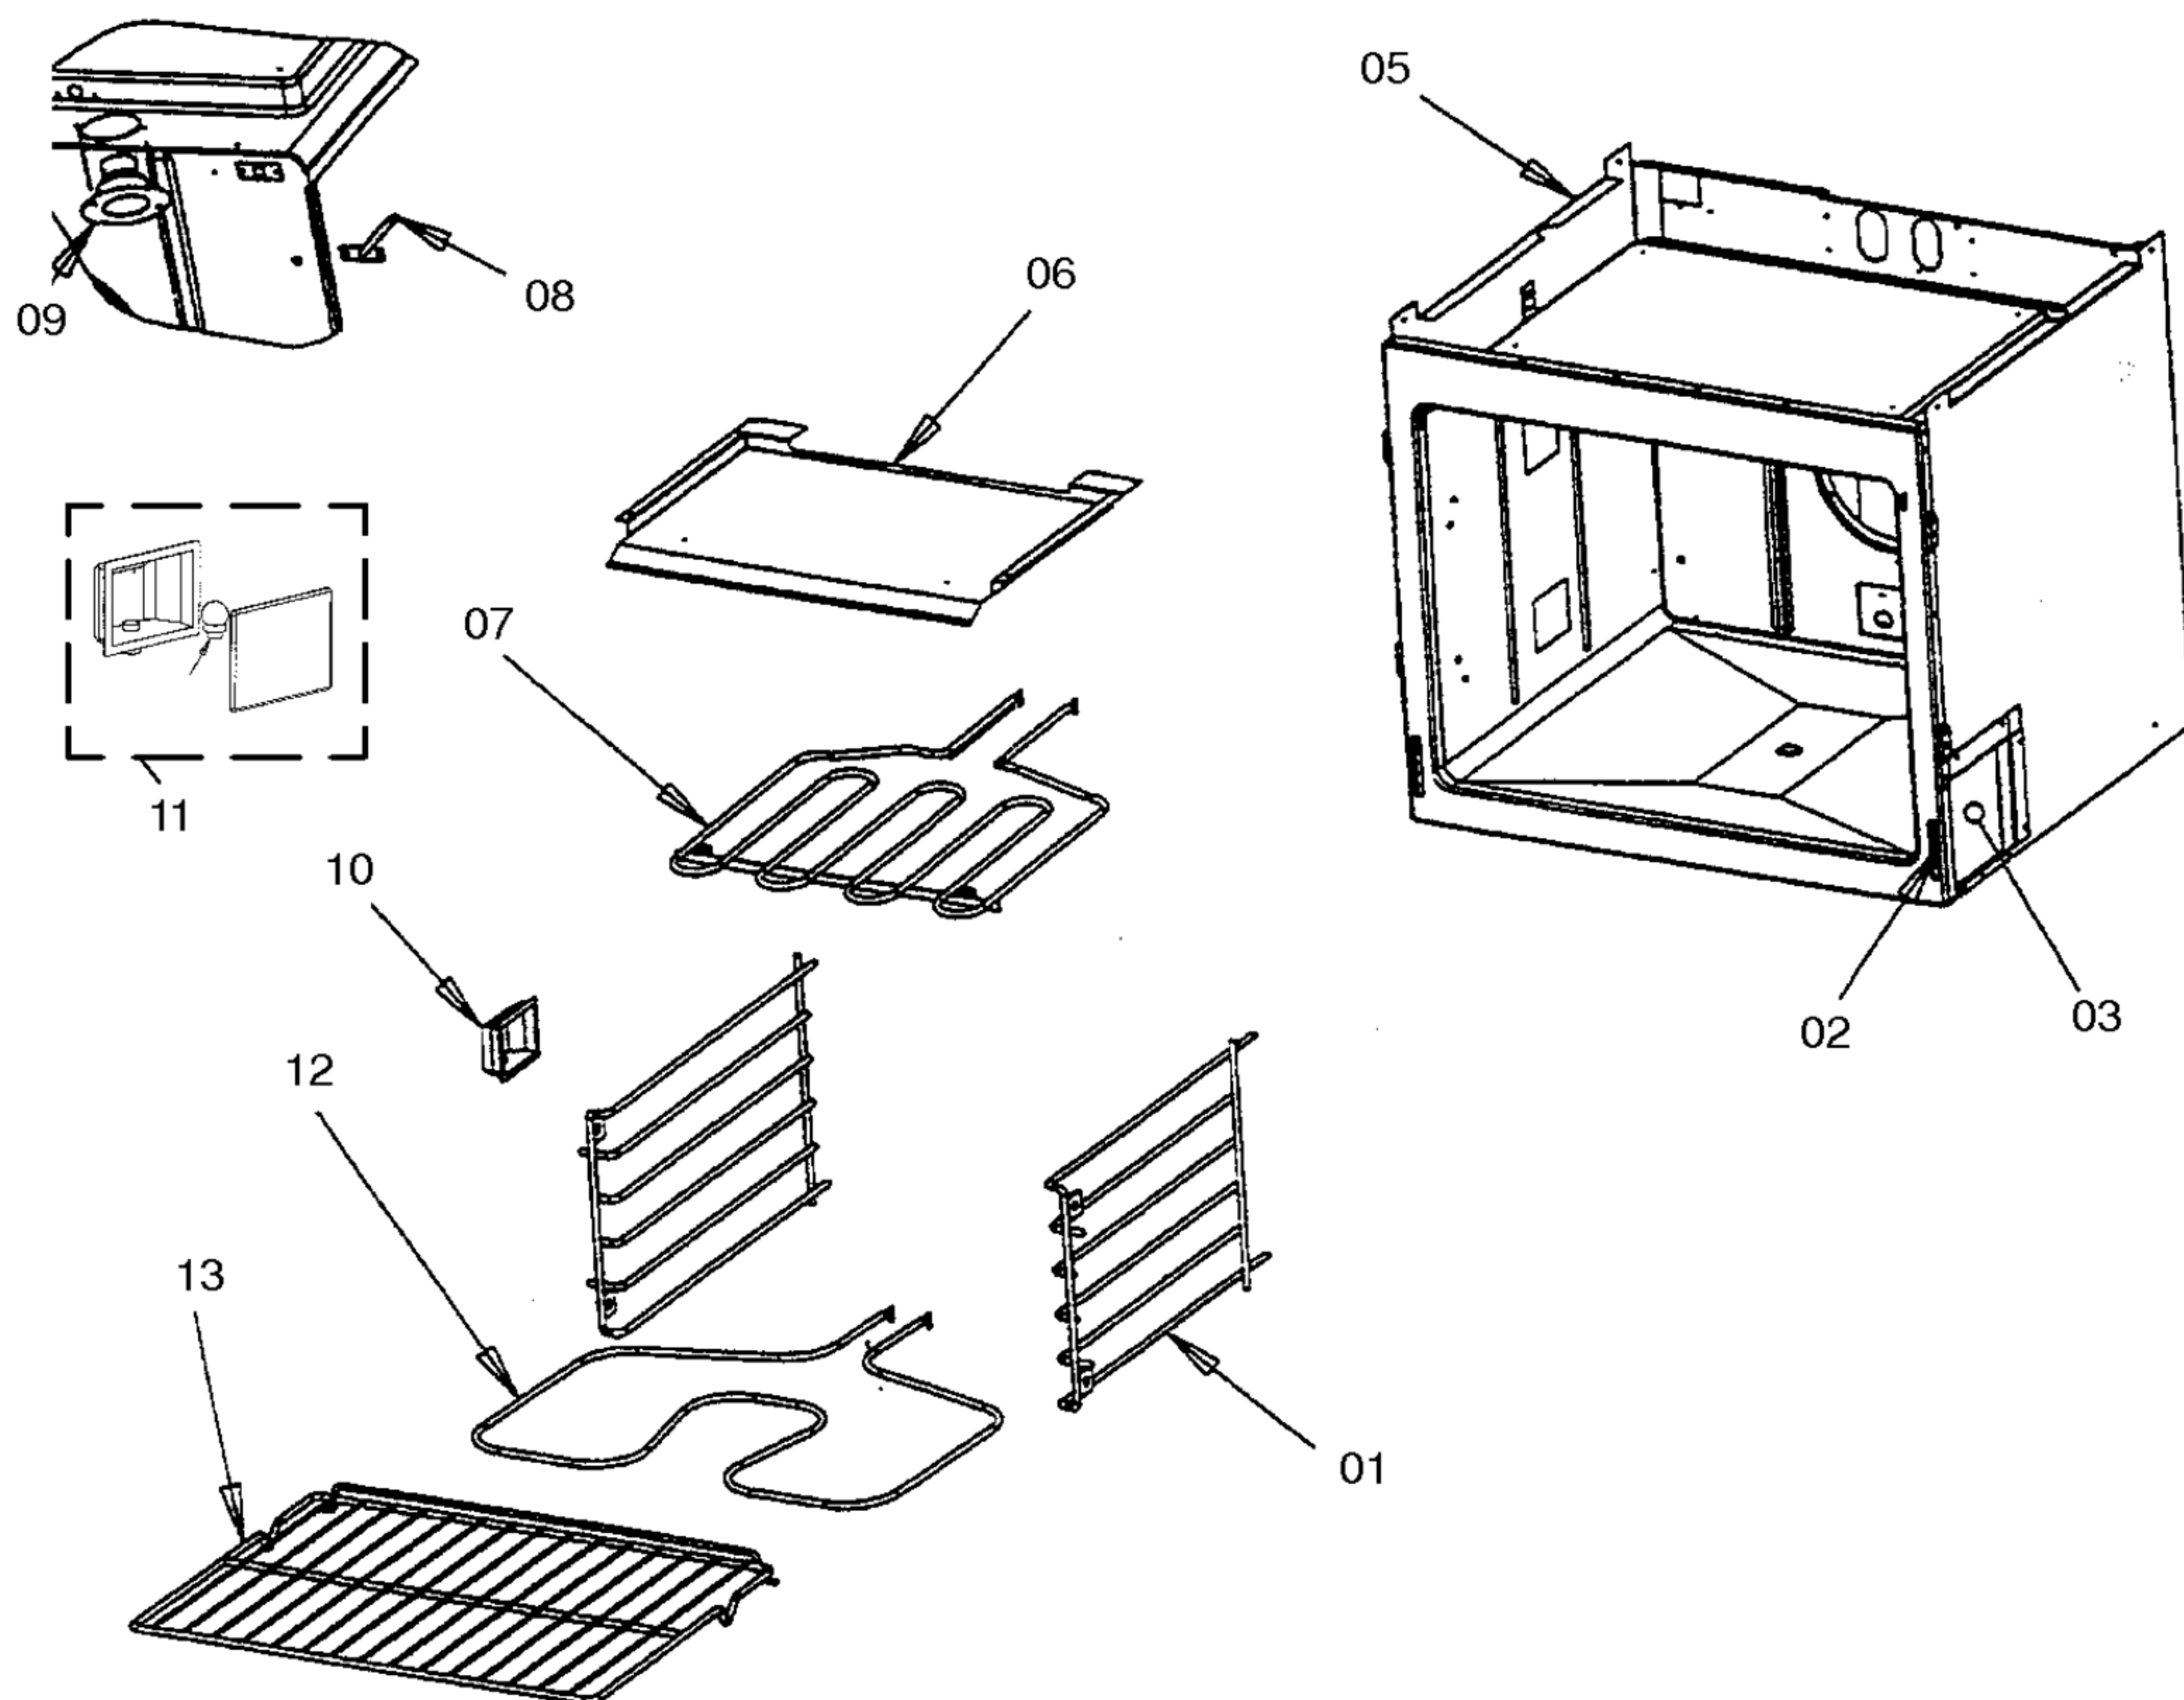

Page/Item	Part No.	Image	Part Discription
09 01	36 8828	SHELF	RACK, 27"S (NON-CONVECT)
09 02	36 7649	HEATER-ELEMENT	ELEMENT, BAKE 27
09 03	36 7553	SUPPORT	SUPPORT, RACK (NON-CONV)
09 05	36 7647	HEATER-ELEMENT	ELEMENT, BROIL
09 06	36 8265	REFLECTOR	REFLECTOR
09 08	41 4510	HOLDER	SUPPORT, HINGE COUNTER
09 09	48 5972	BRACKET	BRACKET, COUNTER SUPT RH
09 10	23 8829	OVEN	MODULE, OVEN CAN 27"NON-C
09 17	41 4152	TEMPERATURE SENSOR	THERMAL SENSOR KIT
09 18	41 1220	catalyzer	CATALYST
09 19	41 4512	LAMP HOUSING	LAMP, OVEN
09 21	48 5973	BRACKET	BRACKET, COUNTER SUPT LH

* Not illustrated