



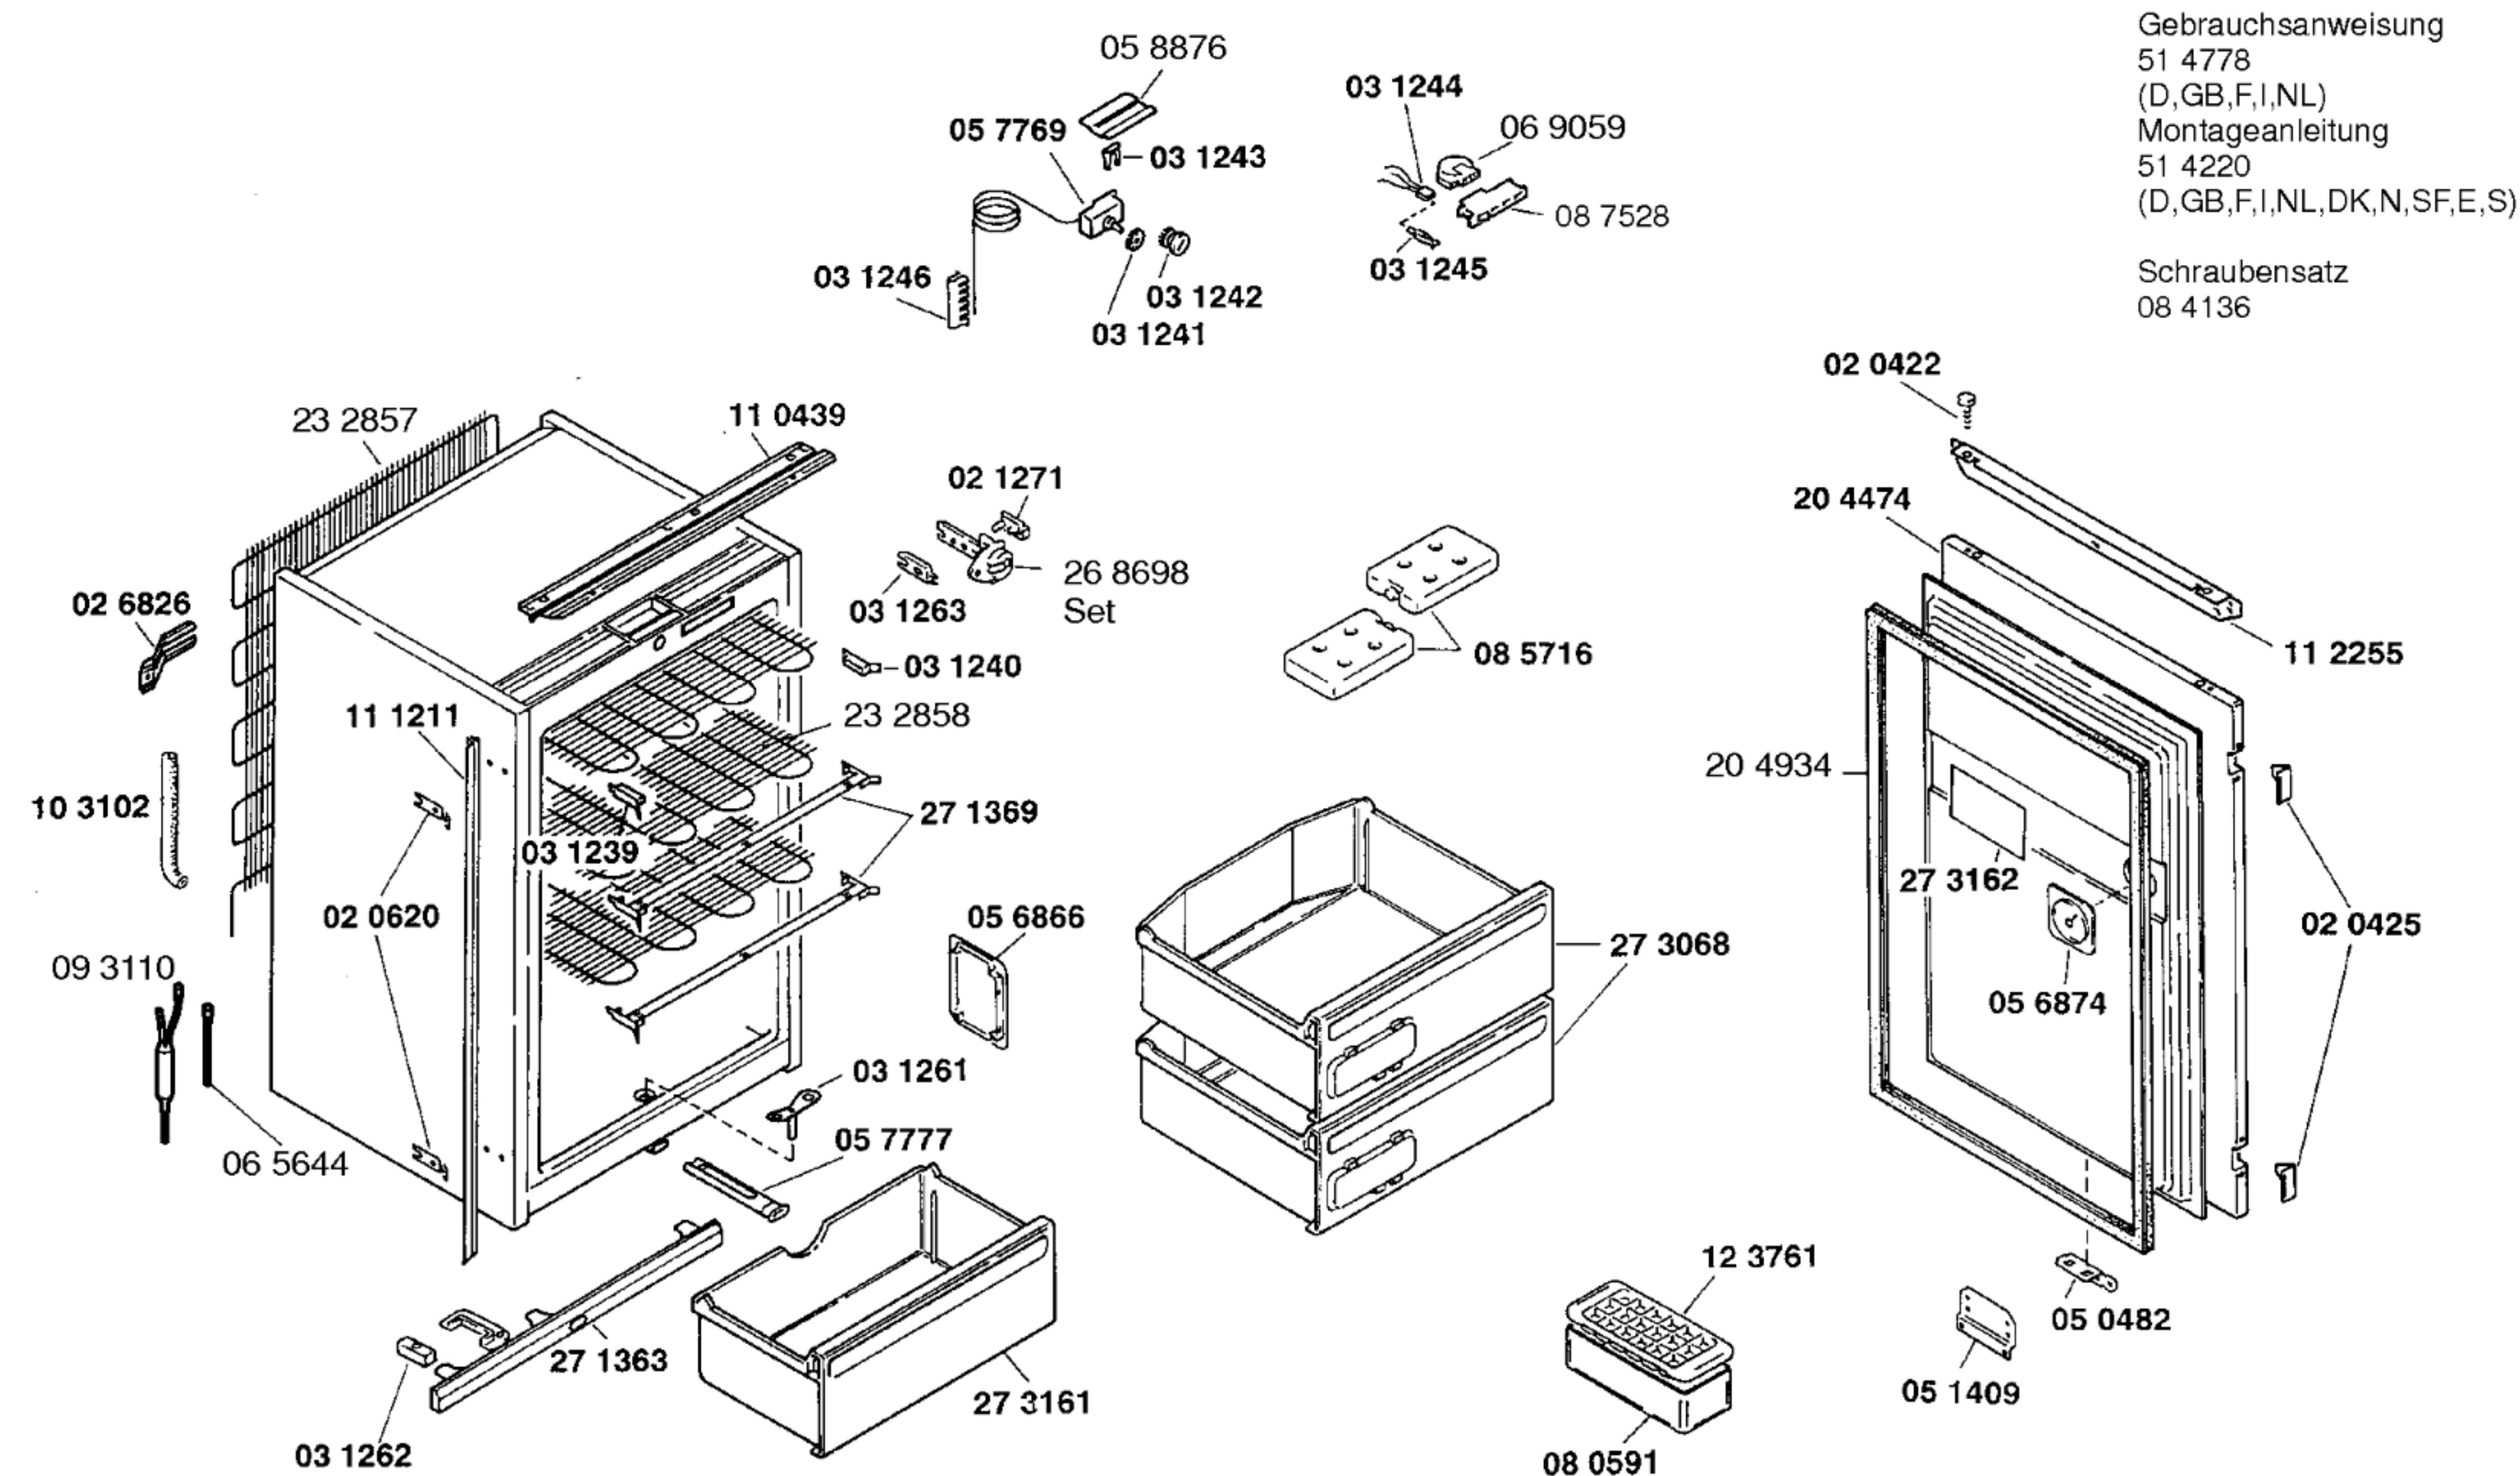

Gebrauchsanweisung
51 4778
(D,GB,F,I,NL)
Montageanleitung
51 4220
(D,GB,F,I,NL,DK,N,SF,E,S)

Schraubensatz
08 4136

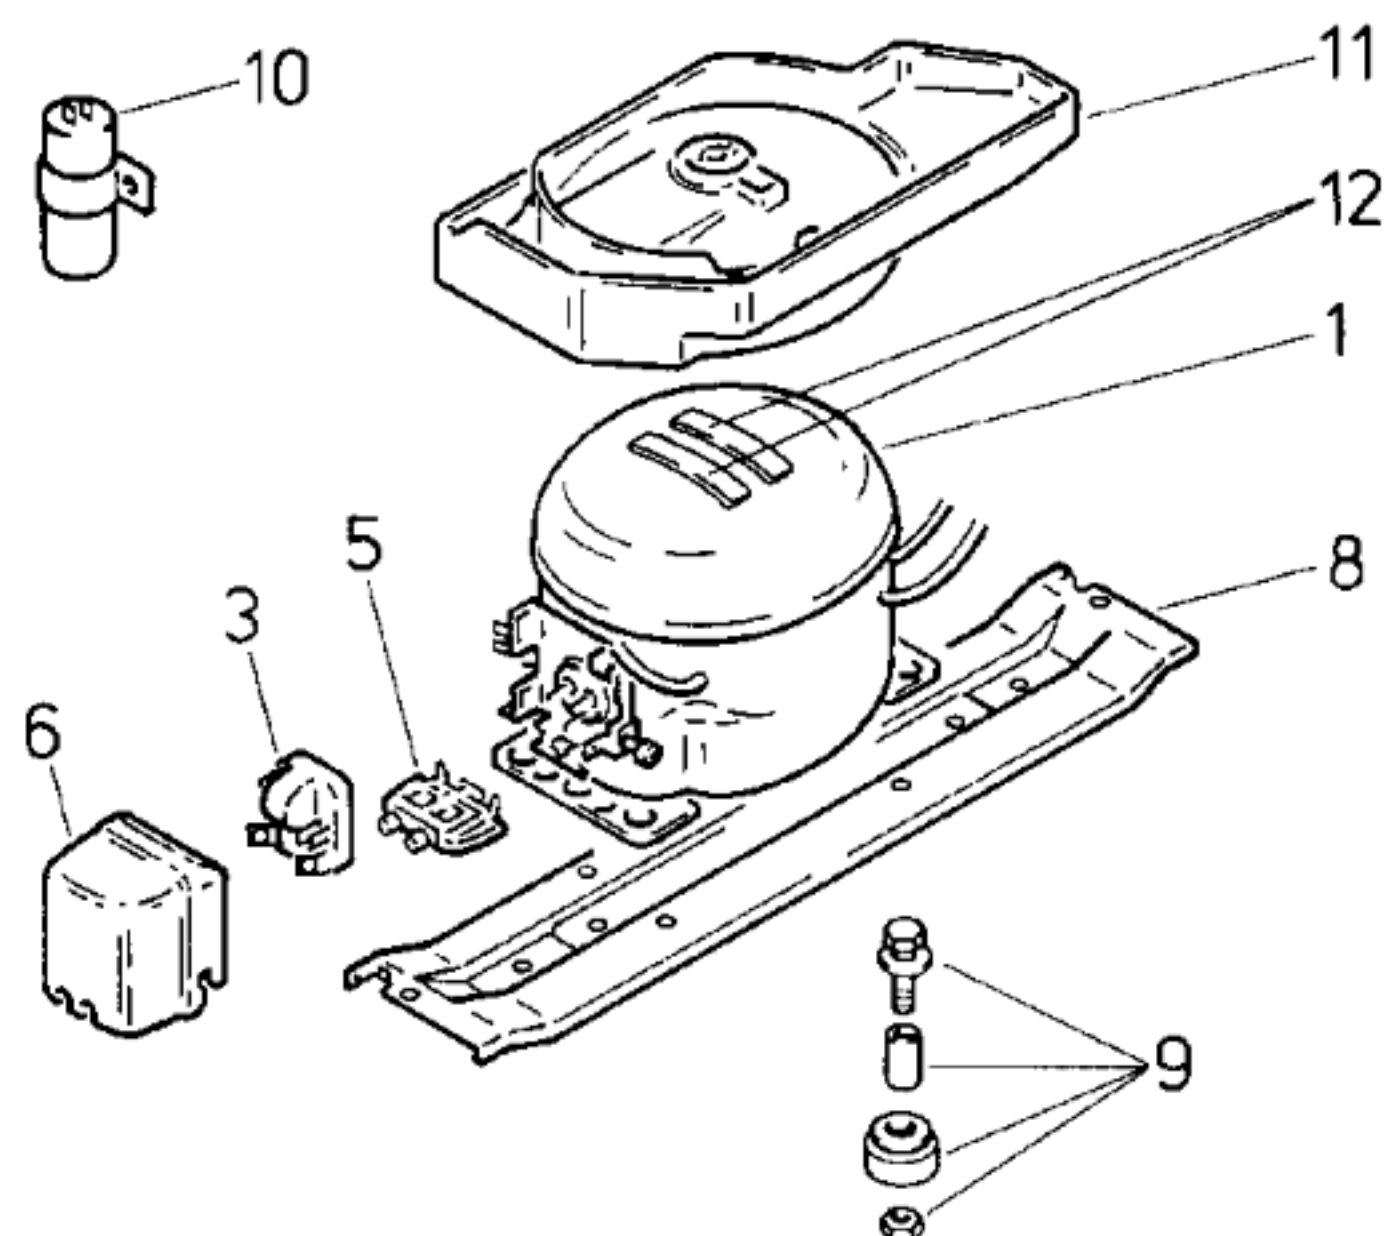

Pos.	Danfoss		
	TLES 5 F		
1	14 1242		
2			
3	05 9191		
4			
5	02 7310		
6	15 1072		
7			
8	27 1375		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 5 F	
Förderleistung/Delivery/Débit		l/h	914
Anlaufstrom/Starting current/Cour de démarrage		A	4,0
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	18,9
		Hi/aux Ω	15,3
Temp.-Regler/Thermostat		WHF	
Typ/Type		TF 57 SF2	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/		°C	-25 -17
Valeurs de commutation		„ein“	-33 -23
		„aus“	-19,5 -13
		(„abtauen“ od.)	„alarm“
Füllmenge/Fill.quantity/Charge		R134a g	110
Anschlußwert/Conn.load/Puiss. connectée		W	110
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance		Ω	
Leistung/Power/Puissance		W	
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance		Ω	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance		Ω	
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance		Ω	
Spannung/Voltage/Tension		V	