 


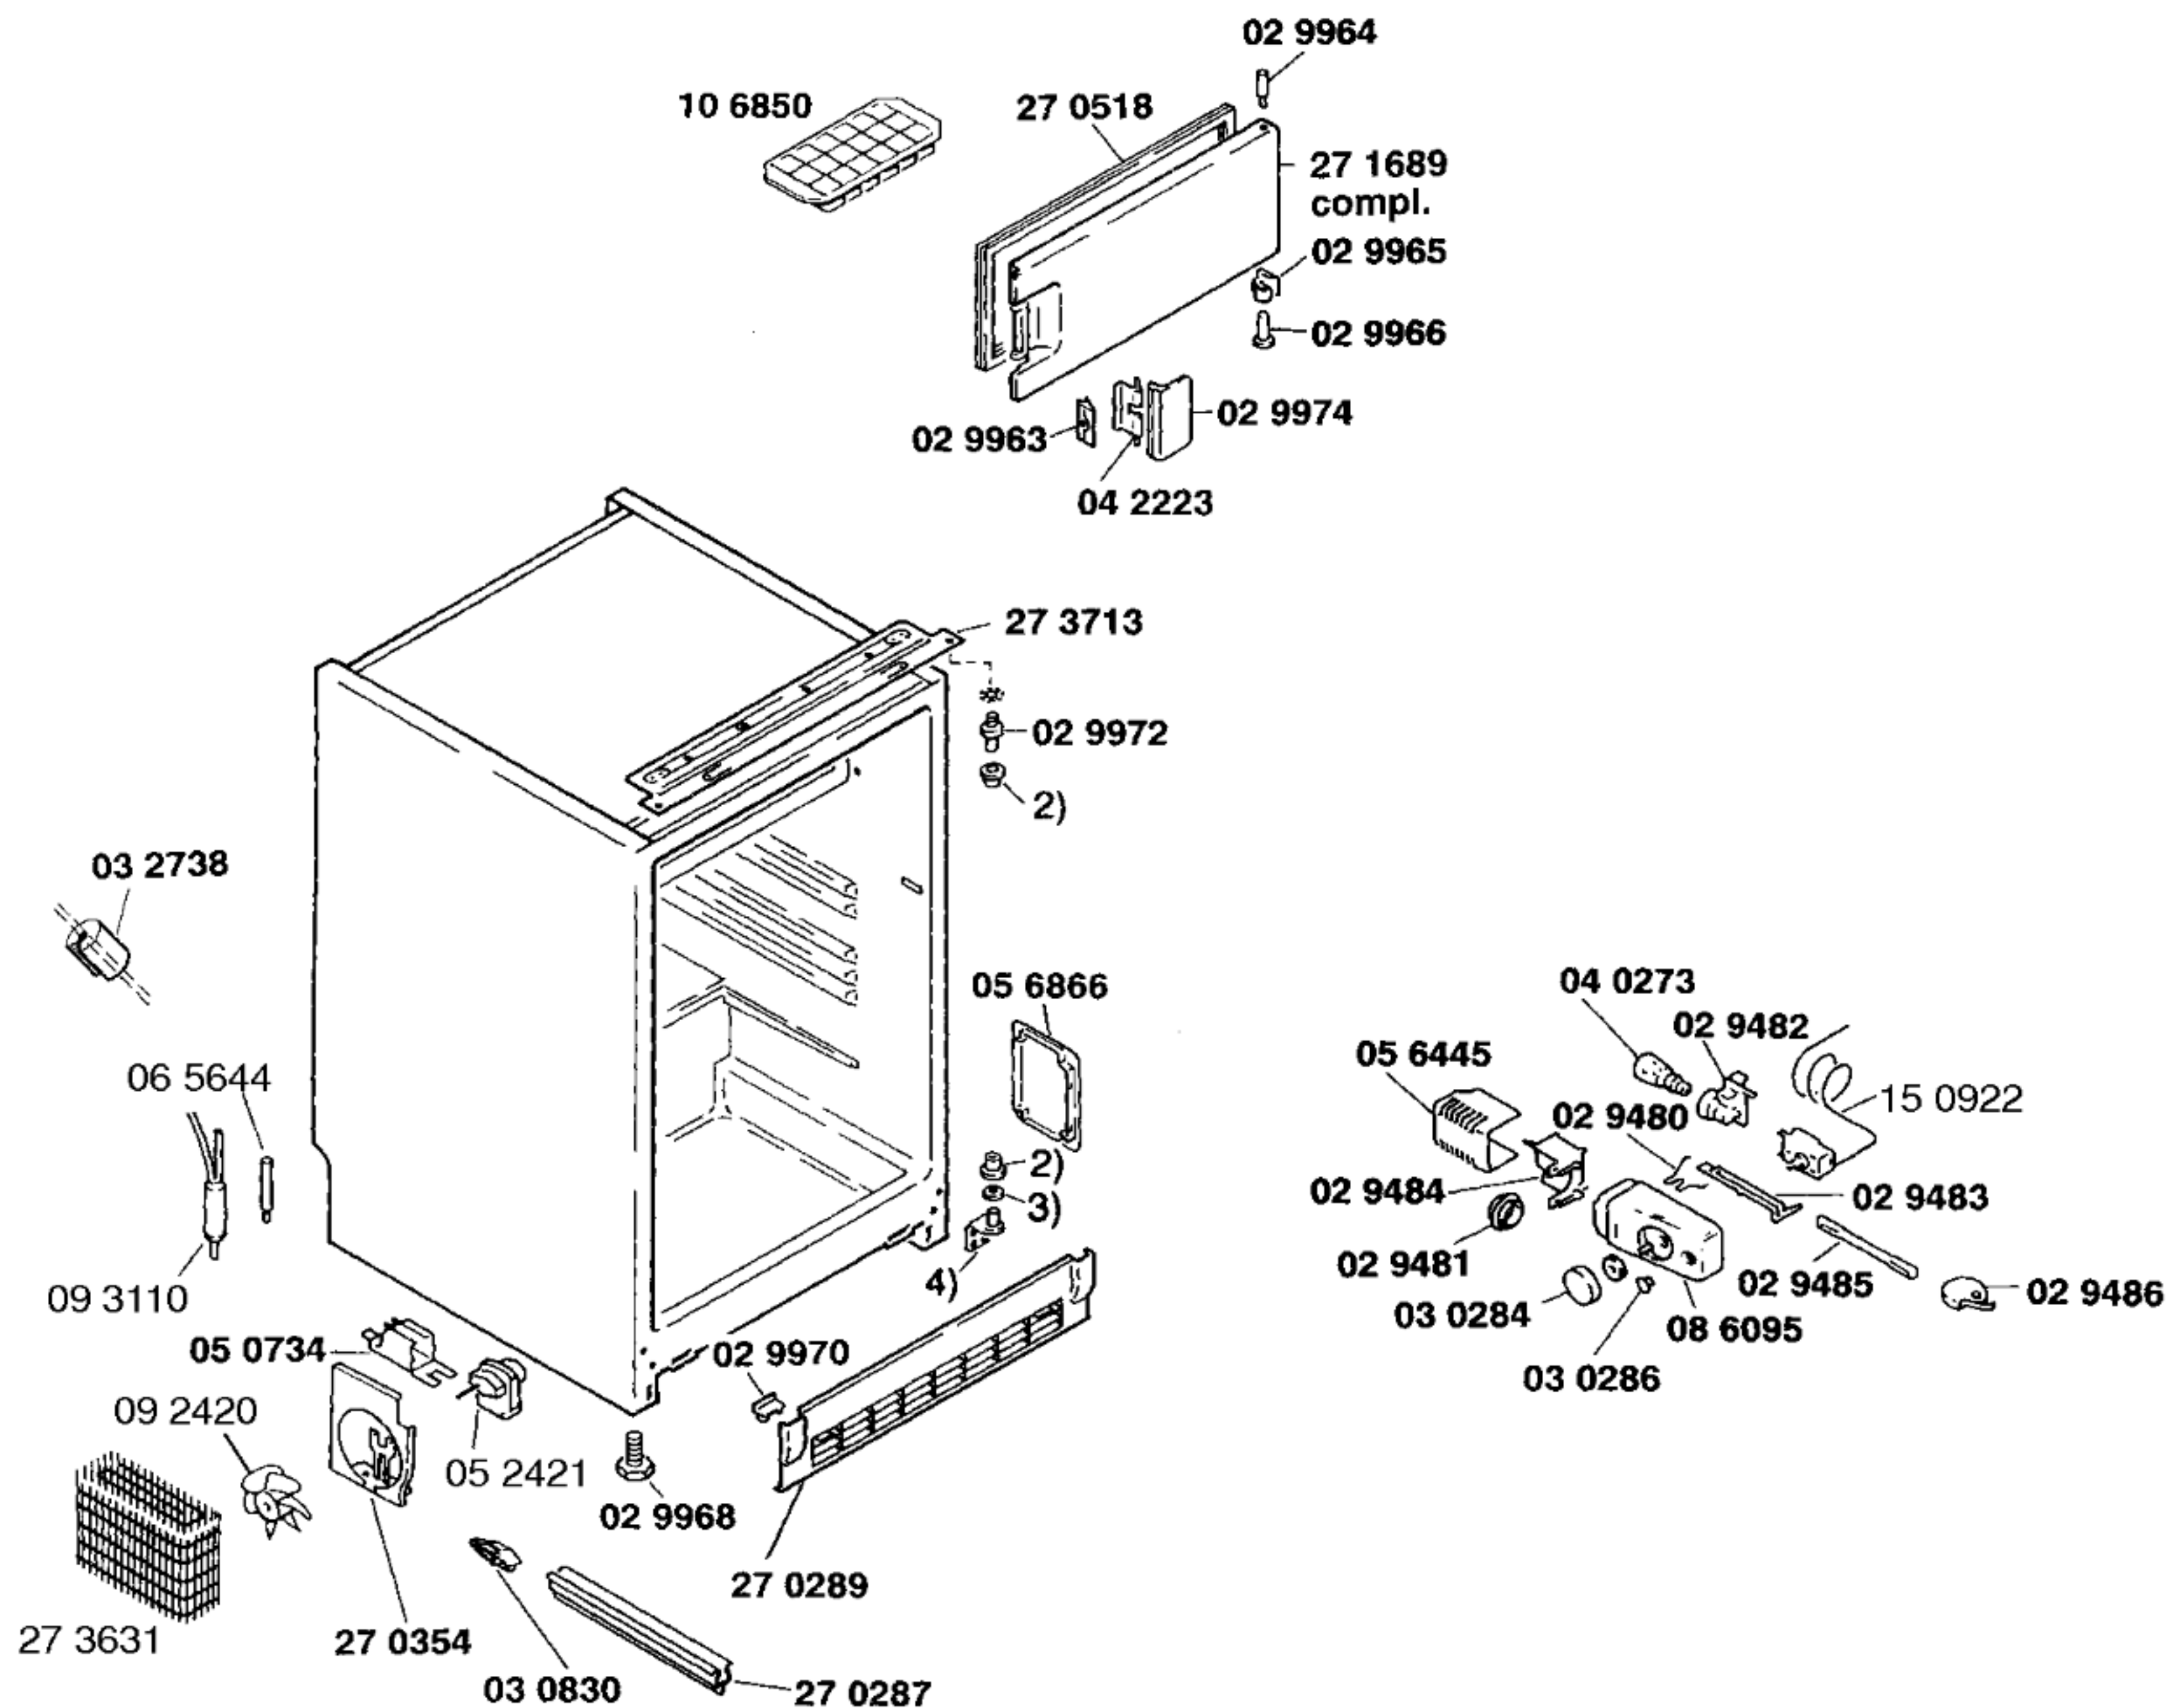

51 4331
Gebrauchsanweisung
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

51 4009
Montageanweisung
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

2) 01 9257

 
3) 02 0605

4) 02 9971


Zubehör:

Dekorrahmen
Z4110A1,Alu
Z4110W1,weiss

Sockel
Z4510X0

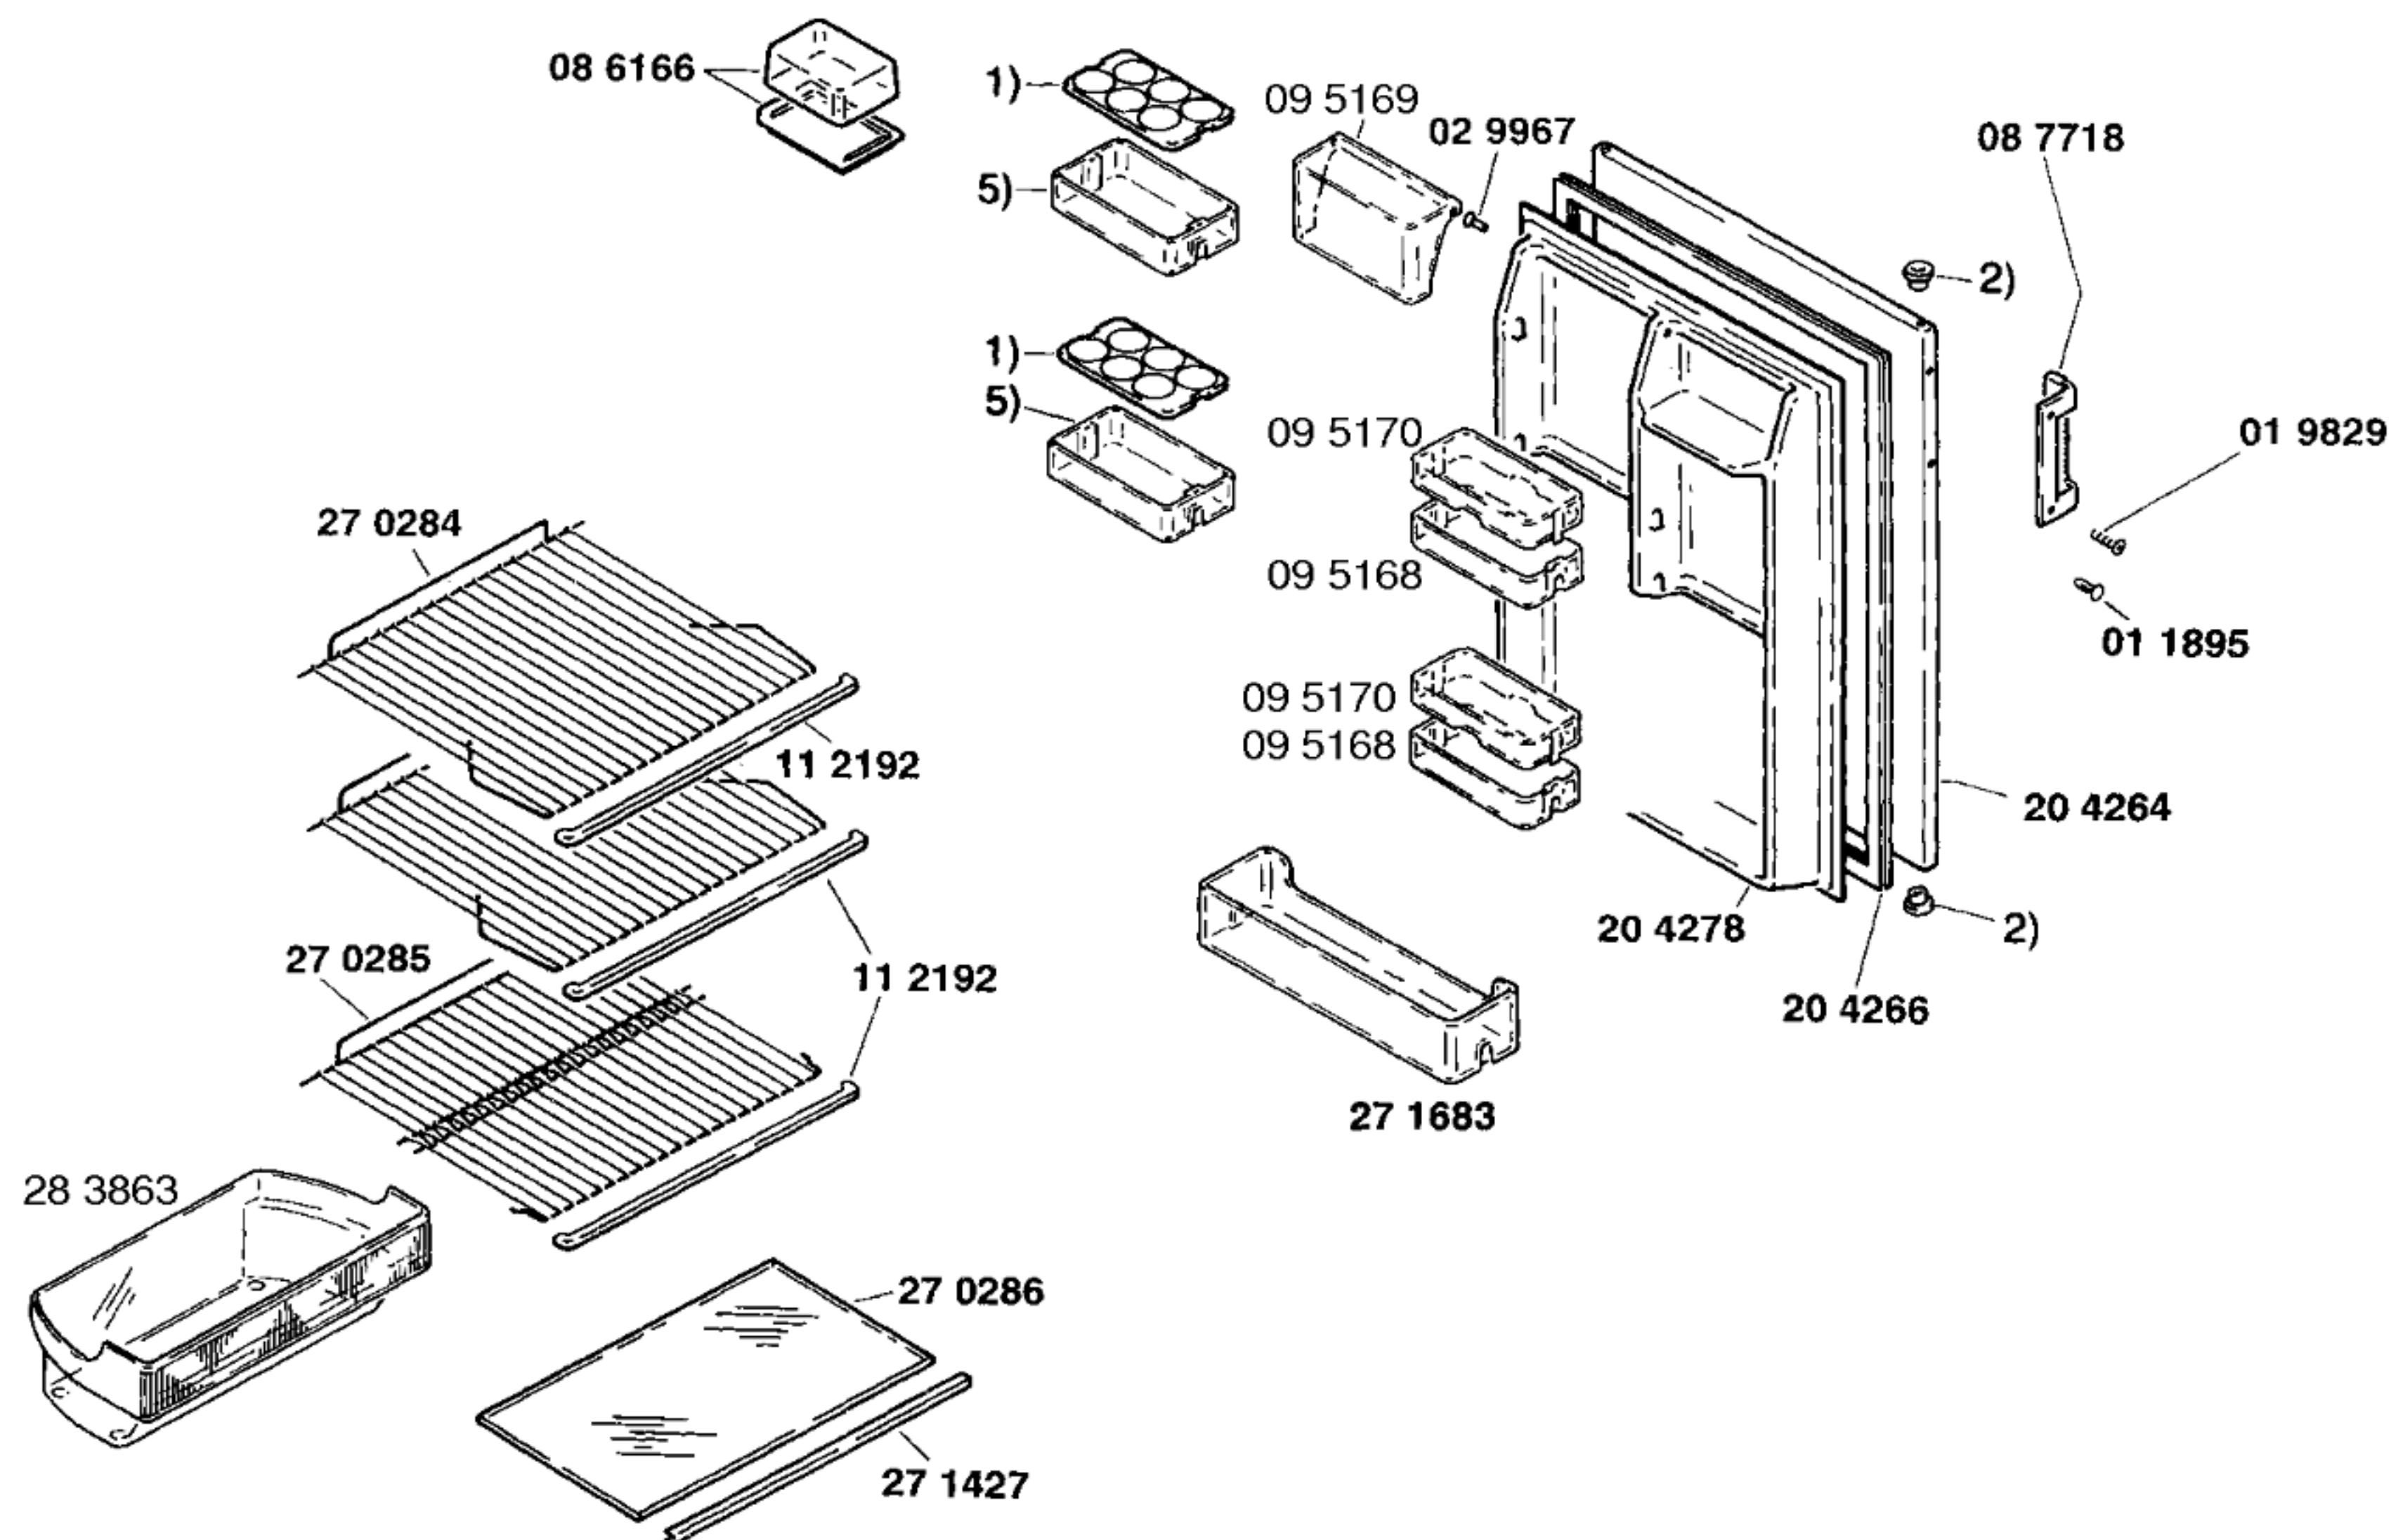

 - 1) 08 5589
- 2) 01 9257
- 5) 08 7716

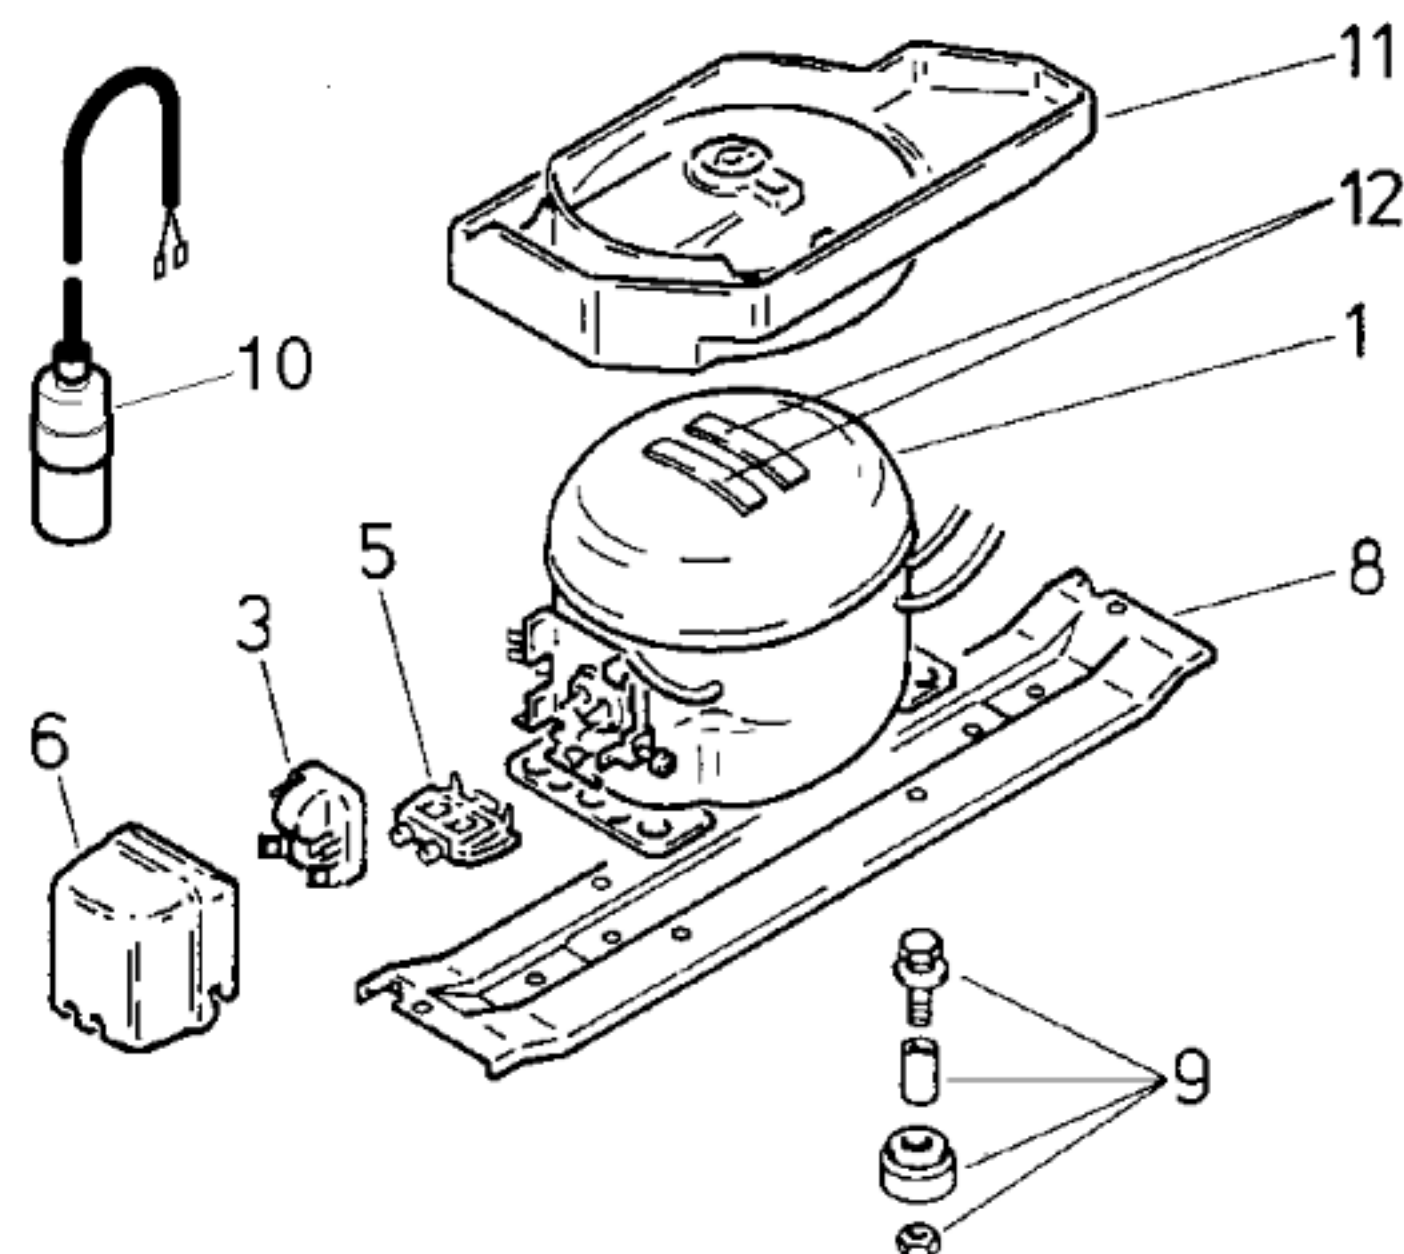

Pos.			
	Danfoss		
	TL 5 F		
1	14 1119		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	27 0833		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TL 5 F			
Förderleistung/Delivery/Débit		l/h	914		
Anlaufstrom/Starting current/Cour de démarrage		A	8,4		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	18,0	
		Hi/aux	Ω	14,7	
Temp.-Regler/Thermostat		Danfoss			
Typ/Type					
Reglerstellung/Position			kalt	warm	
Schaltwerte/Switching values/		„ein“	°C	-4,5	-4,5
Valeurs de commutation		„aus“		-31,0	-13,5
(„abtauen“ od.)		„alarm“			
Füllmenge/Fill.quantity/Charge		R134a	g	75	
Anschlußwert/Conn.load/Puiss. connectée		W	110		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Schaltuhr/Timer/Minuterie de contact					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			