

**BOSCH**

BBS 221300 – 0 752 210 237–EXP.1

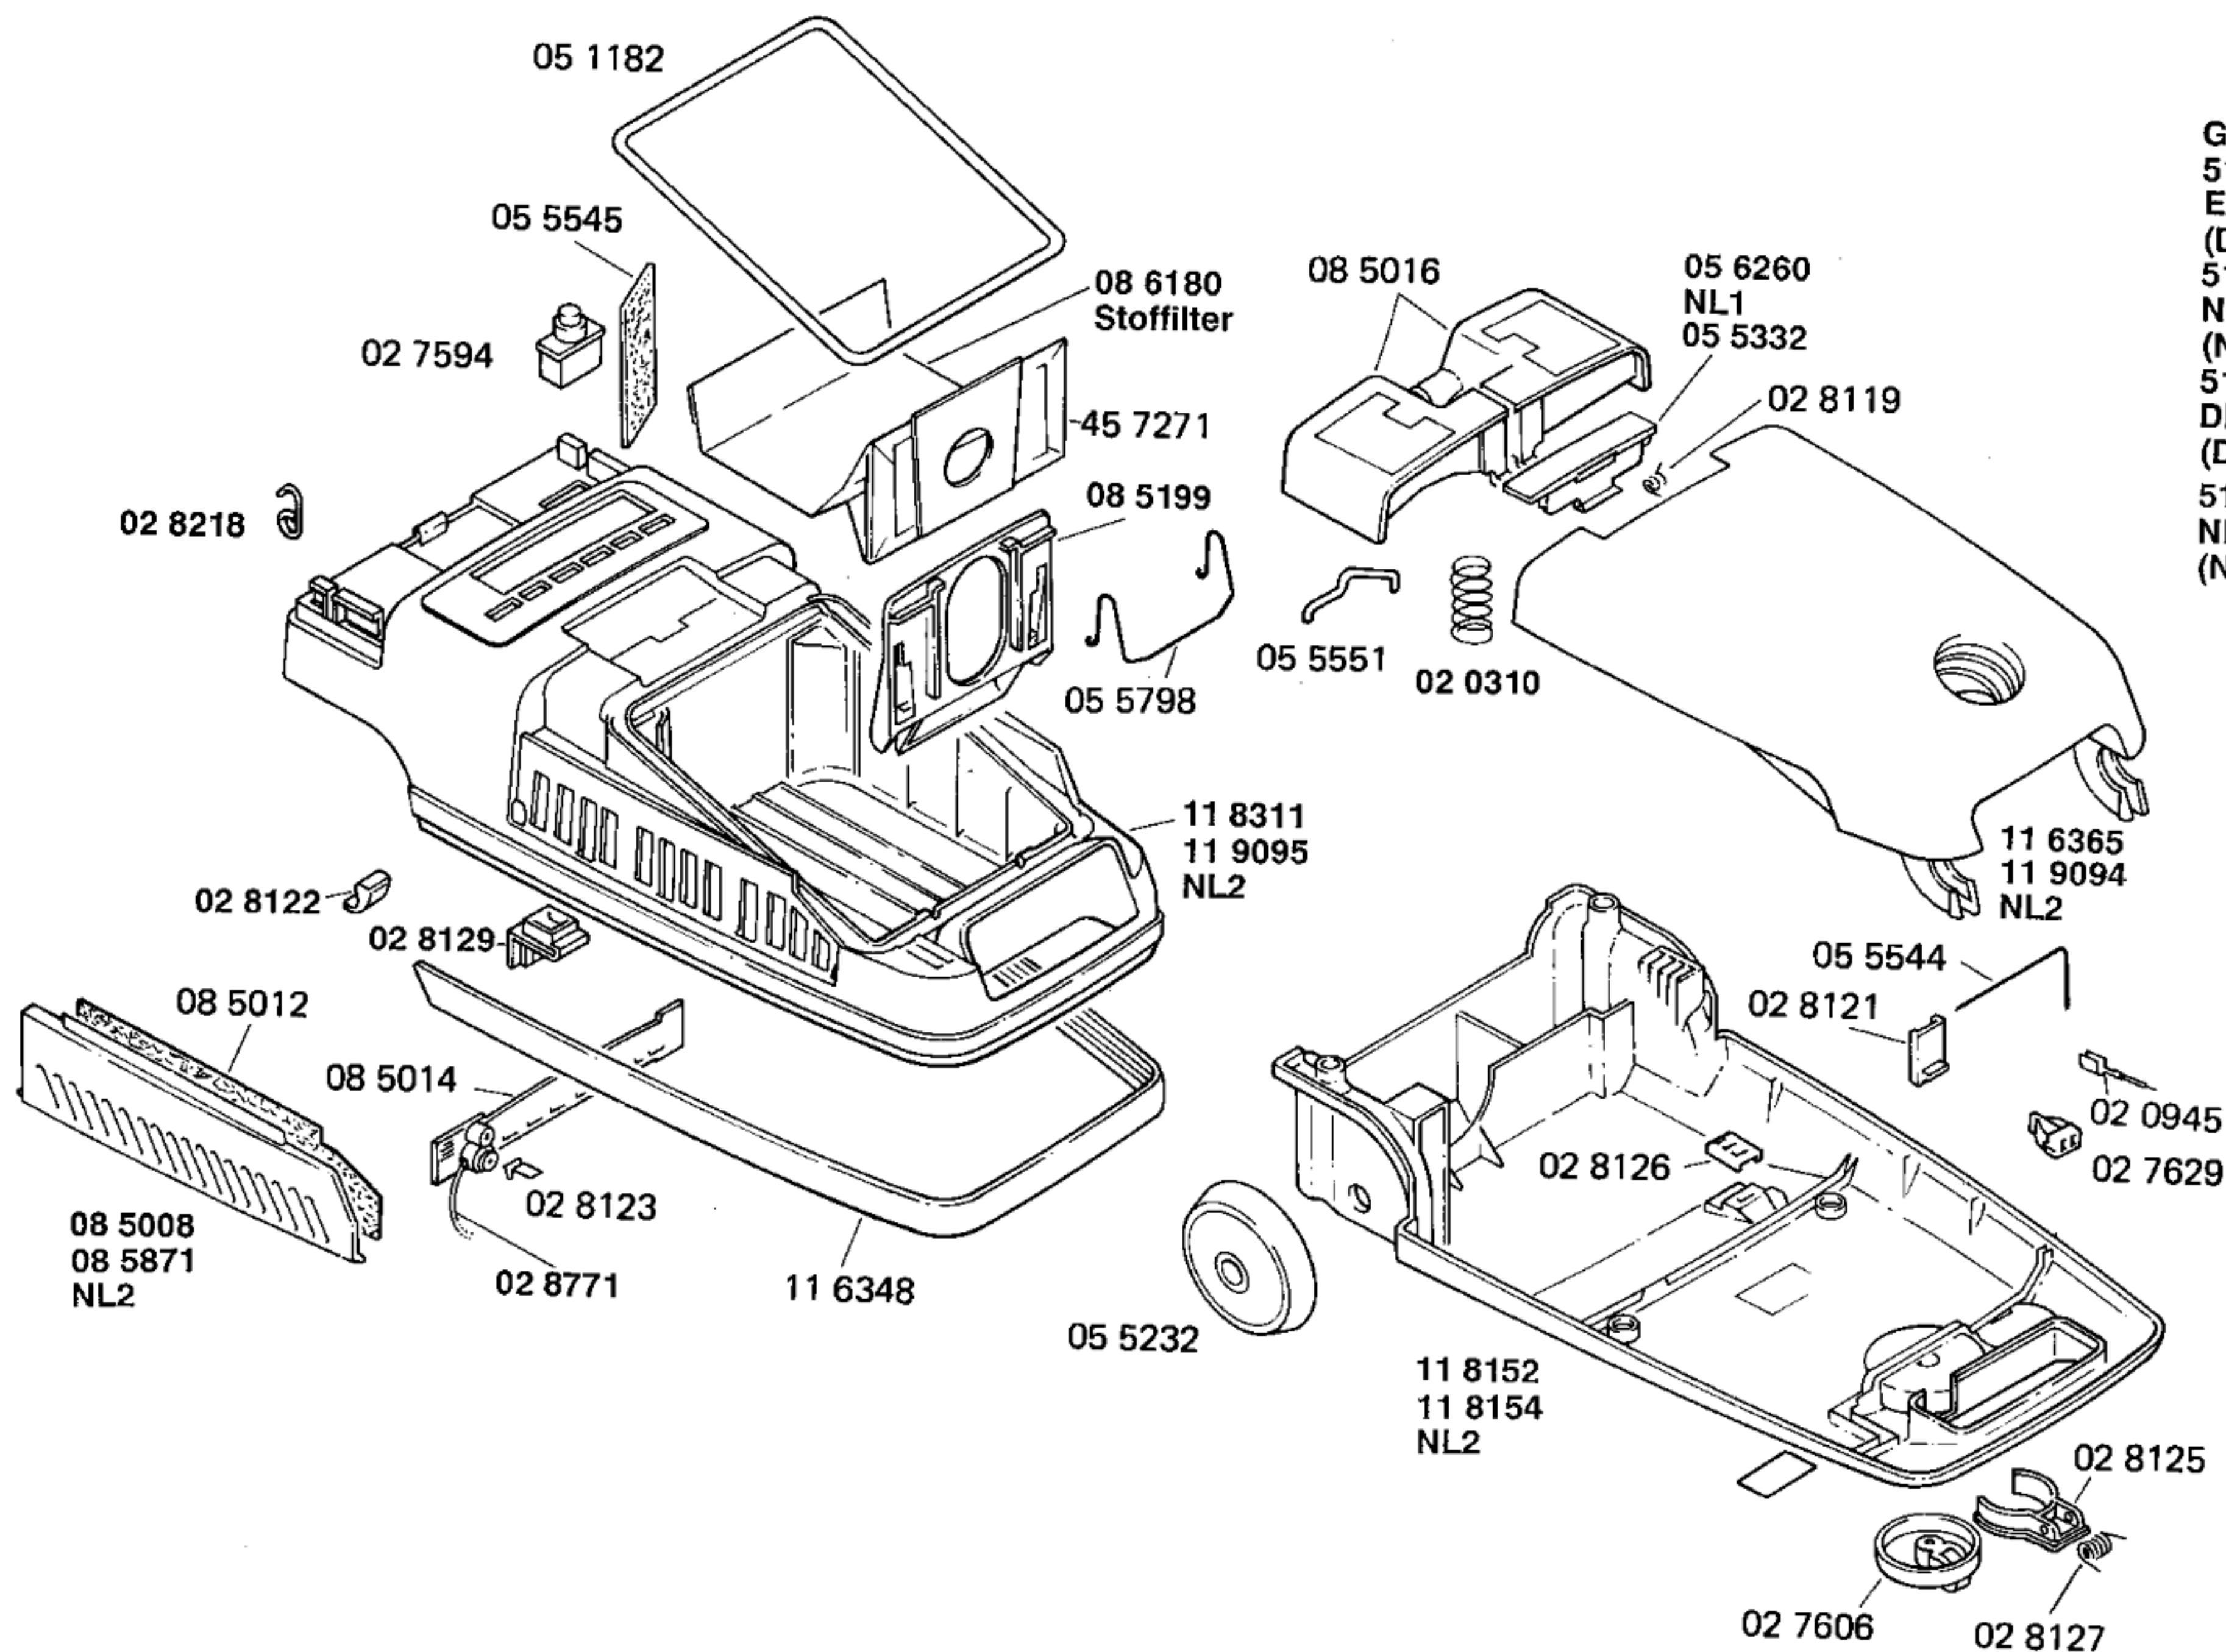 
BBS 221335 – 0 752 210 238–DK1

BBS 221346 – 0 752 210 239–NL1

BBS 221331 – 0 752 210 240–NL1

BBS 221380 – 0 752 210 291–ET1

BBS 221446 – 0 752 210 290–NL2

BODENPFLEGEGERÄTE
BodenstaubsaugerIdent – Nummern – Konstante
3740**Gebrauchsanweisung**

51 3342

Exp.1, ET1

(D,NL,F,I,GB,SP)

51 3343

NL1

(NL)

51 3345

DK1,N1

(D,DK,N,SF,S)

51 3594

NL2

(NL)

**BOSCH**

BBS 221300 – 0 752 210 237–EXP.1

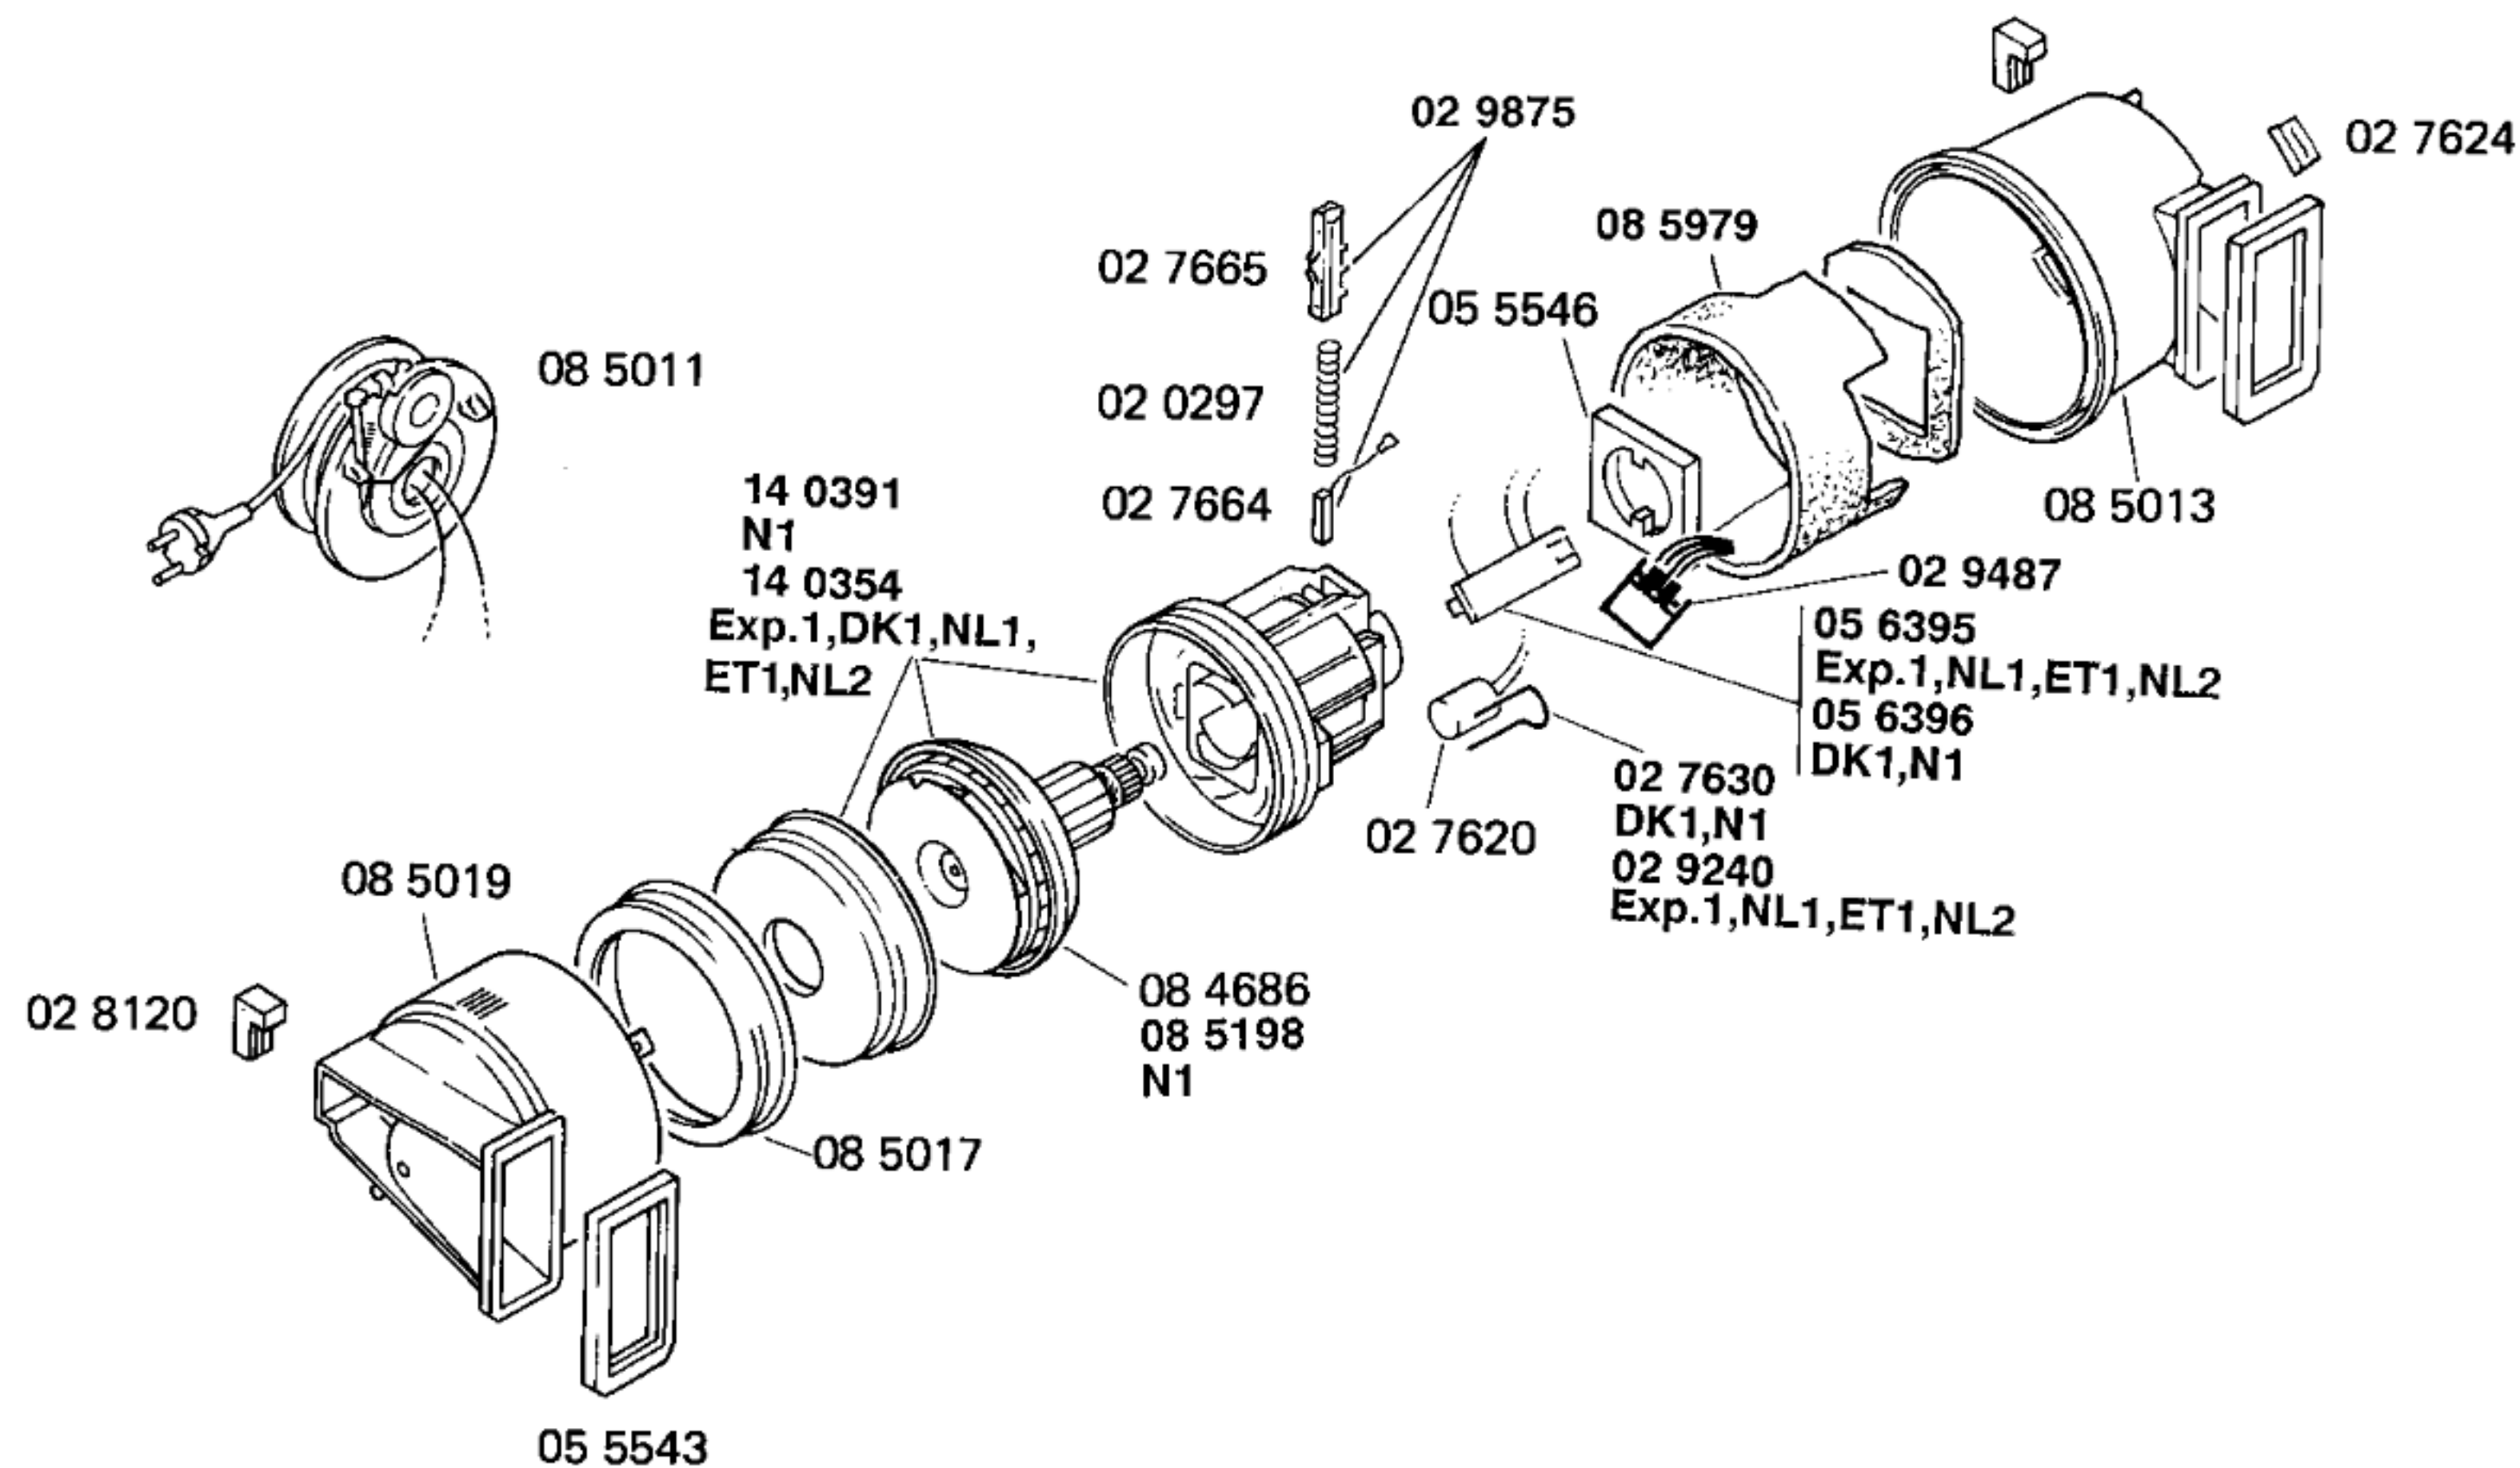 
BBS 221335 – 0 752 210 238–DK1

BBS 221346 – 0 752 210 239–NL1

BBS 221331 – 0 752 210 240–NL1

BBS 221380 – 0 752 210 291–ET1

BBS 221446 – 0 752 210 290–NL2

BODENPFLEGEGERÄTE
BodenstaubsaugerIdent – Nummern – Konstante
3740Zubehör:
BBS 22..