


**BOSCH**

T 6202 - 0 728 144 126-D1
T 6202 - 0 728 144 127-CH1

WASCHGERÄTE
Trockner

Ident-Nummern-Konstante
3740

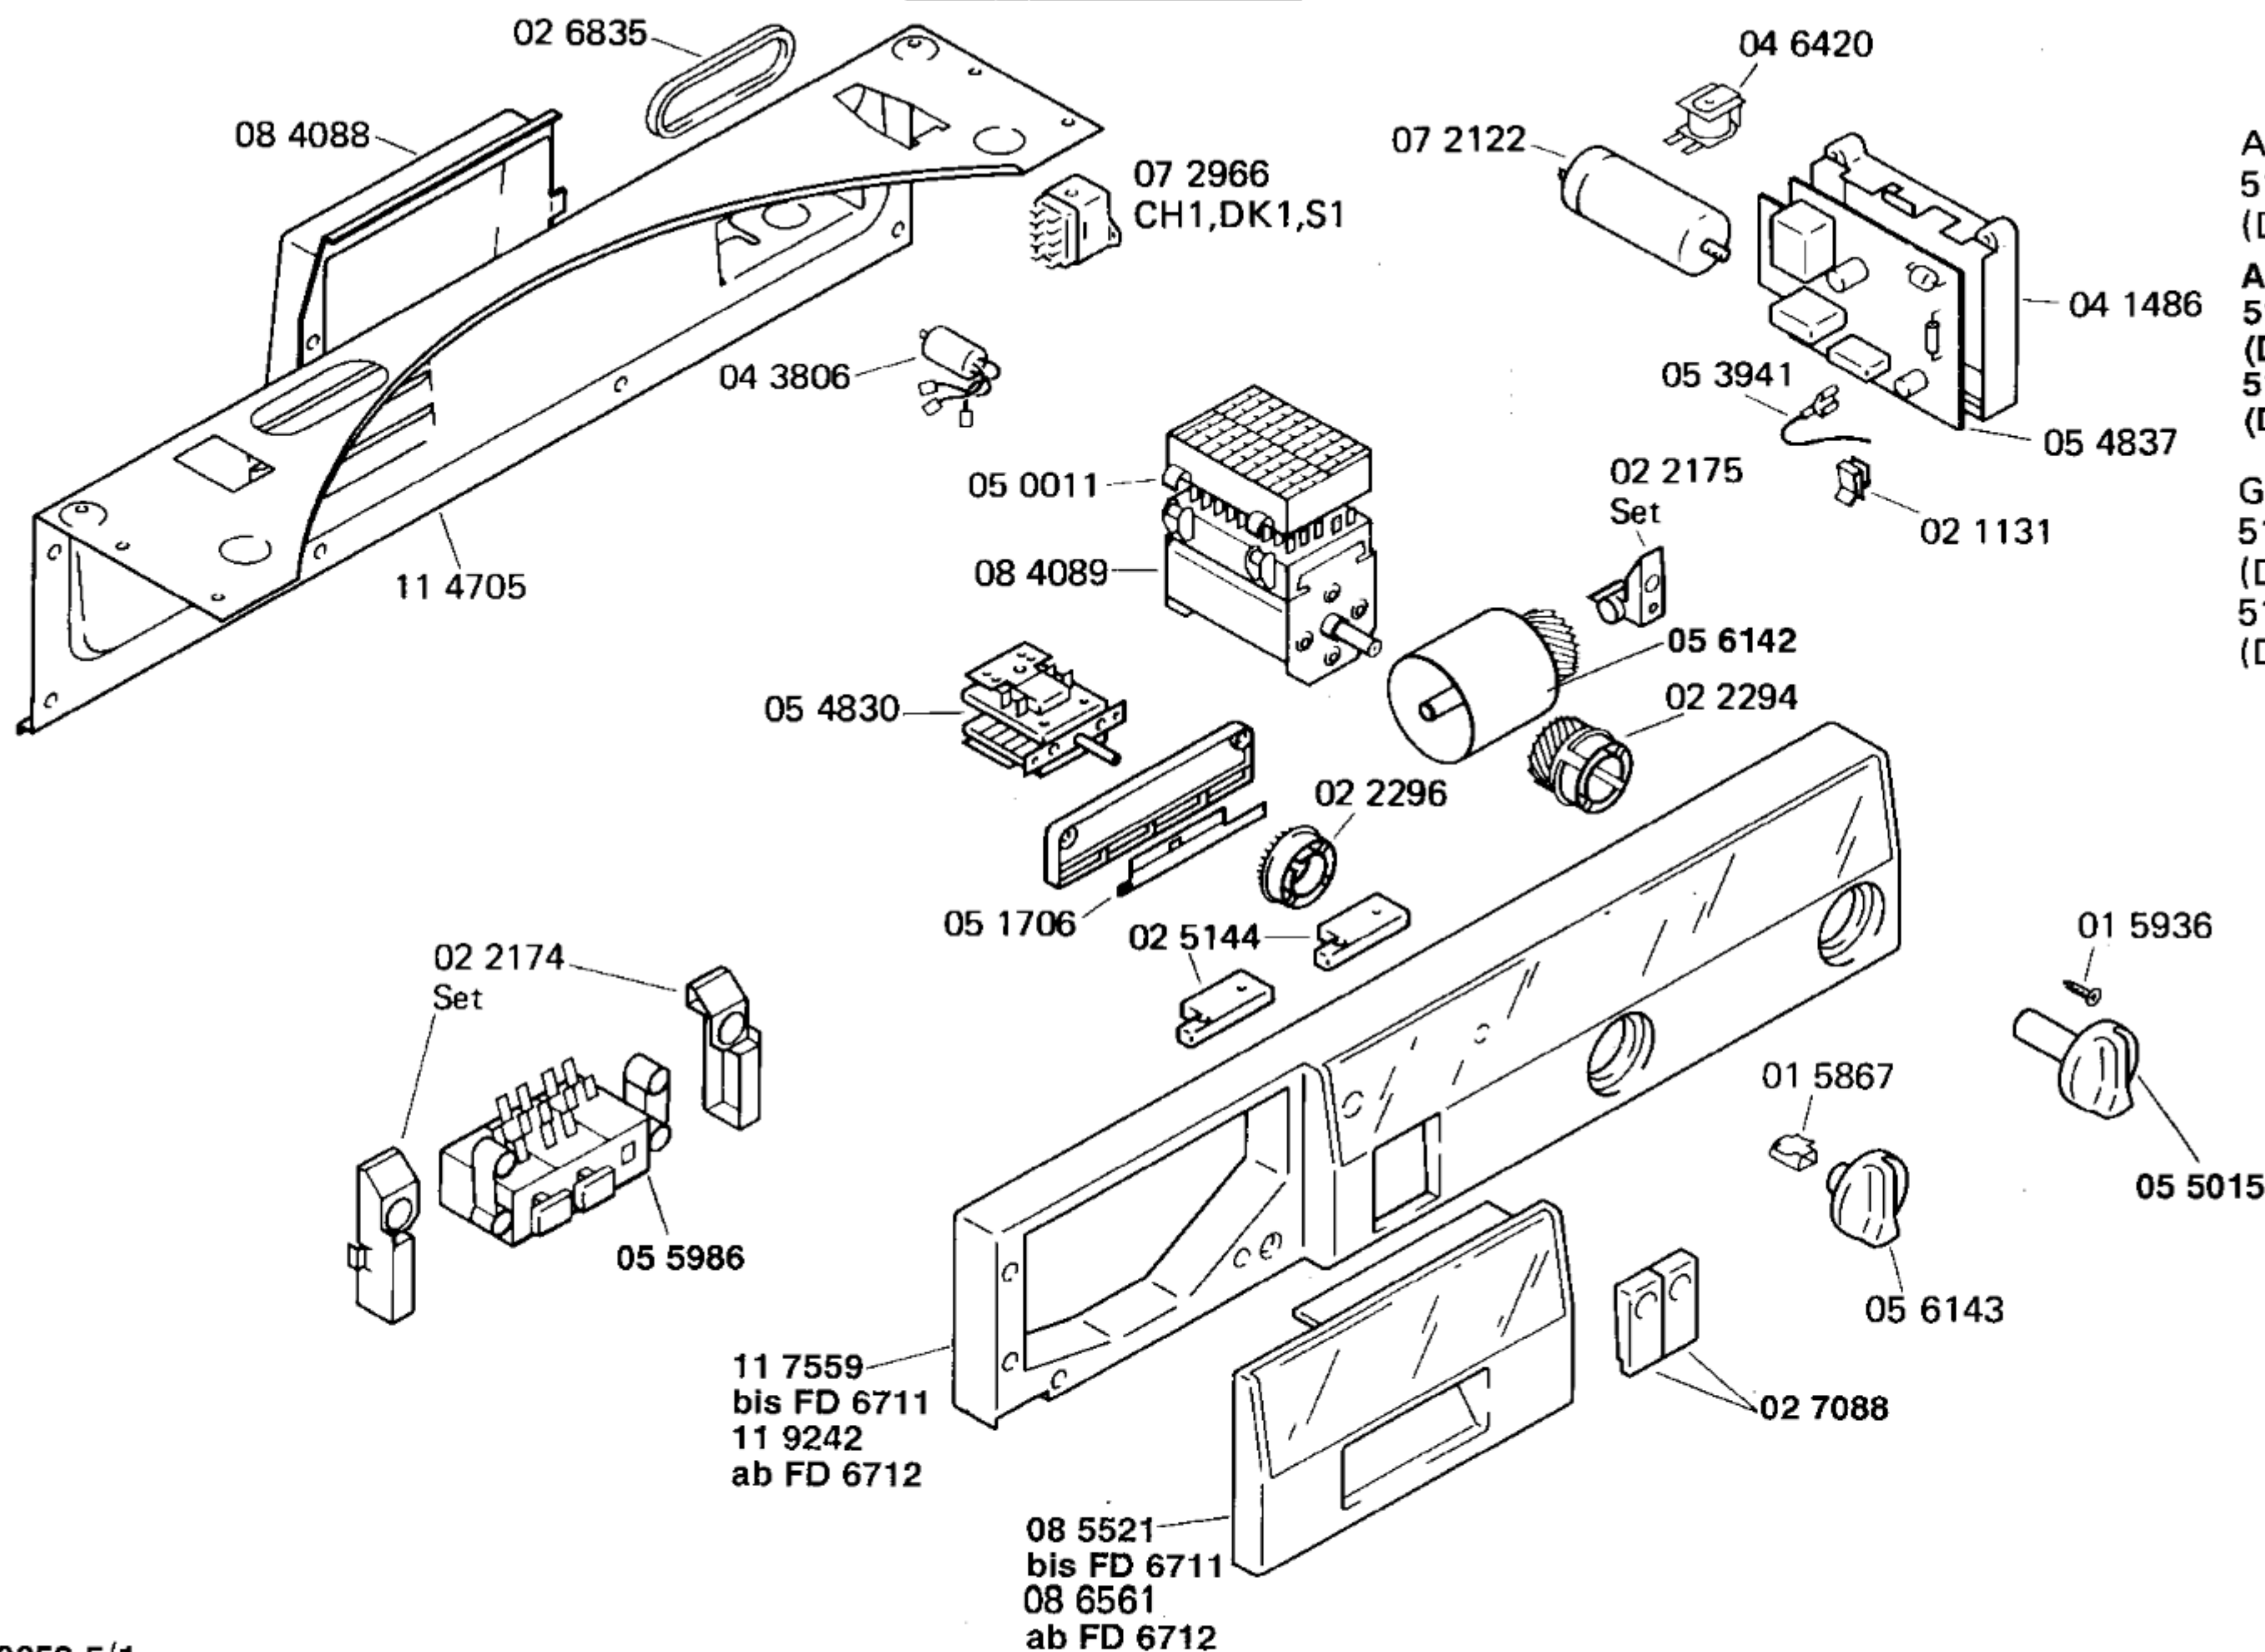

Aufstellanweisungen:
51 1968
(D,GB,F,I,NL,E)

Aufstellanweisungen
51 1968
(D,GB,F,I,NL,E)
51 2531
(D,F,I,DK,S)

Gebrauchsanweisungen:
51 2150
(D,GB,F,I,NL,E)
51 2532
(D,F,I,S,DK)

Ident-Nummern-Konstante
3740


1) 02 0159

2) 01 5938

3) 05 1104

5) 01 5939

6) 02 6876

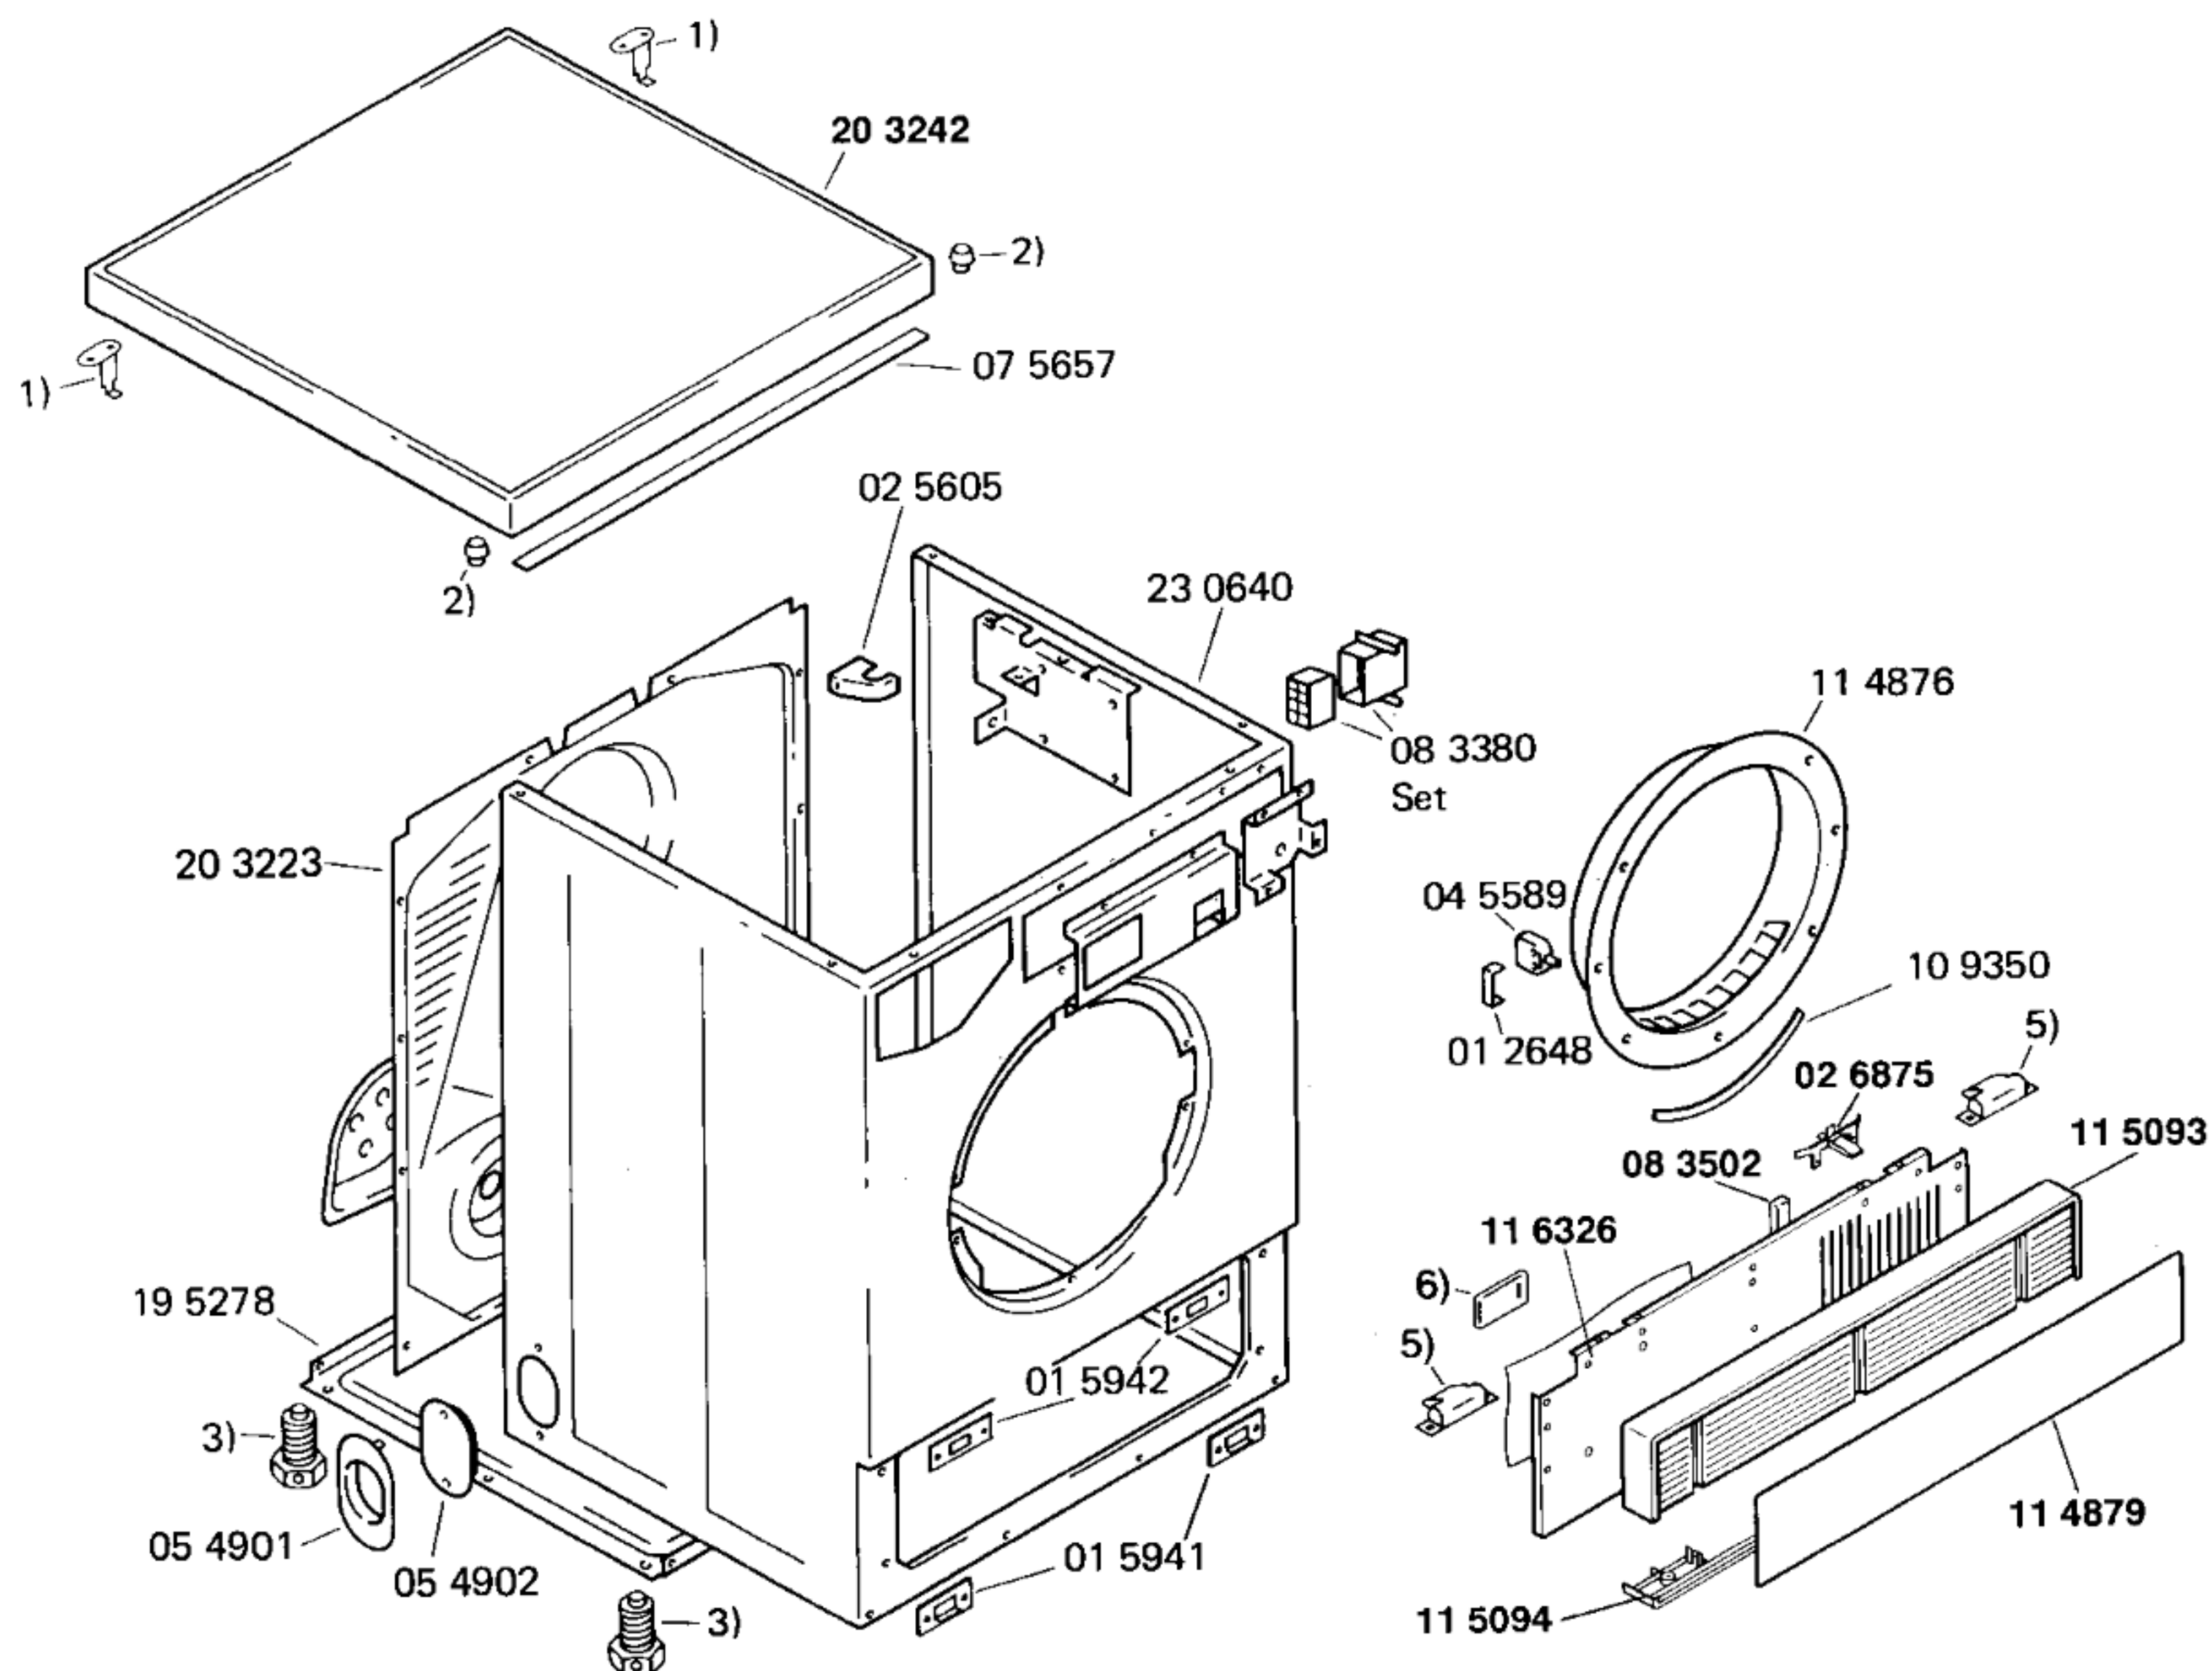



**BOSCH**


T 6202 - 0 728 144 126-D1
T 6202 - 0 728 144 127-CH1

WASCHGERÄTE
Trockner

Ident-Nummern-Konstante
3740

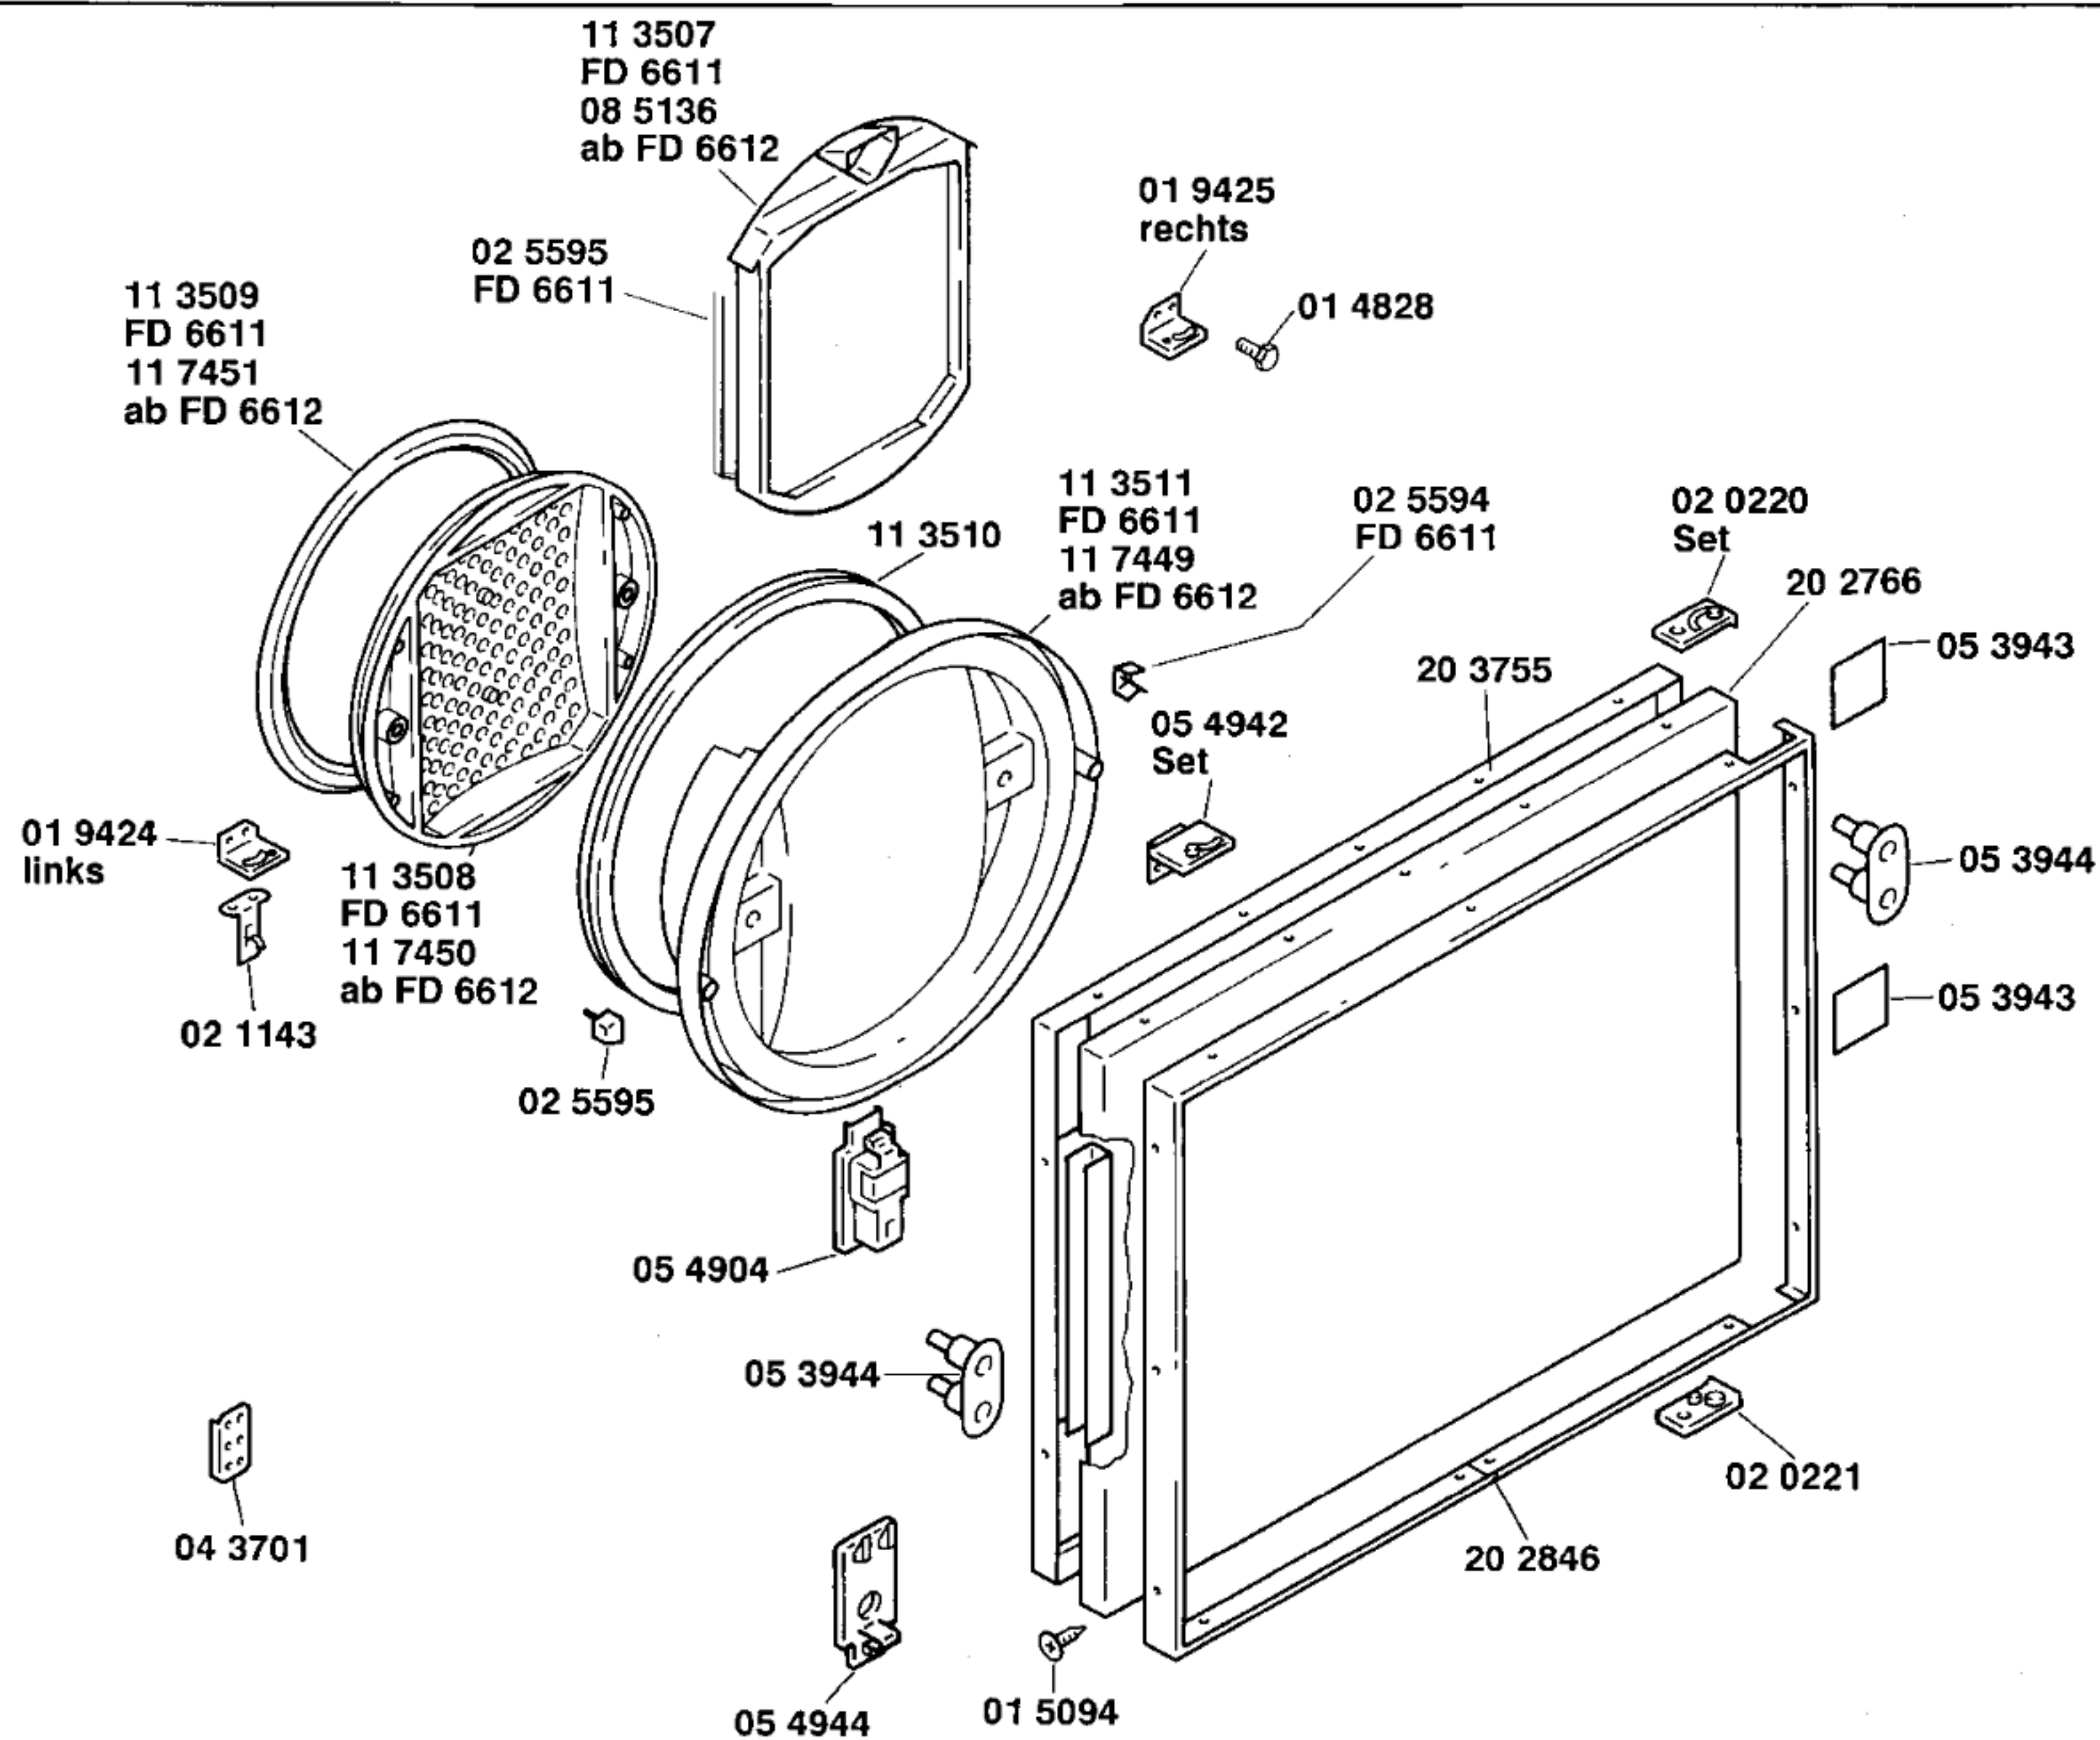

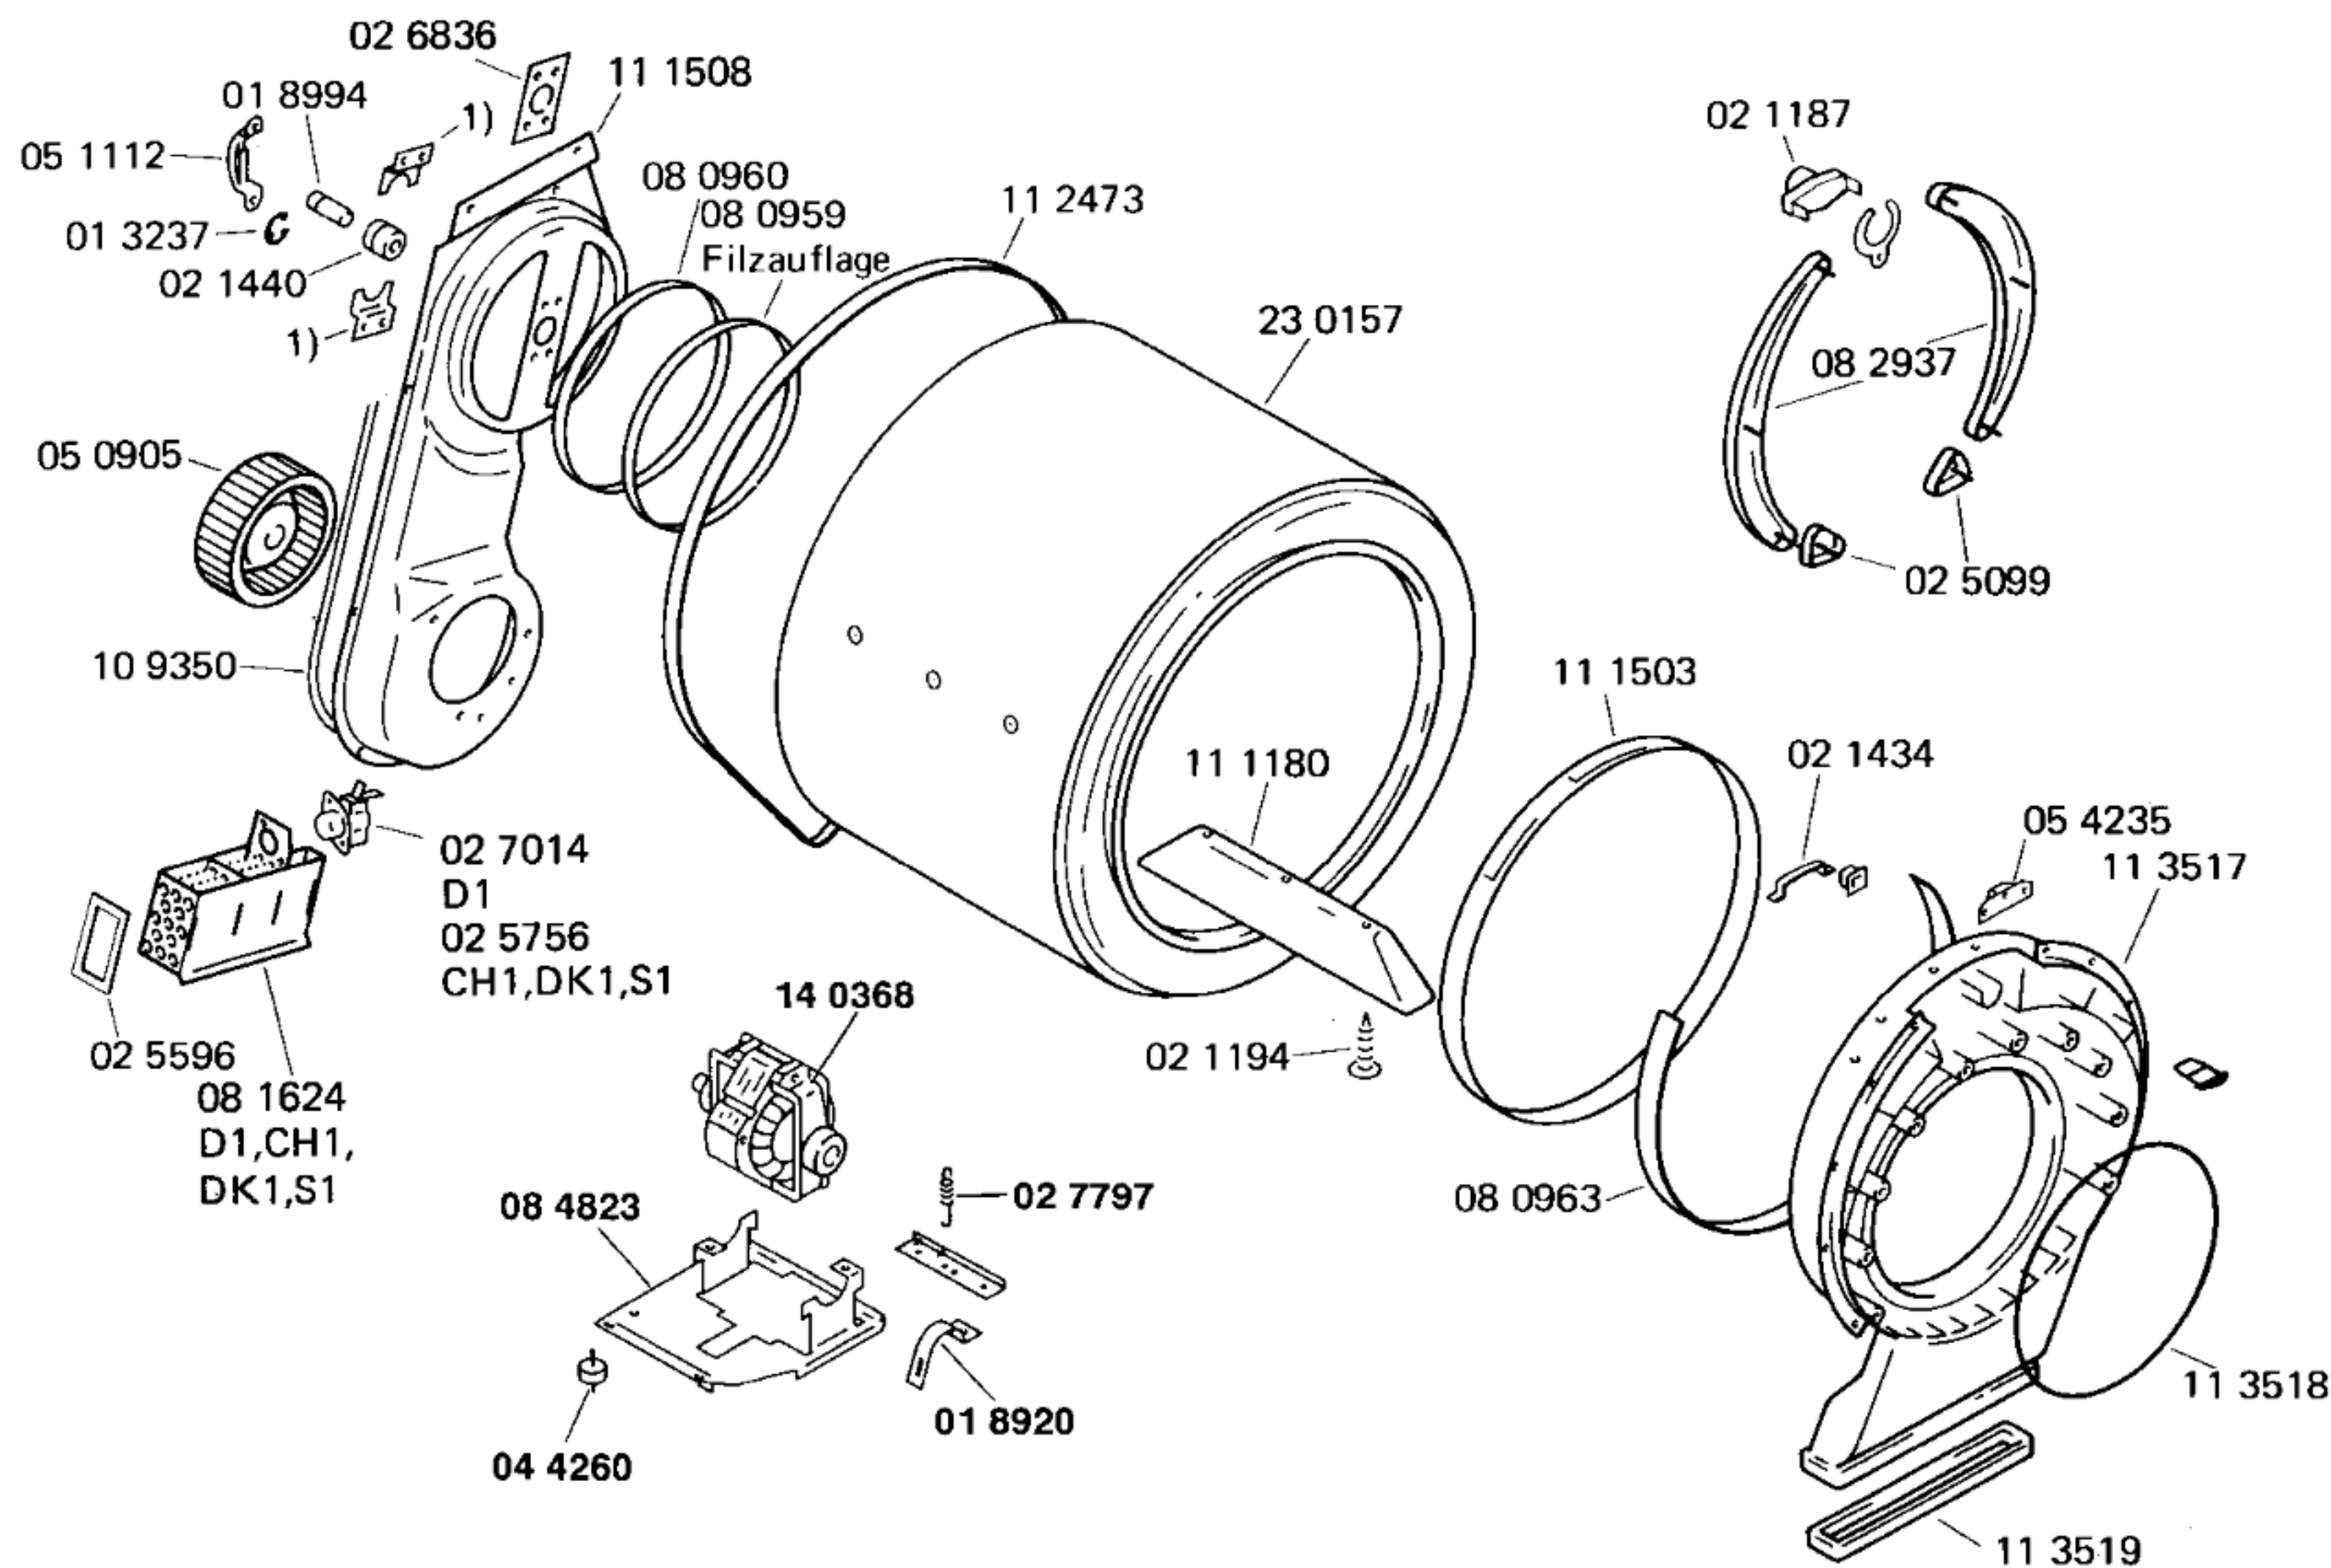

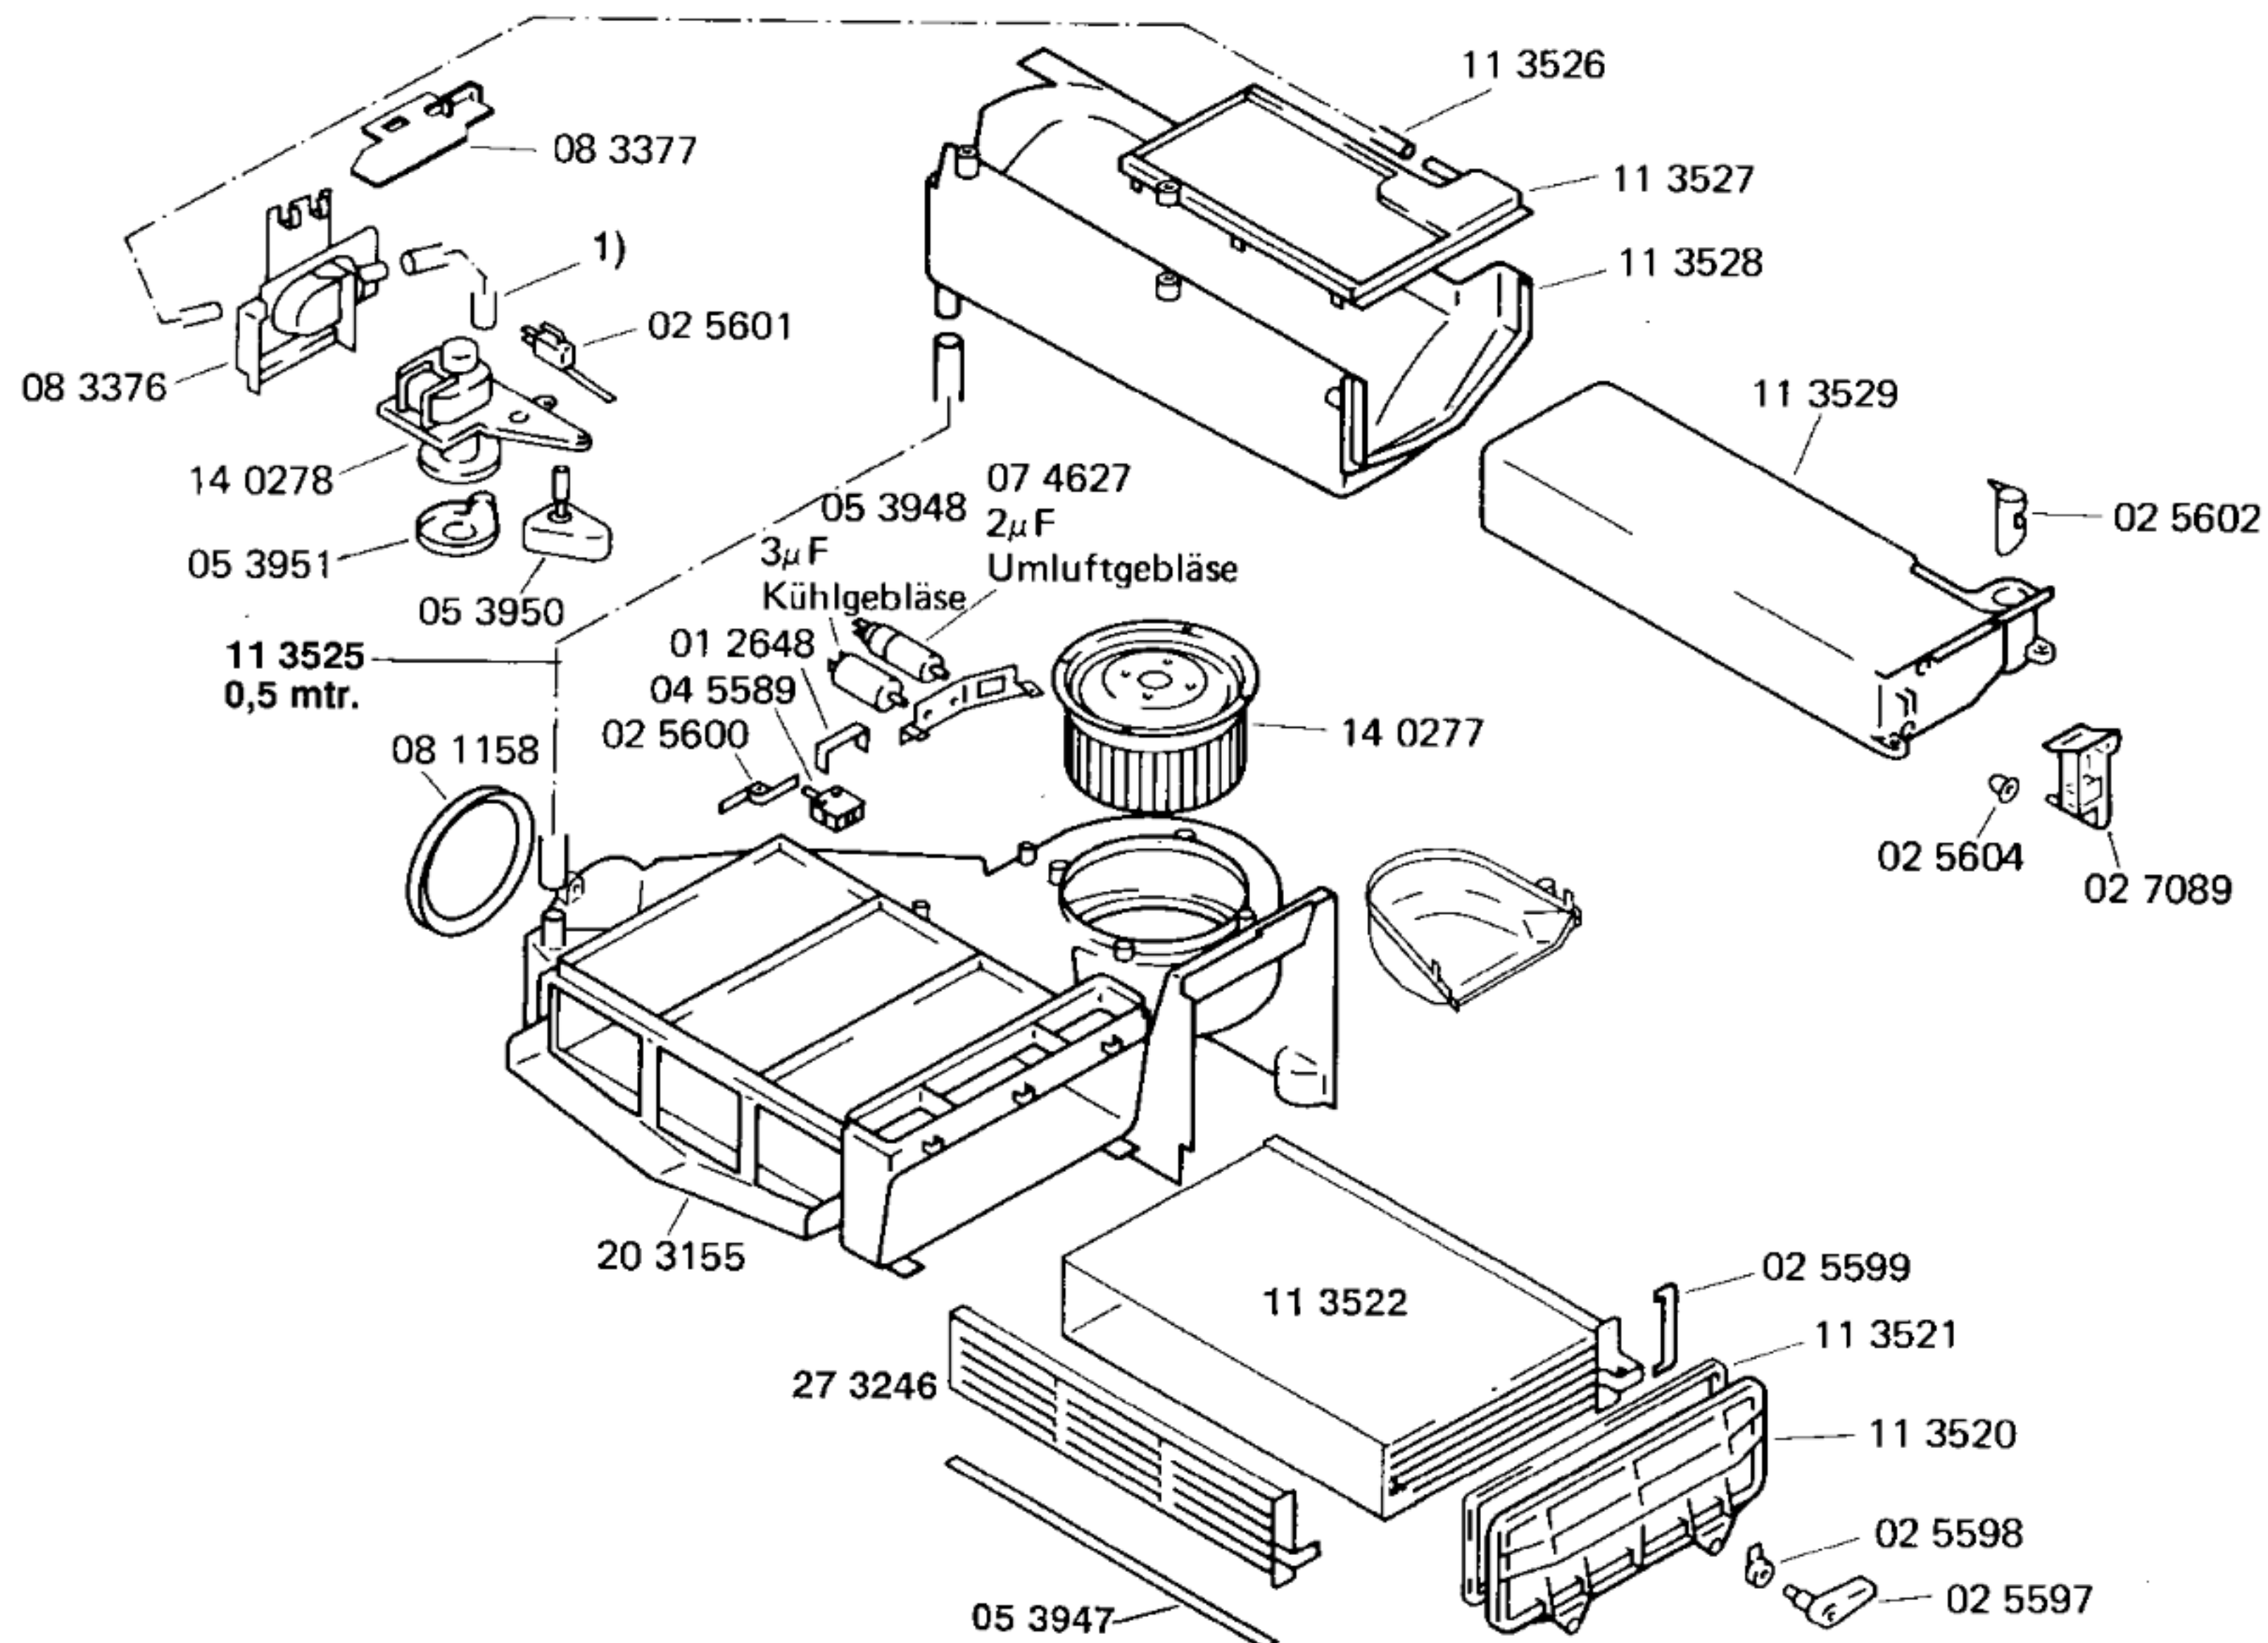

1) 08 3375
bis FD 6609
08 5679
ab FD 6610