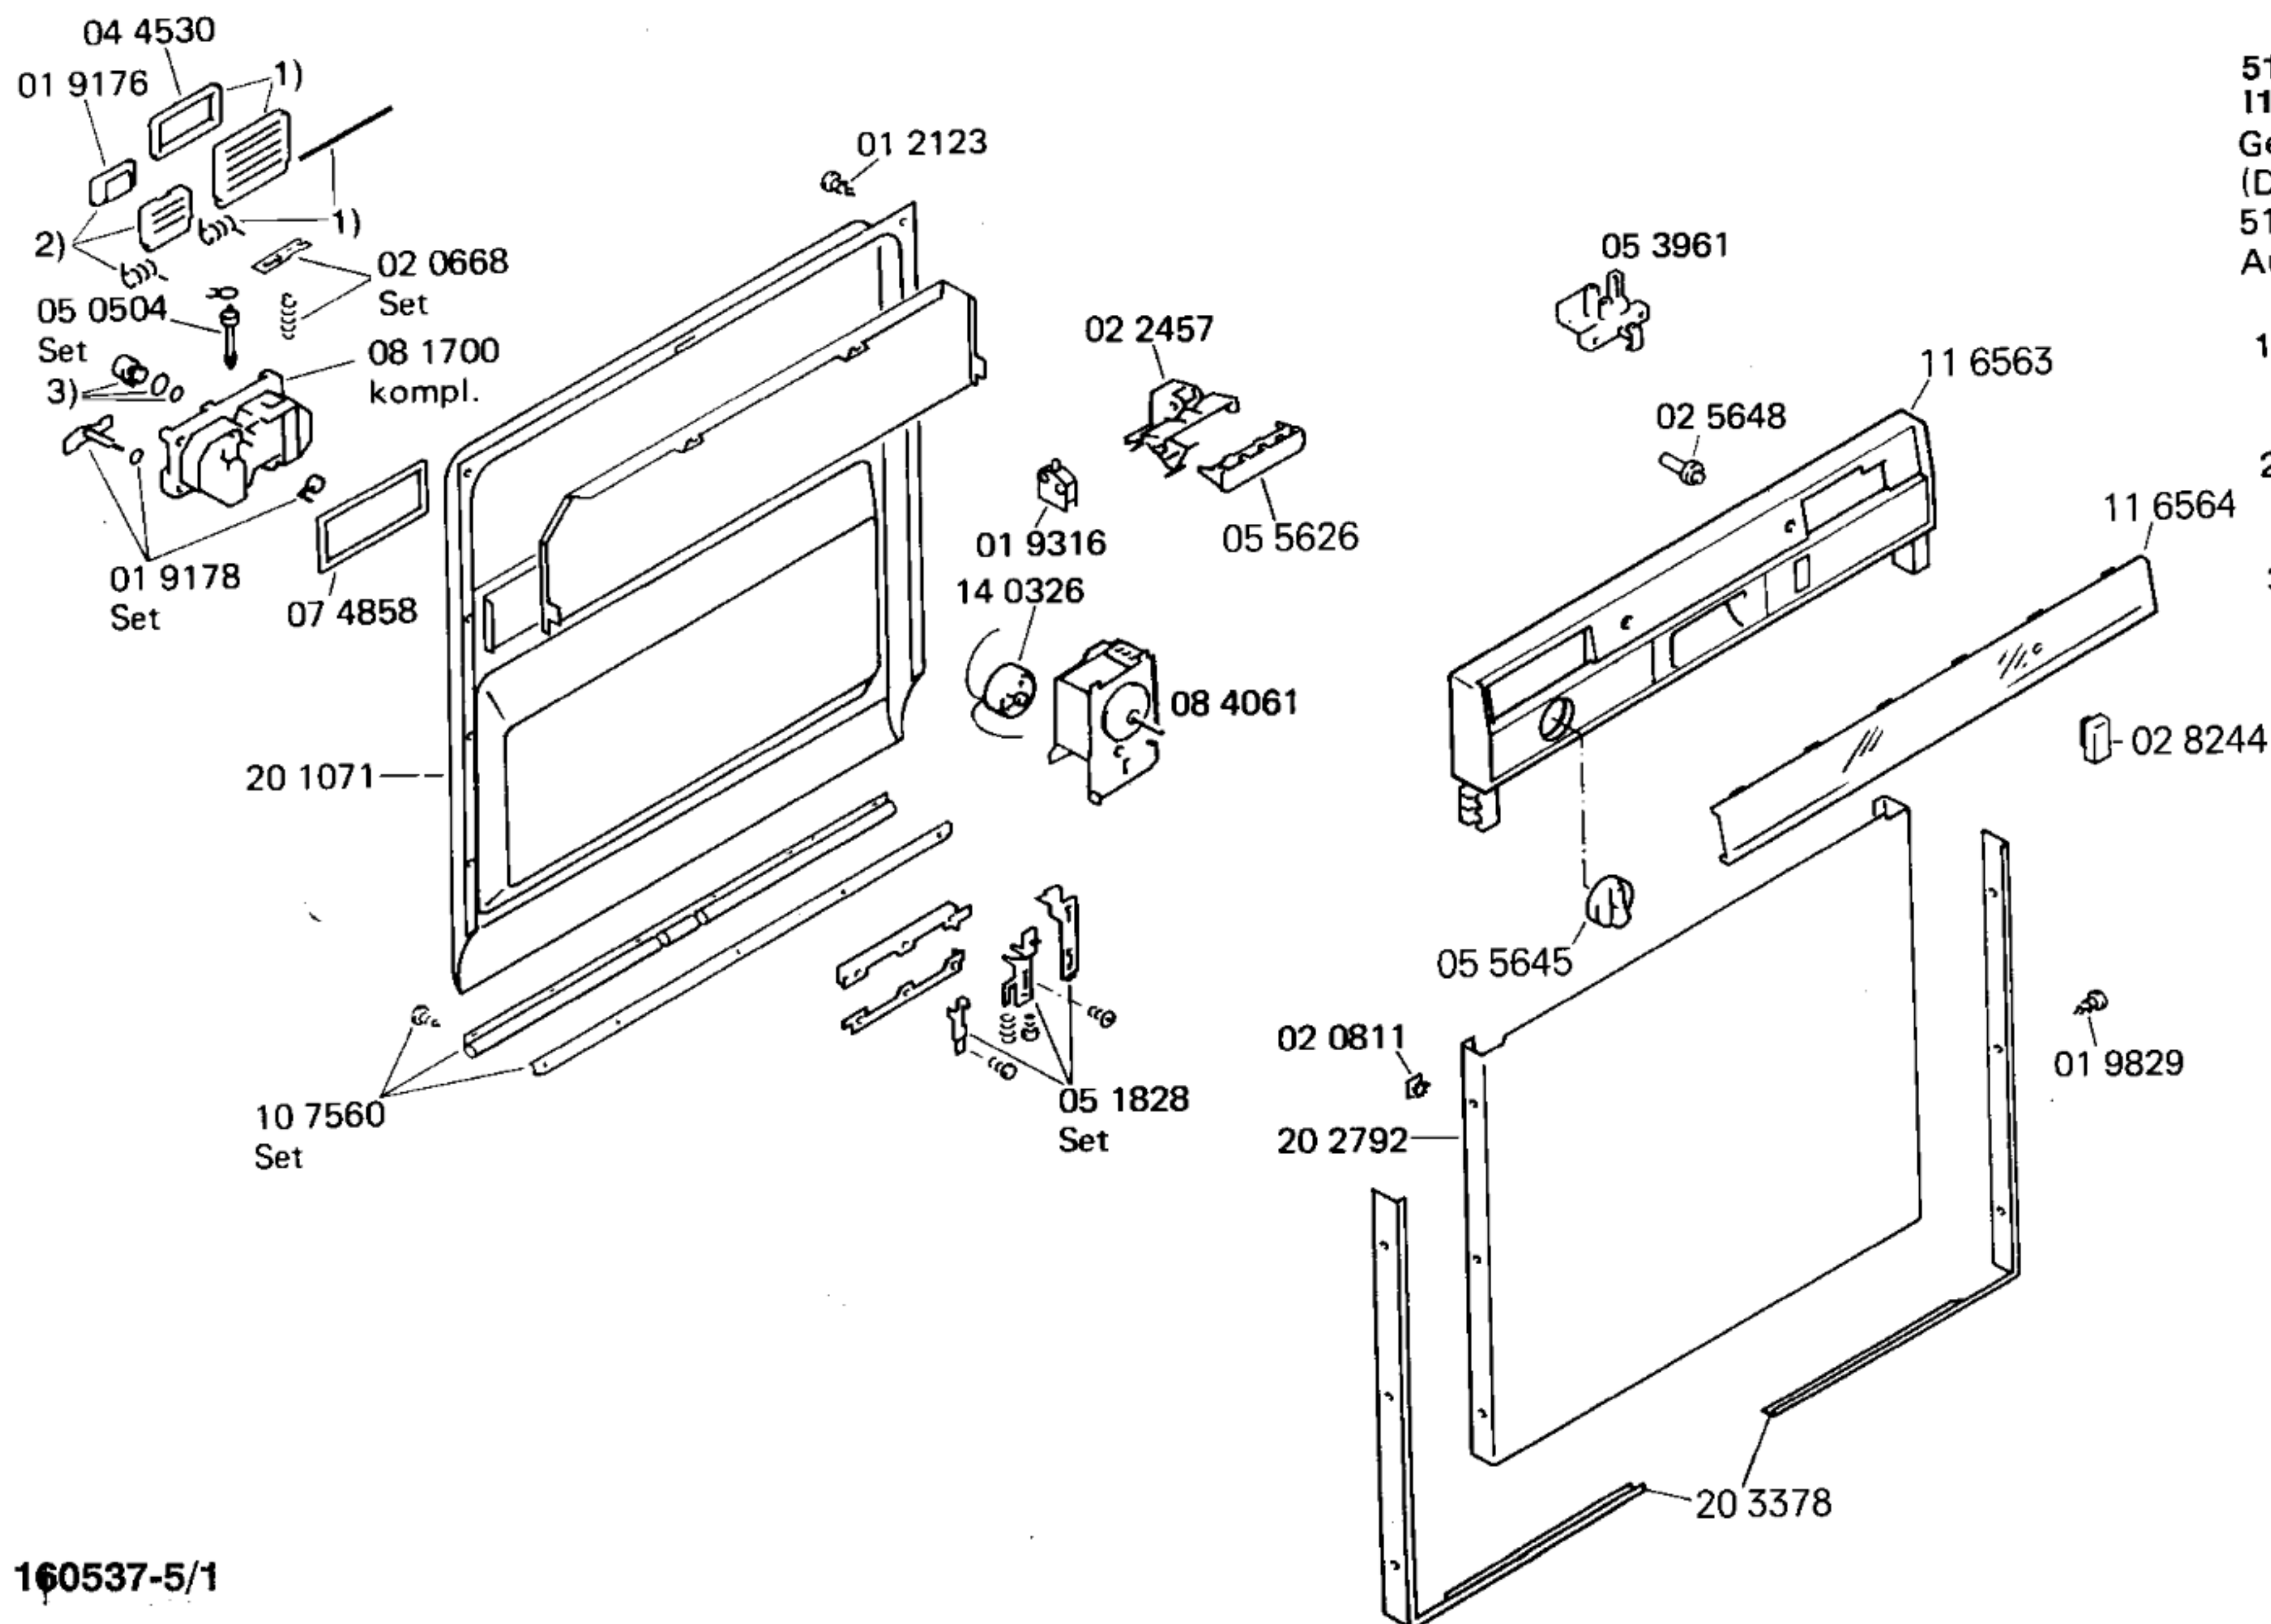


**BOSCH**


SMS 210041 - 0 730 103 555-11

GESCHIRRSPÜLGERÄTE
StandgeräteIdent.-Nummern-Konstante
3740

51 1552
11
Gebrauchsanweisung
(D,GB,F,I,NL,DK,P,E)
51 2277
Aufstellanleitung

- 1) 04 2085
Set
- 2) 04 2105
Set
- 3) 01 9177
Set


Ident-Nummern-Konstante
3740

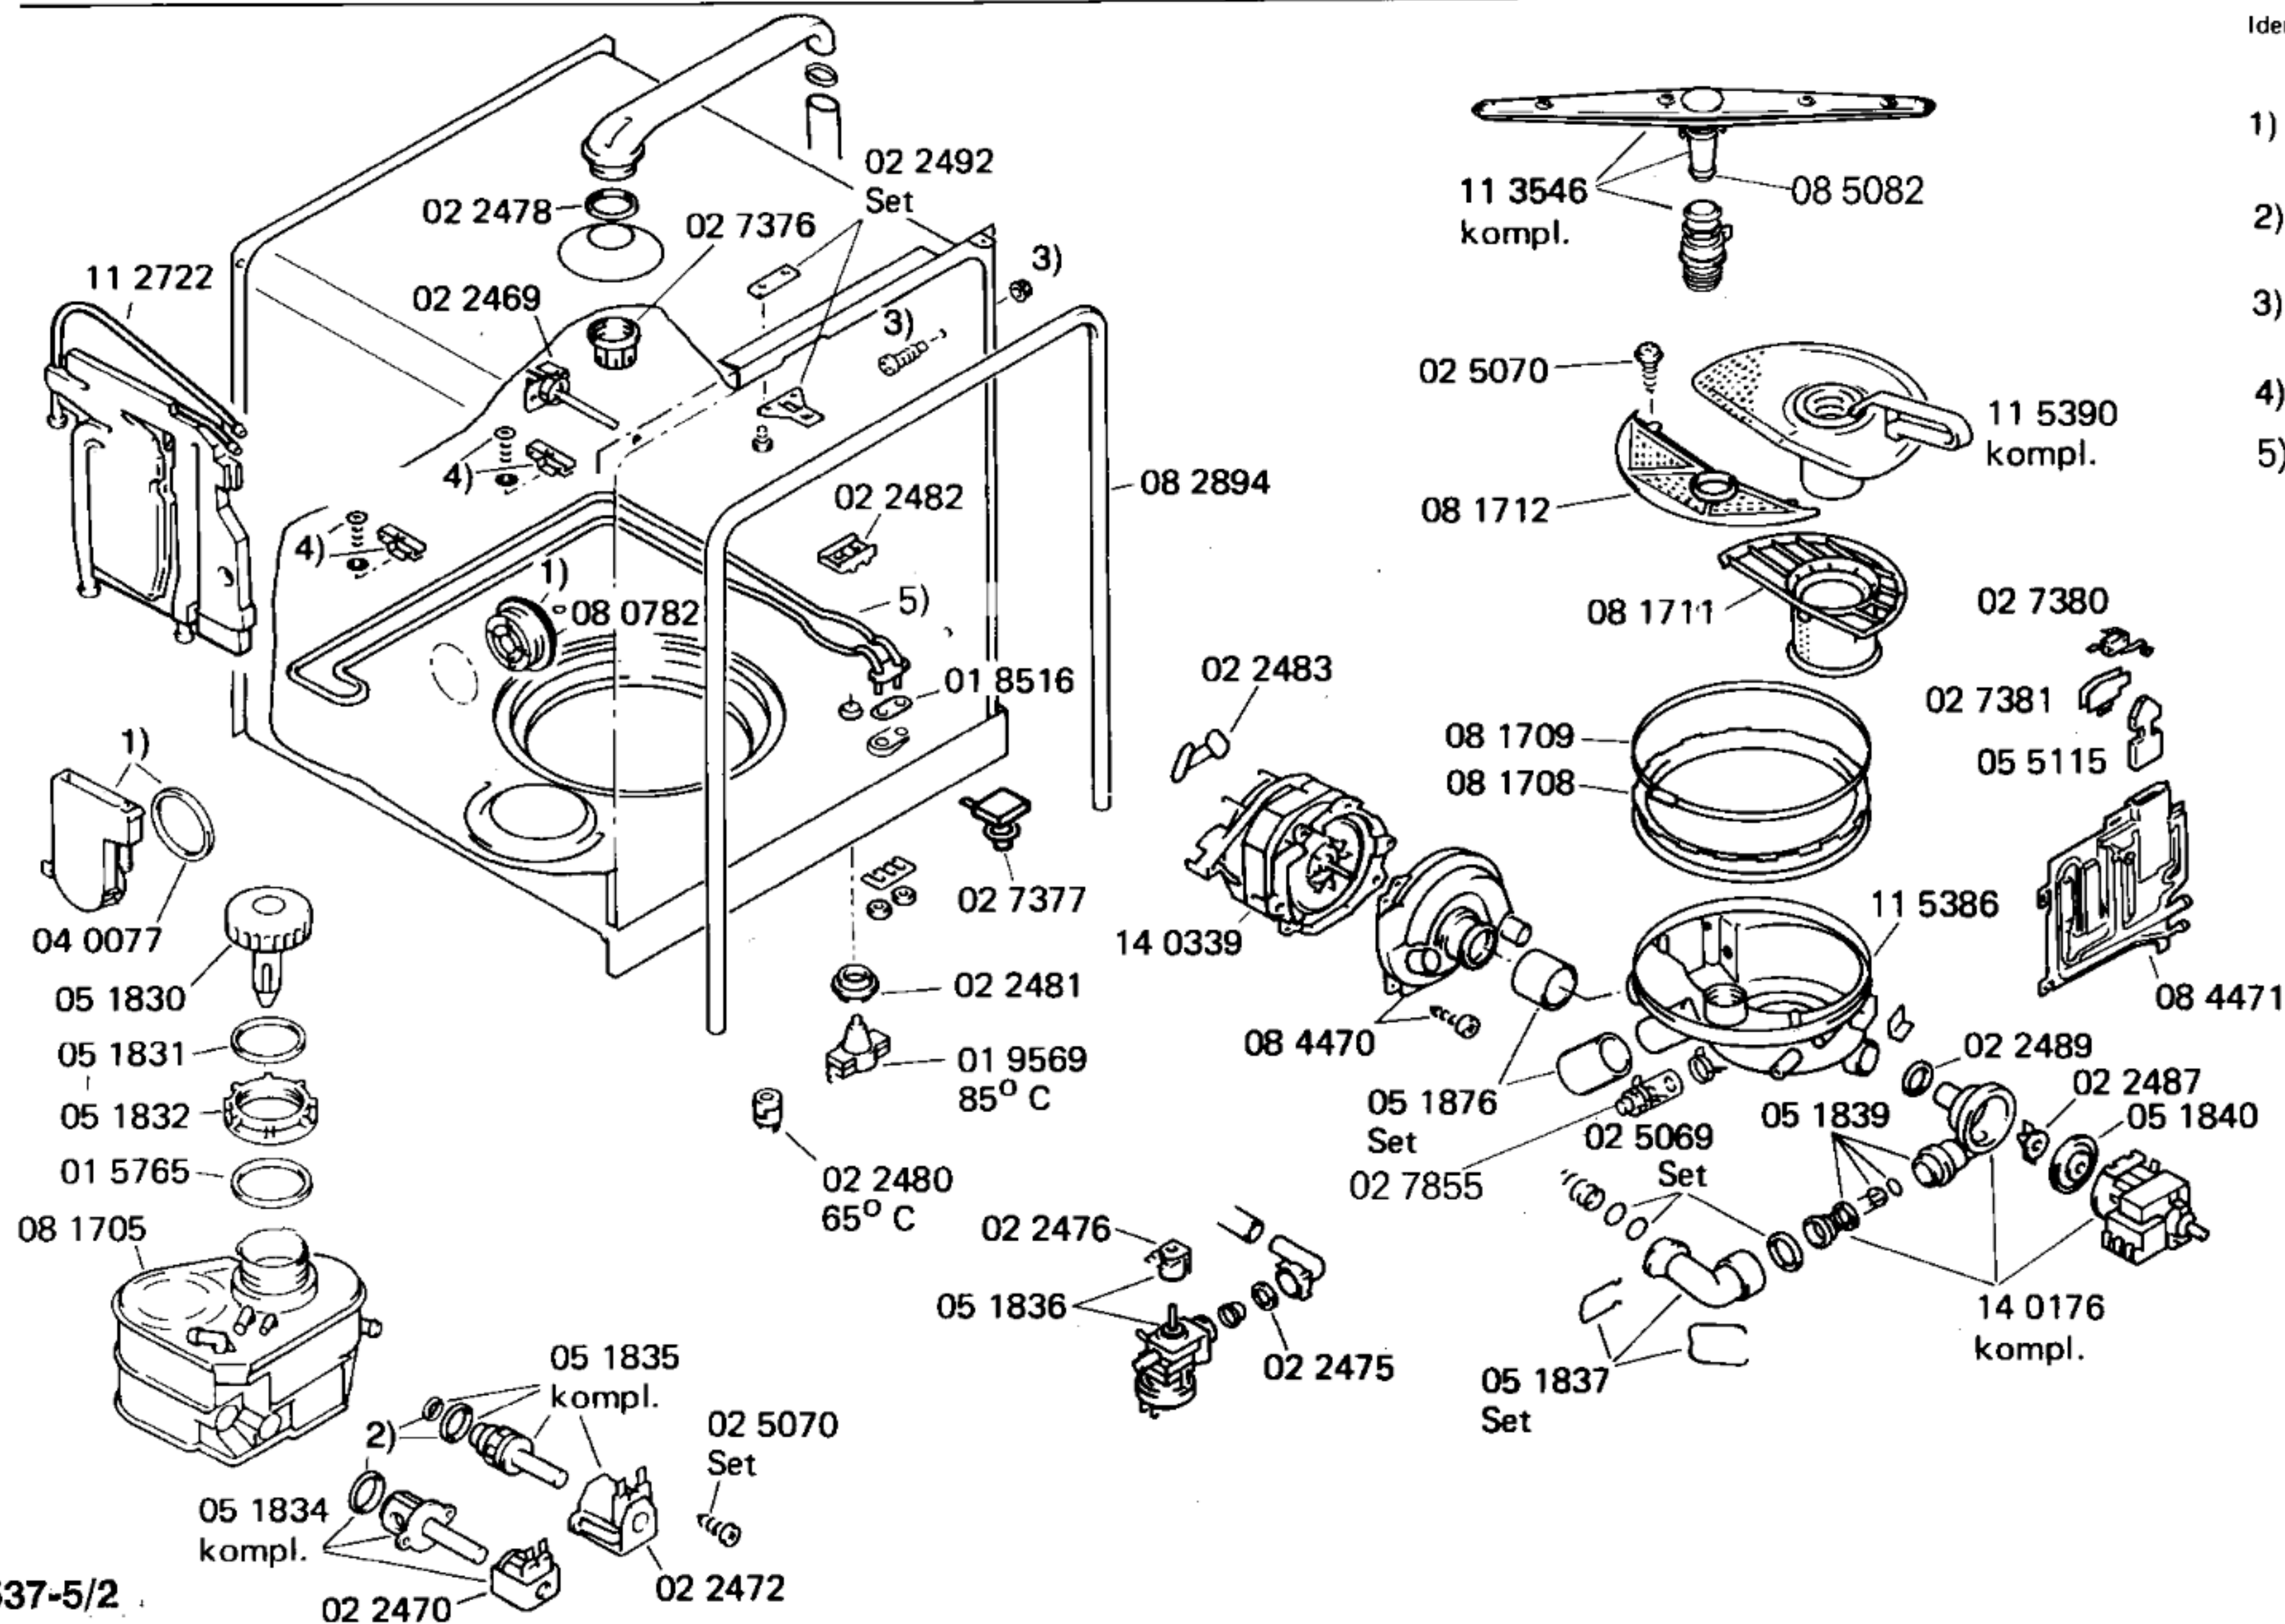

- 1) 08 0781
Set
- 2) 02 5067
Set
- 3) 01 9204
Set
- 4) 05 1838
- 5) 20 2256
2300 W


**BOSCH**

SMS 210041 - 0 730 103 555-I1

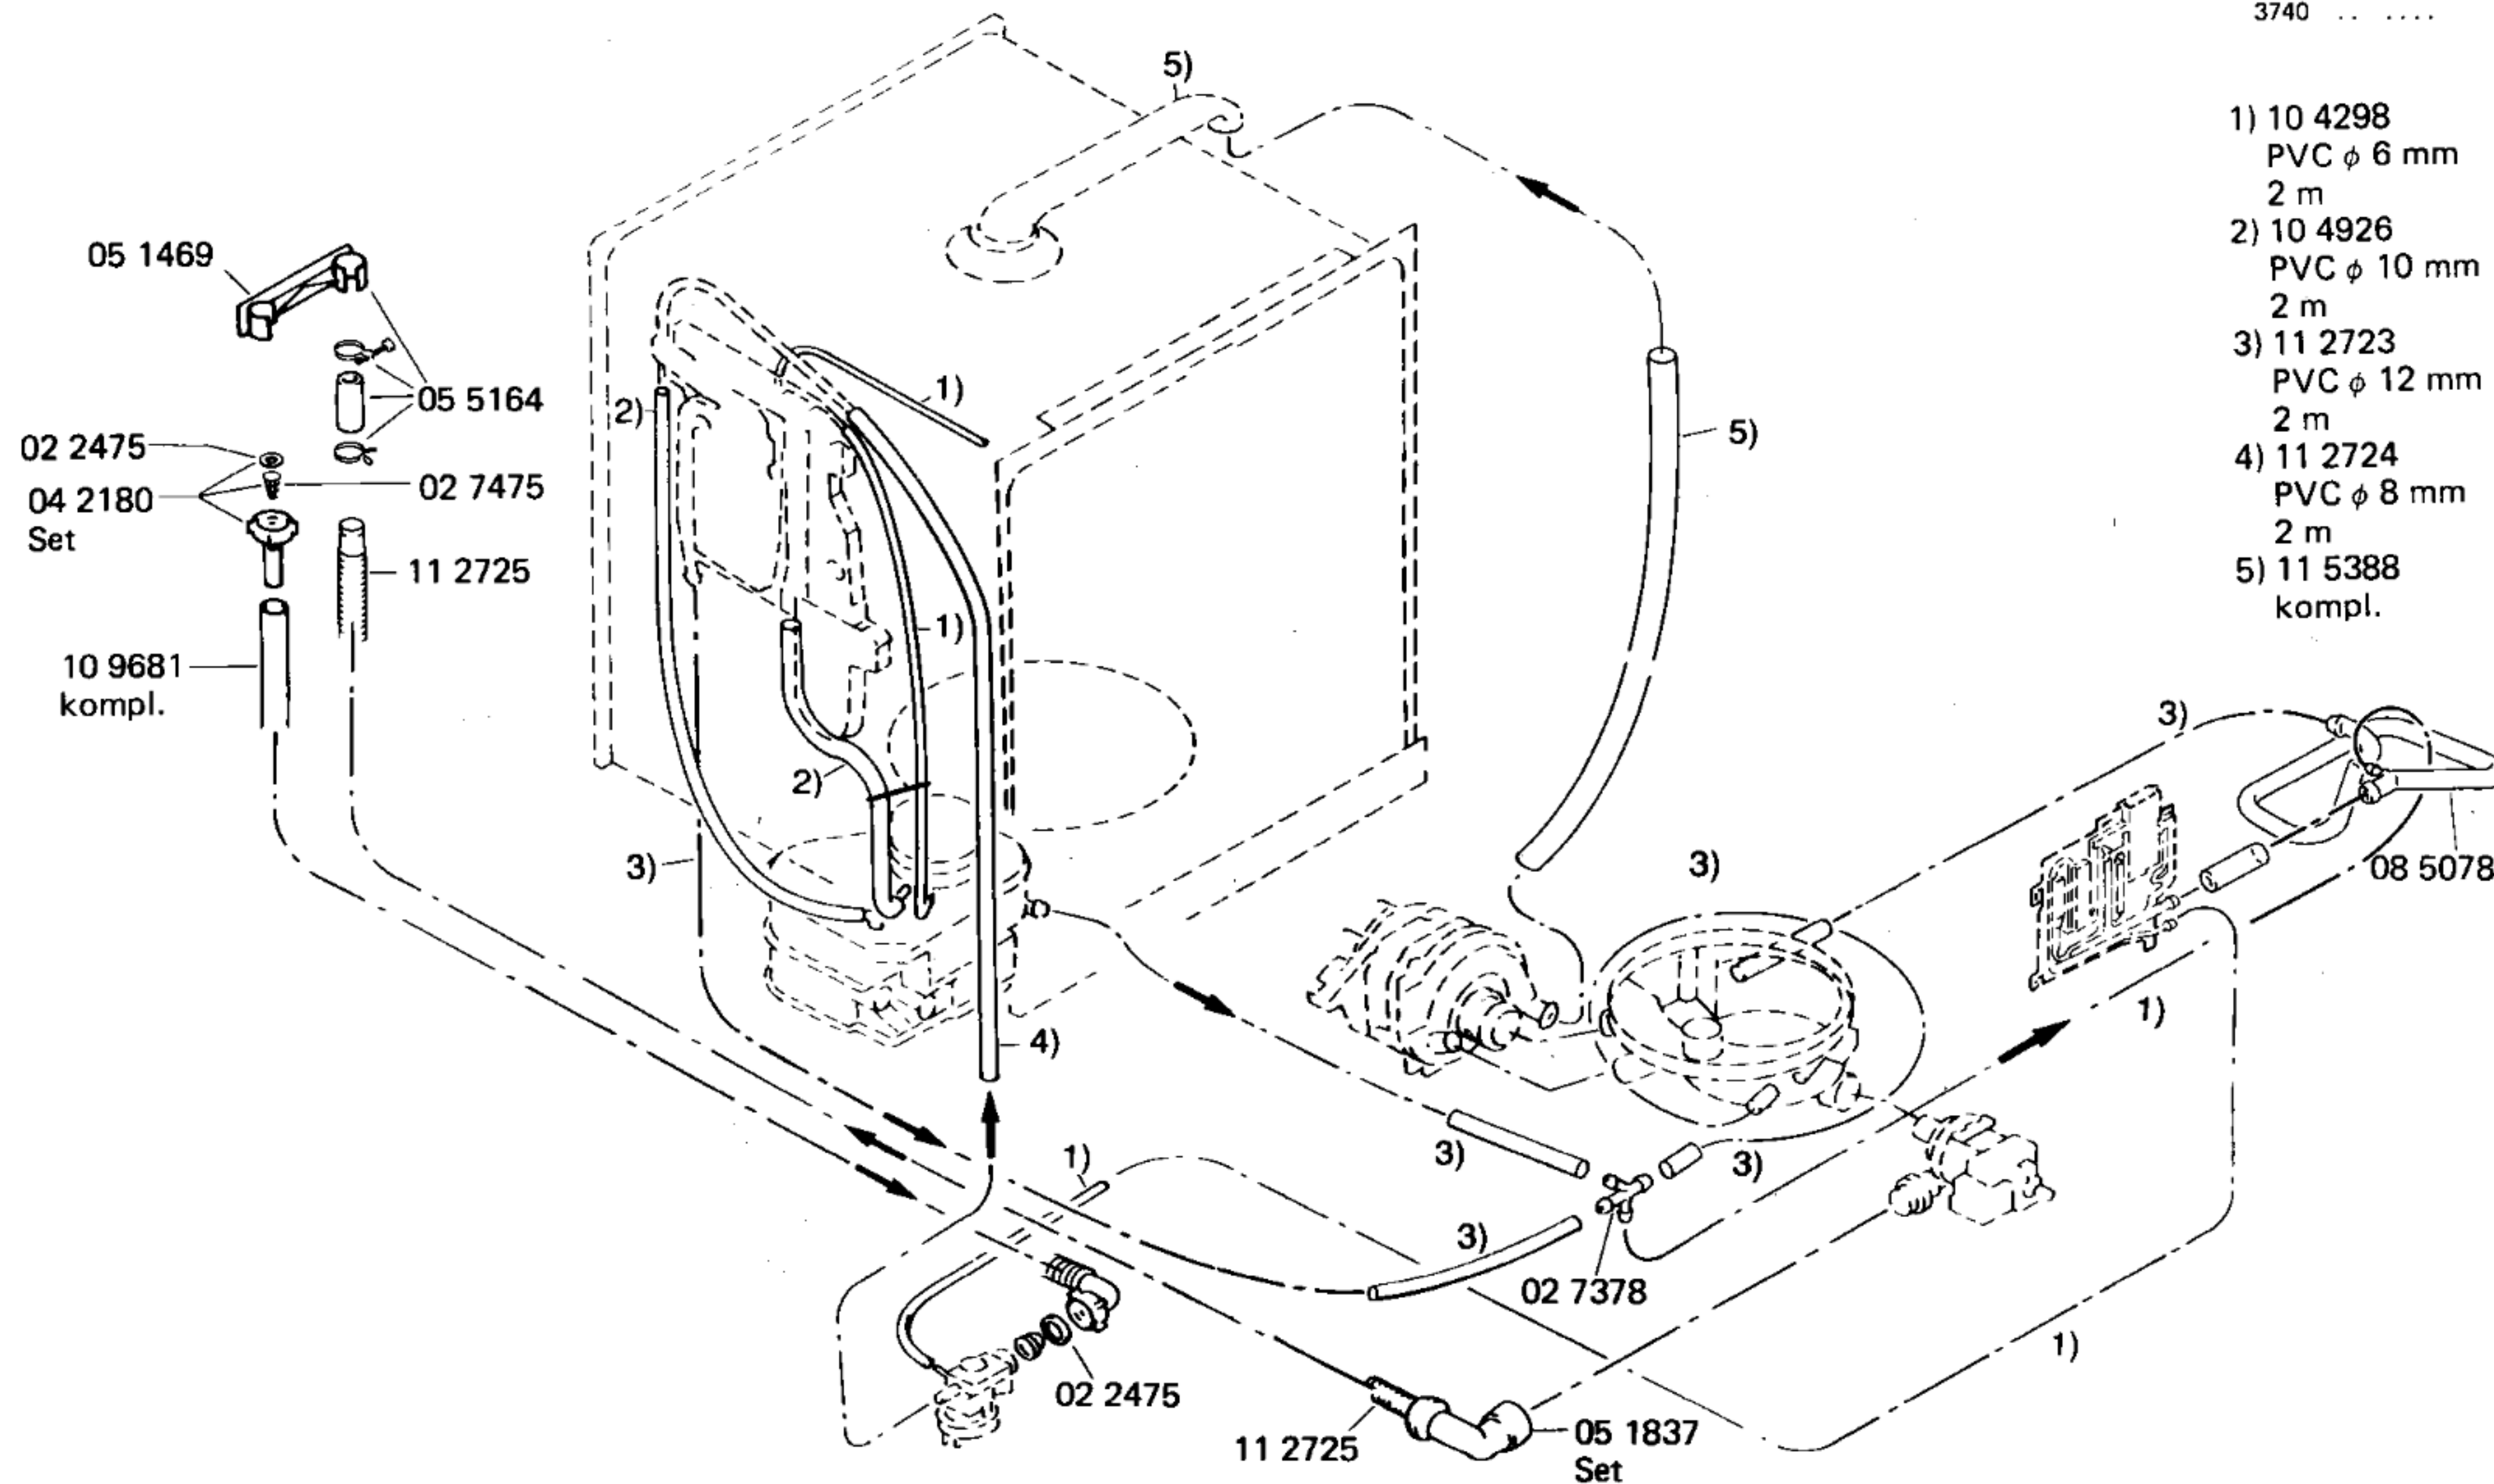GESCHIRRSPÜLGERÄTE
StandgeräteIdent-Nummern-Konstante
3740

Ident-Nummern-Konstante
3740

- 1) 08 2970
Set
- 2) 08 2971
Set

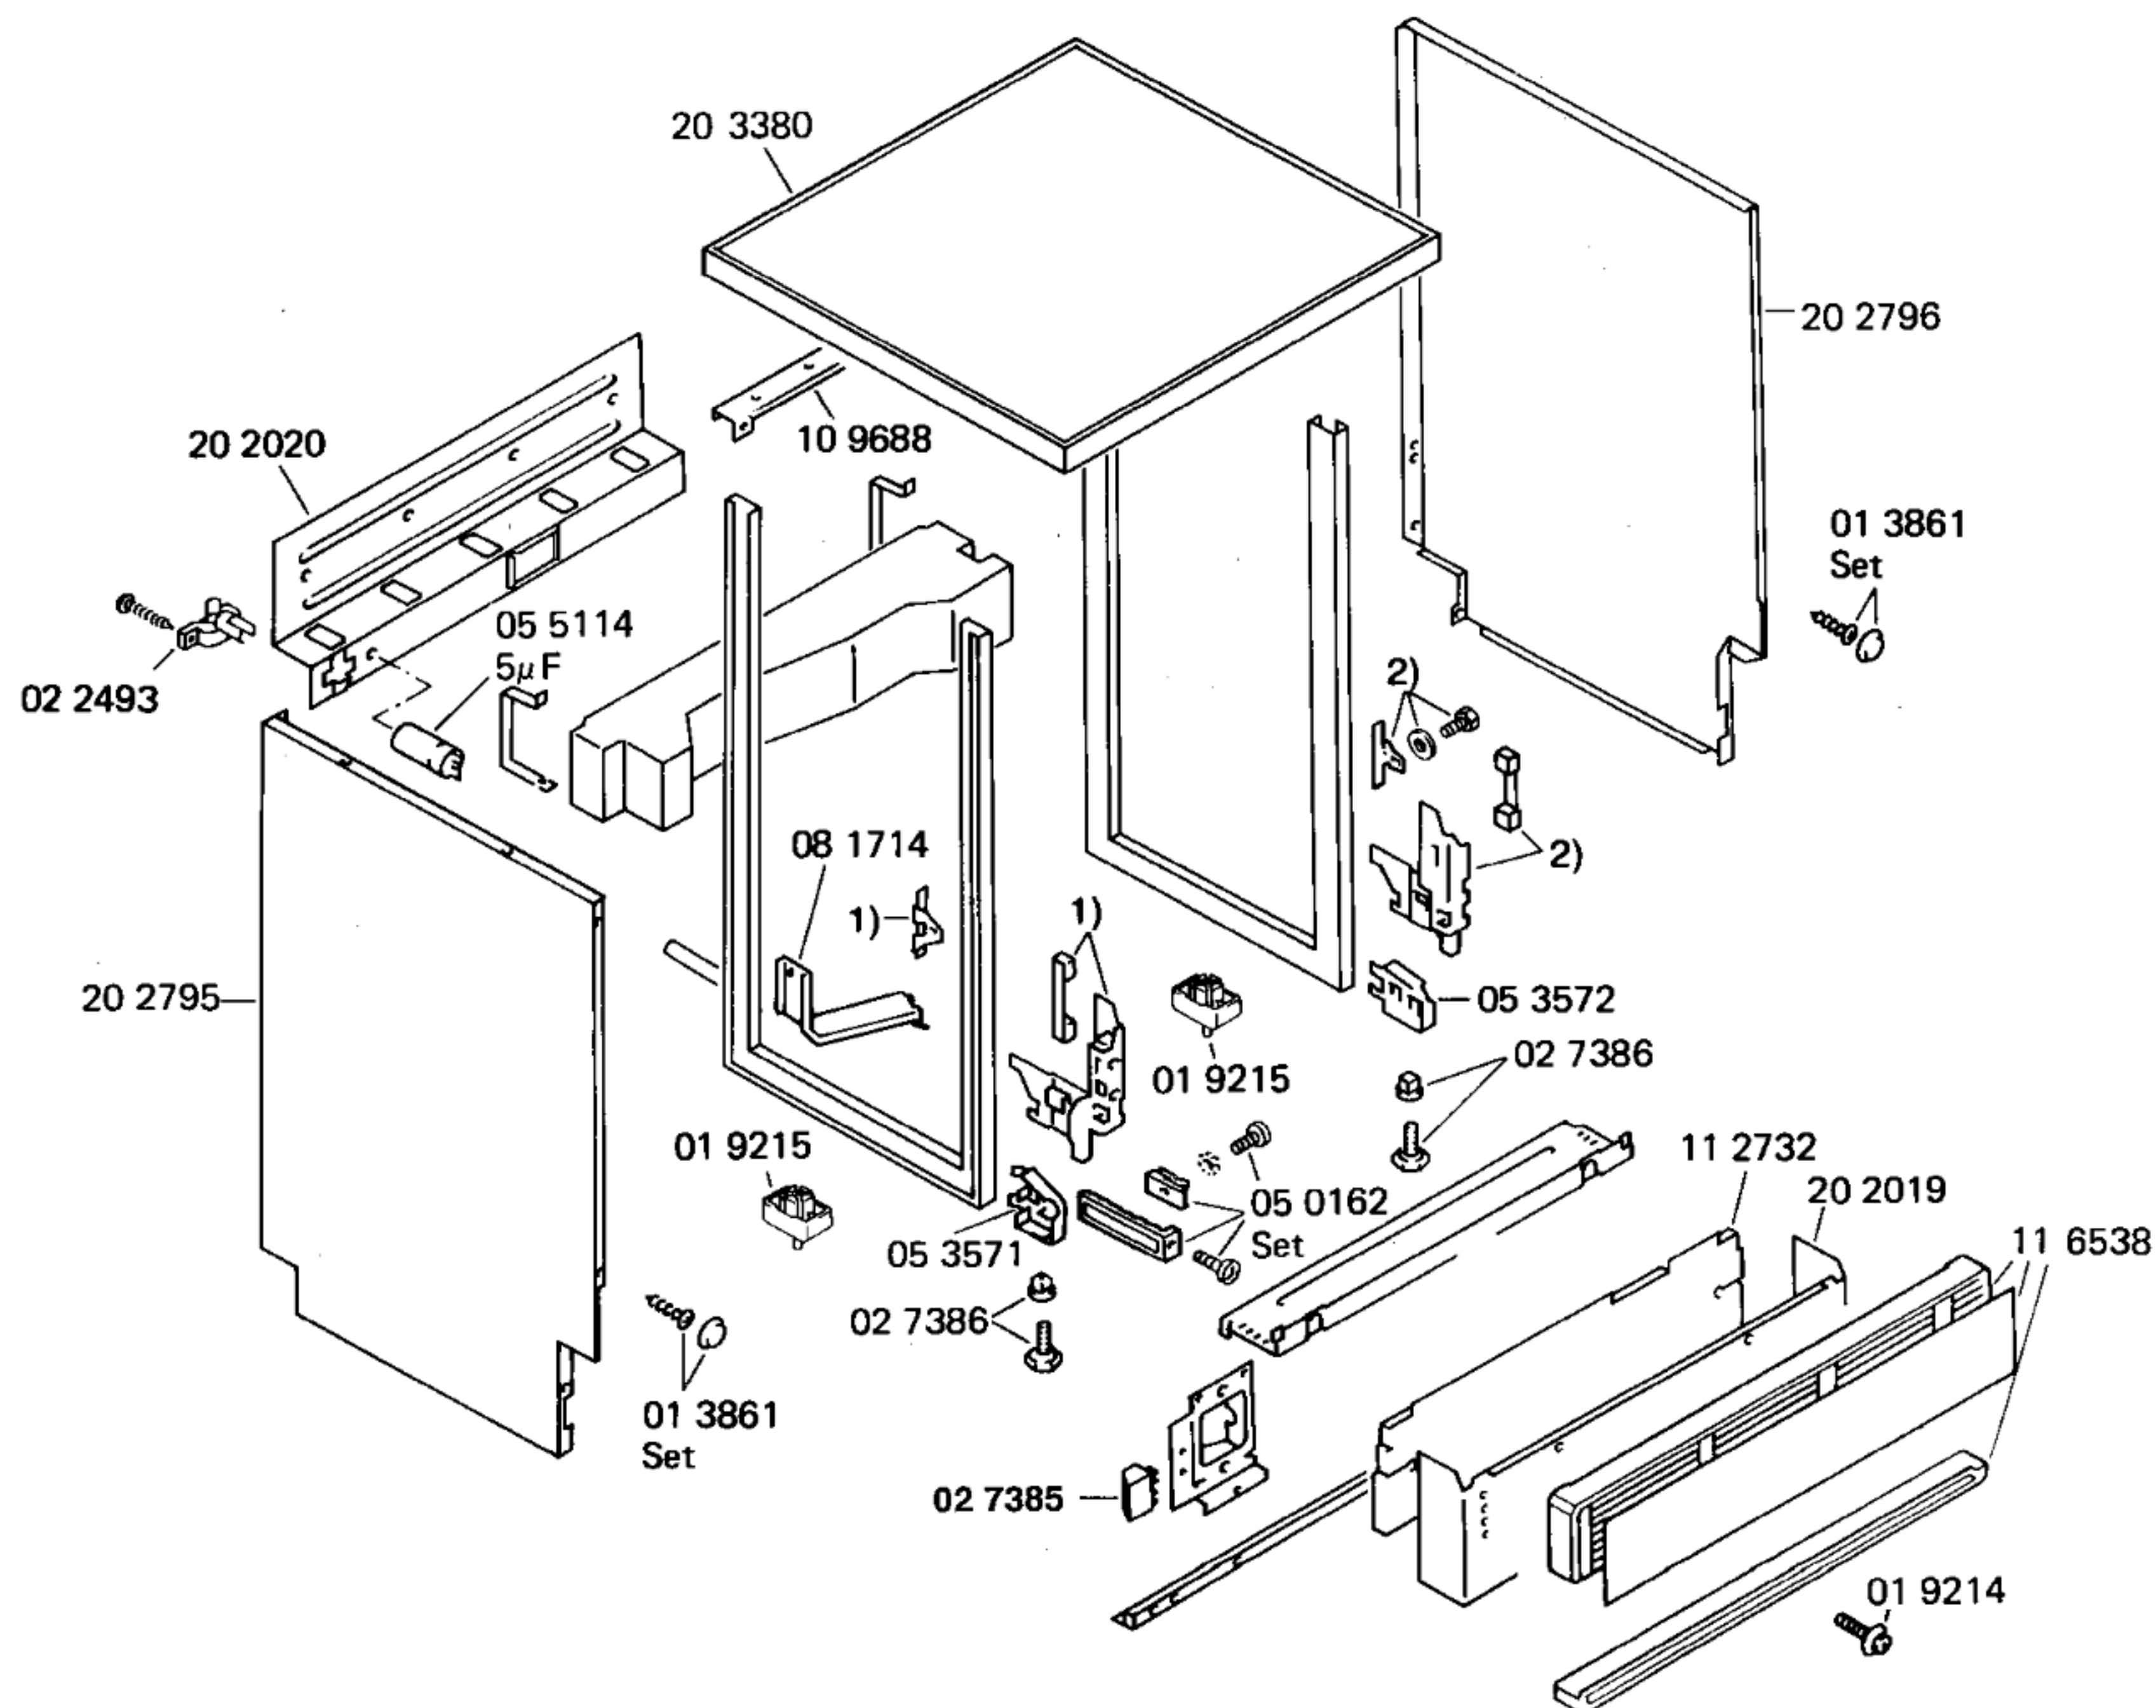

**BOSCH**

SMS 210041 - 0 730 103 555-I1

GESCHIRRSPÜLGERÄTE
StandgeräteIdent-Nummern-Konstante
3740

1) 01 9202

2) 11 0668
Set3) 05 1287
Set