




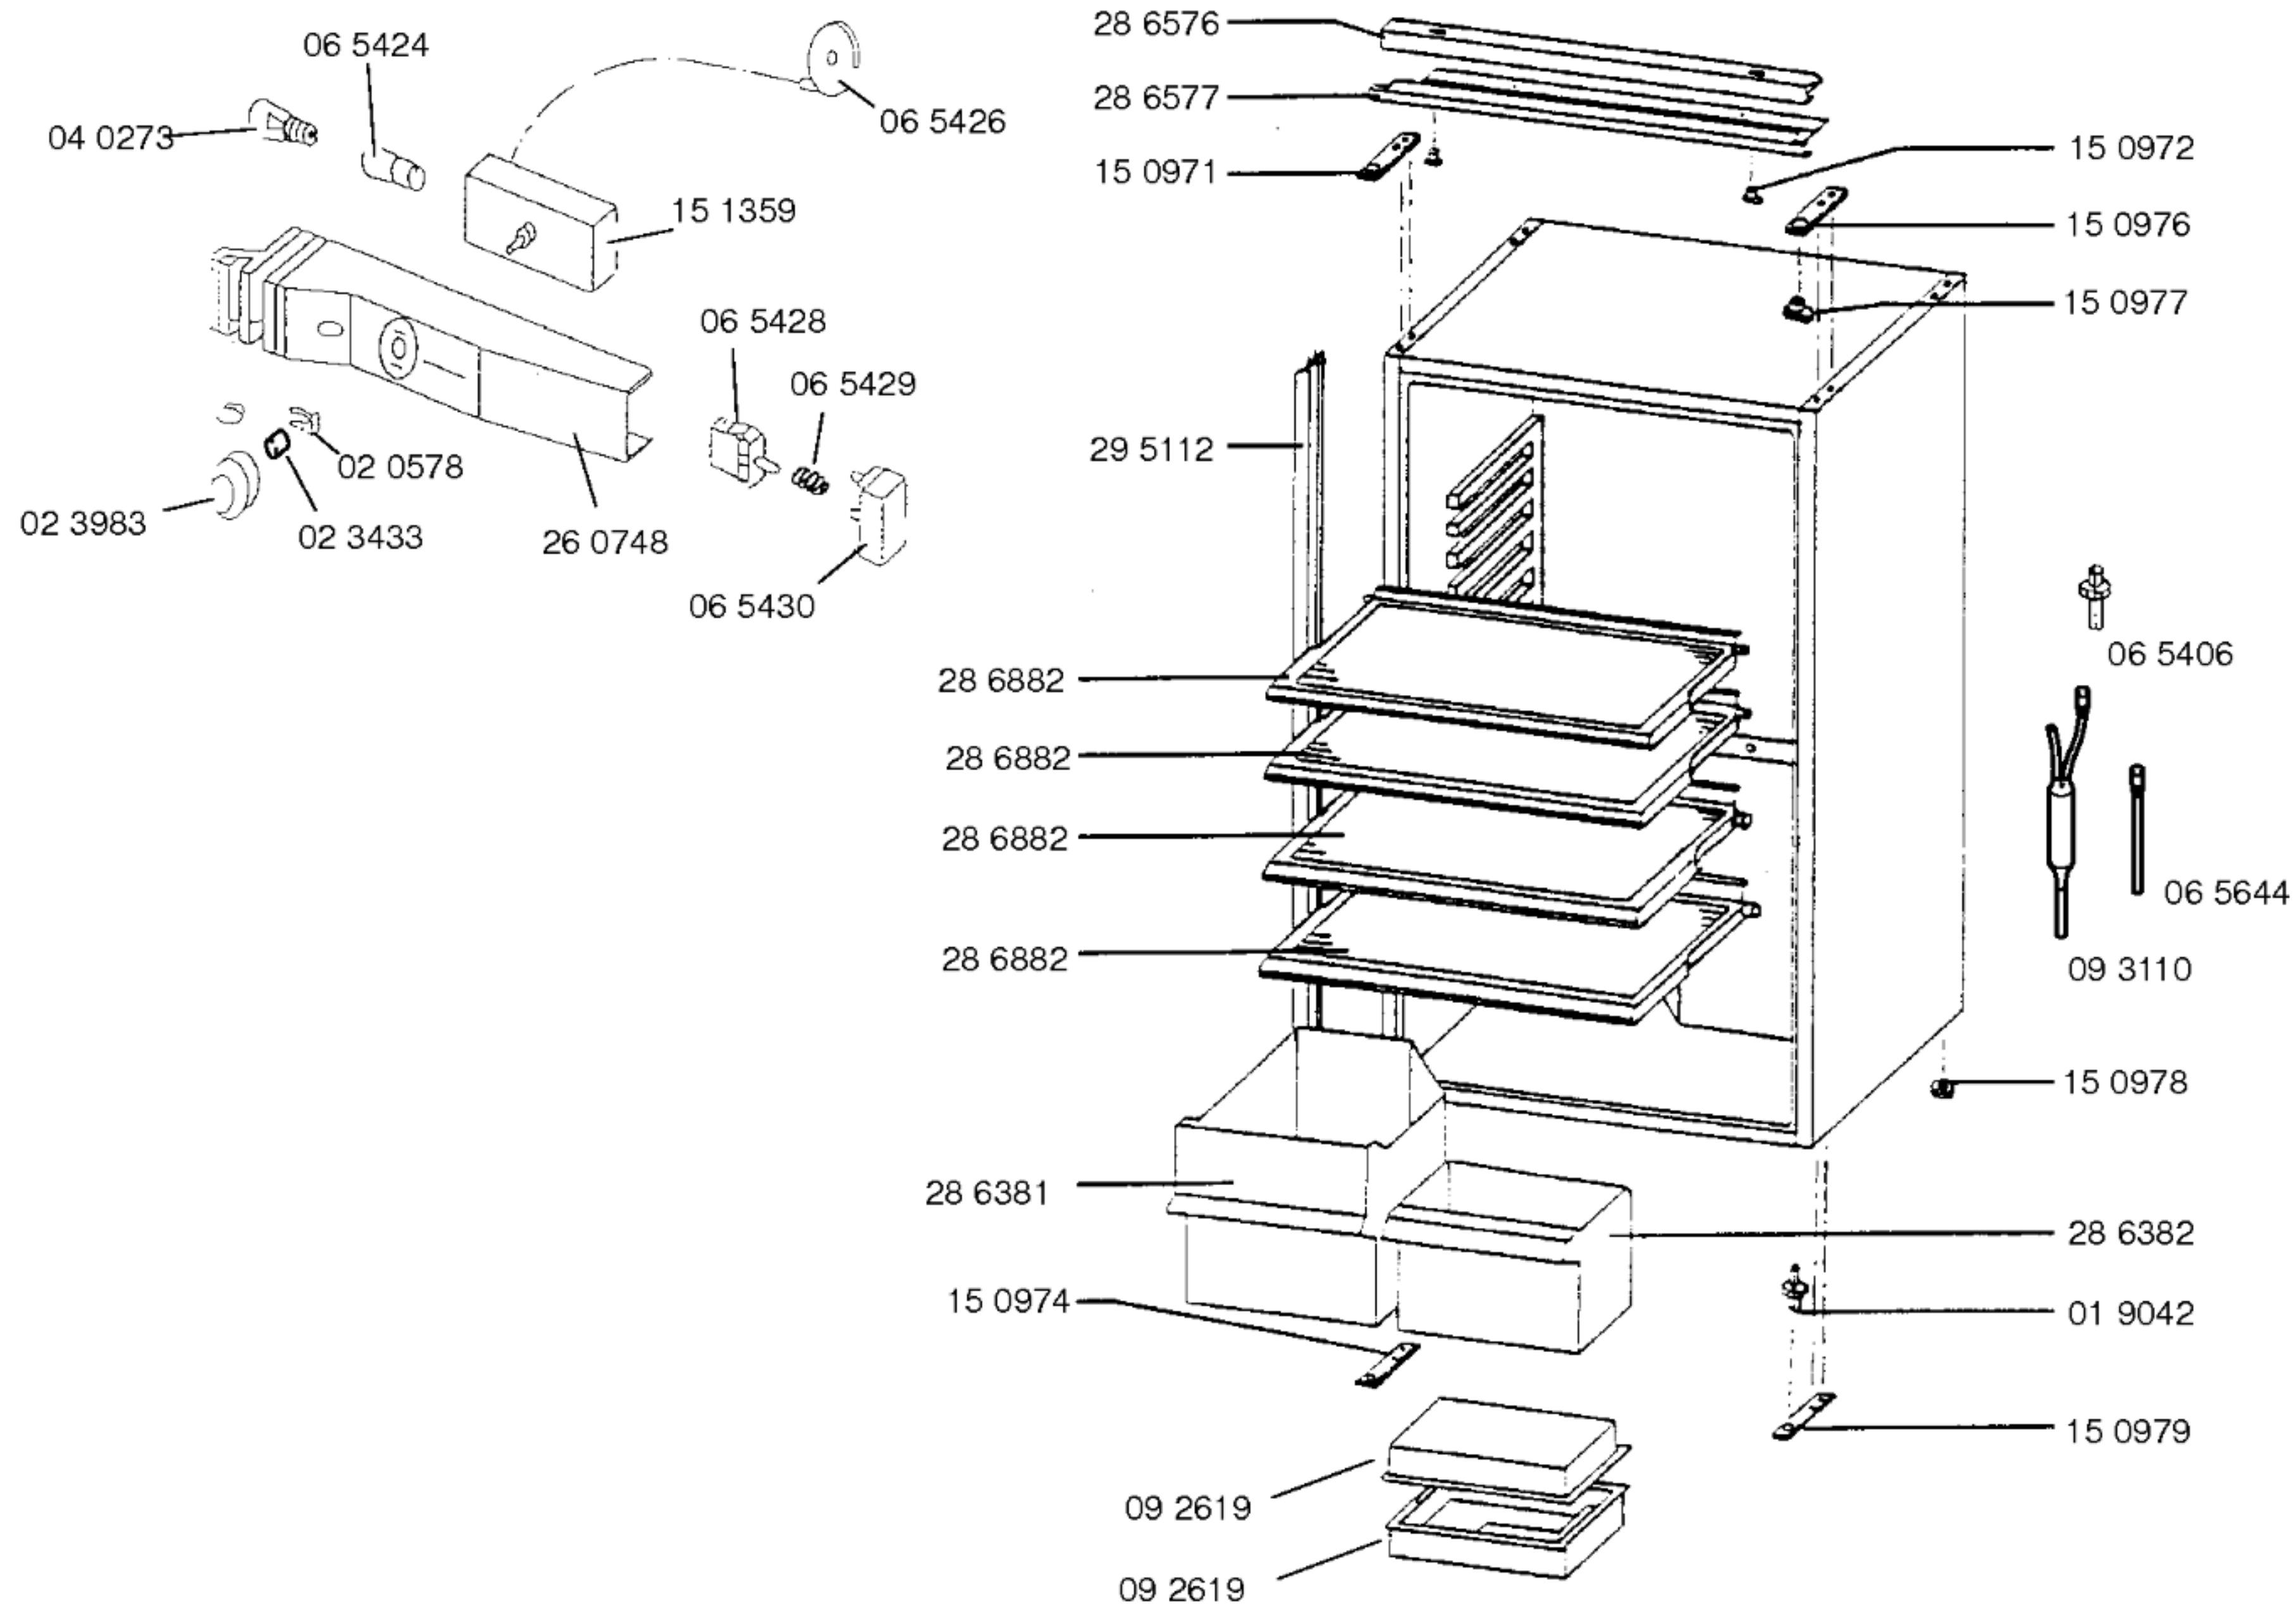

Gebrauchsanweisung
51 7288
(D,GB,F,I,E,NL)

Montageanleitung
51 7263

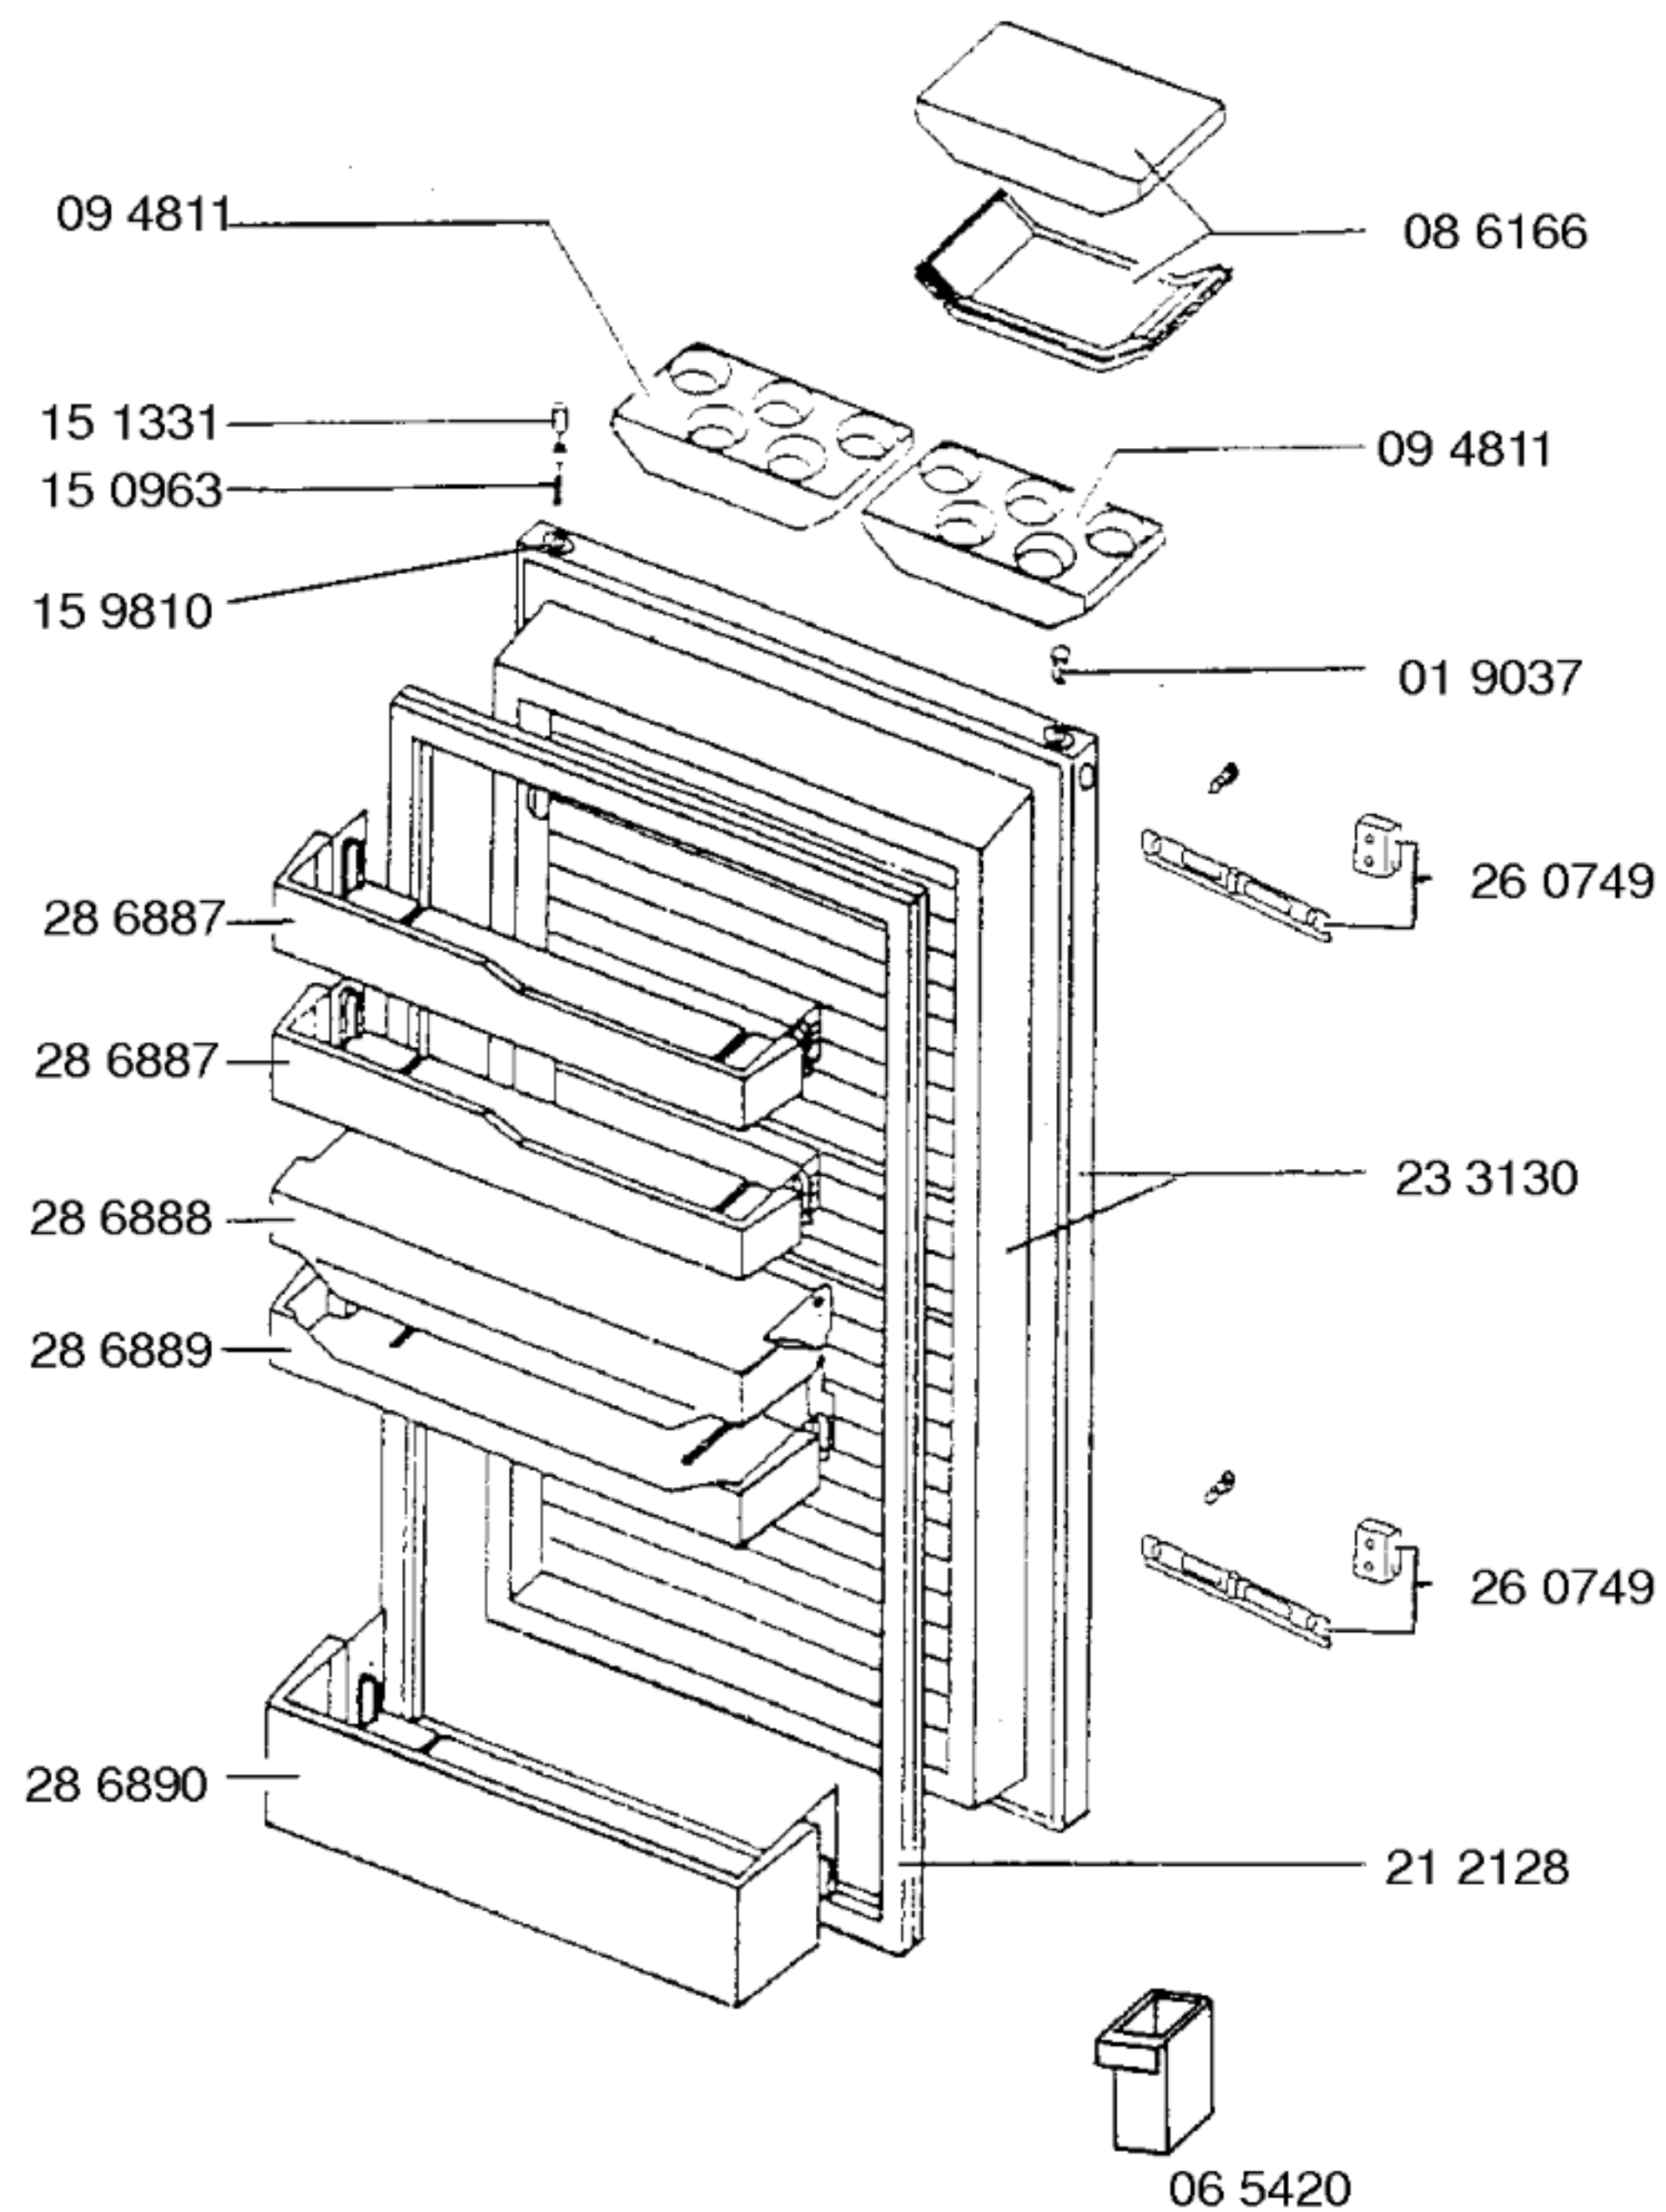

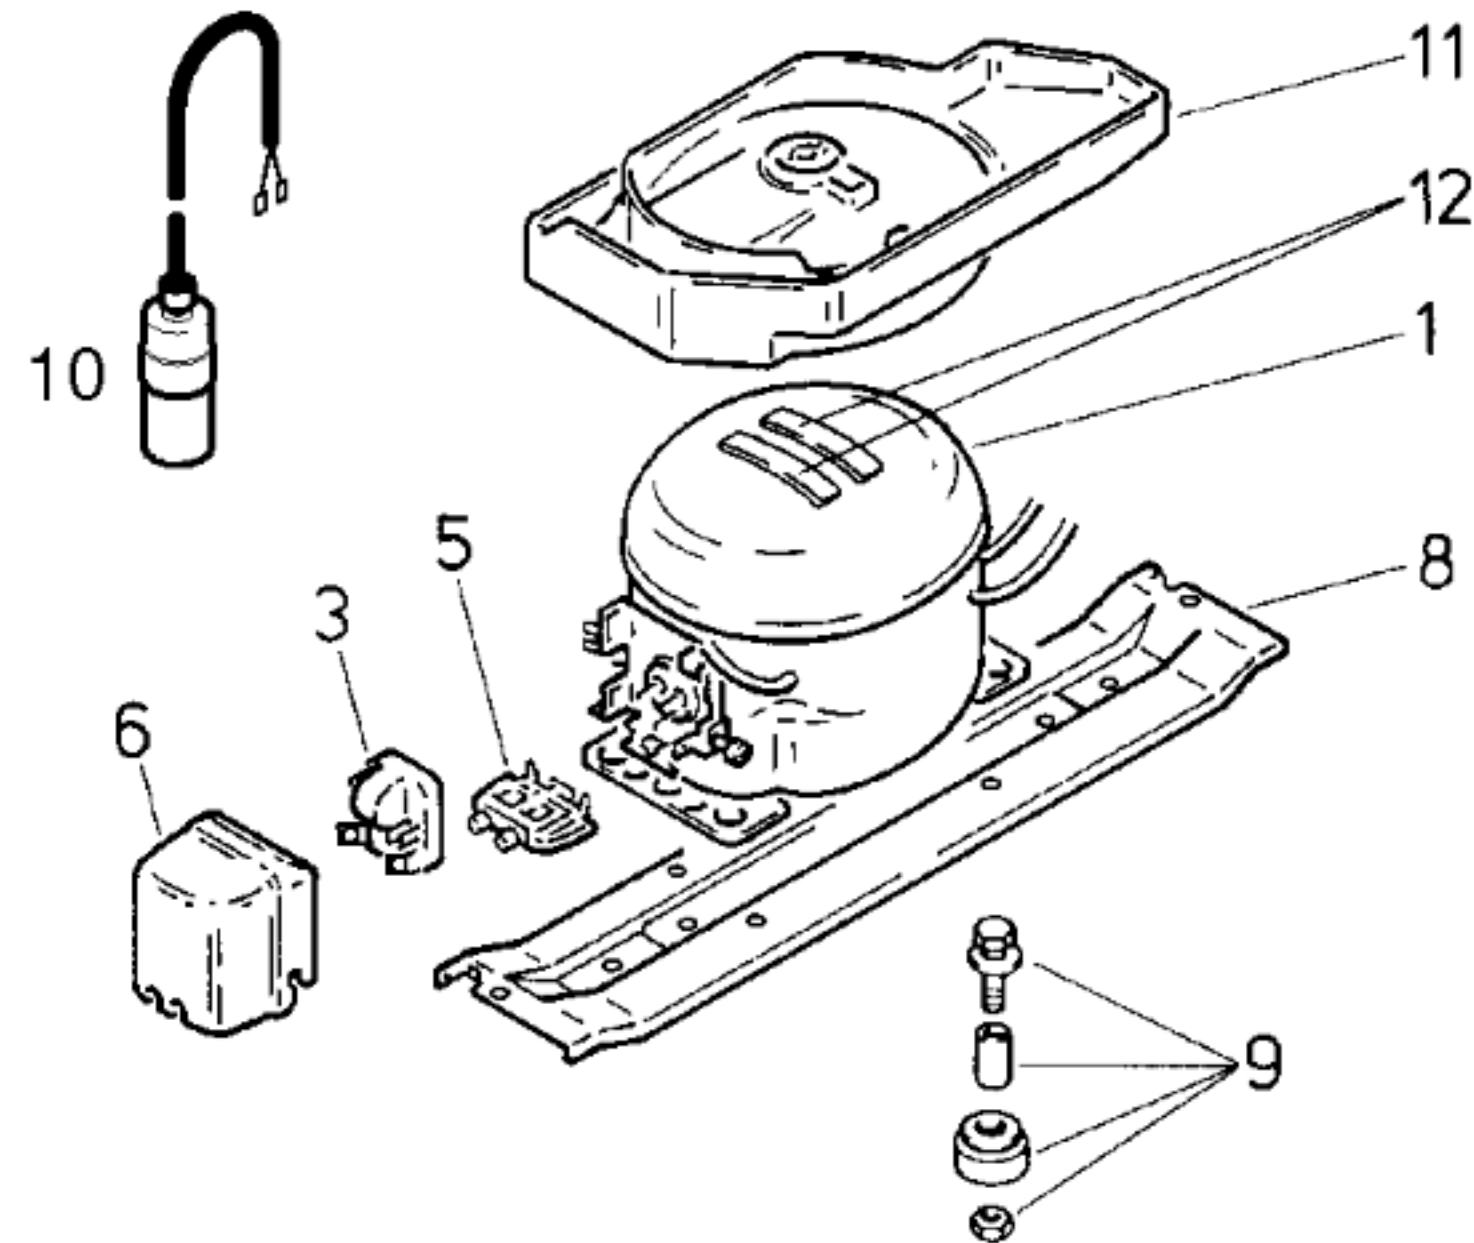

Pos.			
	Danfoss		
	TLES 6 K		
1	14 1306		
2			
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	27 8207		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 6 K		
Förderleistung/Delivery/Débit		l/h	1026	
Anlaufstrom/Starting current/Cour de démarrage		A	4,0	
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	18,9
		Hi/aux	Ω	15,3
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	°C	+4
		„aus“		+4
		(„abtauen“ od.)		-28,5
		„alarm“		-16
Füllmenge/Fill.quantity/Charge		R600a	g	
Anschlußwert/Conn.load/Puiss. connectée		W	65	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		