



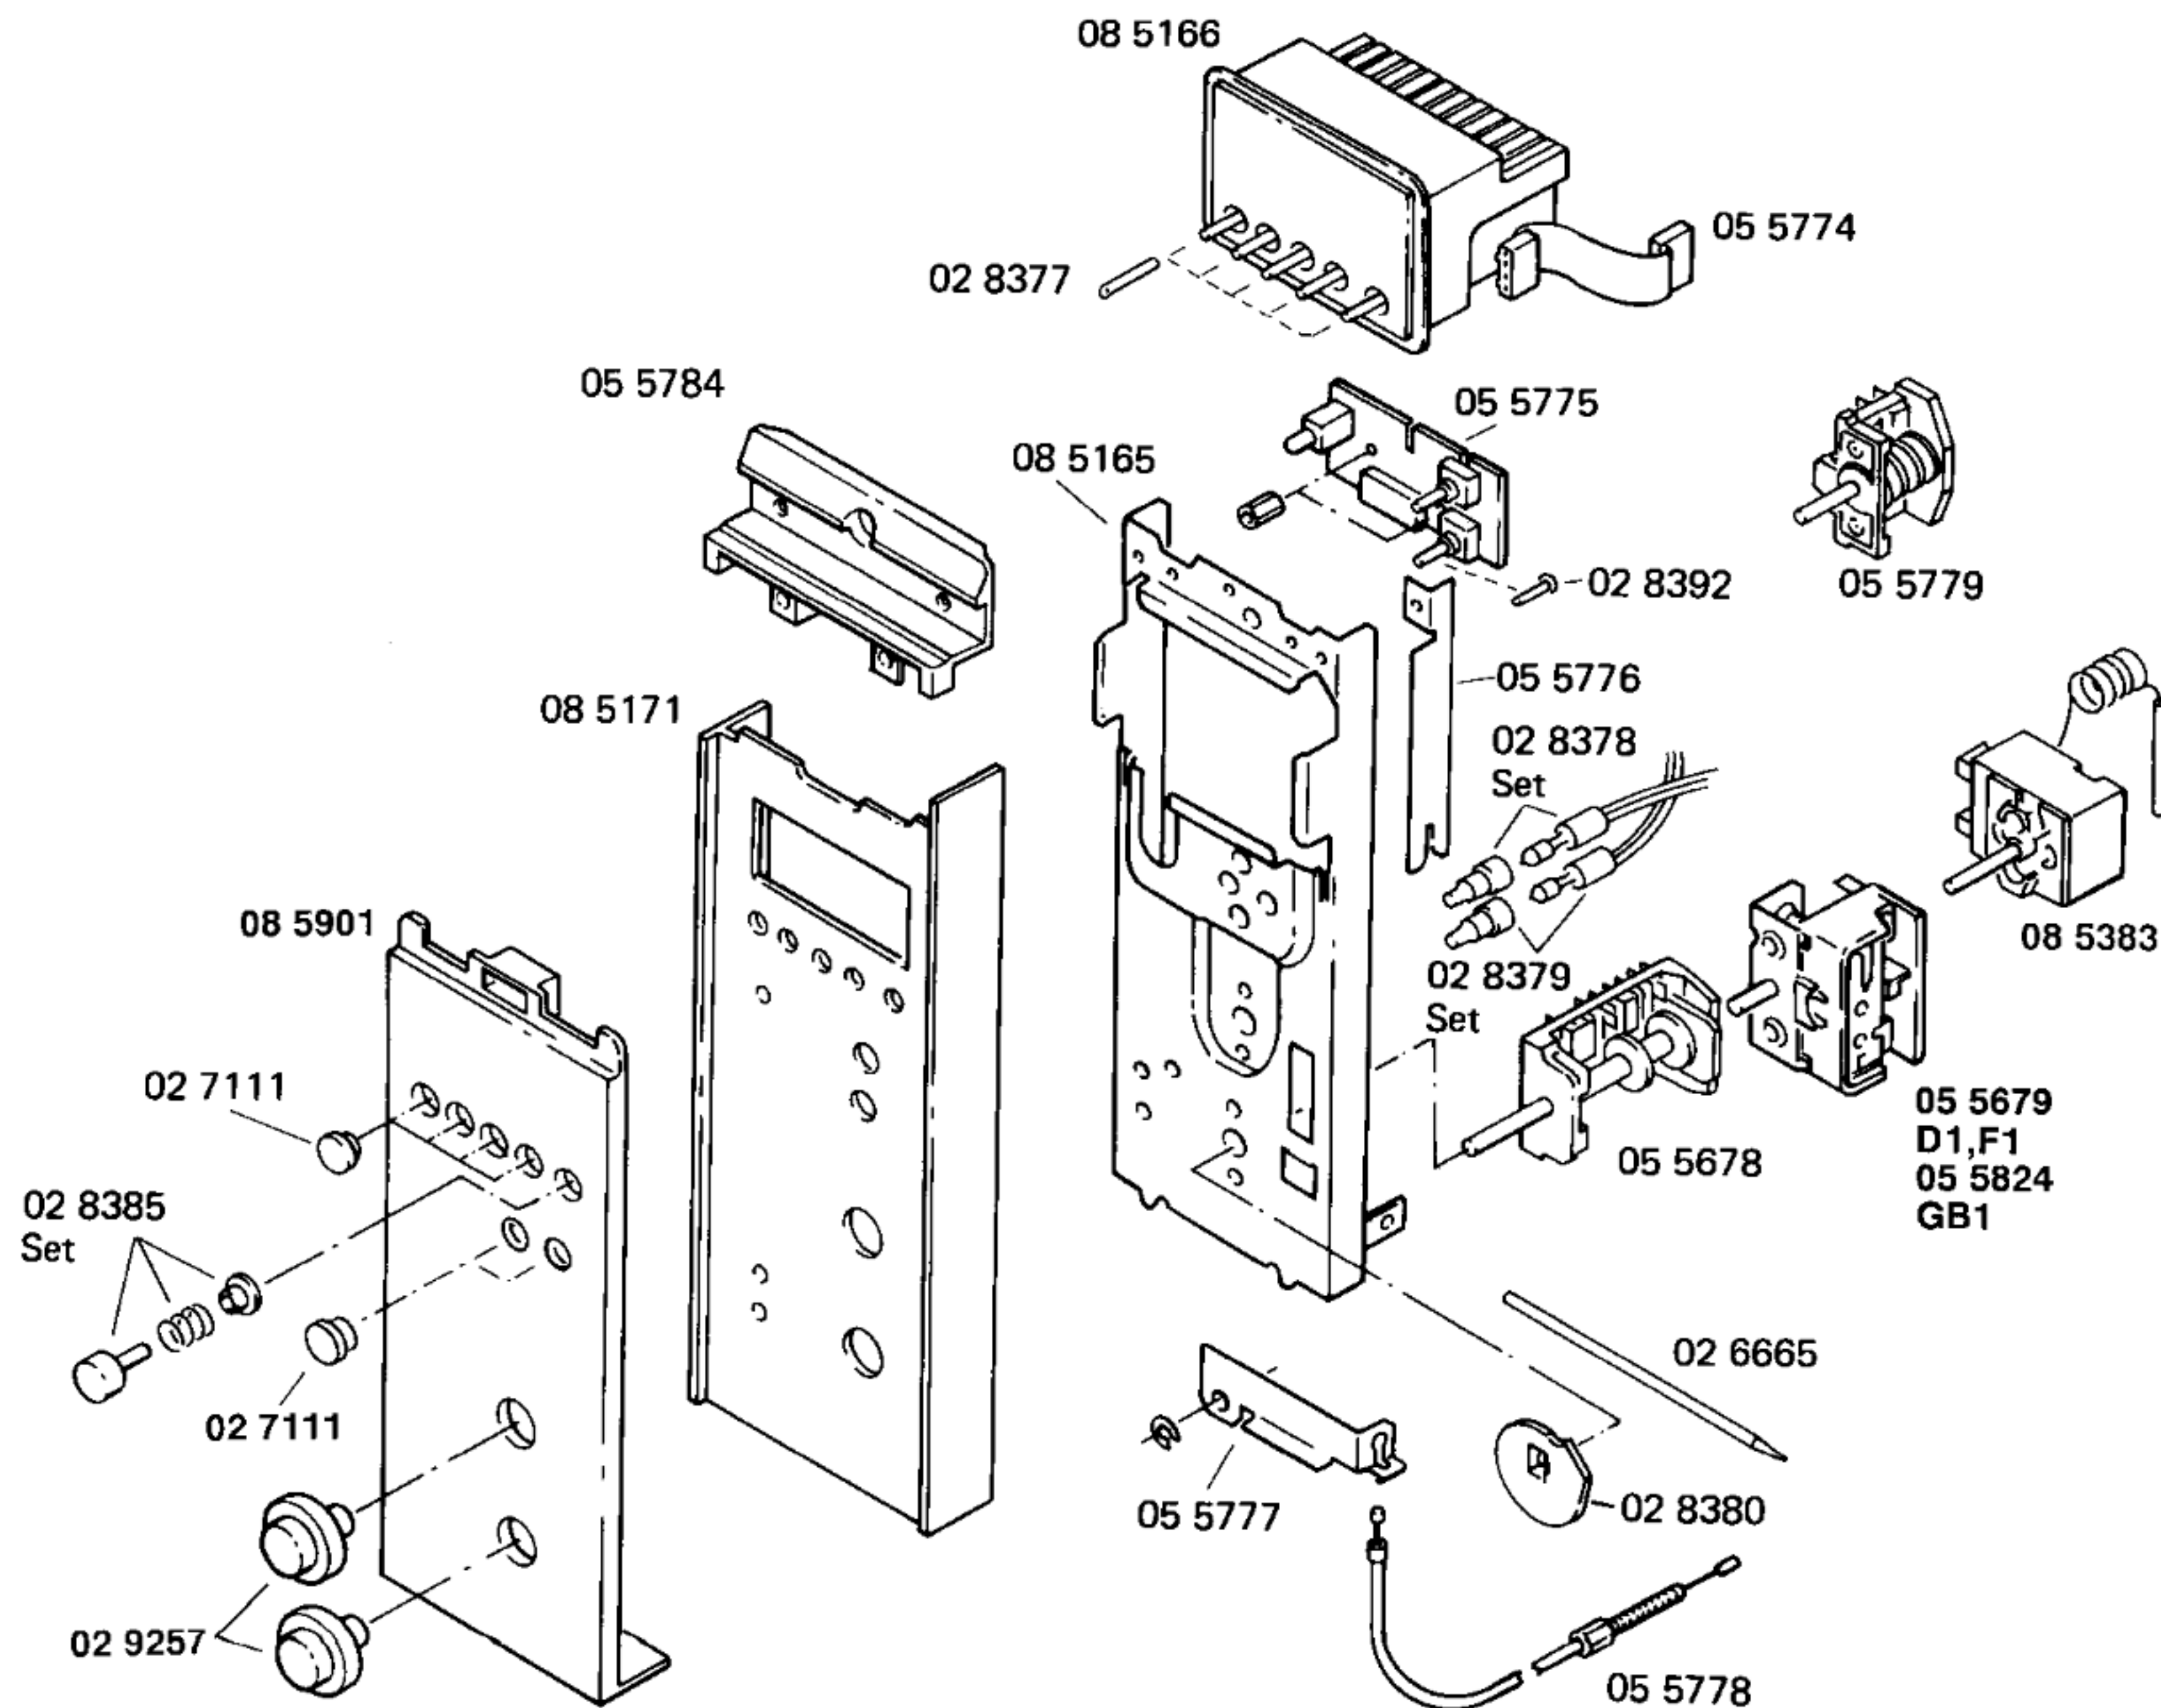


51 3328  
Gebrauchsanweisung  
(D, F, GB)  
Kochbücher  
51 2883  
(D)  
51 3329  
(GB)  
51 3412  
(F)

- 1) 11 4538  
02 8732  
Anschlagteil
- 2) Seitenblech  
kompl.  
27 0006  
links  
27 2084  
rechts
- 3) 03 1615  
rechts  
03 1616  
links

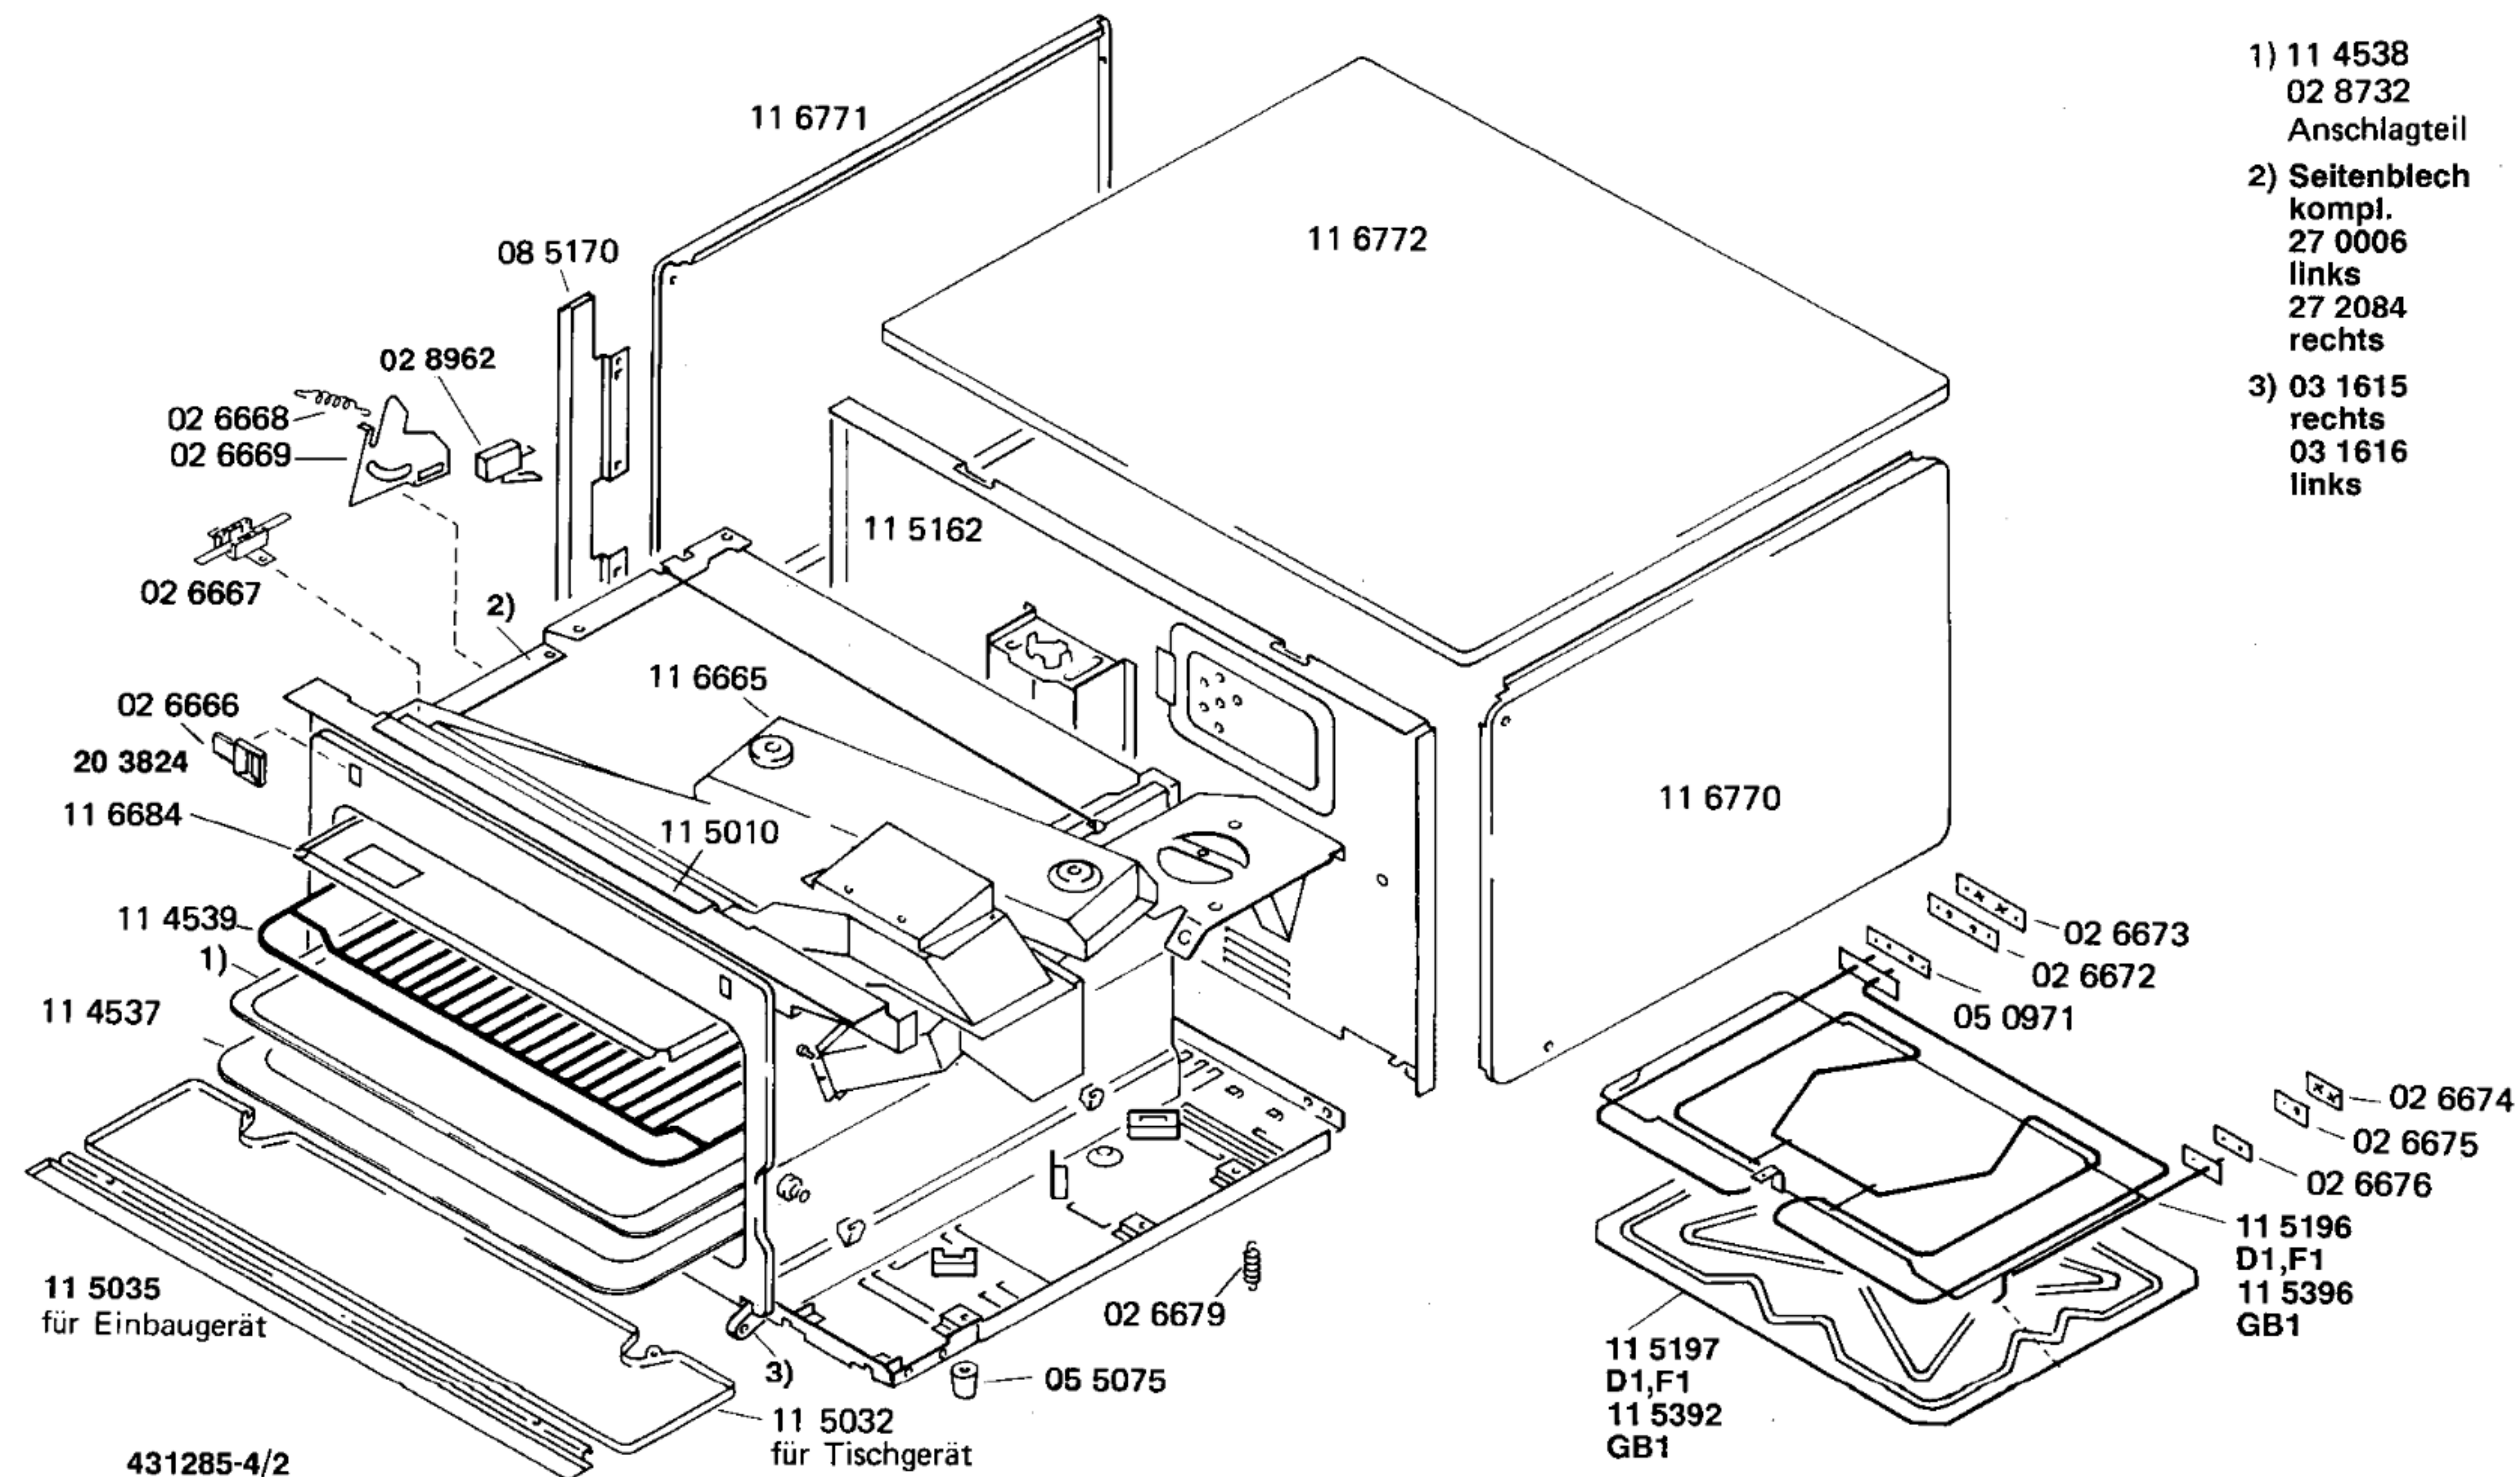



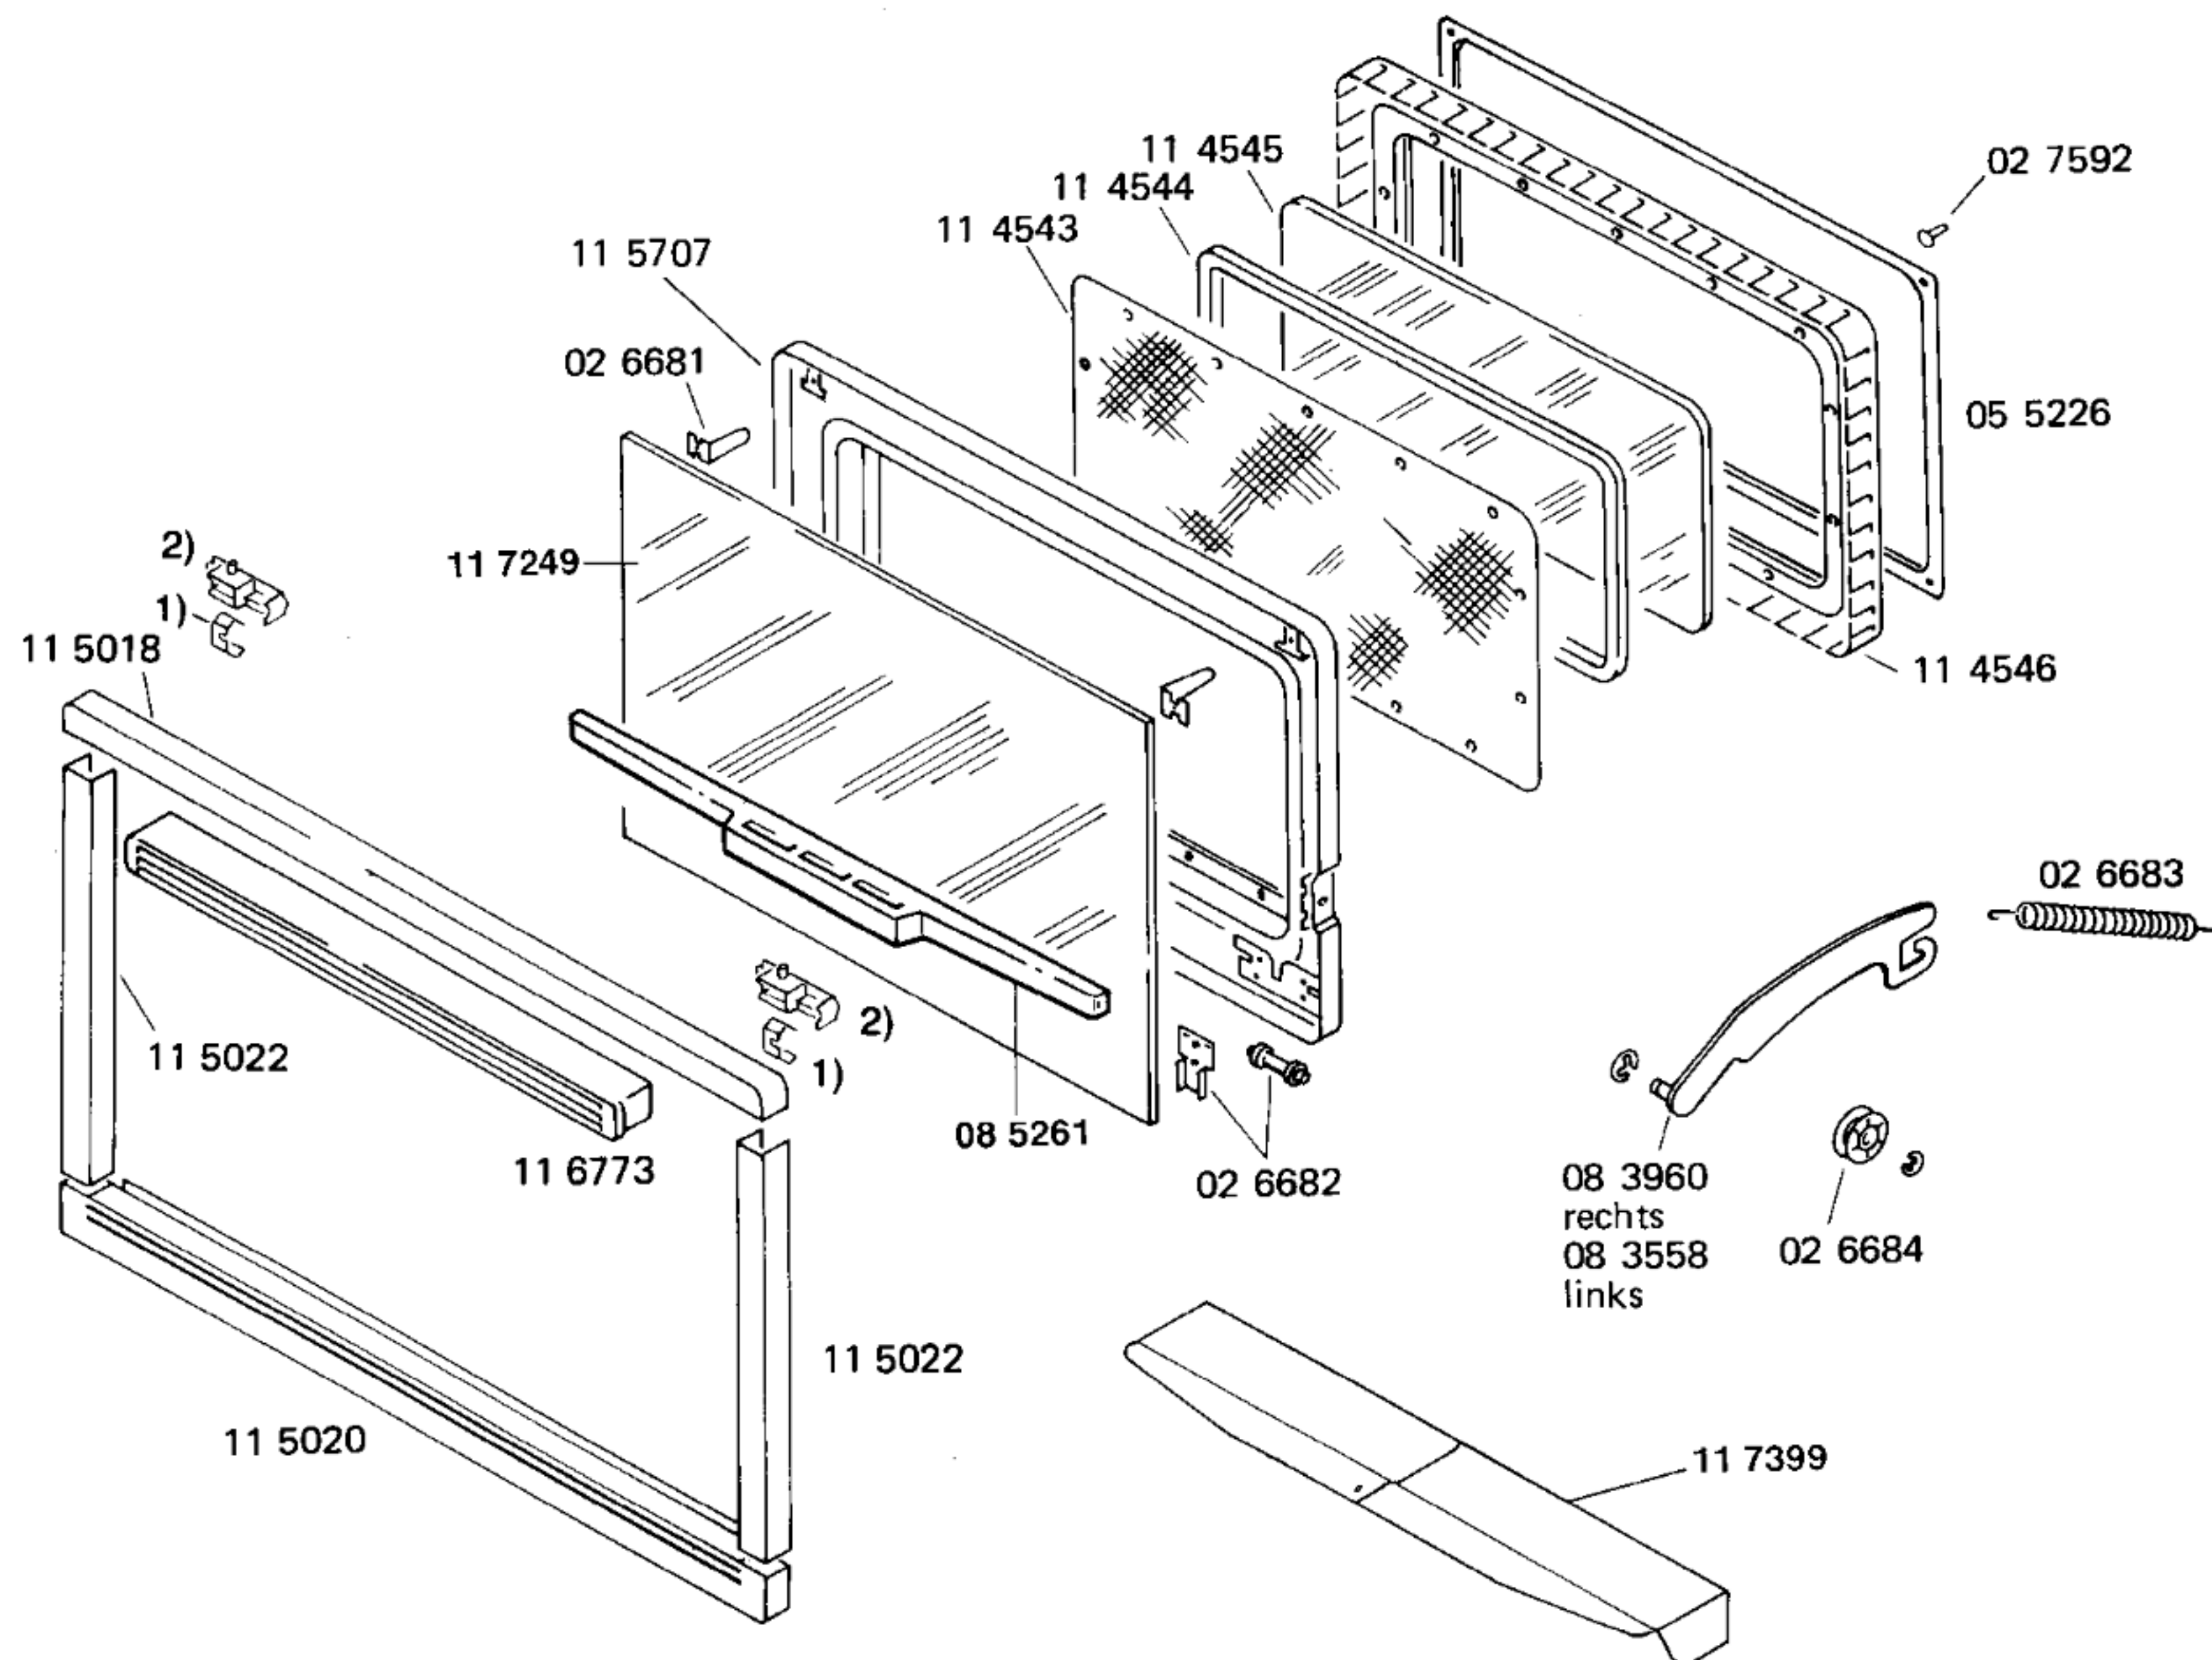

1) 02 7045  
2) 02 7044

