 
 
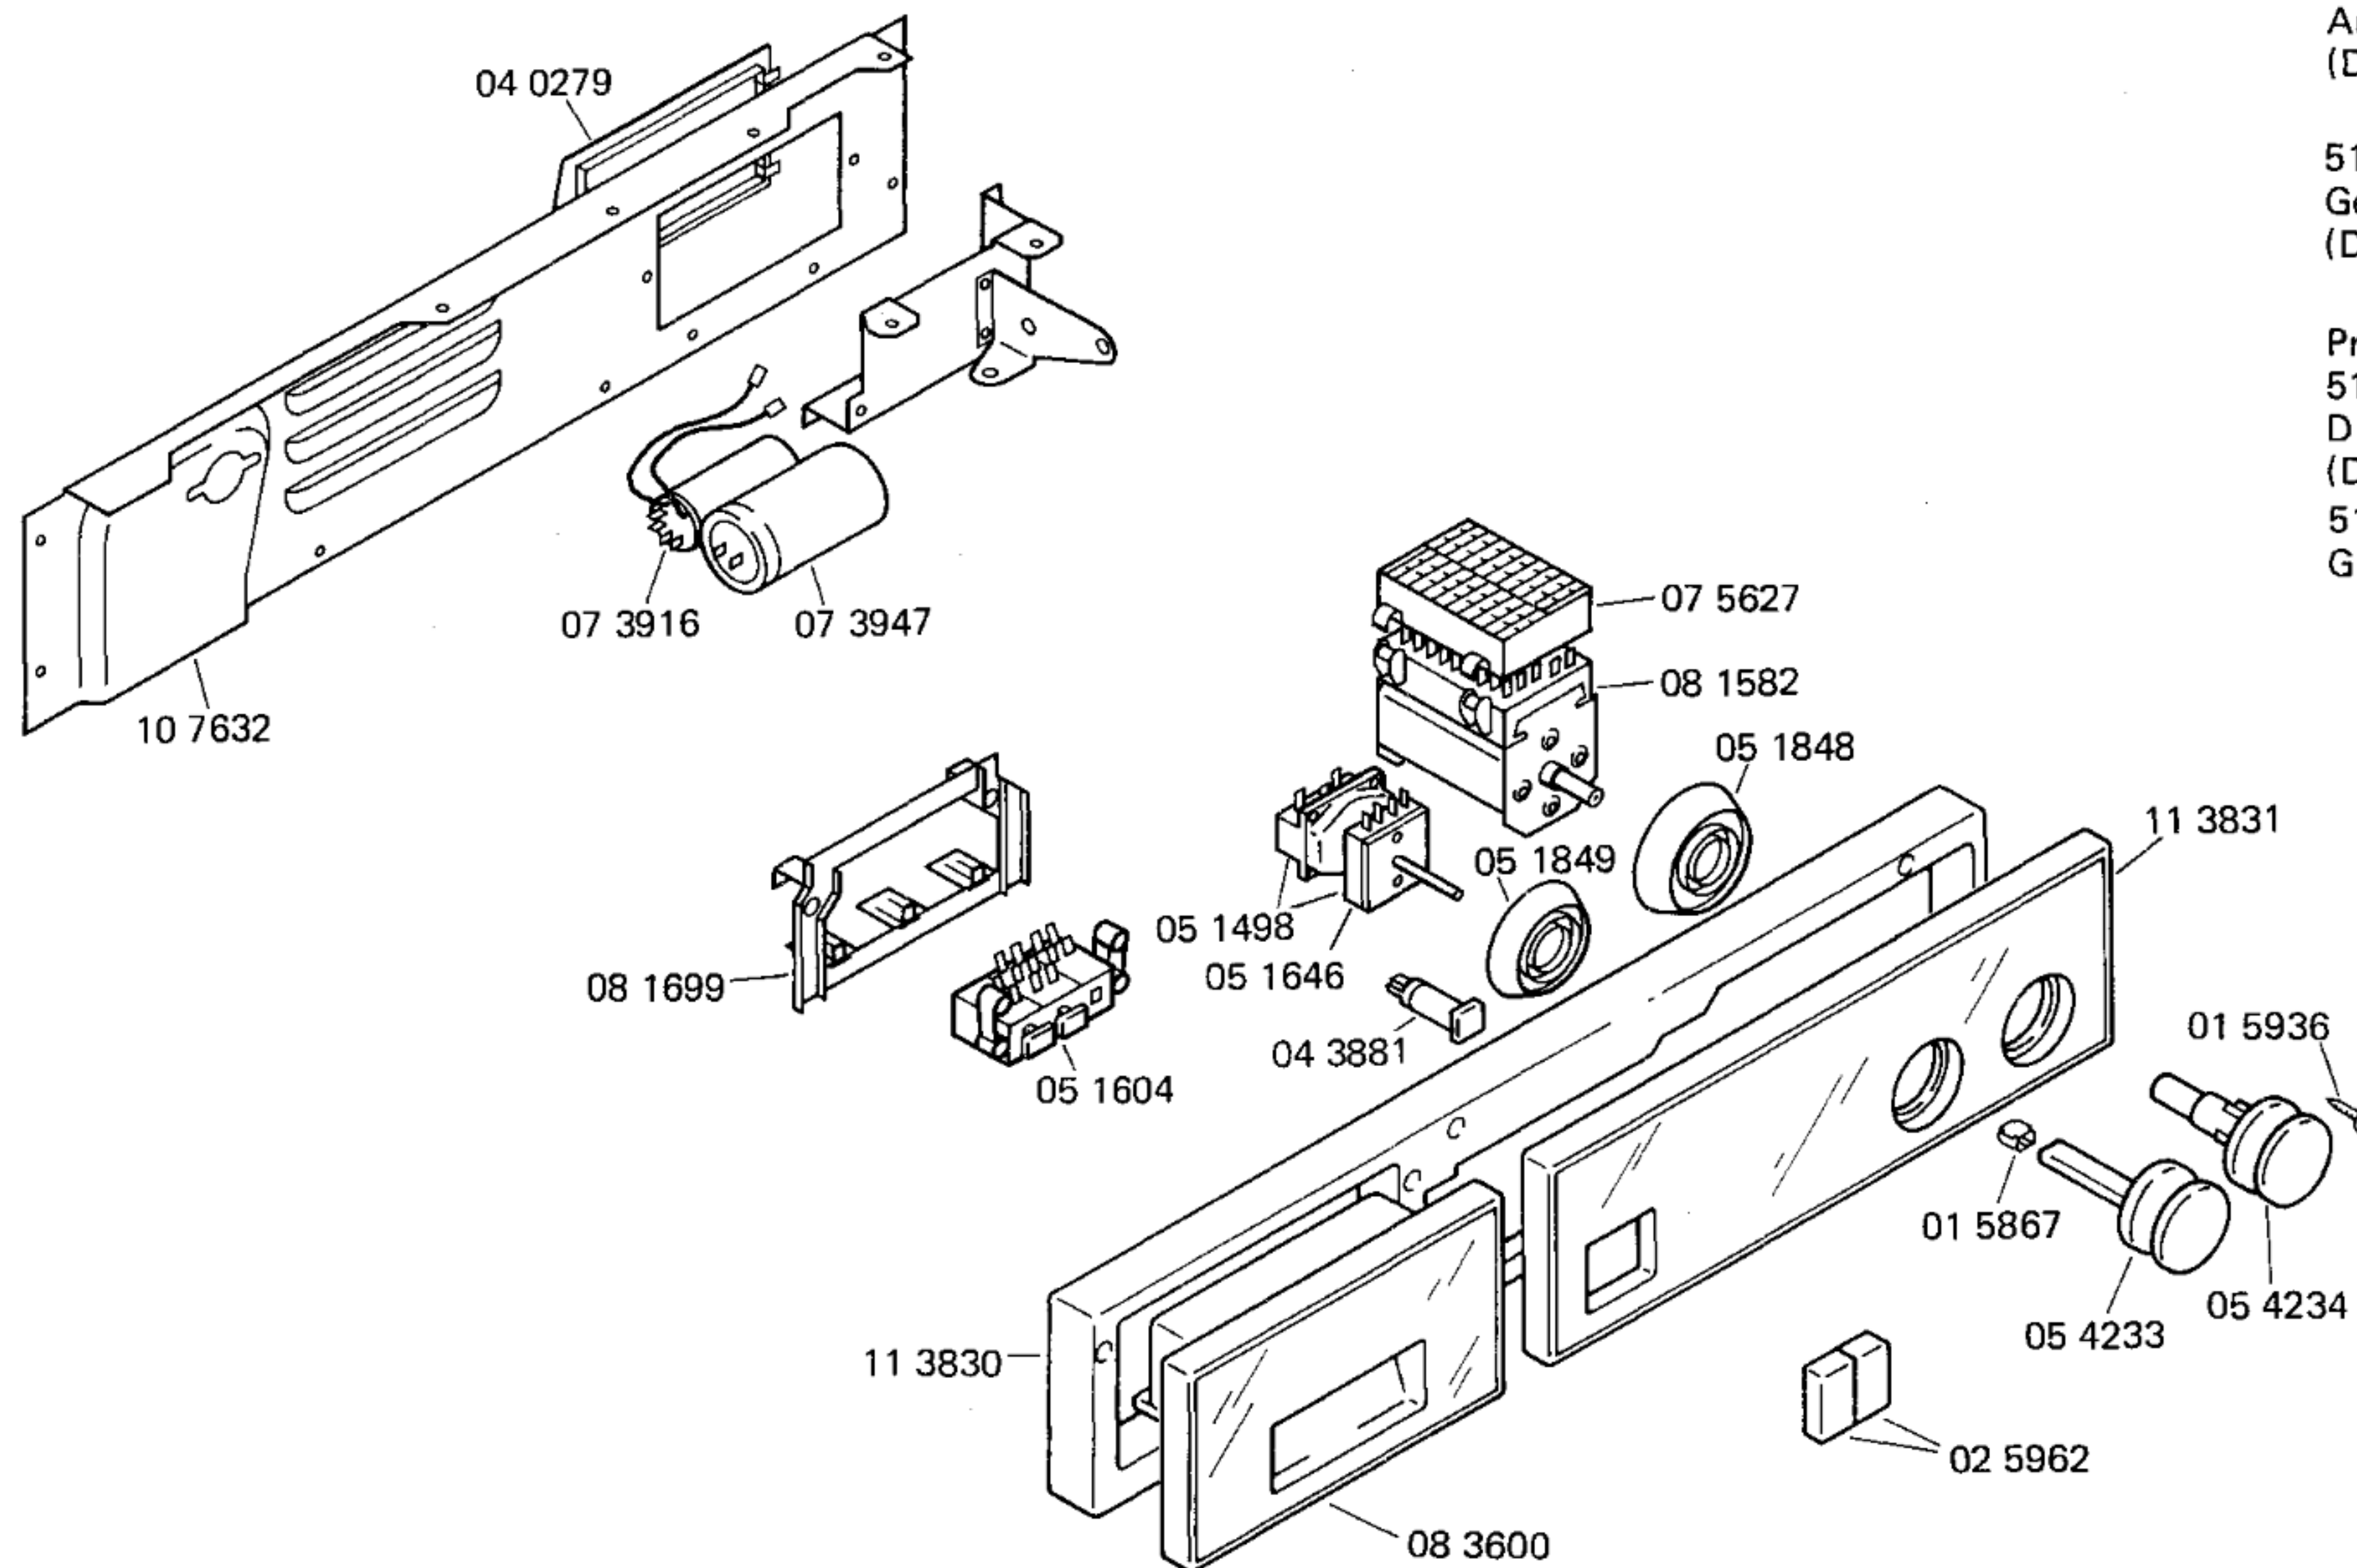 


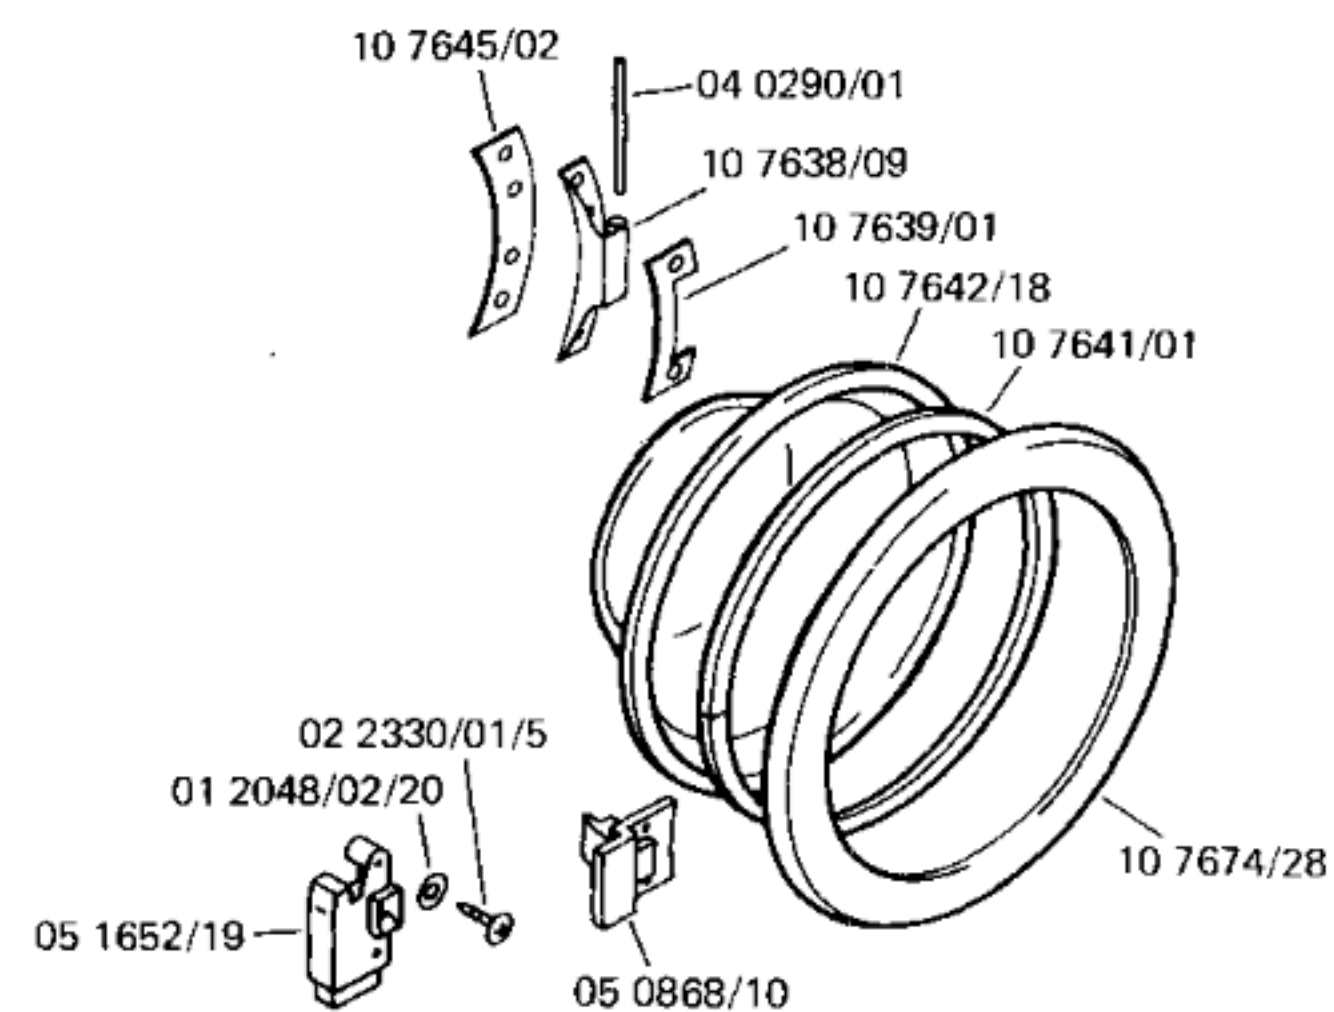


51 1712
Aufstellanweisung
(D,F,I,NL,GB,E)


51 1717
Gebrauchsanweisung
(D,F,I,NL,GB,E)

 Programmtabellen:
51 1718
D1
(D,F,I,NL,GB,E)
51 1719
GB1

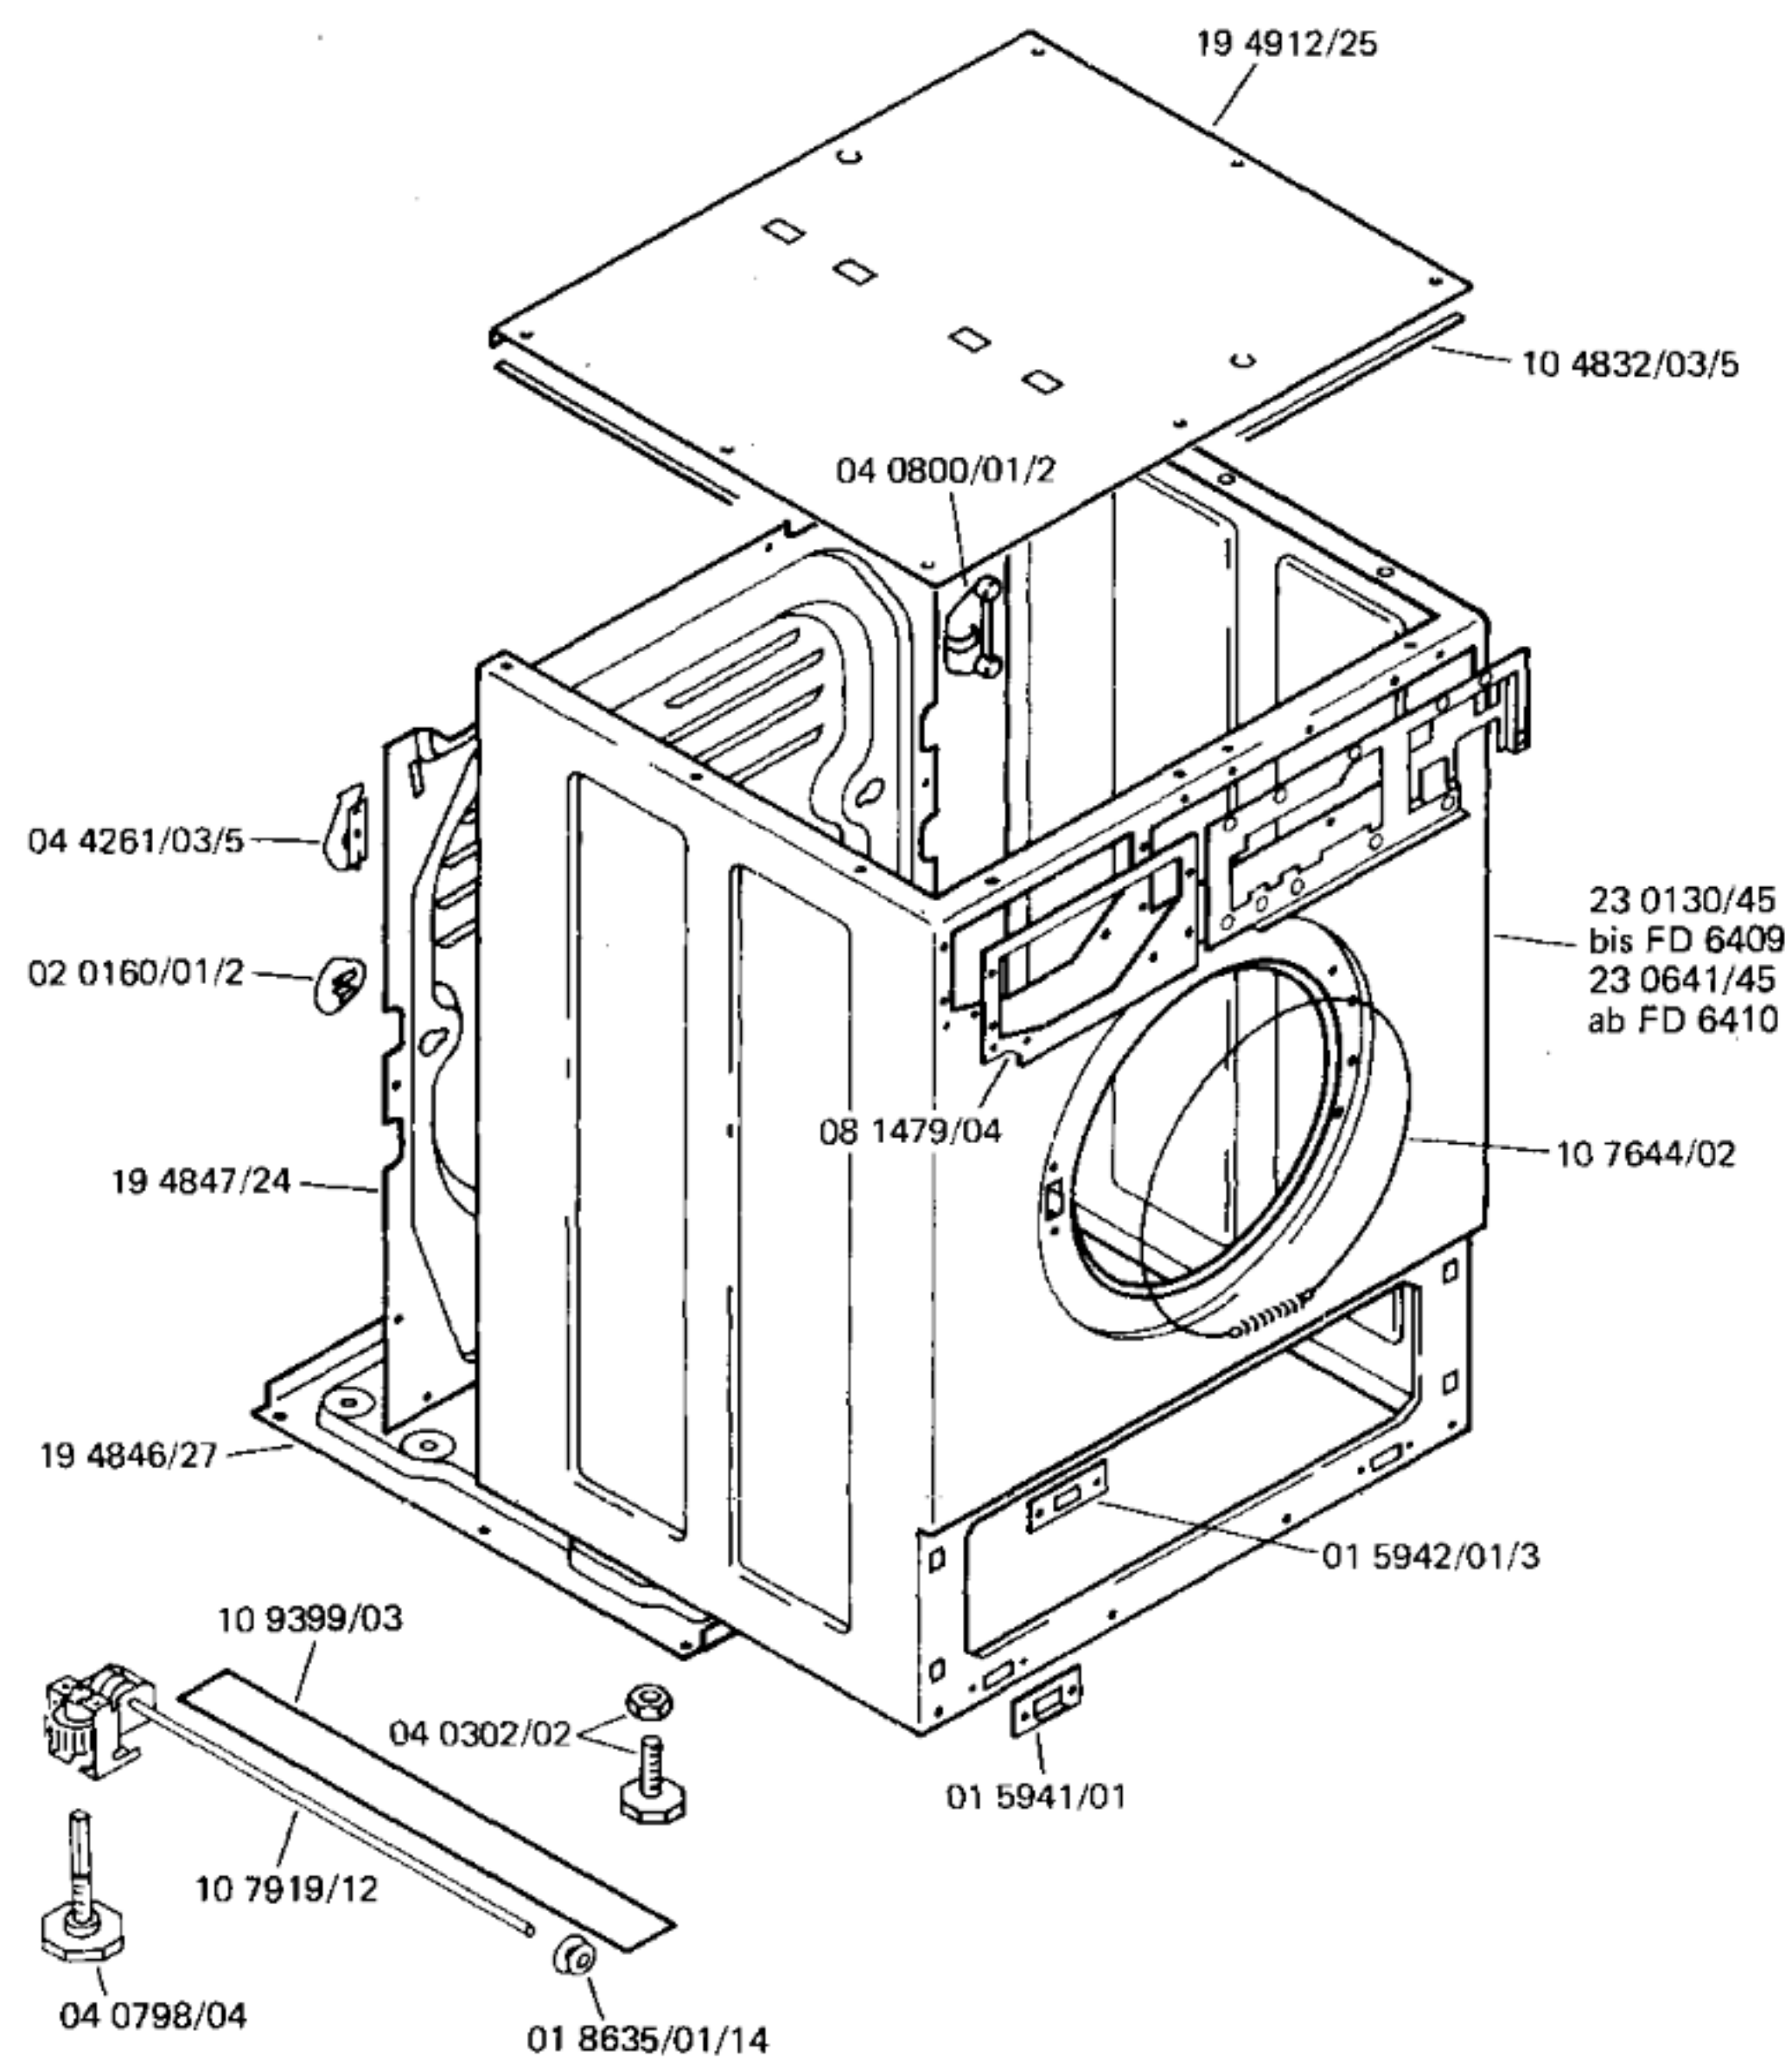

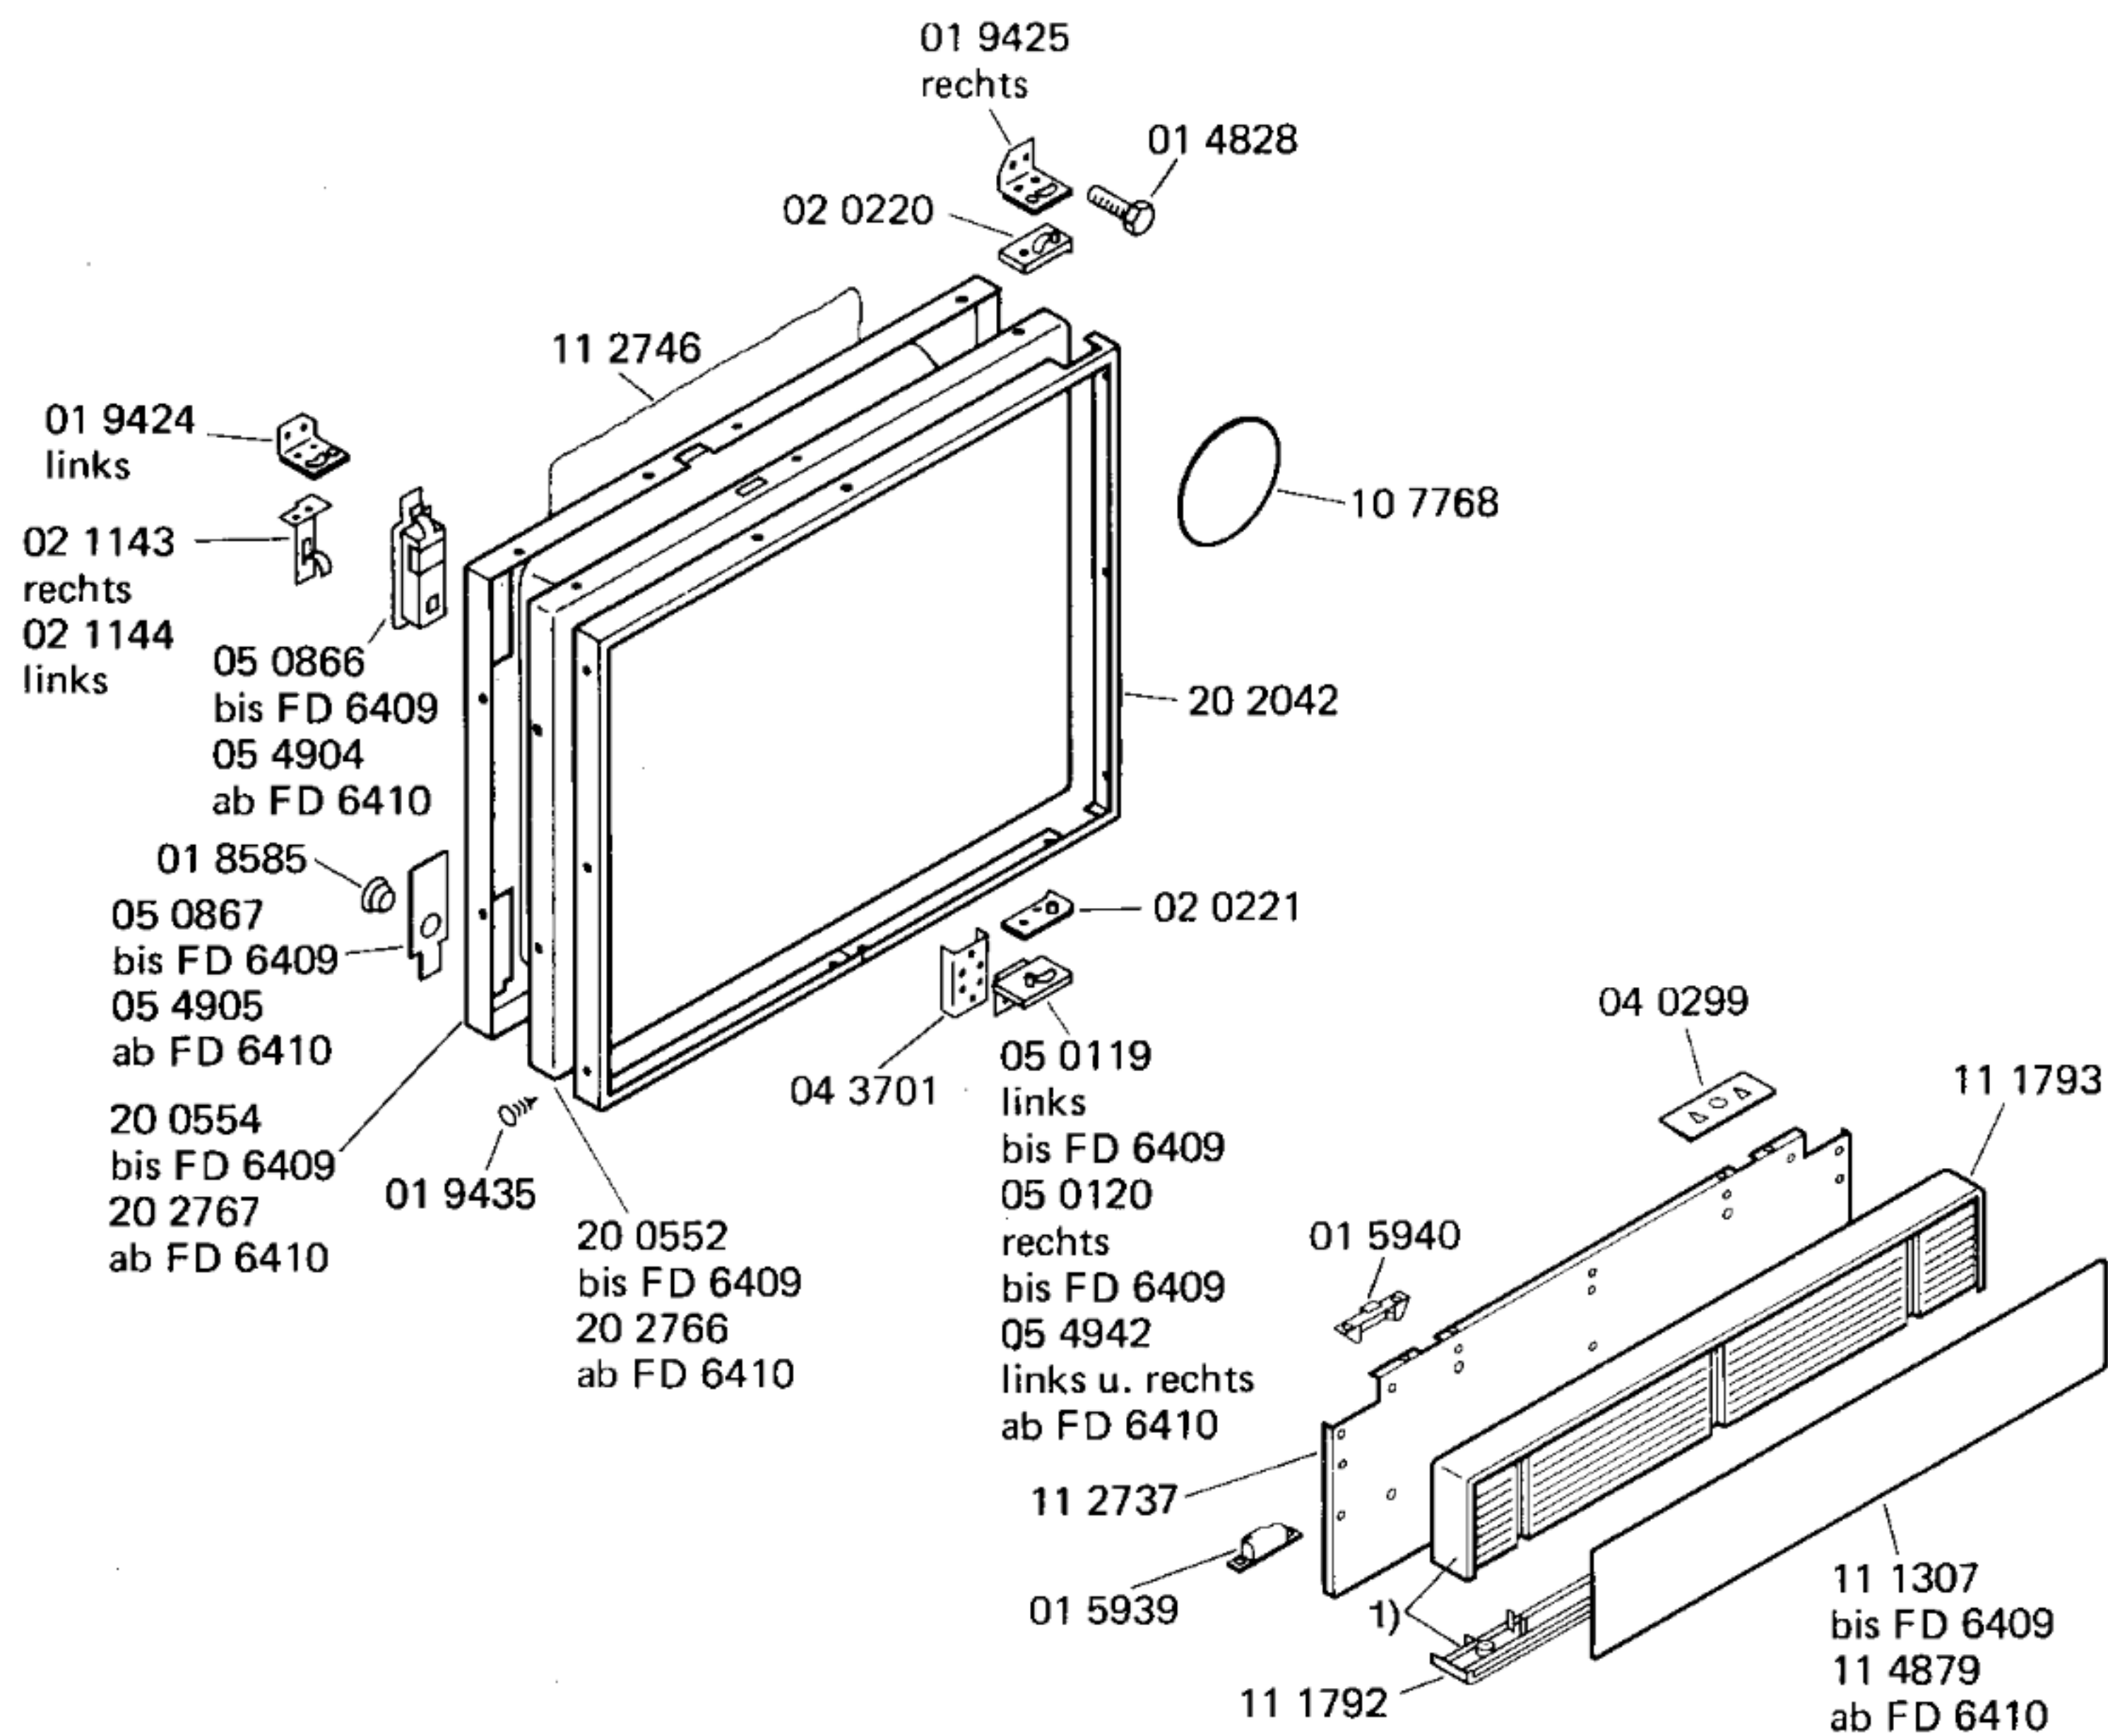

 1) bis FD 6509
11 1792
11 1793

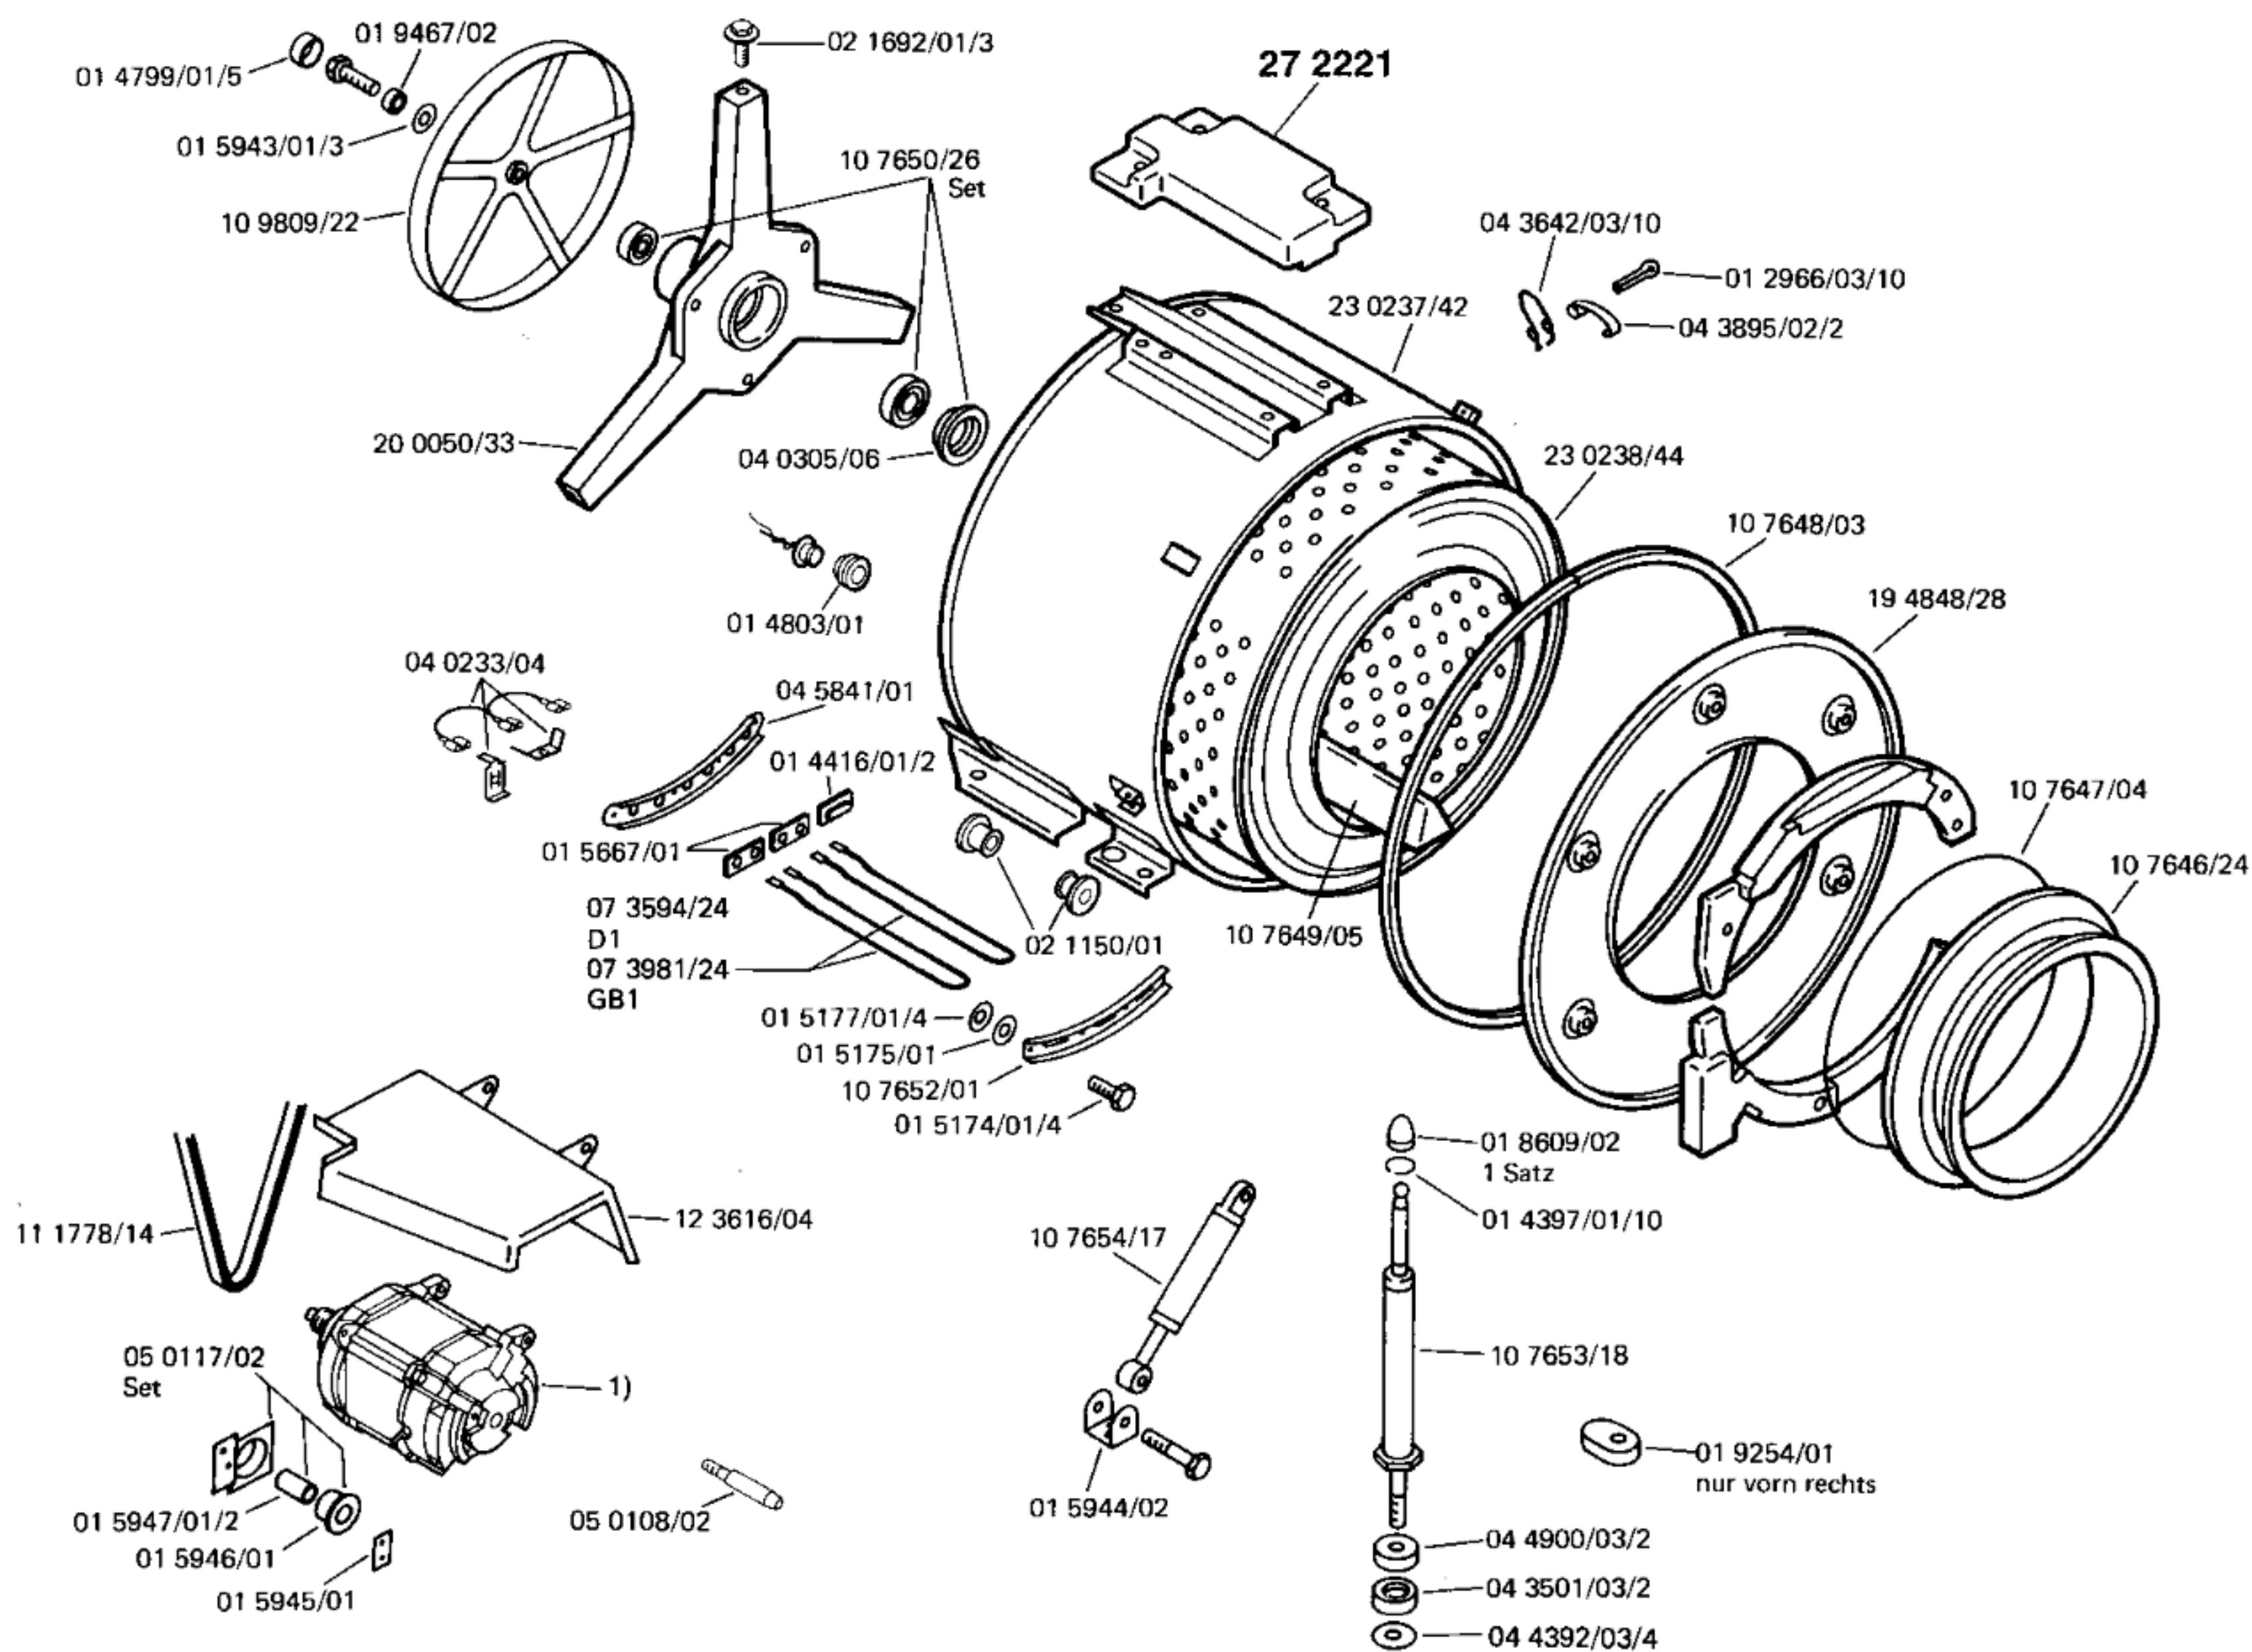

1) 14 0112/44 *
bis FD 6510
D1
14 0372/44
ab FD 6511
D1
14 0293/44*
bis FD 6510
GB1
14 0377/44
ab FD 6511
GB1

*05 0117/02
bis FD 6409
mitbestellen

