



ELECTROLUX HOME PRODUCTS PTY LTD
ABN 51 004 762 341

Technical Publication N° RE141

Issue: 11
Date: 10/13


WESTINGHOUSE

REFRIGERATOR / FREEZER


SECTION	PAGE N°
EXPLODED VIEW & PARTS LIST	2 to 5
WIRING DIAGRAM	6

MODEL:


RJ202T
RD-24WR4HB

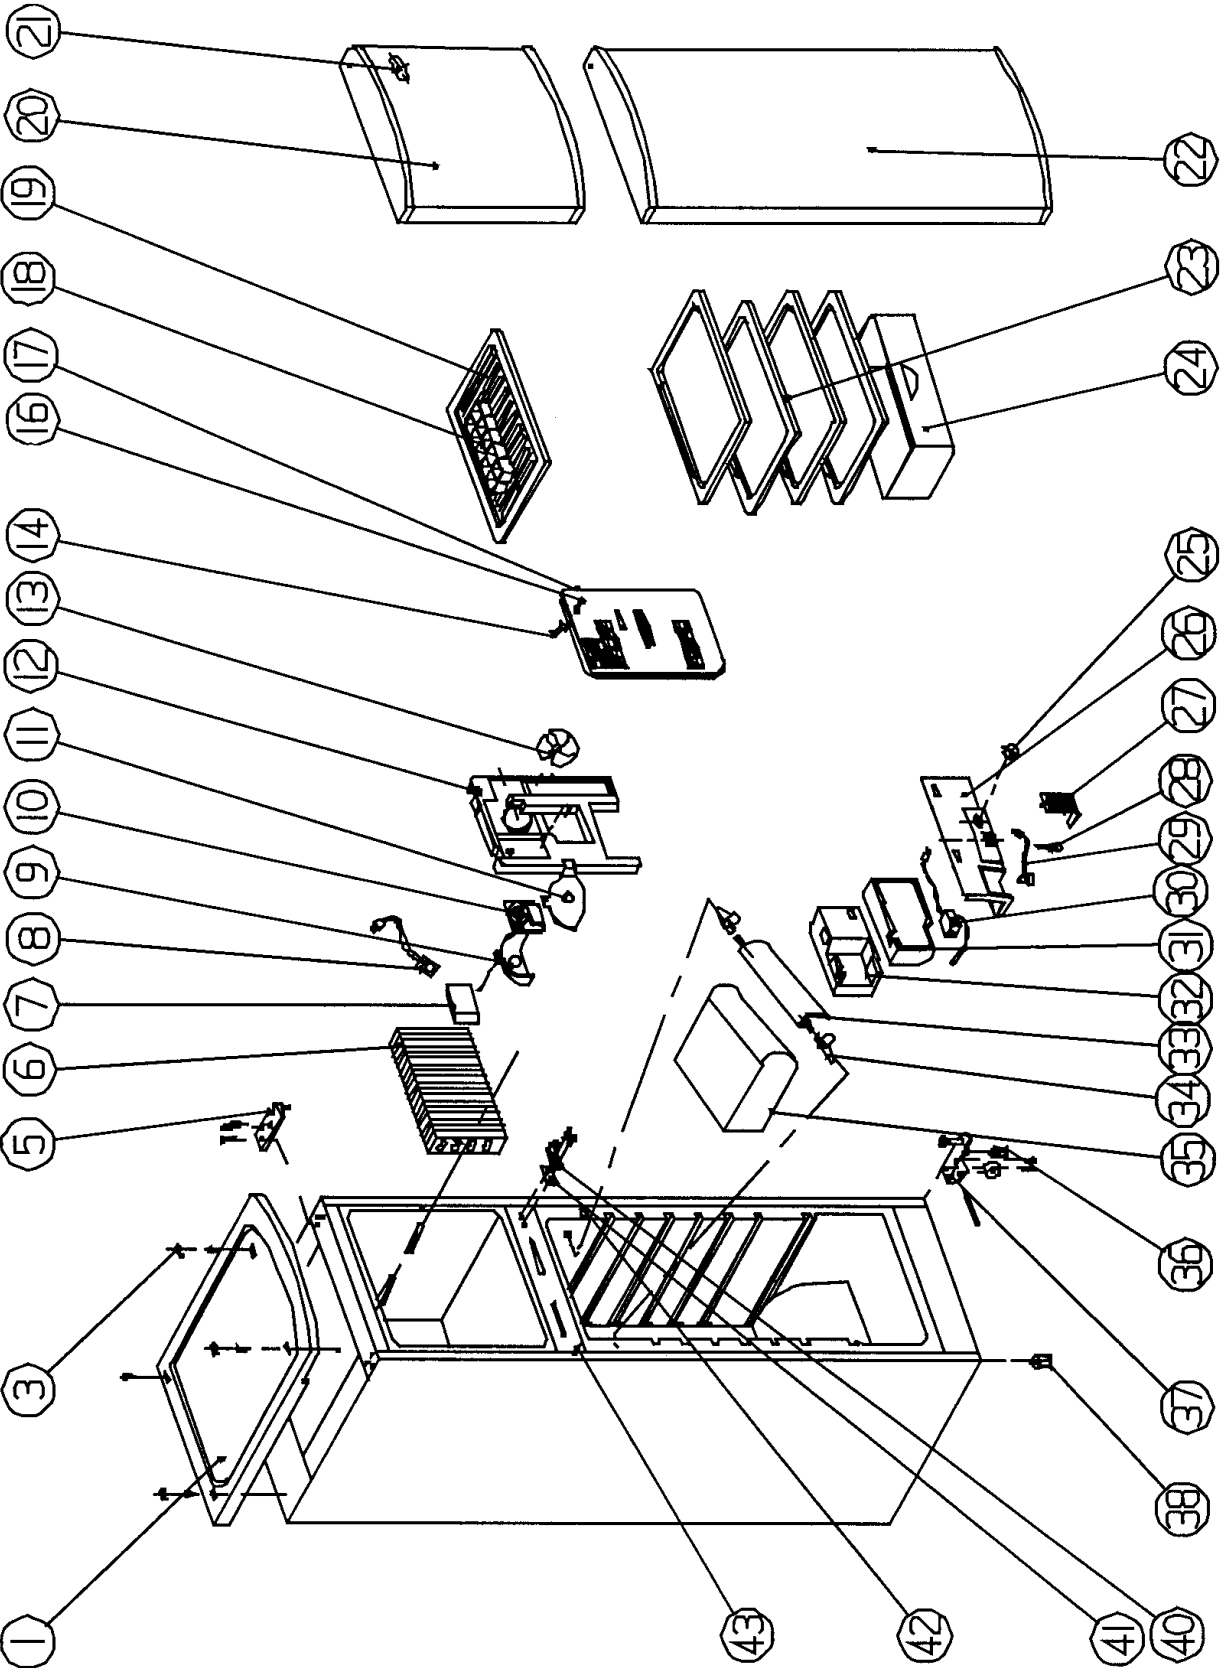

ITEM	PART NUMBER	DESCRIPTION Ex. 5198	QTY
1	9101300633	Cover, Top	1
3	2109164	Screw Cover-Top Cover	4
5	1204328	Hinge, Upper	1
6	9130100270	Evaporator	1
7	1005498	Thermostat Fixed Box	1
8	1411329	Thermostat, Defrost	1
9	2107108	Back Cover, Fan Motor	1
10	9140200161	Motor, Evaporator Fan	1
11	2107109	Cover, Fan Motor	1
12	1109267	Wind Channel Foam, Freezer Chamber	1
13	14023	Blade, Fan	1
14	9120900287	Fixed Seat	1
16	1701134	Cover, Screw	1
17	9101200213	Cover For Evaporator	1
18	1440080	Tray, Ice	1
18	1005384	Bin, Ice	1
19	2105437	Shelves Parts In Freezer Chamber	1
20	9100501383	Door, Upper	1
21	1901513	Badge	1
22	9100501381	Door, Lower	1
23	2105348	Shelf, Crisper Cover, Refrigerator	1
23	9210500866	Shelf, Wire, Refrigerator	3
24	210140	Drawer, Vegetable	1
25	141067	Knob, Temperature Control	1
26	9140800187	Control Panel, Refrigerator	1
27	2107136	Cover, Lamp	1
28	9140400121	Lamp	1
29	141238	Holder Assembly, Lamp	1
30	9140700218	Thermostat	1
31	1109268	Foam Plate A	1
32	1109269	Foam Plate B	1
33	9210200363	Cover, Freezer Box	1
34	1203358	Fixed Buckle	2
35	1005668	Soft Freezer Box	1
36	K11043	Leg Regulator	1
37	1204308	Hinge, Lower	1
38	K11041	Leg, Front-High	1
40	1204311	Hinge, Mid	1
41	120440	Hinge Axle Base	2
42	9141000200	Switch, Door	1
43	1701134	Cover, Screw	1
NI	1411249	Fuse, Thermal	1
NI	140470	Heater, Defrost	1
NI	140460	Heater, Drain Trough	1

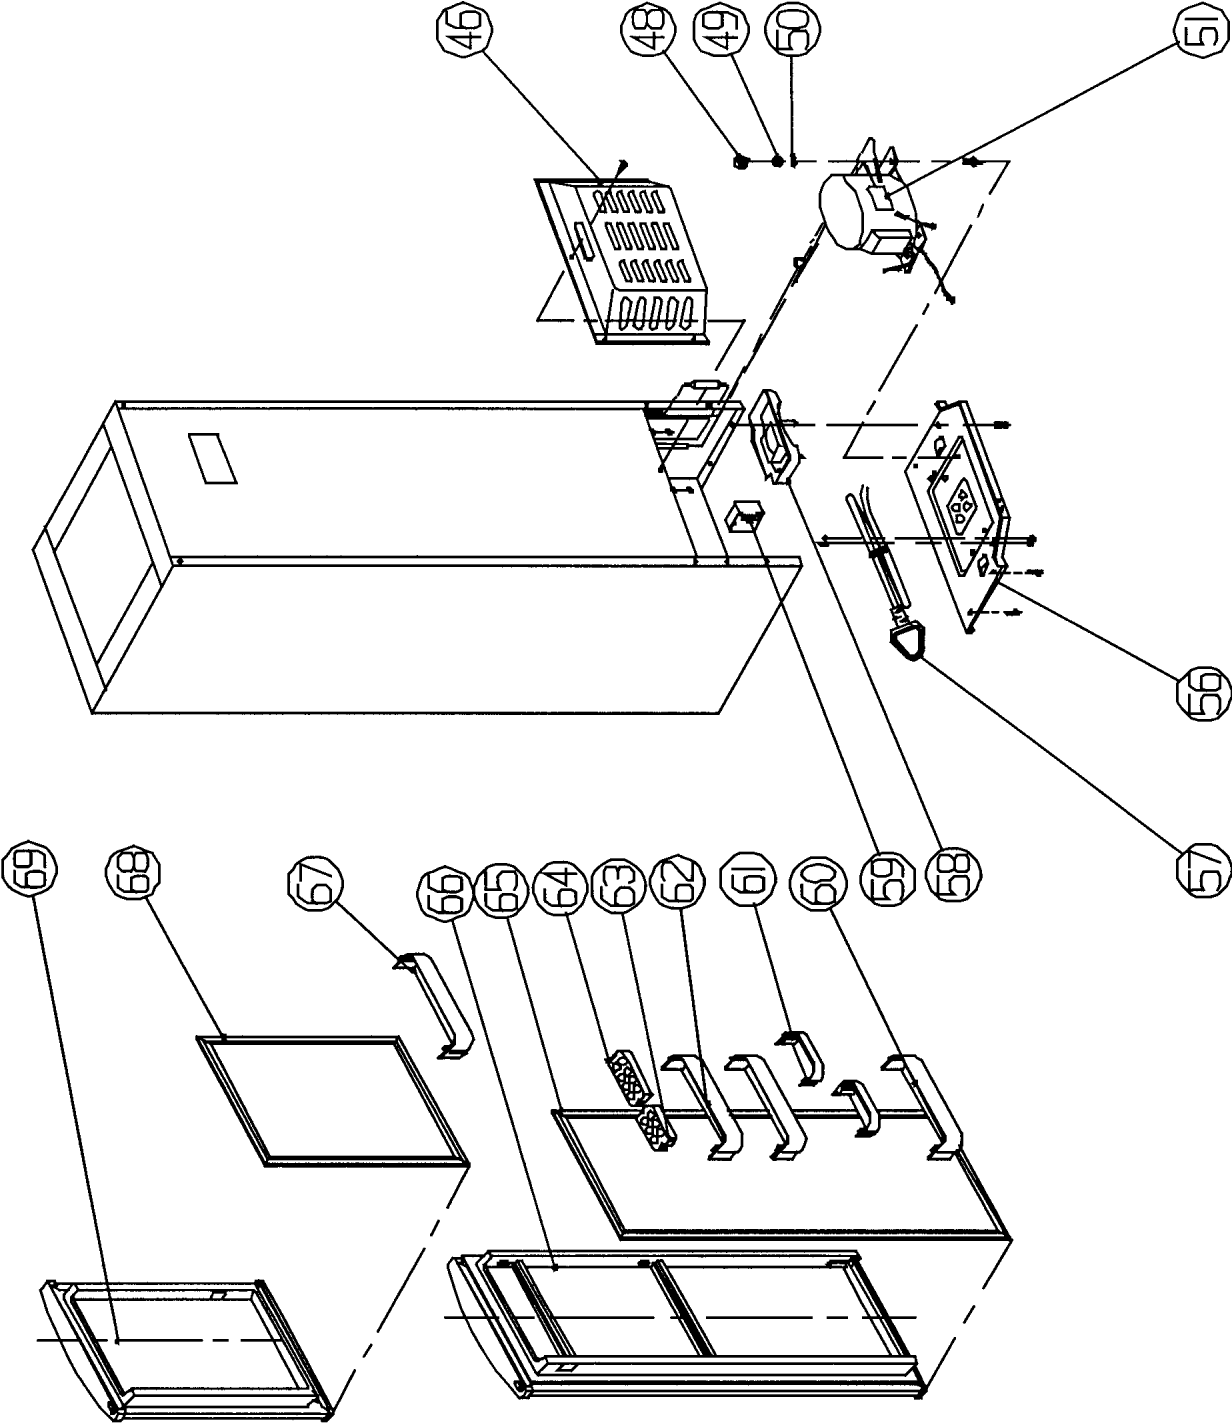

ITEM	PART NUMBER	DESCRIPTION Ex. 5199	QTY
46	2107134	Cover, Compressor	1
48	170355	Nut M6x30	4
49	17044	Round-Pad 6	4
50	17042	Round-Pad 6	4
51	1304402	Compressor	1
56	9110800213	Base, Compressor	1
57	1501281	Cord, Power Supply With Plug(Australia)	1
58	9110600155	Pan, Water Disposal	1
59	9140200169	Timer, Defrost	1
60	2105362	Rack, Lower Door	1
61	2105434	Door Rack, Small	2
62	2105360	Rack, Upper Lower Door	2
63	21049	Tray, Eggs-Small	1
64	210412	Tray, Eggs	1
65	9160100318	Gasket, Door Lower	1
66	1007509	Liner, Door Lower	1
67	2105358	Shelf, Upper Door	1
68	9160100317	Gasket, Upper Door	1
69	1007508	Liner, Upper Door	1
NI	120512	Cam, Freezer & Food Compartment Doors (L/H)	2
NI	120515	Cam, Freezer & Food Compartment Doors (R/H)	2
NI	B54120	Overload	1
NI	CBB65A4	Capacitor	1
NI	QP215C	Relay	1

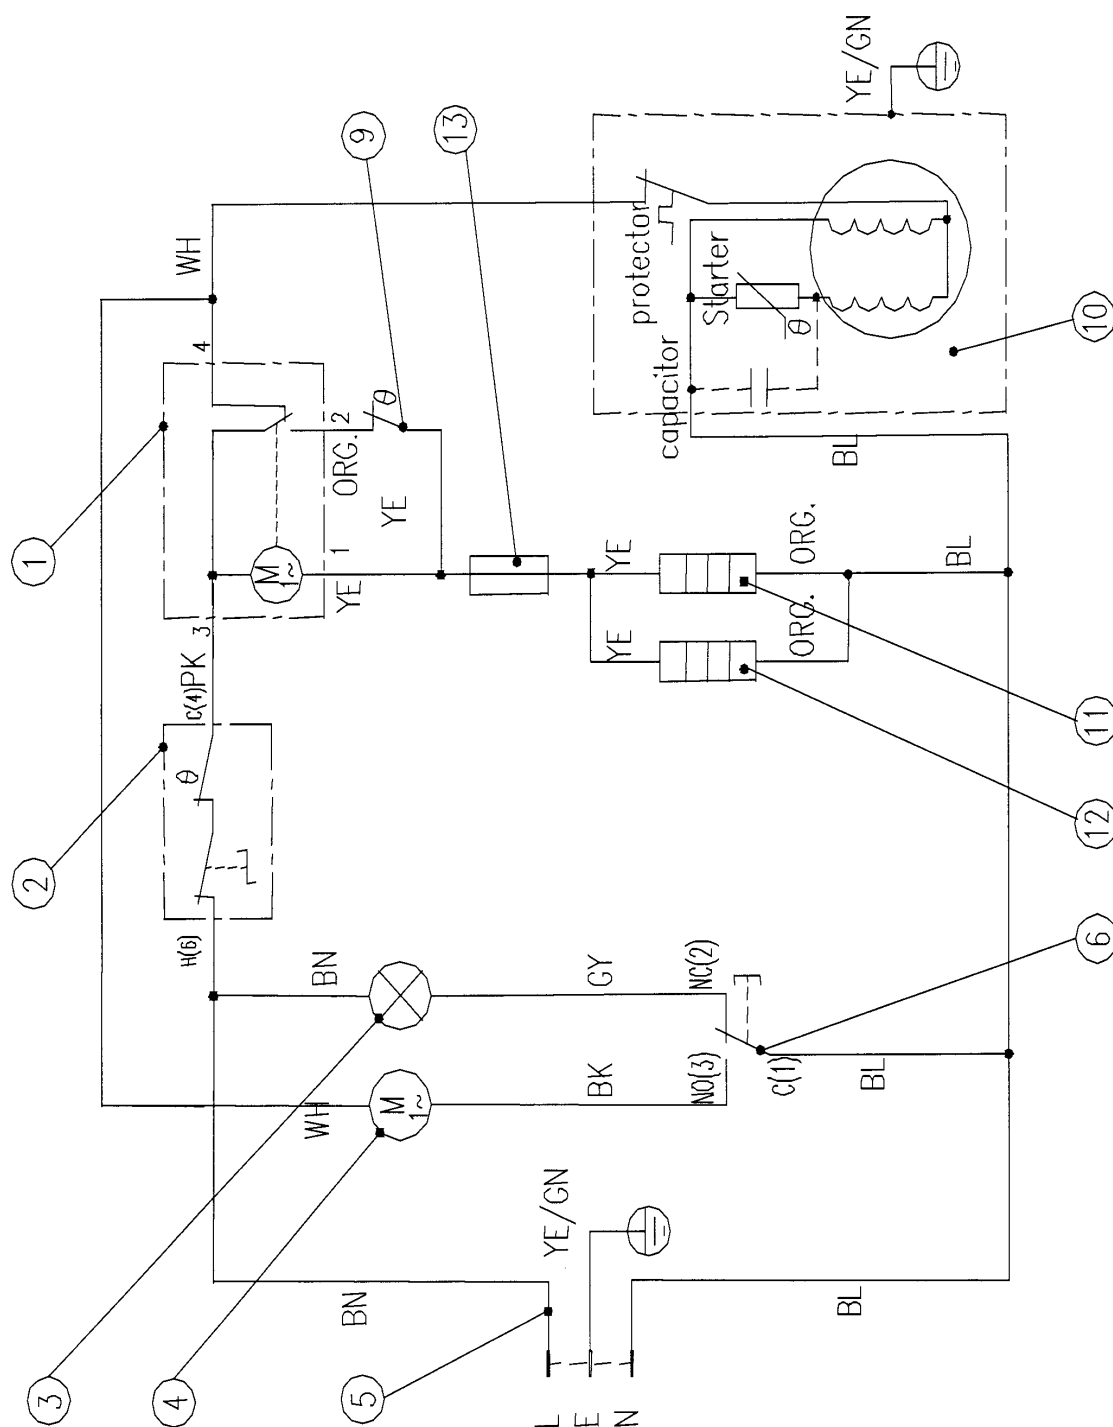

1, Defrost timer. 2, Thermostat. 3, Interior lamp. 4, Motor fan. 5, Power supply cord with plug. 6, Door switch. 9, Defrost thermostat. 10, Compressor assembly. 11, Defrost heater. 12, Trough heater. 13, Temperature fuse unit.

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. The manufacturer cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.