

Item	PNC	ELC	Brand	Model	Market
A	900275758	00	Electrolux	ERC3205	THA
A	900275768	00	Electrolux	ERC3205	VNE
A	900275750	00	Electrolux	ERC3205	PHH
A	900275734	00	Electrolux	ERC3205	IDE

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.

		Rice Cooker	
Electrolux SEA Pte.,Ltd. APAC	Publication-No. 160714		

Model

ERC3205

PNC

900275758

Ex. View Drawing

Parts

ERC3205	900275758
ERC3205	900275768
ERC3205	900275750
ERC3205	900275734


1



2



3

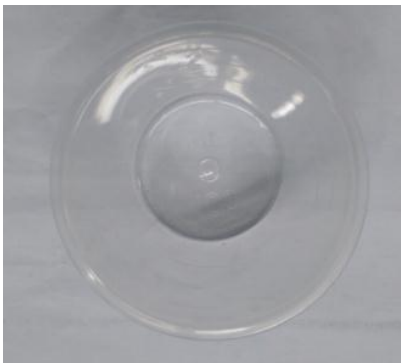

4



5



PNC	ELC	Brand	Model	Market
900275758	00	Electrolux	ERC3205	THA
900275768	00	Electrolux	ERC3205	VNE
900275750	00	Electrolux	ERC3205	PHH
900275734	00	Electrolux	ERC3205	IDE

Important Note: Please list the PNC and Model code for part purchase order (PO)

Pos.	Part Code	Description
1	12161000007279	Lid Button
2	12161000007281	lever button
3	12161000000320	Measuring Cup
4	12161000003147	Rice scoop and soup scoop assembly
5	12161000003802	Steaming tray
6	12261000000582	Inner pot