


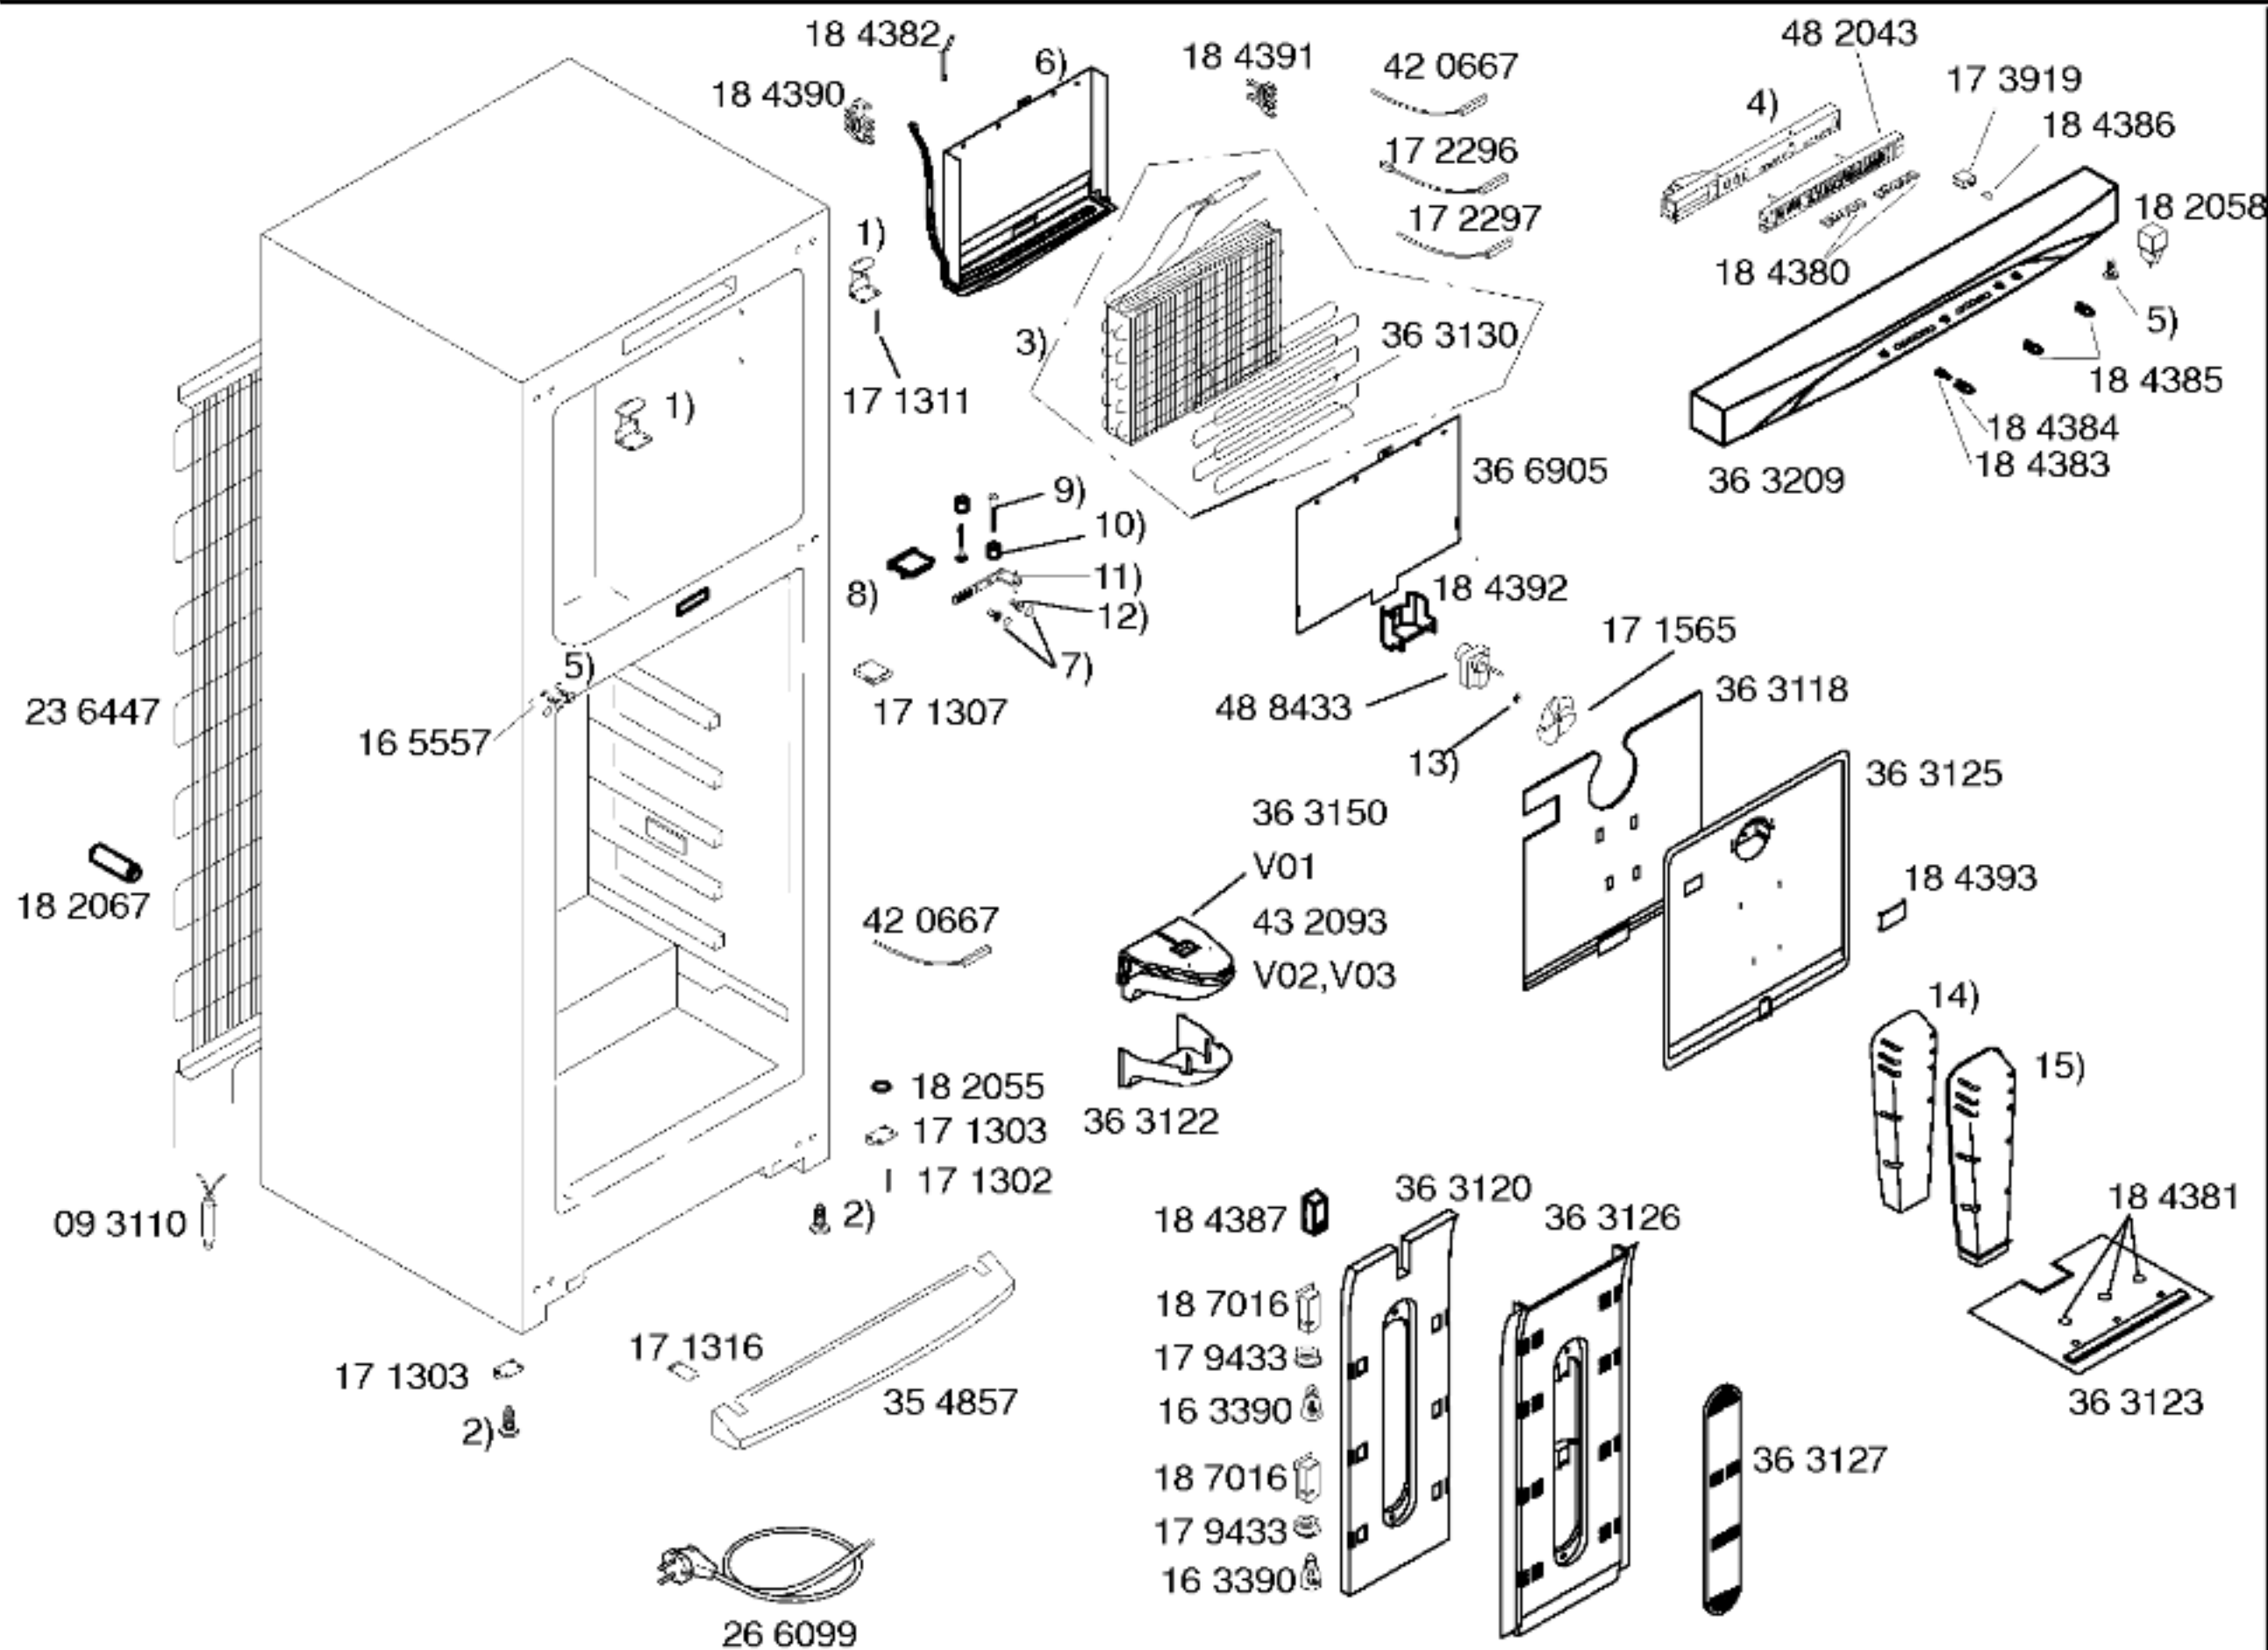

Gebrauchsanweisung
52 9501
(DE,GB,FR,ES,PT)

- 1) 17 1312
- 2) 17 1304
- 3) 36 3131
- 4) 48 9131
- 5) 16 5552
- 6) 36 3132
- 7) 17 6137
- 8) 41 8128
- 9) 18 8194
- 10) 18 8188
- 11) 18 8191
- 12) 18 8196

- 13) 17 1508
- 14) 36 6310

V01

43 2556


V02,V03

- 15) 36 3121

V01

43 2919

V02,V03

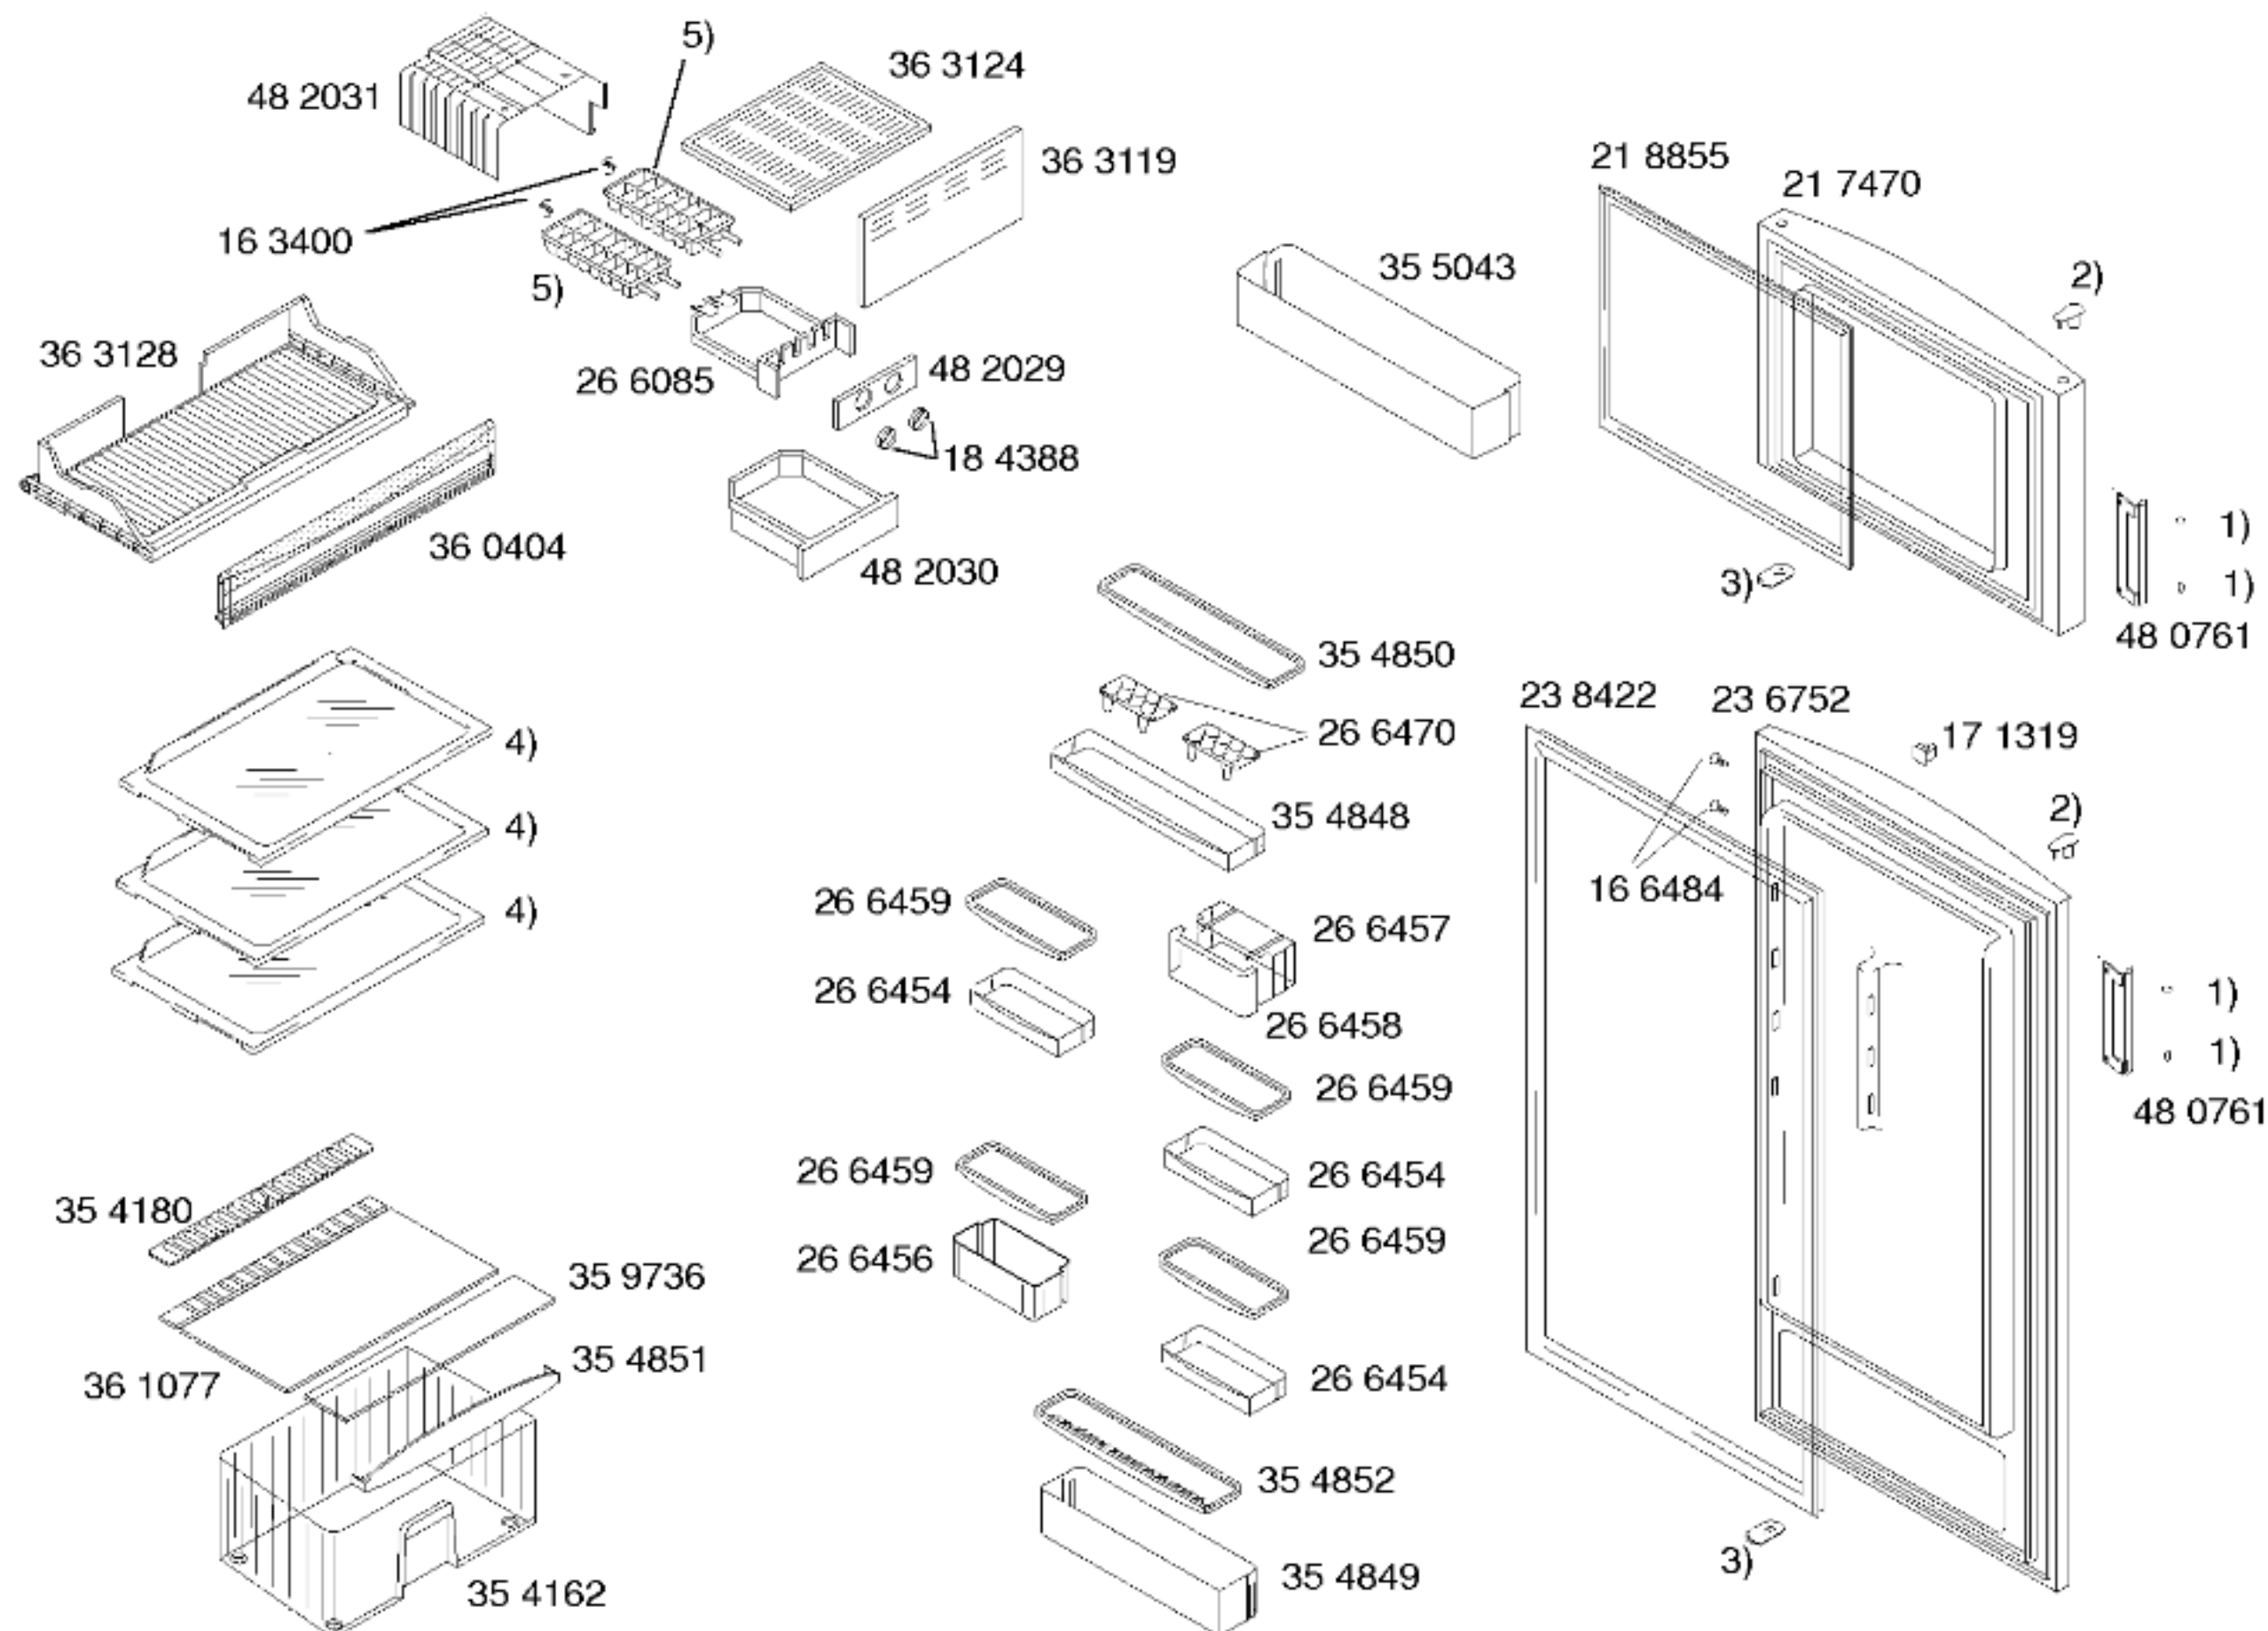

1) 16 5557

2) 17 1321

3) 17 1506


4) 36 3129

5) 26 9013

V01

48 9738

V02

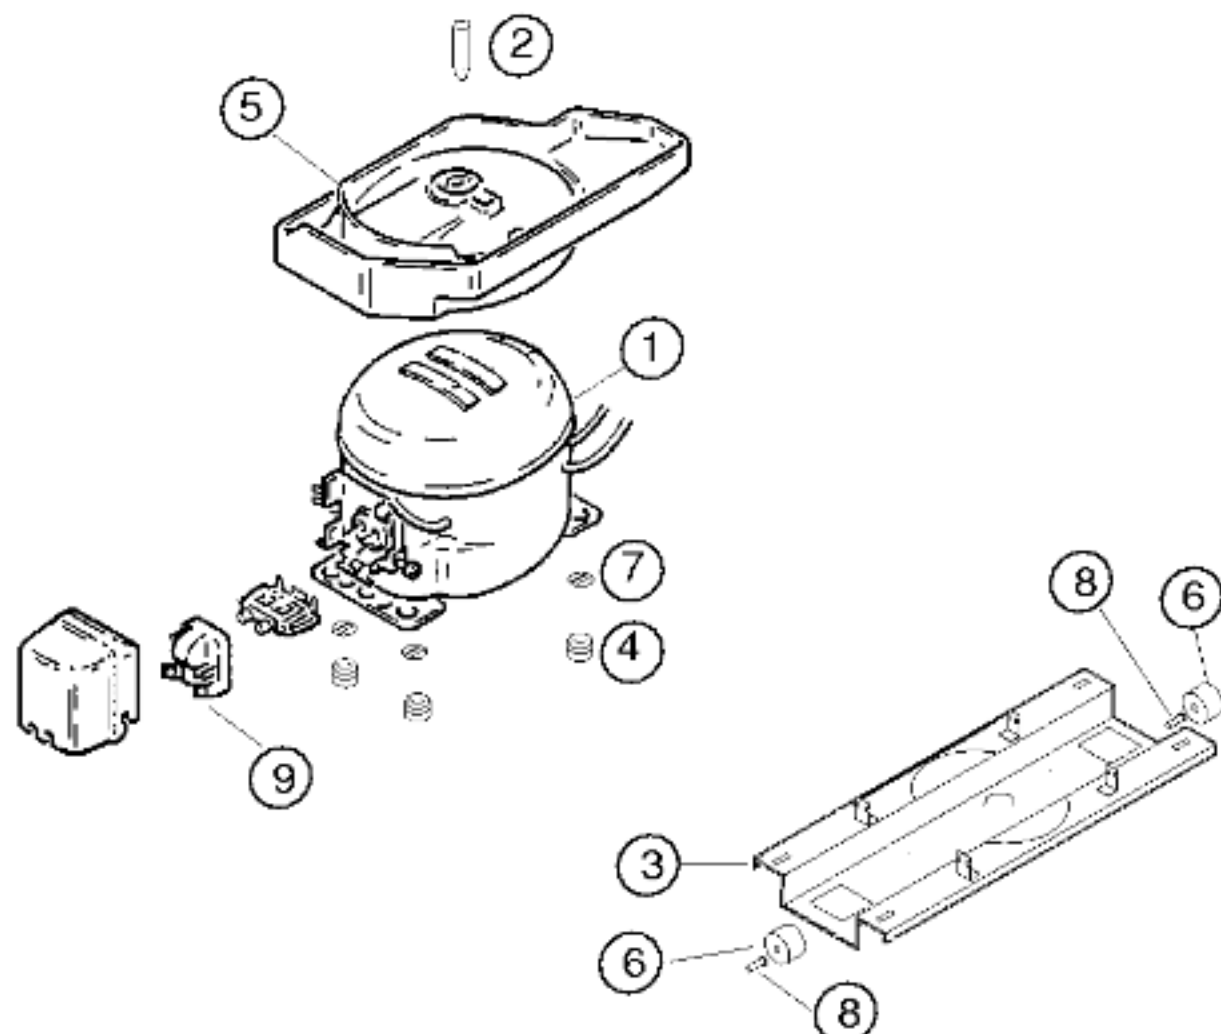

Pos.	Aspera		
	NBT 1116Y		
1	14 2193		
2	41 8170		
3	35 4158		
4	16 3427		
5	36 3166		
6	17 1318		
7	17 1519		
8	18 1014		
9	43 8467		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLE9F 10.7 12.9 18		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acta kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	Elektronisch ..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Verdampfer 120	Ablaufrinne 53	4-V02,3 3-V01
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Verdampfer		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Garilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız