


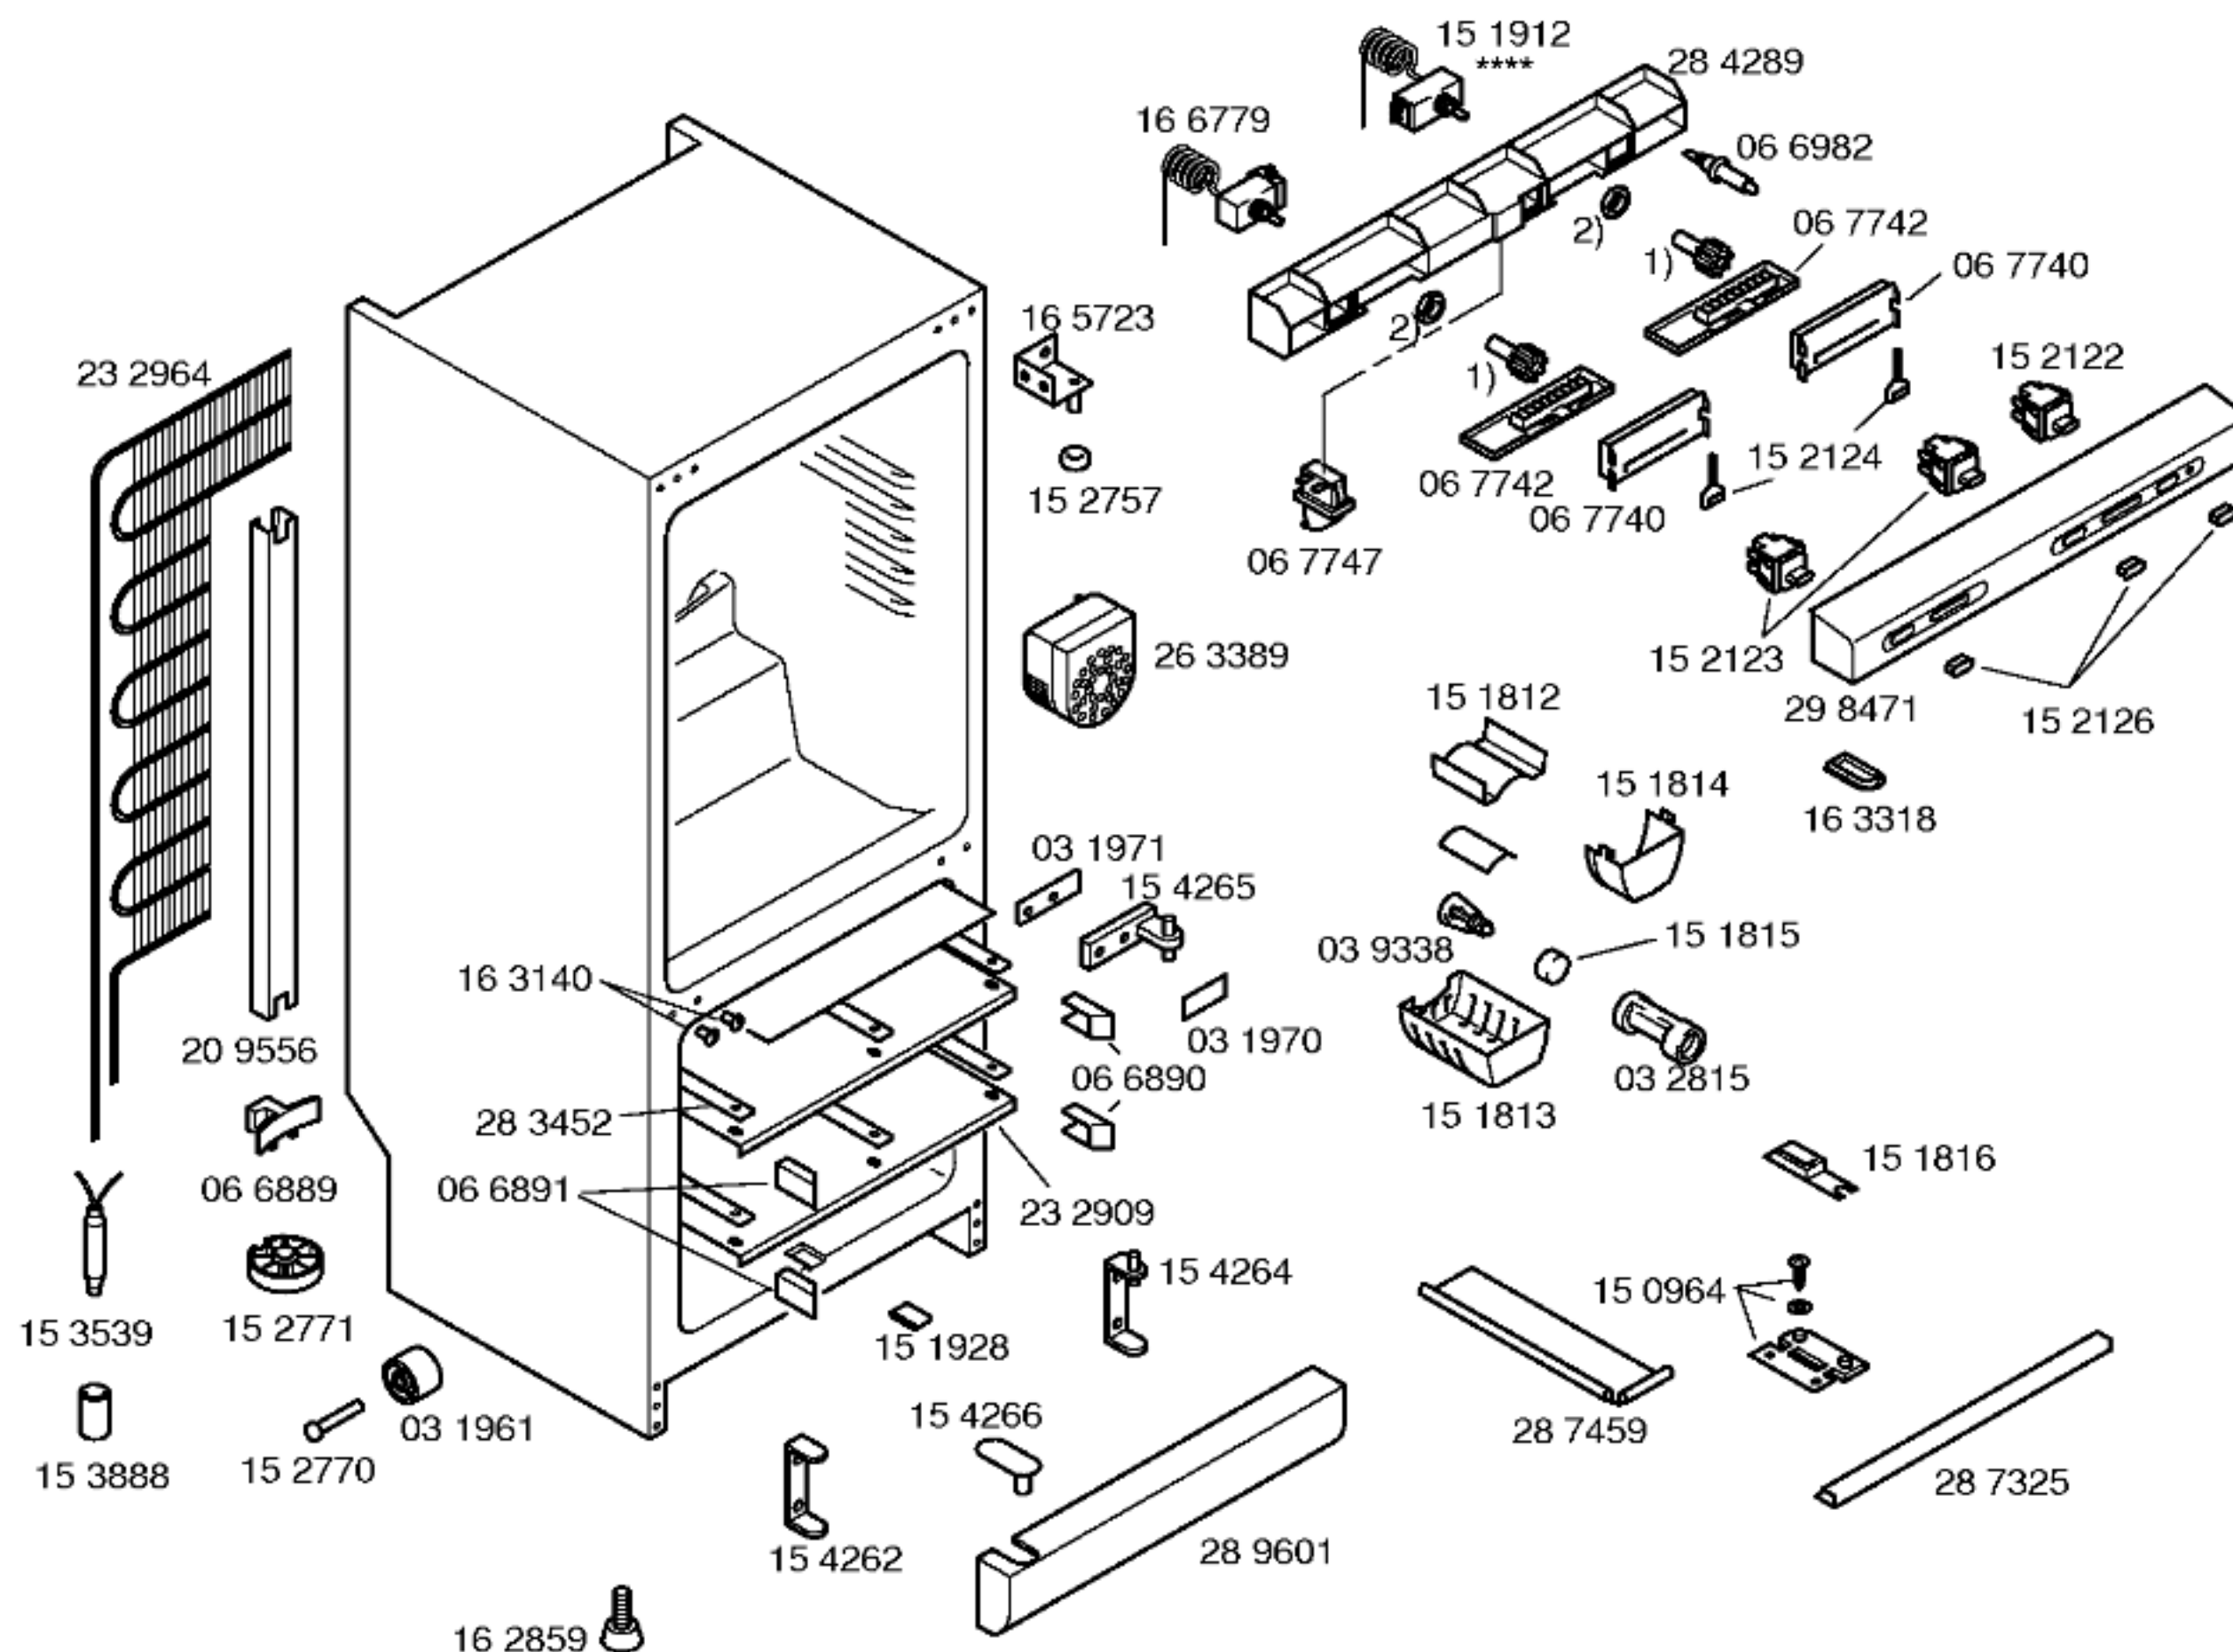



Libro de instrucciones
51 7464
(E,P,GB,,F,NL,GR)

Instrucciones R600a
51 9240
(D,GB,F,I,NL,DK,N,
S,SF,P,GR,E,TR)

Instrucciones de montaje
51 9729
(E,GB,F,P,D,I,NL,N,GR)

1) 06 7746
2) 03 3055

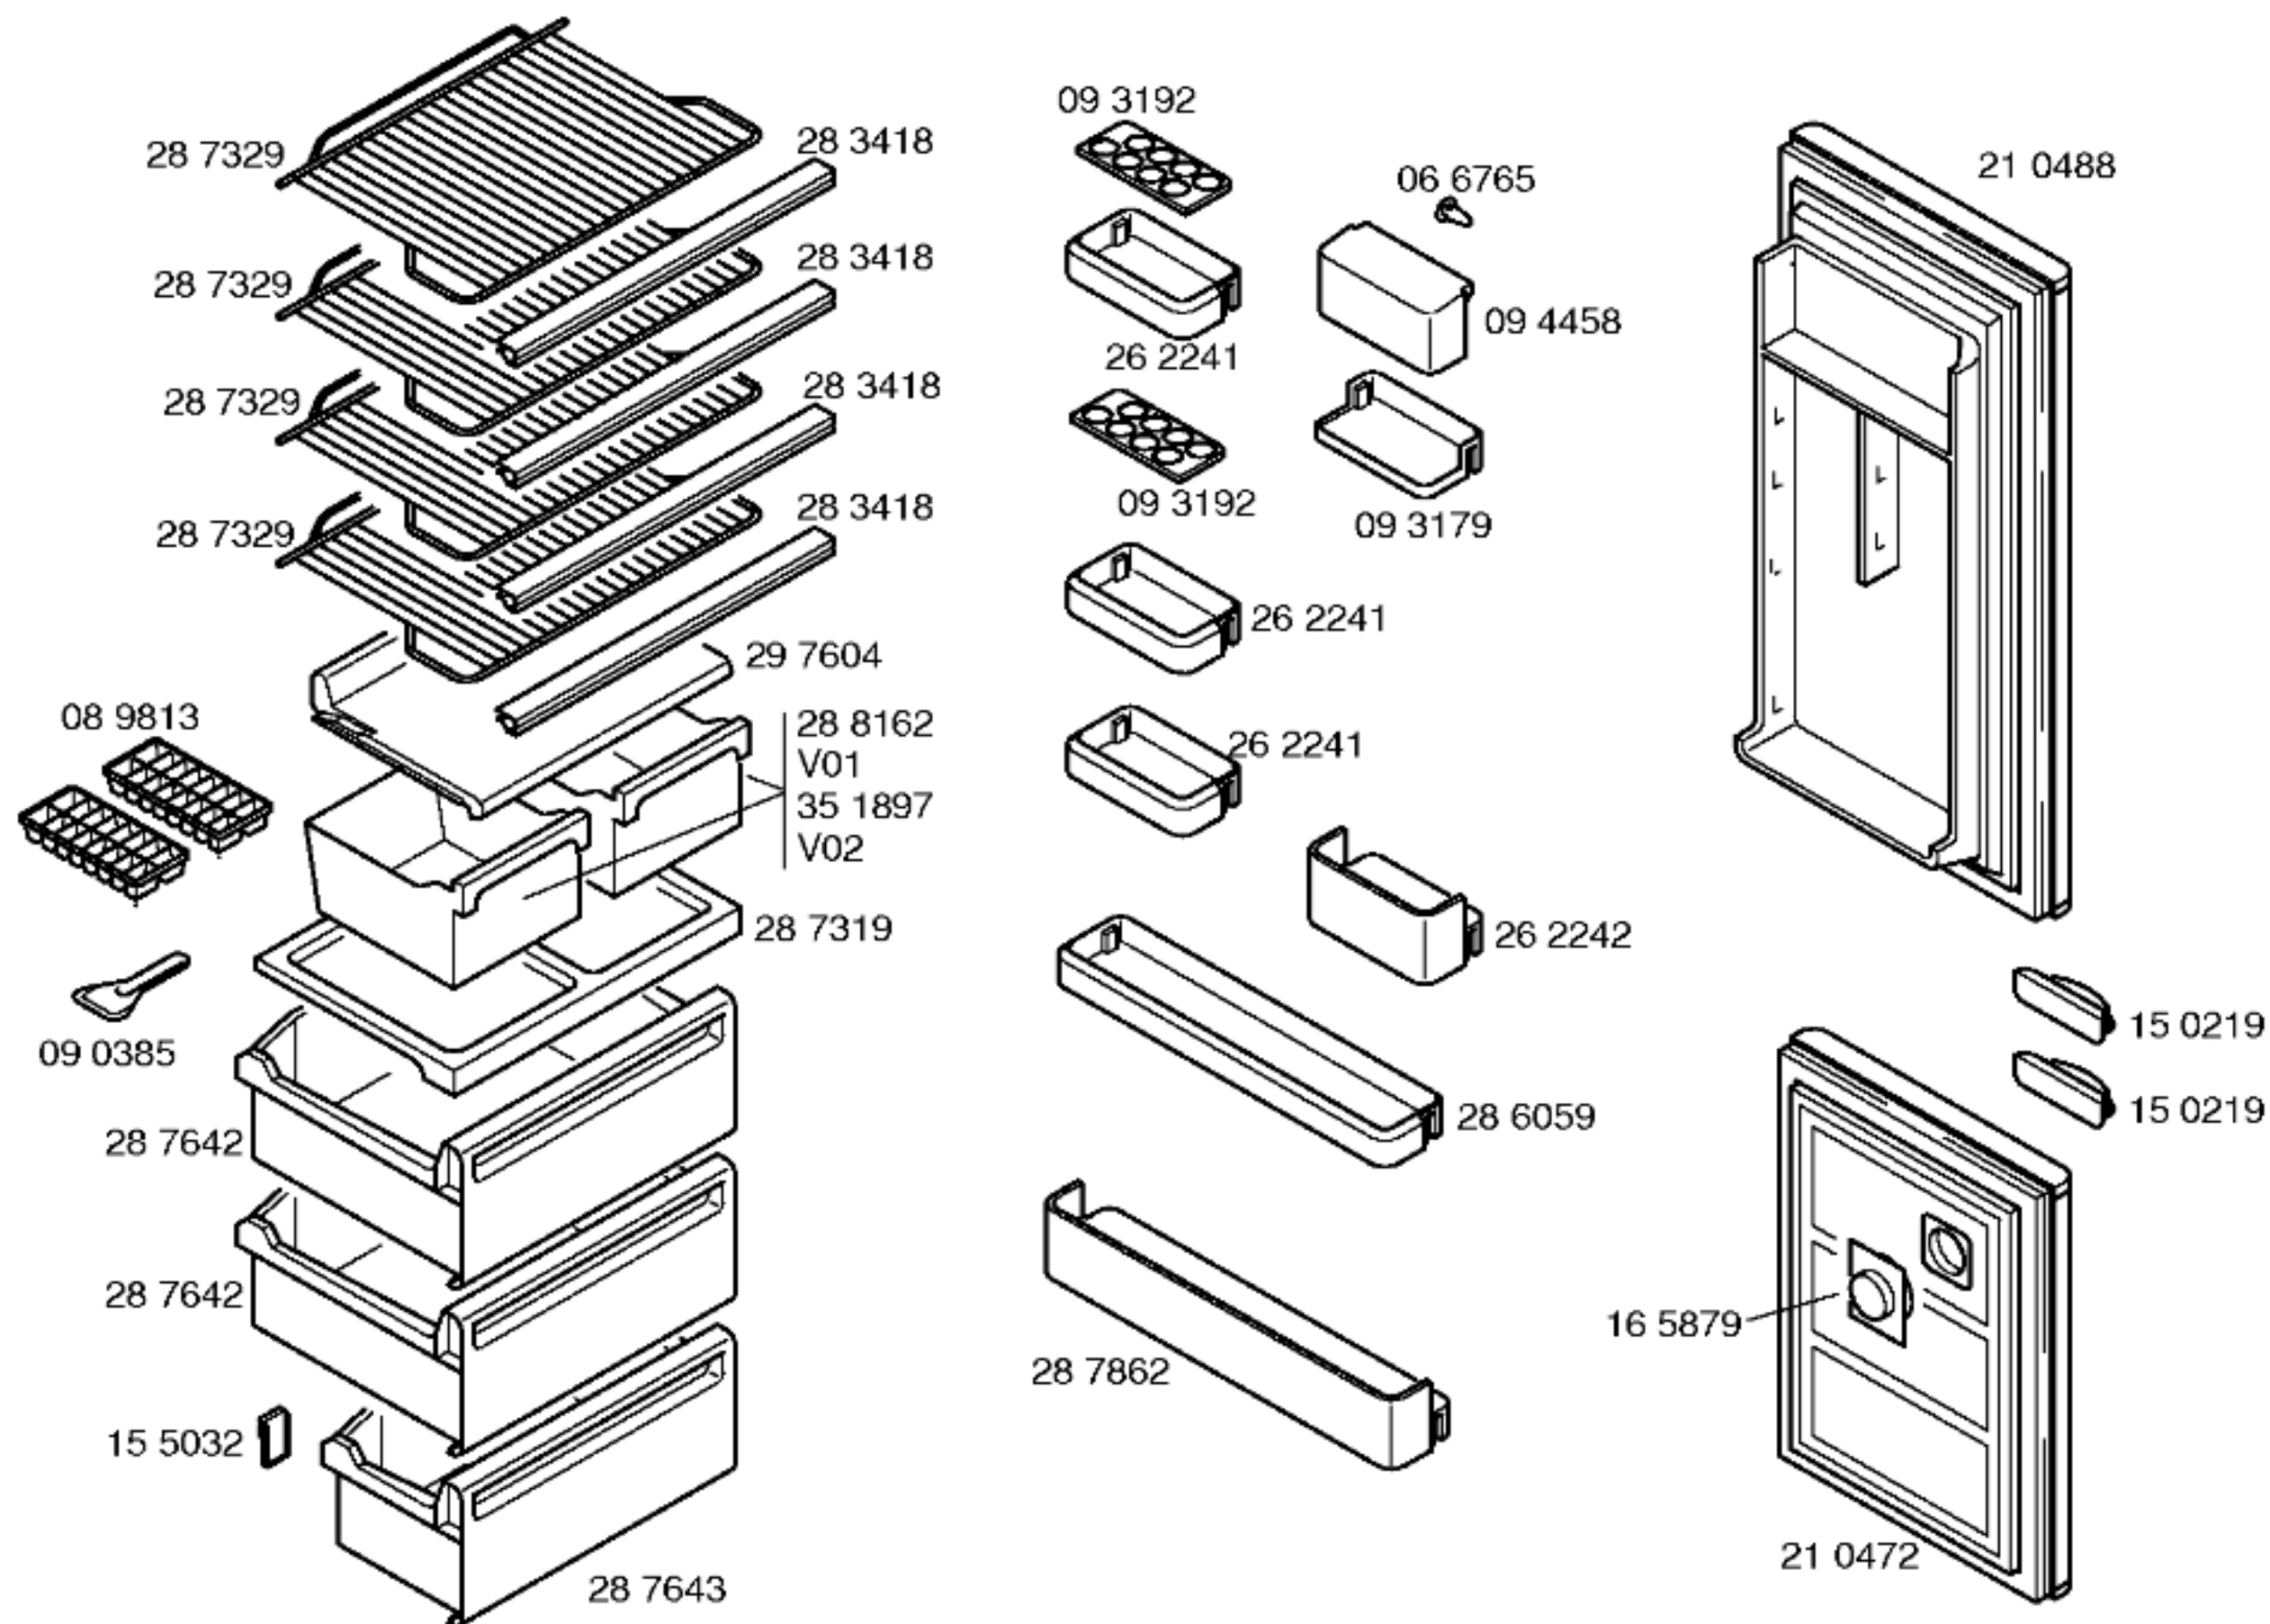

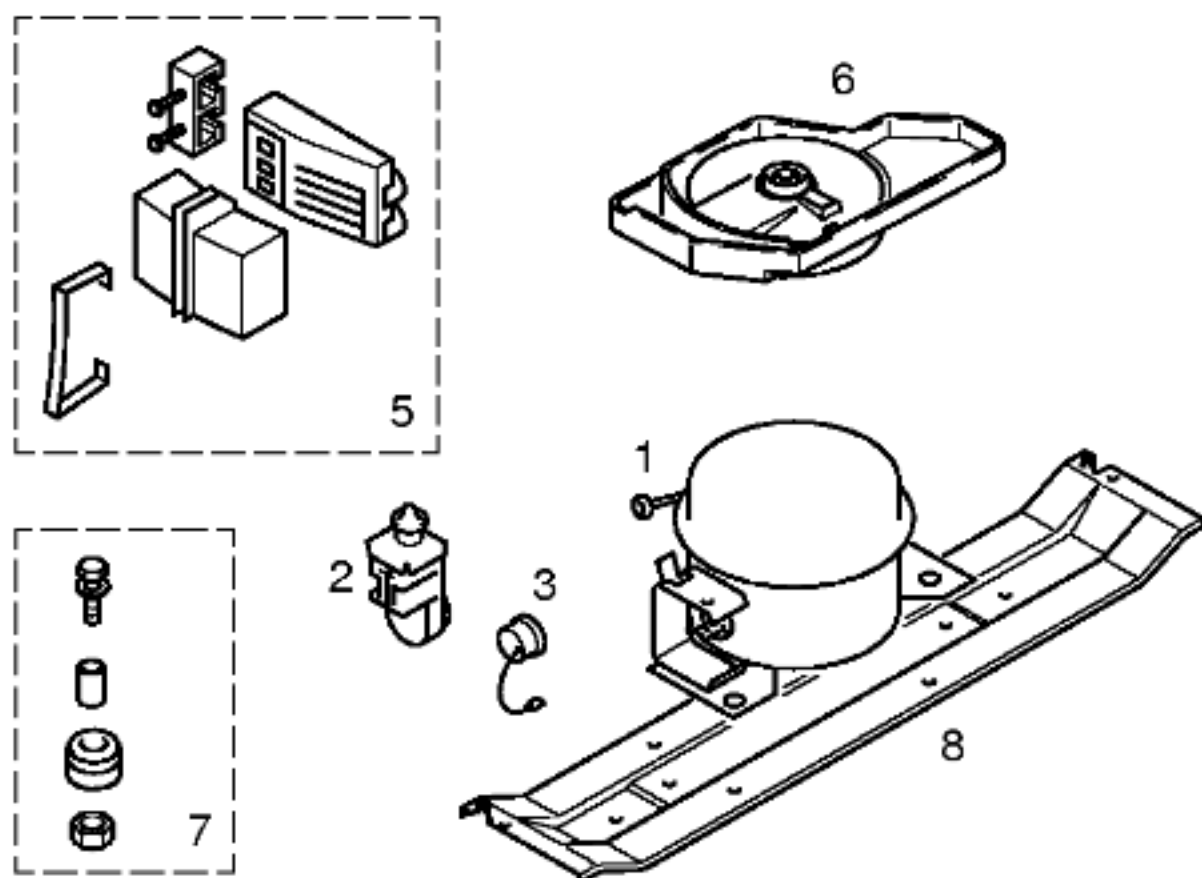

Pos.	****			
	Aspera BMP1084Y	Aspera BMP1110Y		
1	14 1723	14 1605		
2	15 4315	15 4315		
3	16 7769	16 5230		
4				
5				
6	26 4123			
7	05 0166	05 0166		
8	28 0162	28 0162		
9				
10				
11				
12				
13				

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS				

Verdichter/Compressor/Compresseur/Compresor	Aspera BMP1084Y	Aspera BMP1110Y		
Typ/Type/Tipo				
Förderleistung/Delivery/Debit/Aspiración l/h				
Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A	3,60			
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	29,60	24,70		
Hi/aux.	38,50	37,65		
Temp.Reyler/Thermostat/Termostato	Ranco K59-L6045	Ranco K54-L1940		
Typ/Type/Tipo				
Reglerstellung/Position/Conexión	MIN. MAX.	MIN. MAX.		
Schaltwerte/Switching values/	..ein/conex.°C	+6° -14° -22°		
Valeurs de commutation/Desconex.	..aus"/descon.	-14° -28° -20° -28°		
(..abtaven' od)	..alarm'	-10° -18°		
Füllmenge/Fill. quantily/Charge/Carga R600a	g	*	*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	71	86	
Heizung/Heater/Chauflage/Resistenc.descong.				
Widerstand/Resistance/Resistencia	Ohm			
Leistung/Power/Puissance/Potencia	W			
Ventilador/Blower/Ventilateur/Ventilador				
Widerstand/Resistance/Resistencia	Ohm			
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula				
Widerstand/Resistance/Resistencia	Ohm			
Spannung/Voltage/Tension/Tensión	V			
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador				

* Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características