




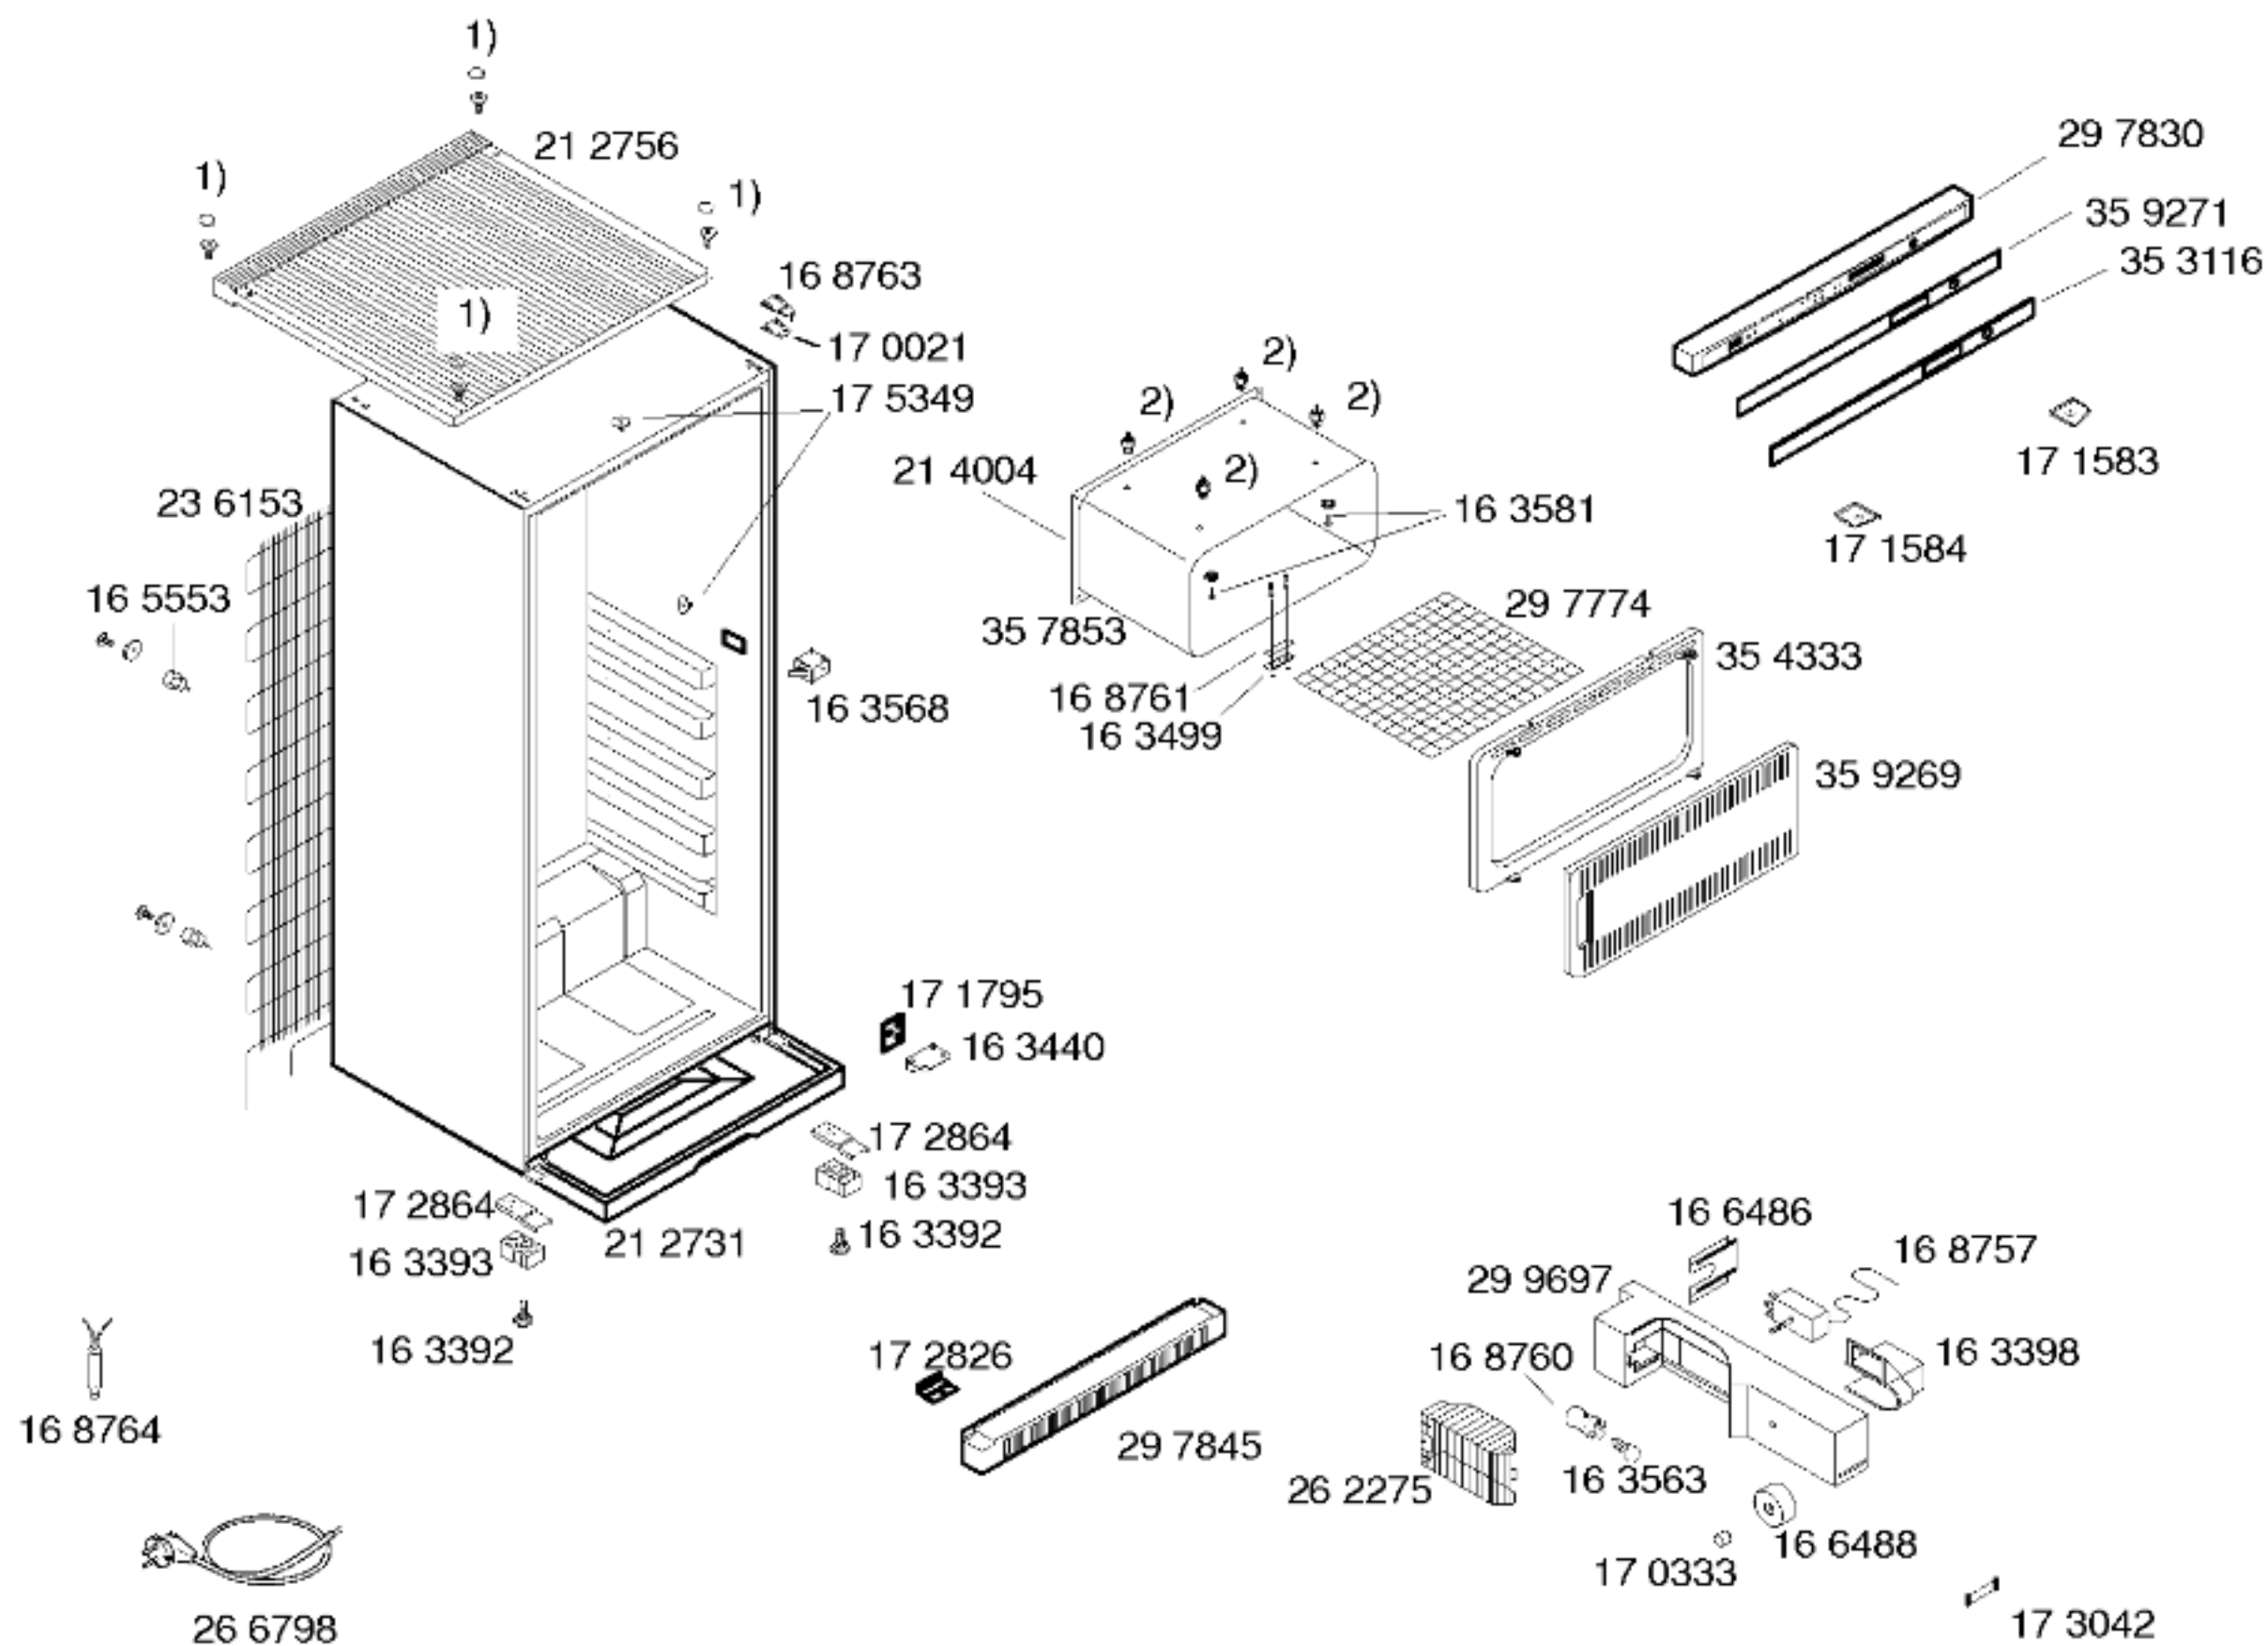

Gebrauchsanweisung
52 6448
(ES,GB,FR,PR,DE)

1) 16 3404
2) 16 8049

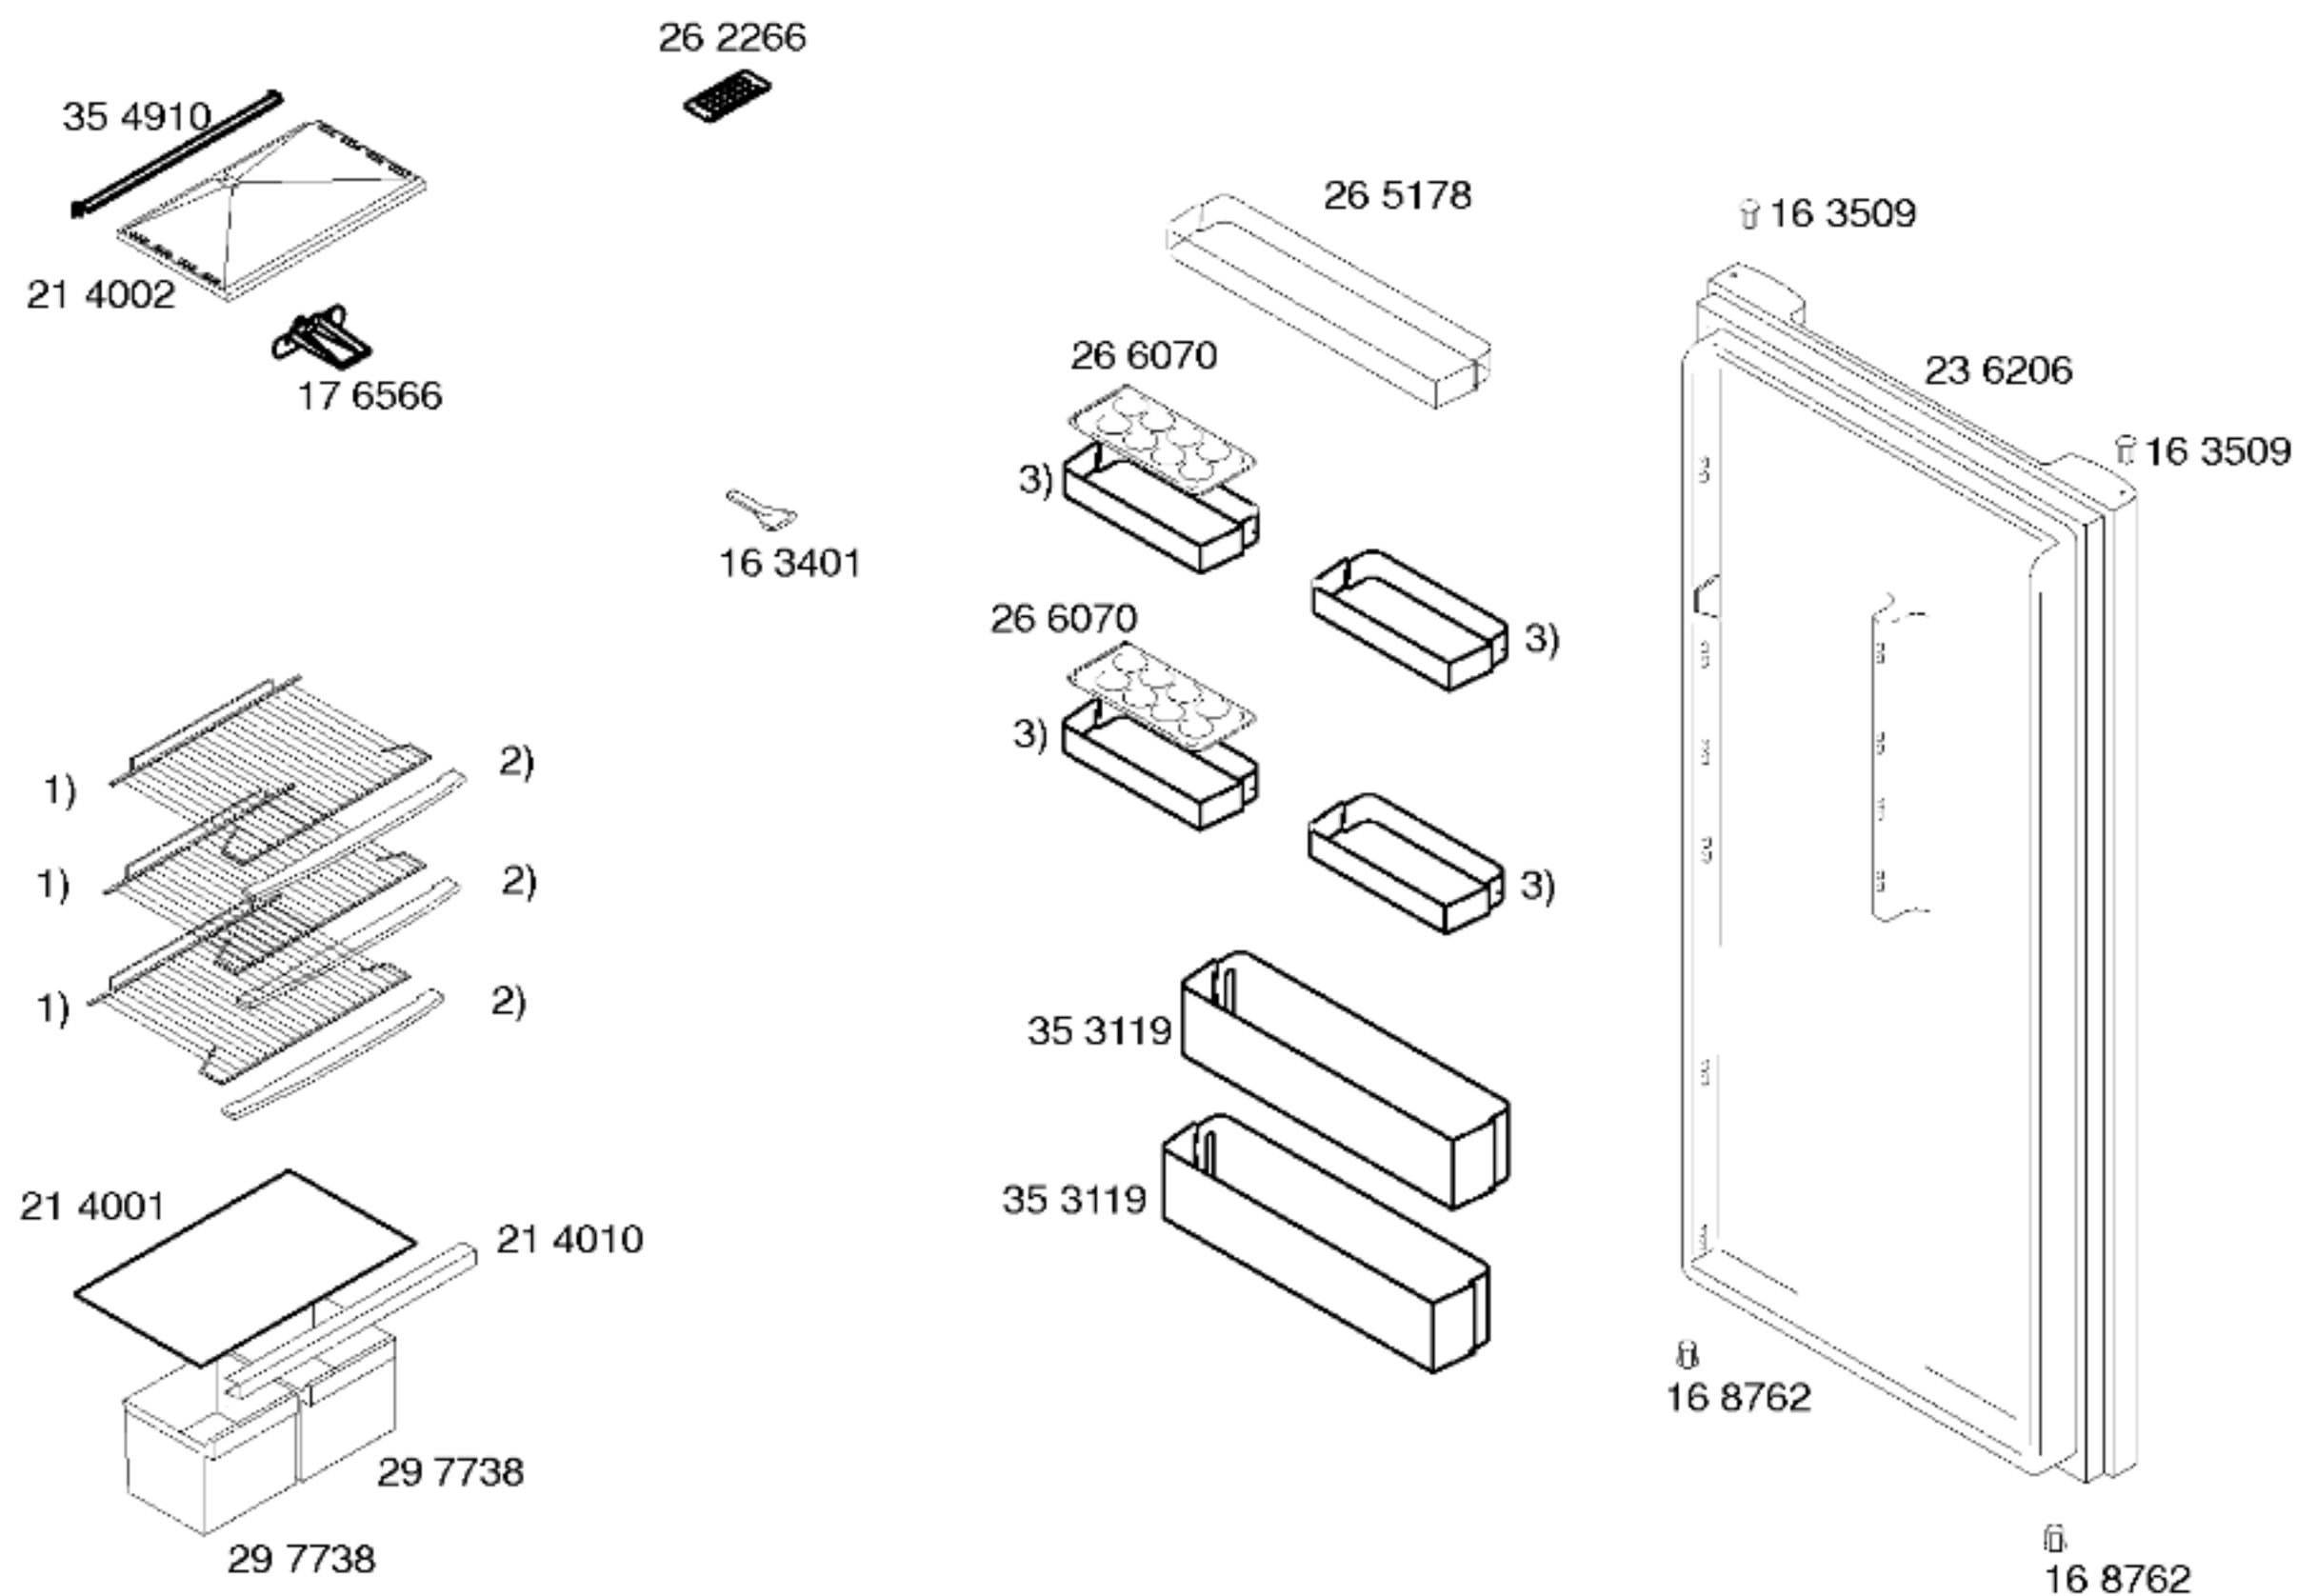

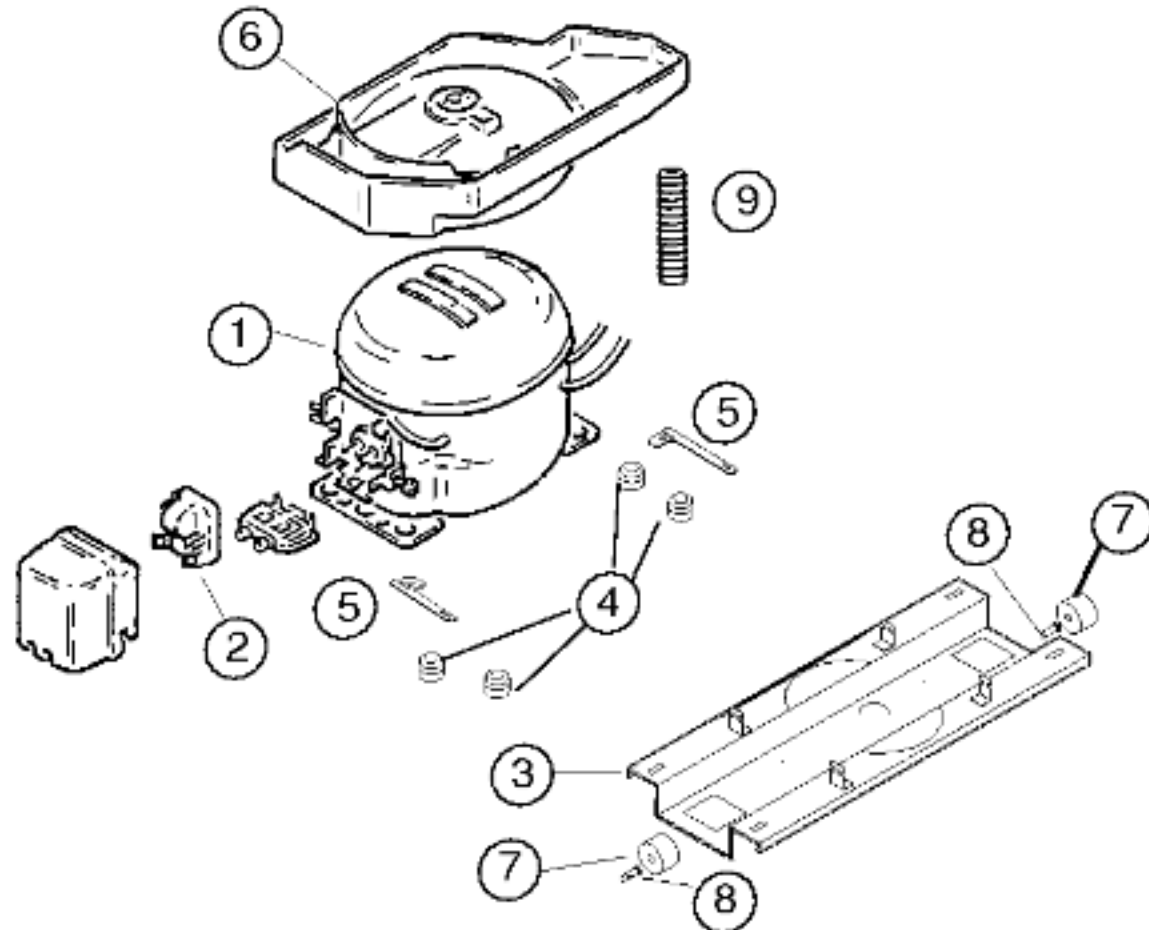

Pos.	Danfoss		
	NL7F		
1	14 1817		
2	16 5570		
3	21 4007		
4	16 3427		
5	16 3508		
6	17 2951		
7	17 5758		
8	17 5759		
9	26 8721		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BILGILER

Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NL7F 10.4 13.3 14.1		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	HANCO K60 P1129 ..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantily/ Dolum miktarı	R134 a	g	*
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Ω W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ω		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ω V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz