 


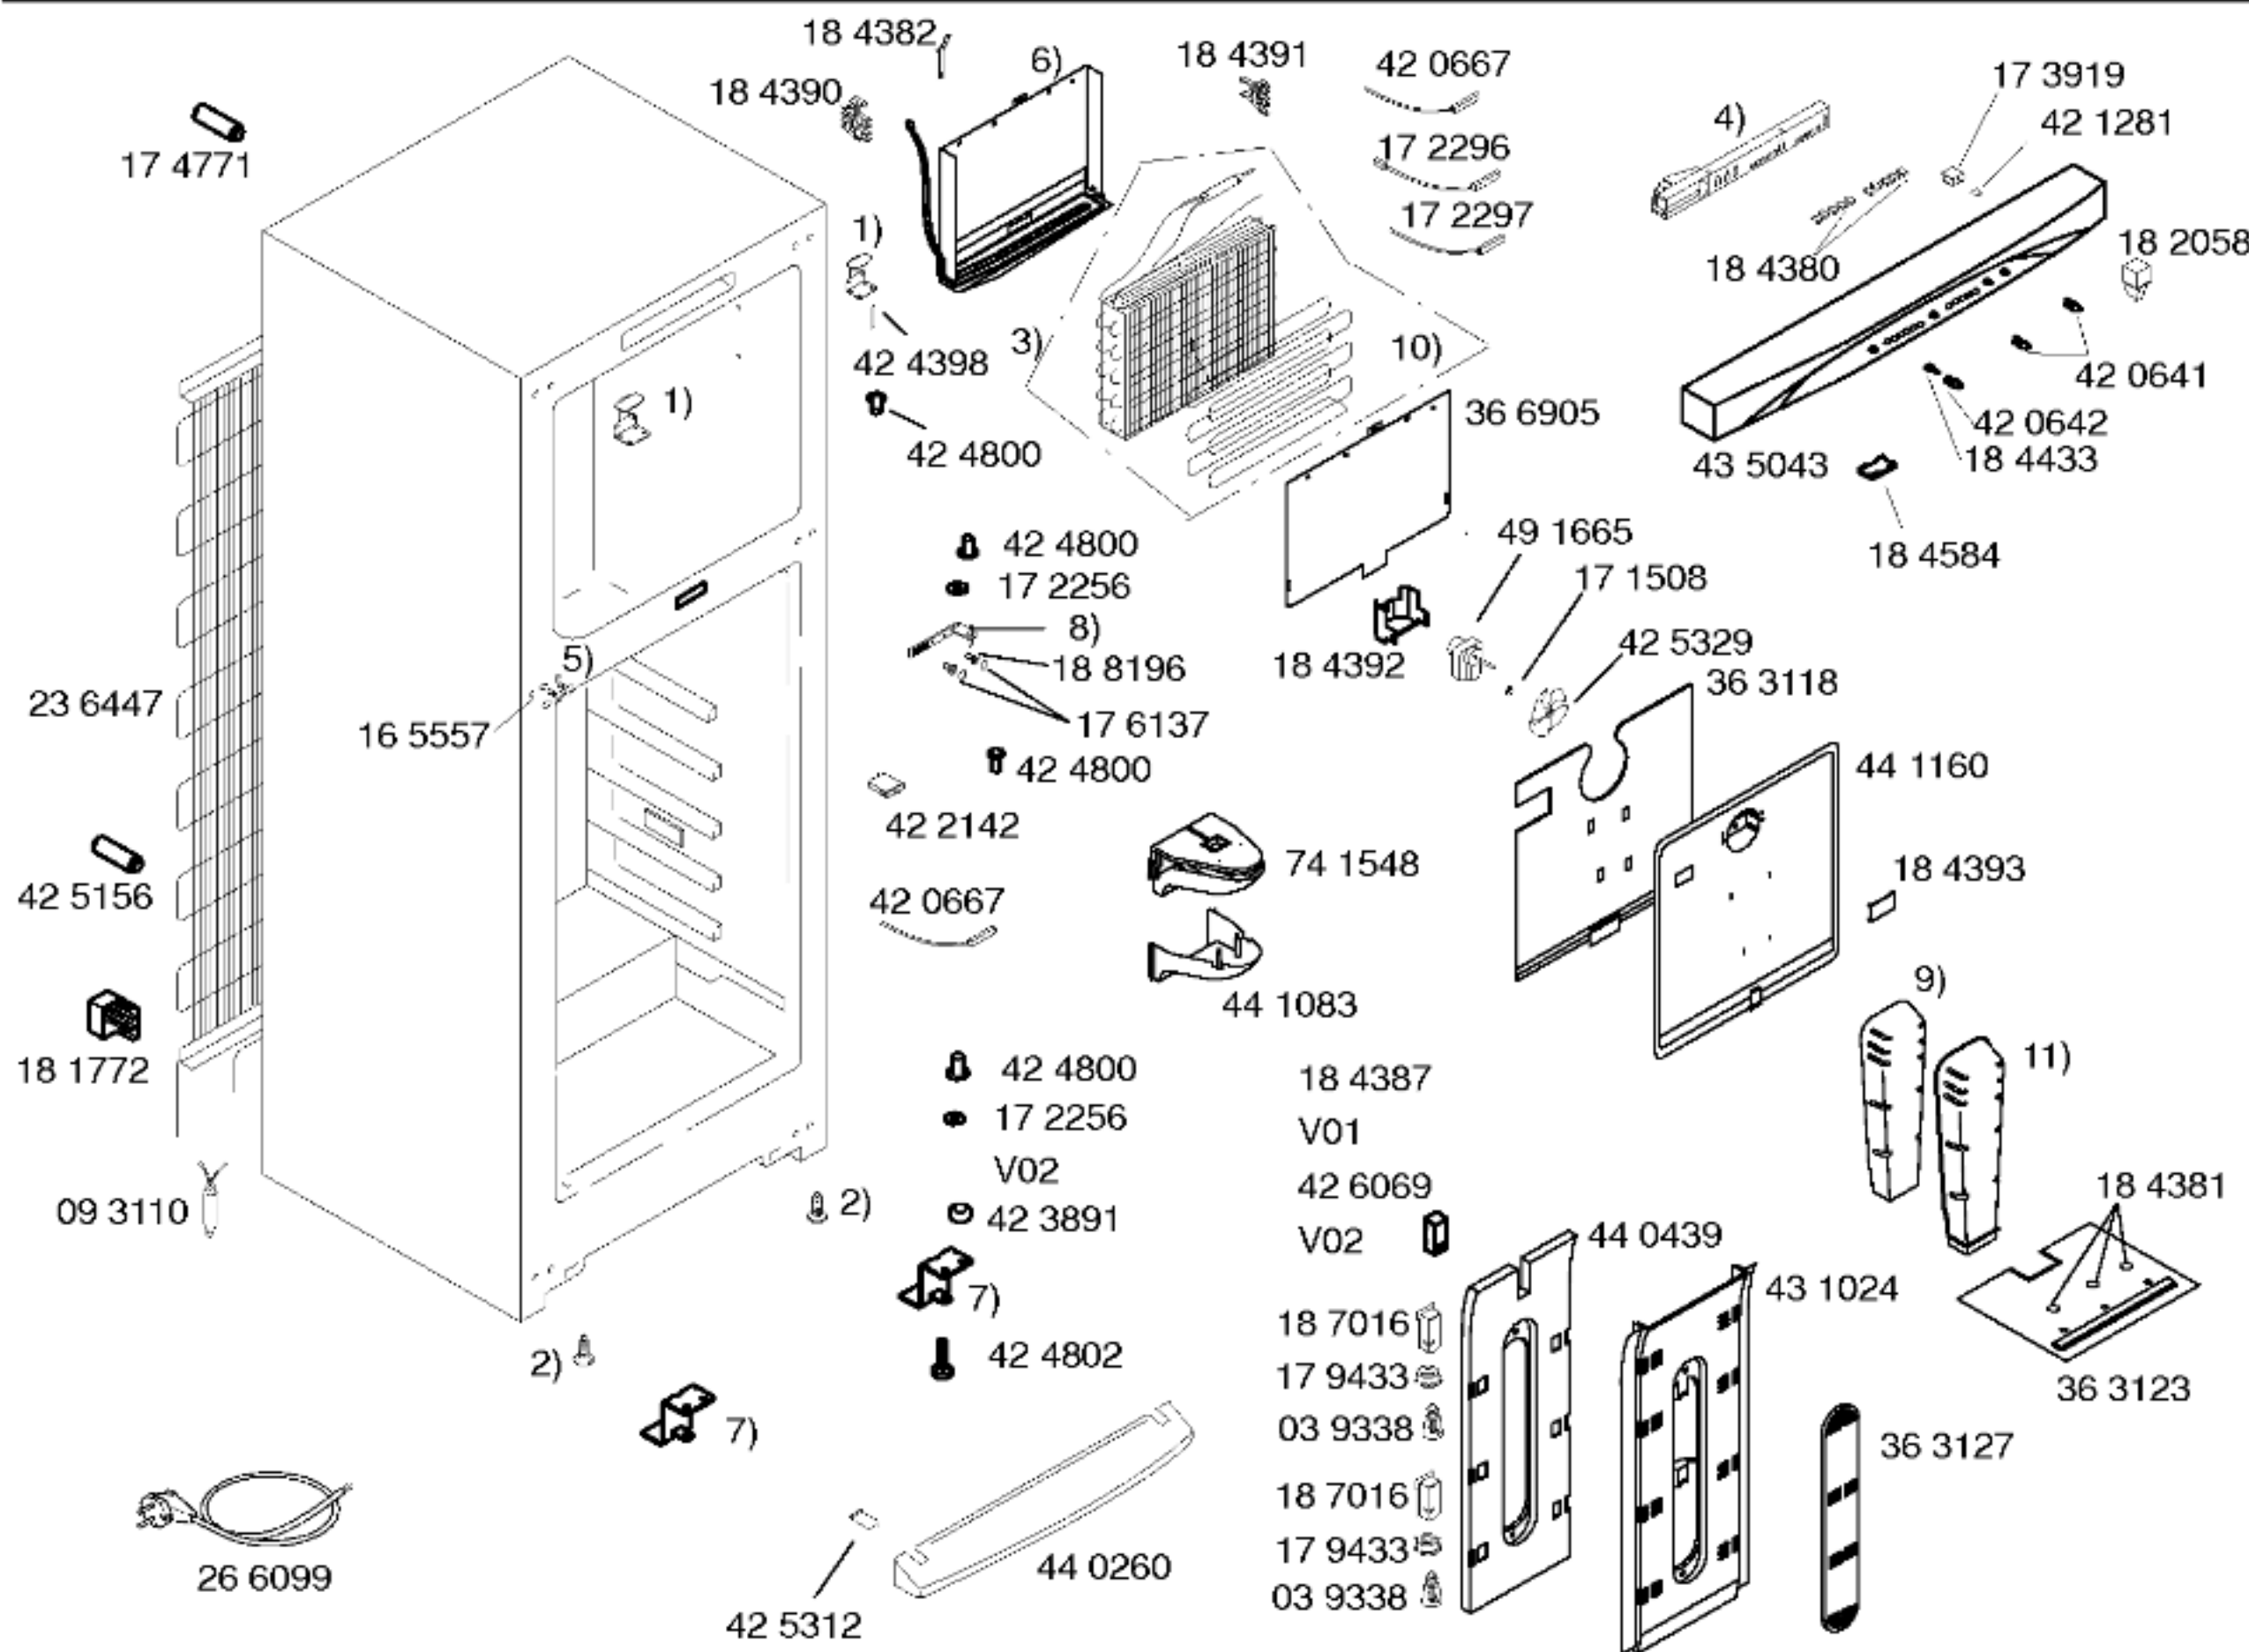

Mat. - Nr. - Konstante
3740

Gebrauchsanweisung
59 2794
(ES,GB,FR,PT)

1) 17 1312

2) 42 4340

3) 43 8723

4) 49 4164

V01

49 5511

V02

5) 16 5552

6) 36 9906

7) 42 4801

V01

42 8184

V02

8) 42 4825

9) 43 7167

 
V01

44 3698

V02

10) 36 9820


11) 43 7164

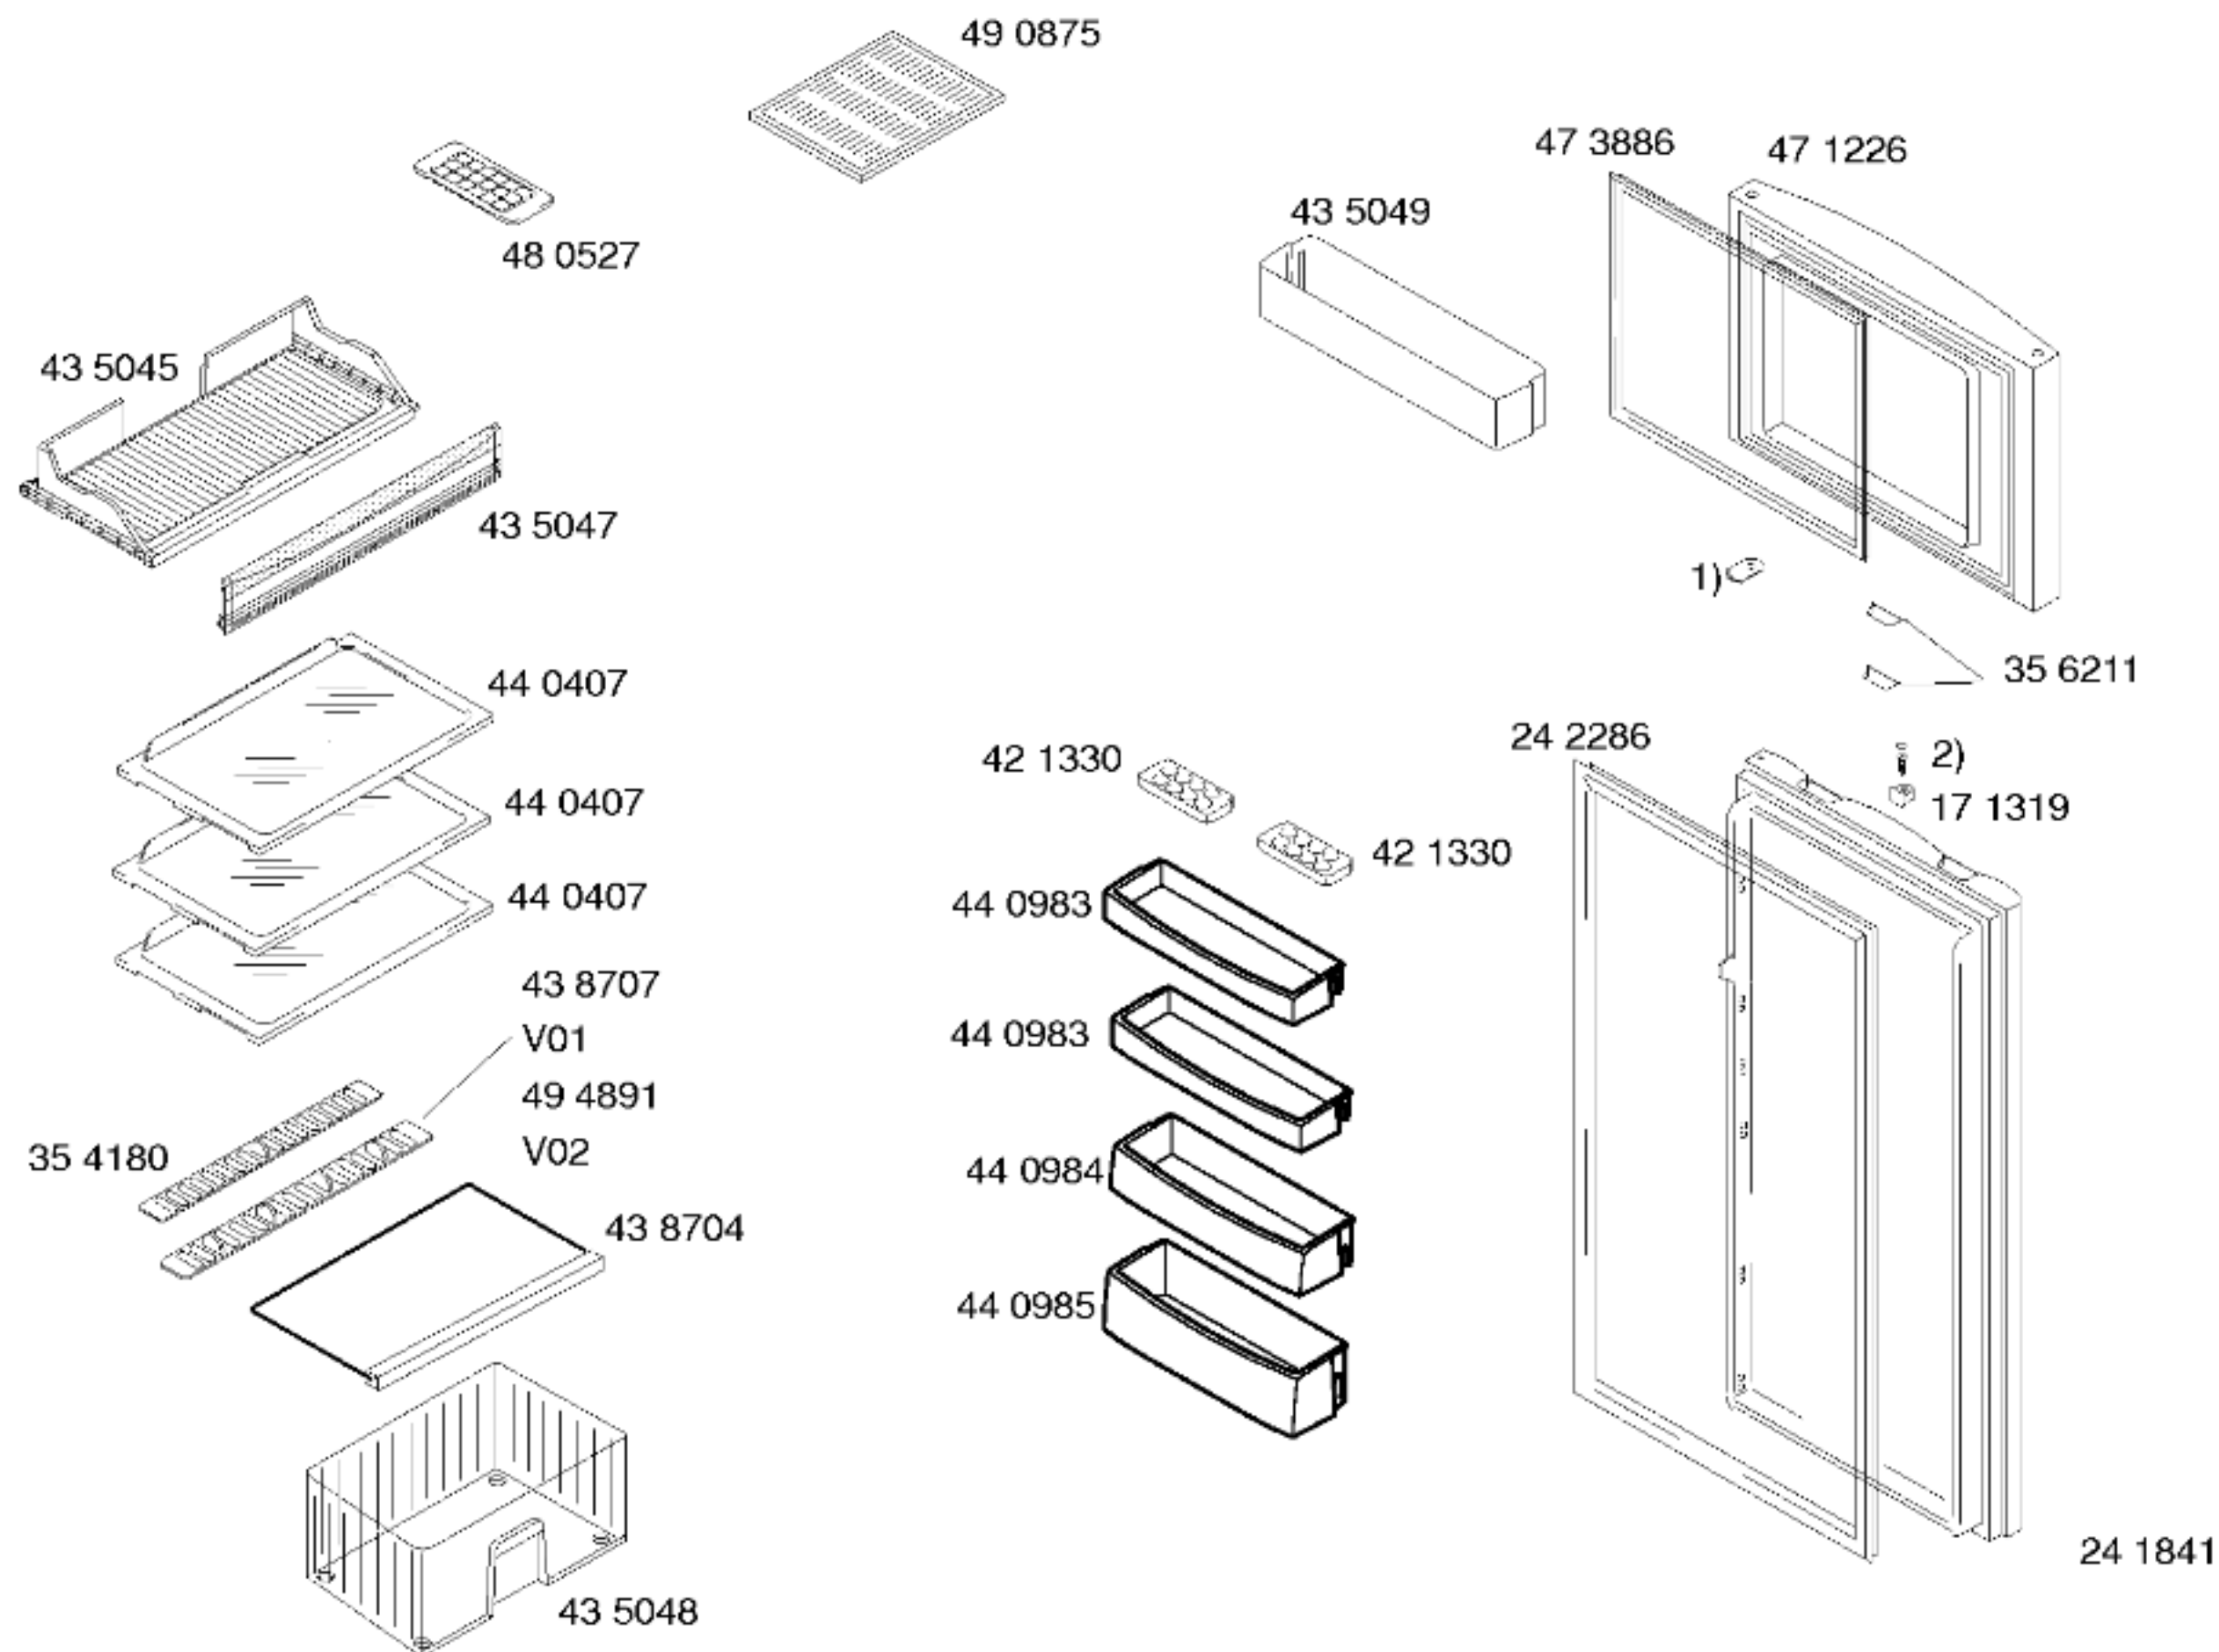

Mat. – Nr. – Konstante
3740

1) 42 6286

 2) 16 5557

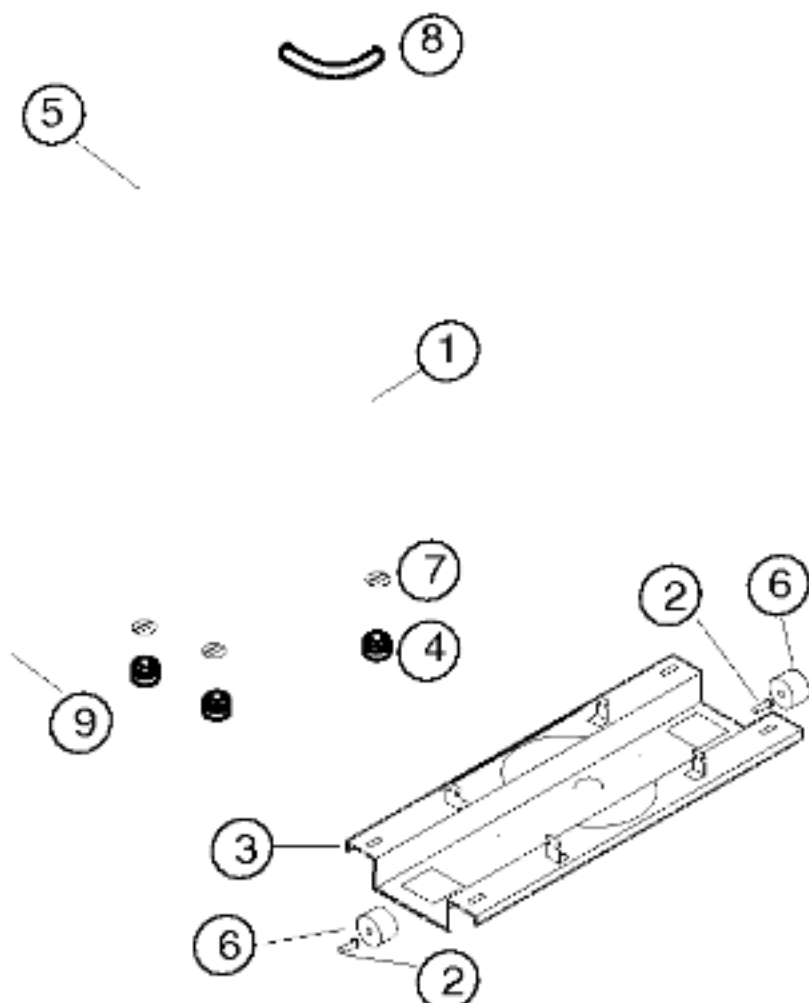

Pos.	Danfoss		
	NLE13KK3		
1	14 3864		
2	18 1014		
3	35 4158		
4	16 3427		
5	49 4671		
6	17 1318		
7	17 1519		
8	42 0376		
9	42 6296		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLE13KK3 6.4 12.9 18		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Actua kapama degerleri Valeurs de commutation/Termostat degeri (..abtaven' od)	..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	42
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Ohm W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ohm V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız