


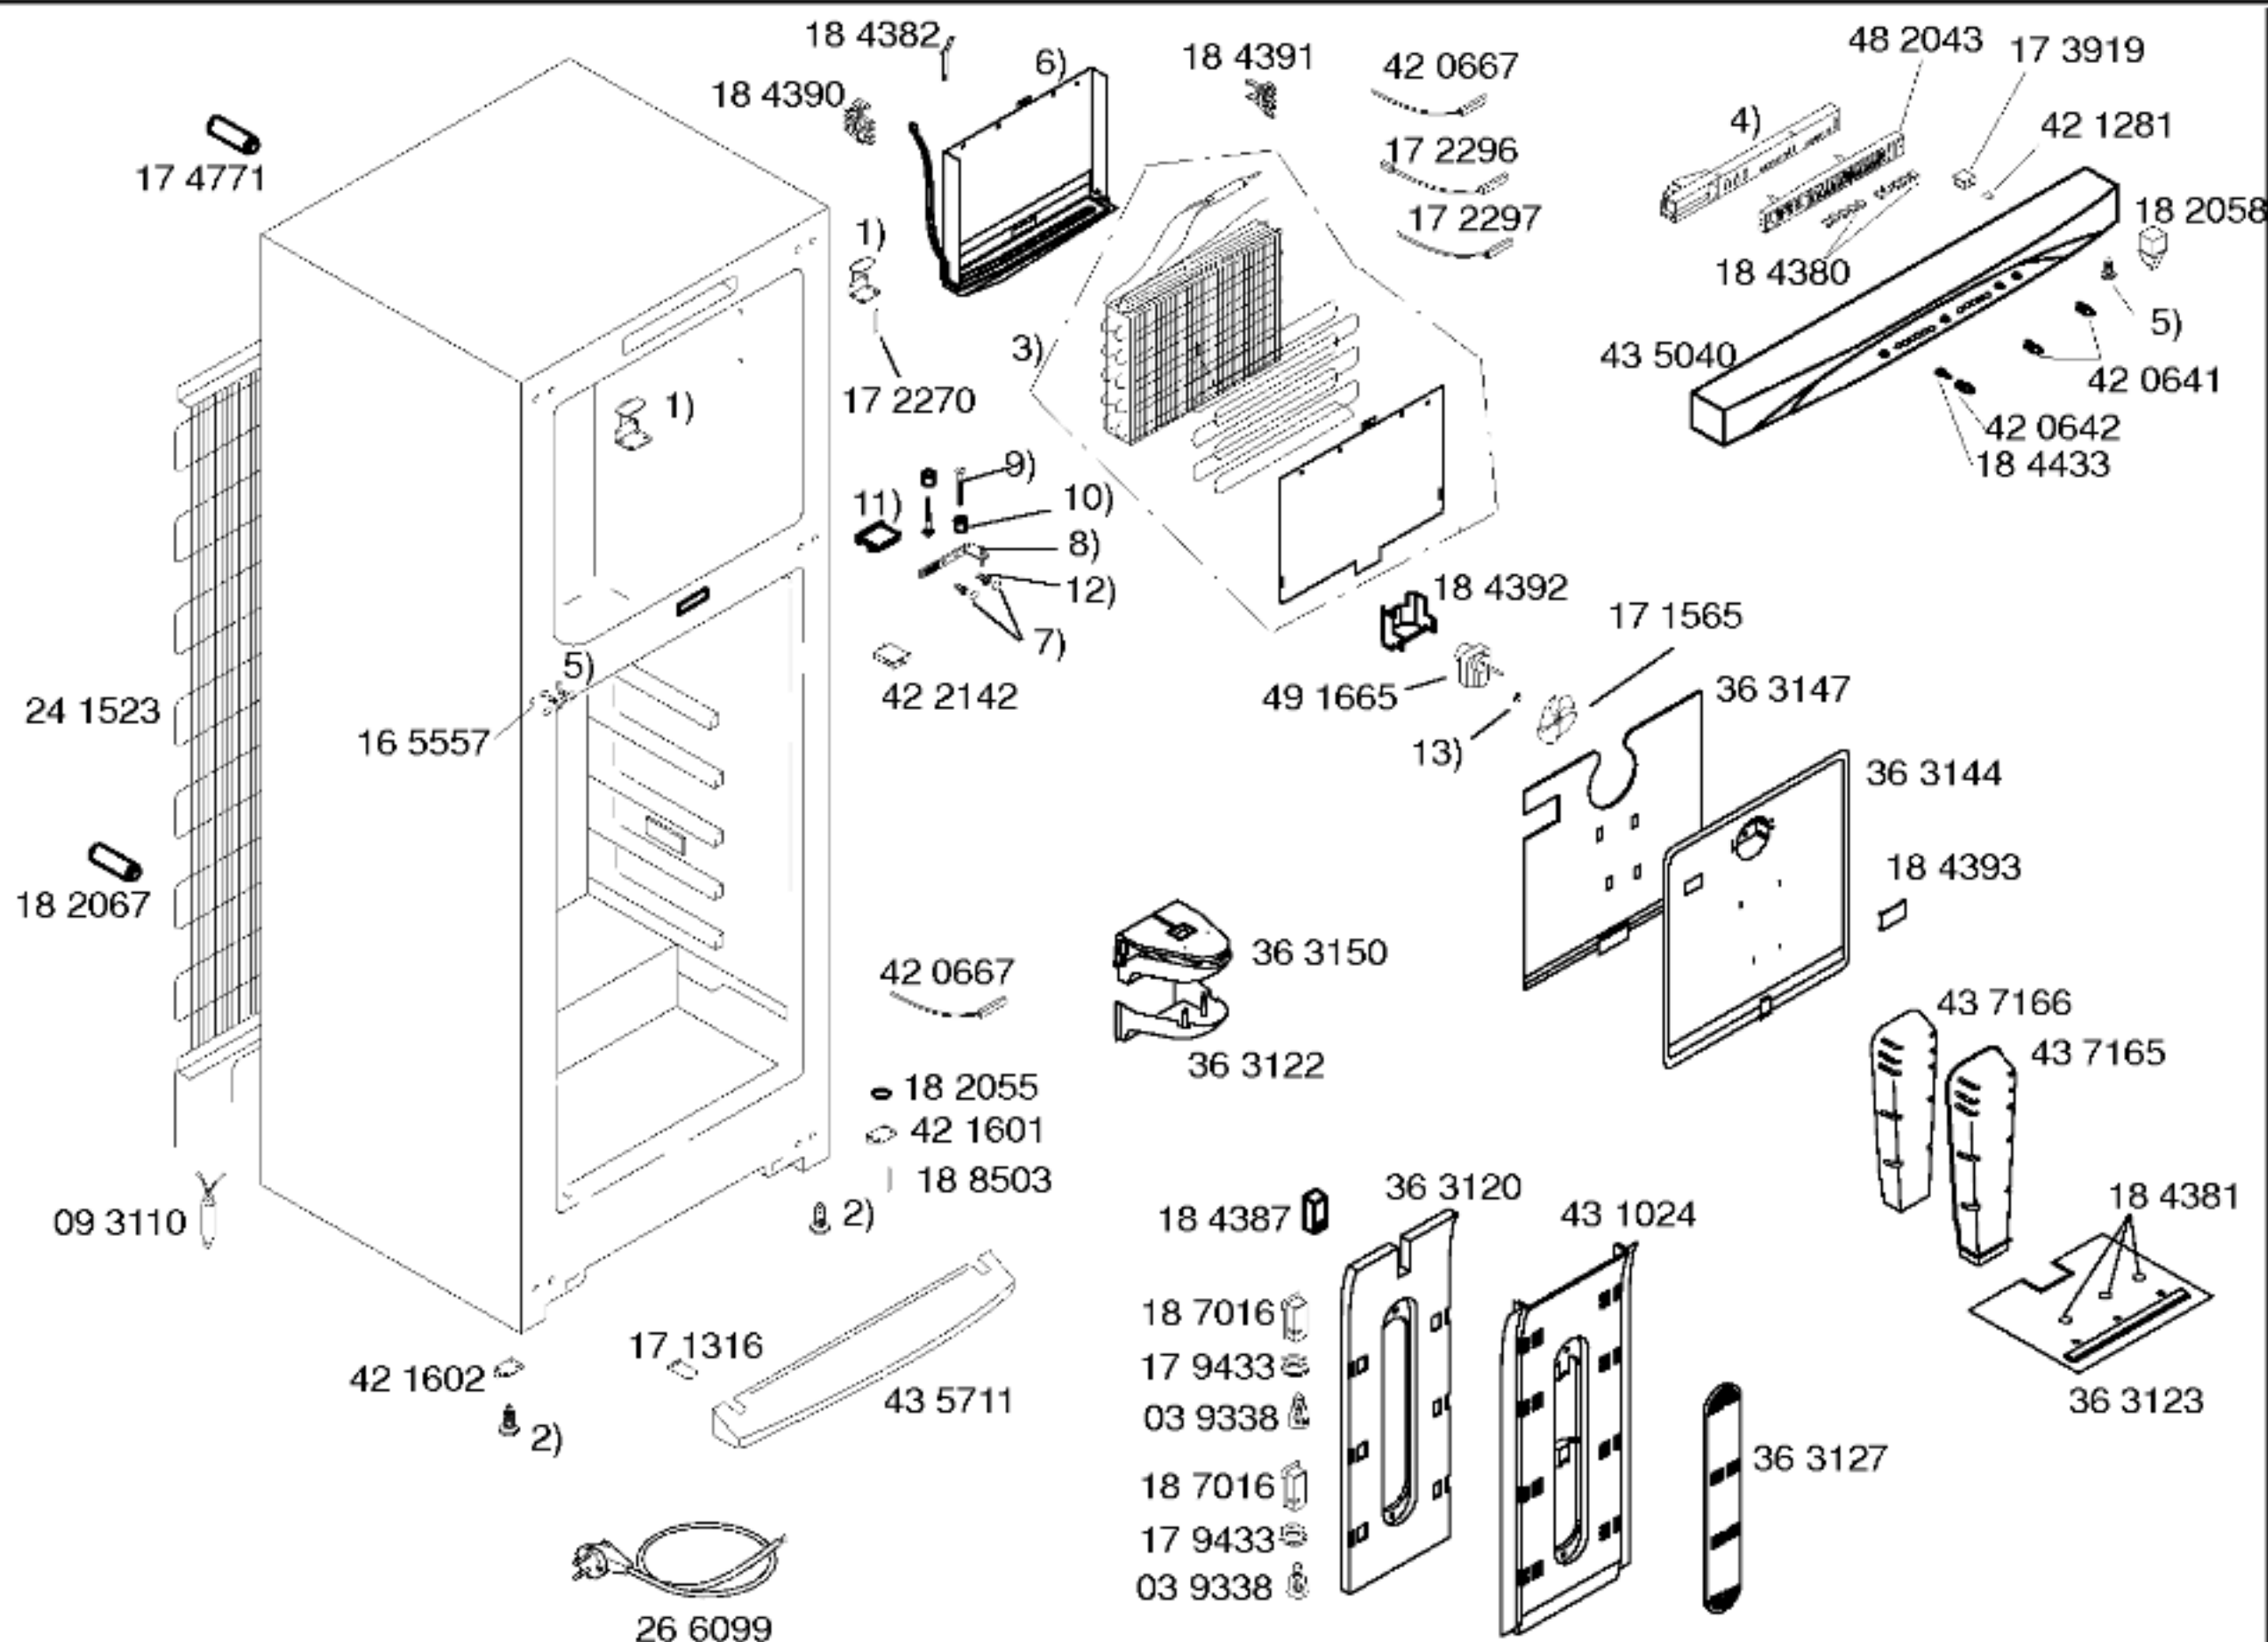

Gebrauchsanweisung

59 1154

(DE,GB,FR,ES,PT)

1) 17 1312

2) 42 4340

3) 43 8726

4) 48 9131

5) 16 5552

6) 36 9905

7) 17 6137

8) 42 0643


9) 18 8194

10) 18 8188


11) 41 8128

12) 18 8196

13) 17 1508

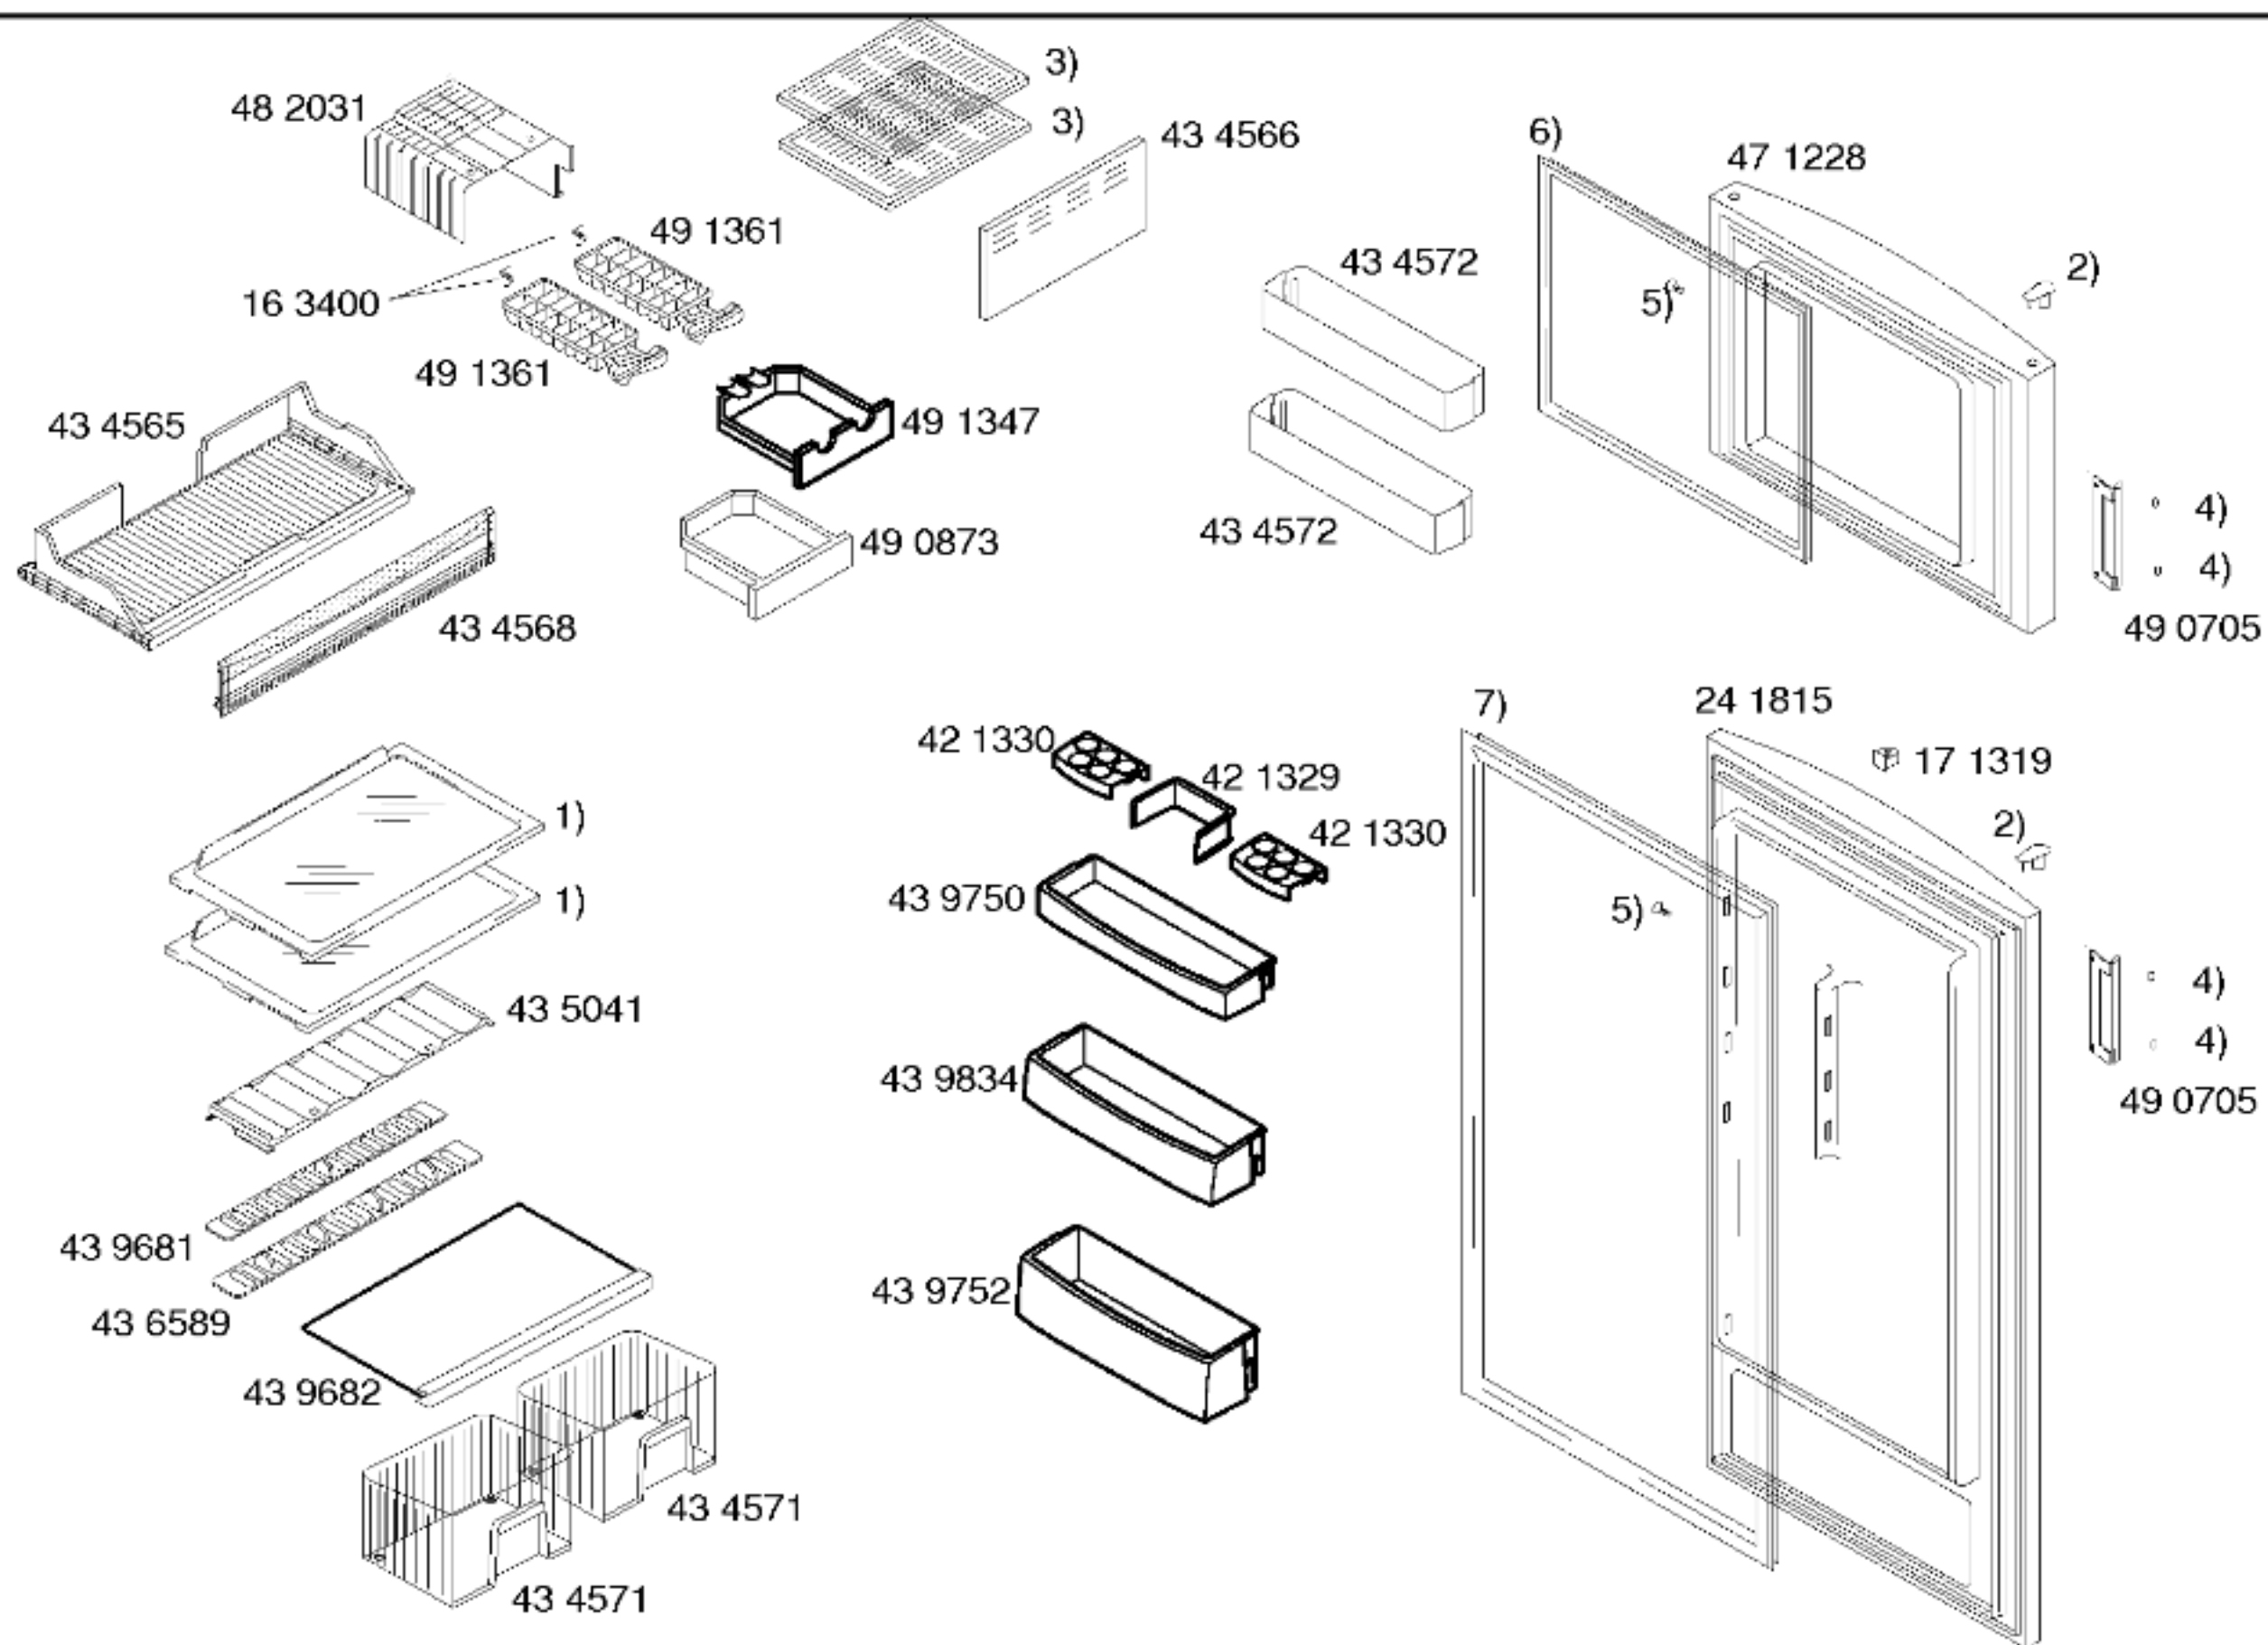

- 1) 47 0830
- 2) 17 1321
- 3) 49 0671
- 4) 16 5557
- 5) 06 0083
- 6) 47 1878
- 7) 24 1272

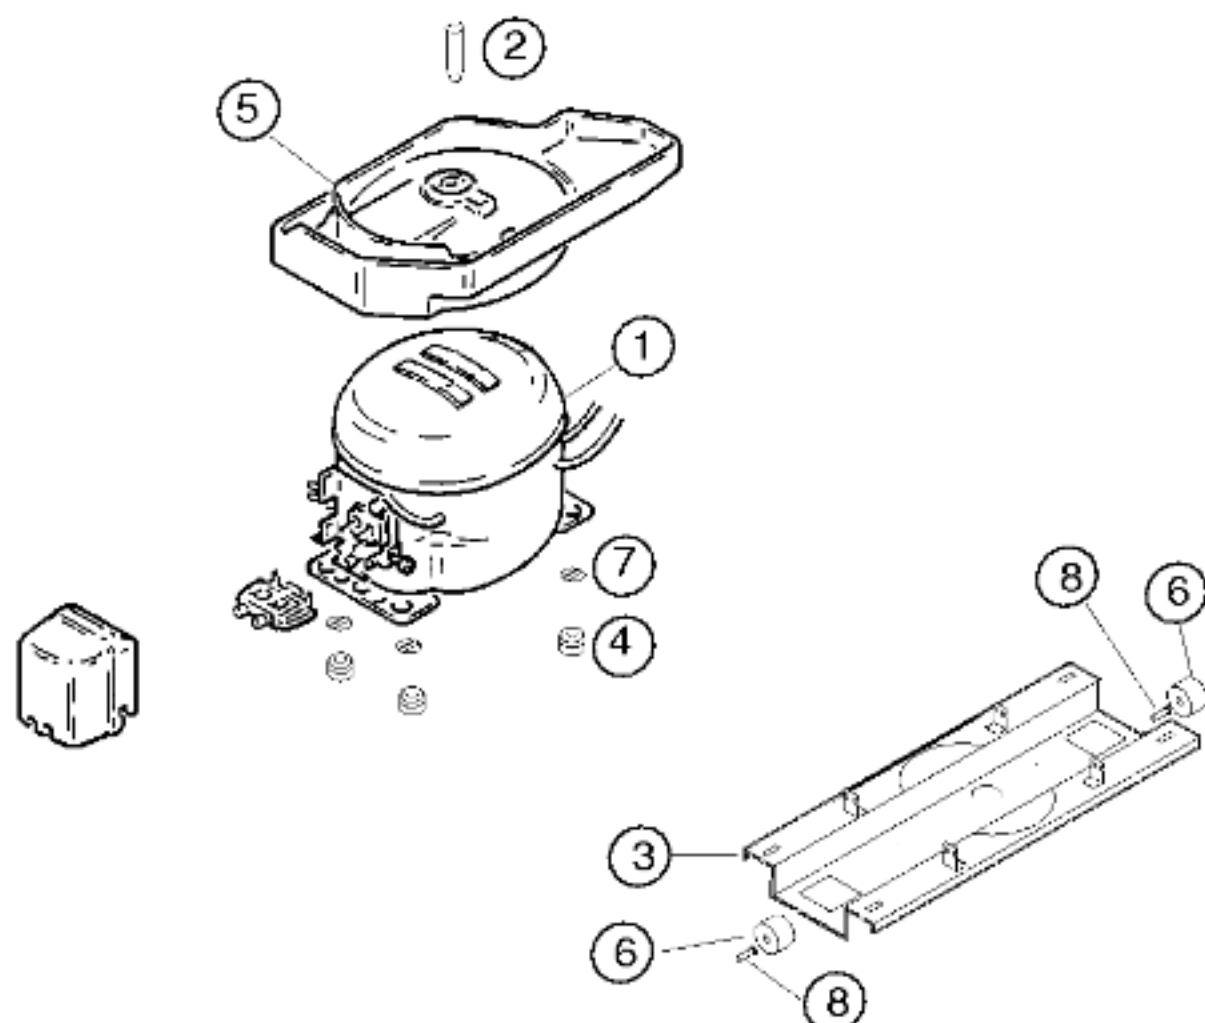

Pos.	Danfoss		
	NLE15KK4		
1	14 3602		
2	42 0376		
3	35 4583		
4	16 3427		
5	49 1201		
6	17 1318		
7	17 1519		
8	18 1014		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	Danfoss NLE15KK4 7 11 16.4		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acma kapama degerleri Valeurs de commutation/Termostat degeri (.abtaven' od)	Elektronisch ..ein/acma °C ..aus"/kapama ..alam'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600a	g	*
Anschlusswert/Comm. load/Giris gucu	W	200	
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc (Annehbare min werte in 220V)	W	200	
	Verdampfer	Ablaufrinne	Klappe 4
	200	61	
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Verdampfer		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

^ Siehe Typenschild/Mamul etiketine bakiniz