


**BOSCH**

V340-0722044525-D1,A1
 V340-0722044526-Exp.1
 V340-0722044527-CH1
 V340-0722044528-N1,SF1

V340-0722044529-F1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

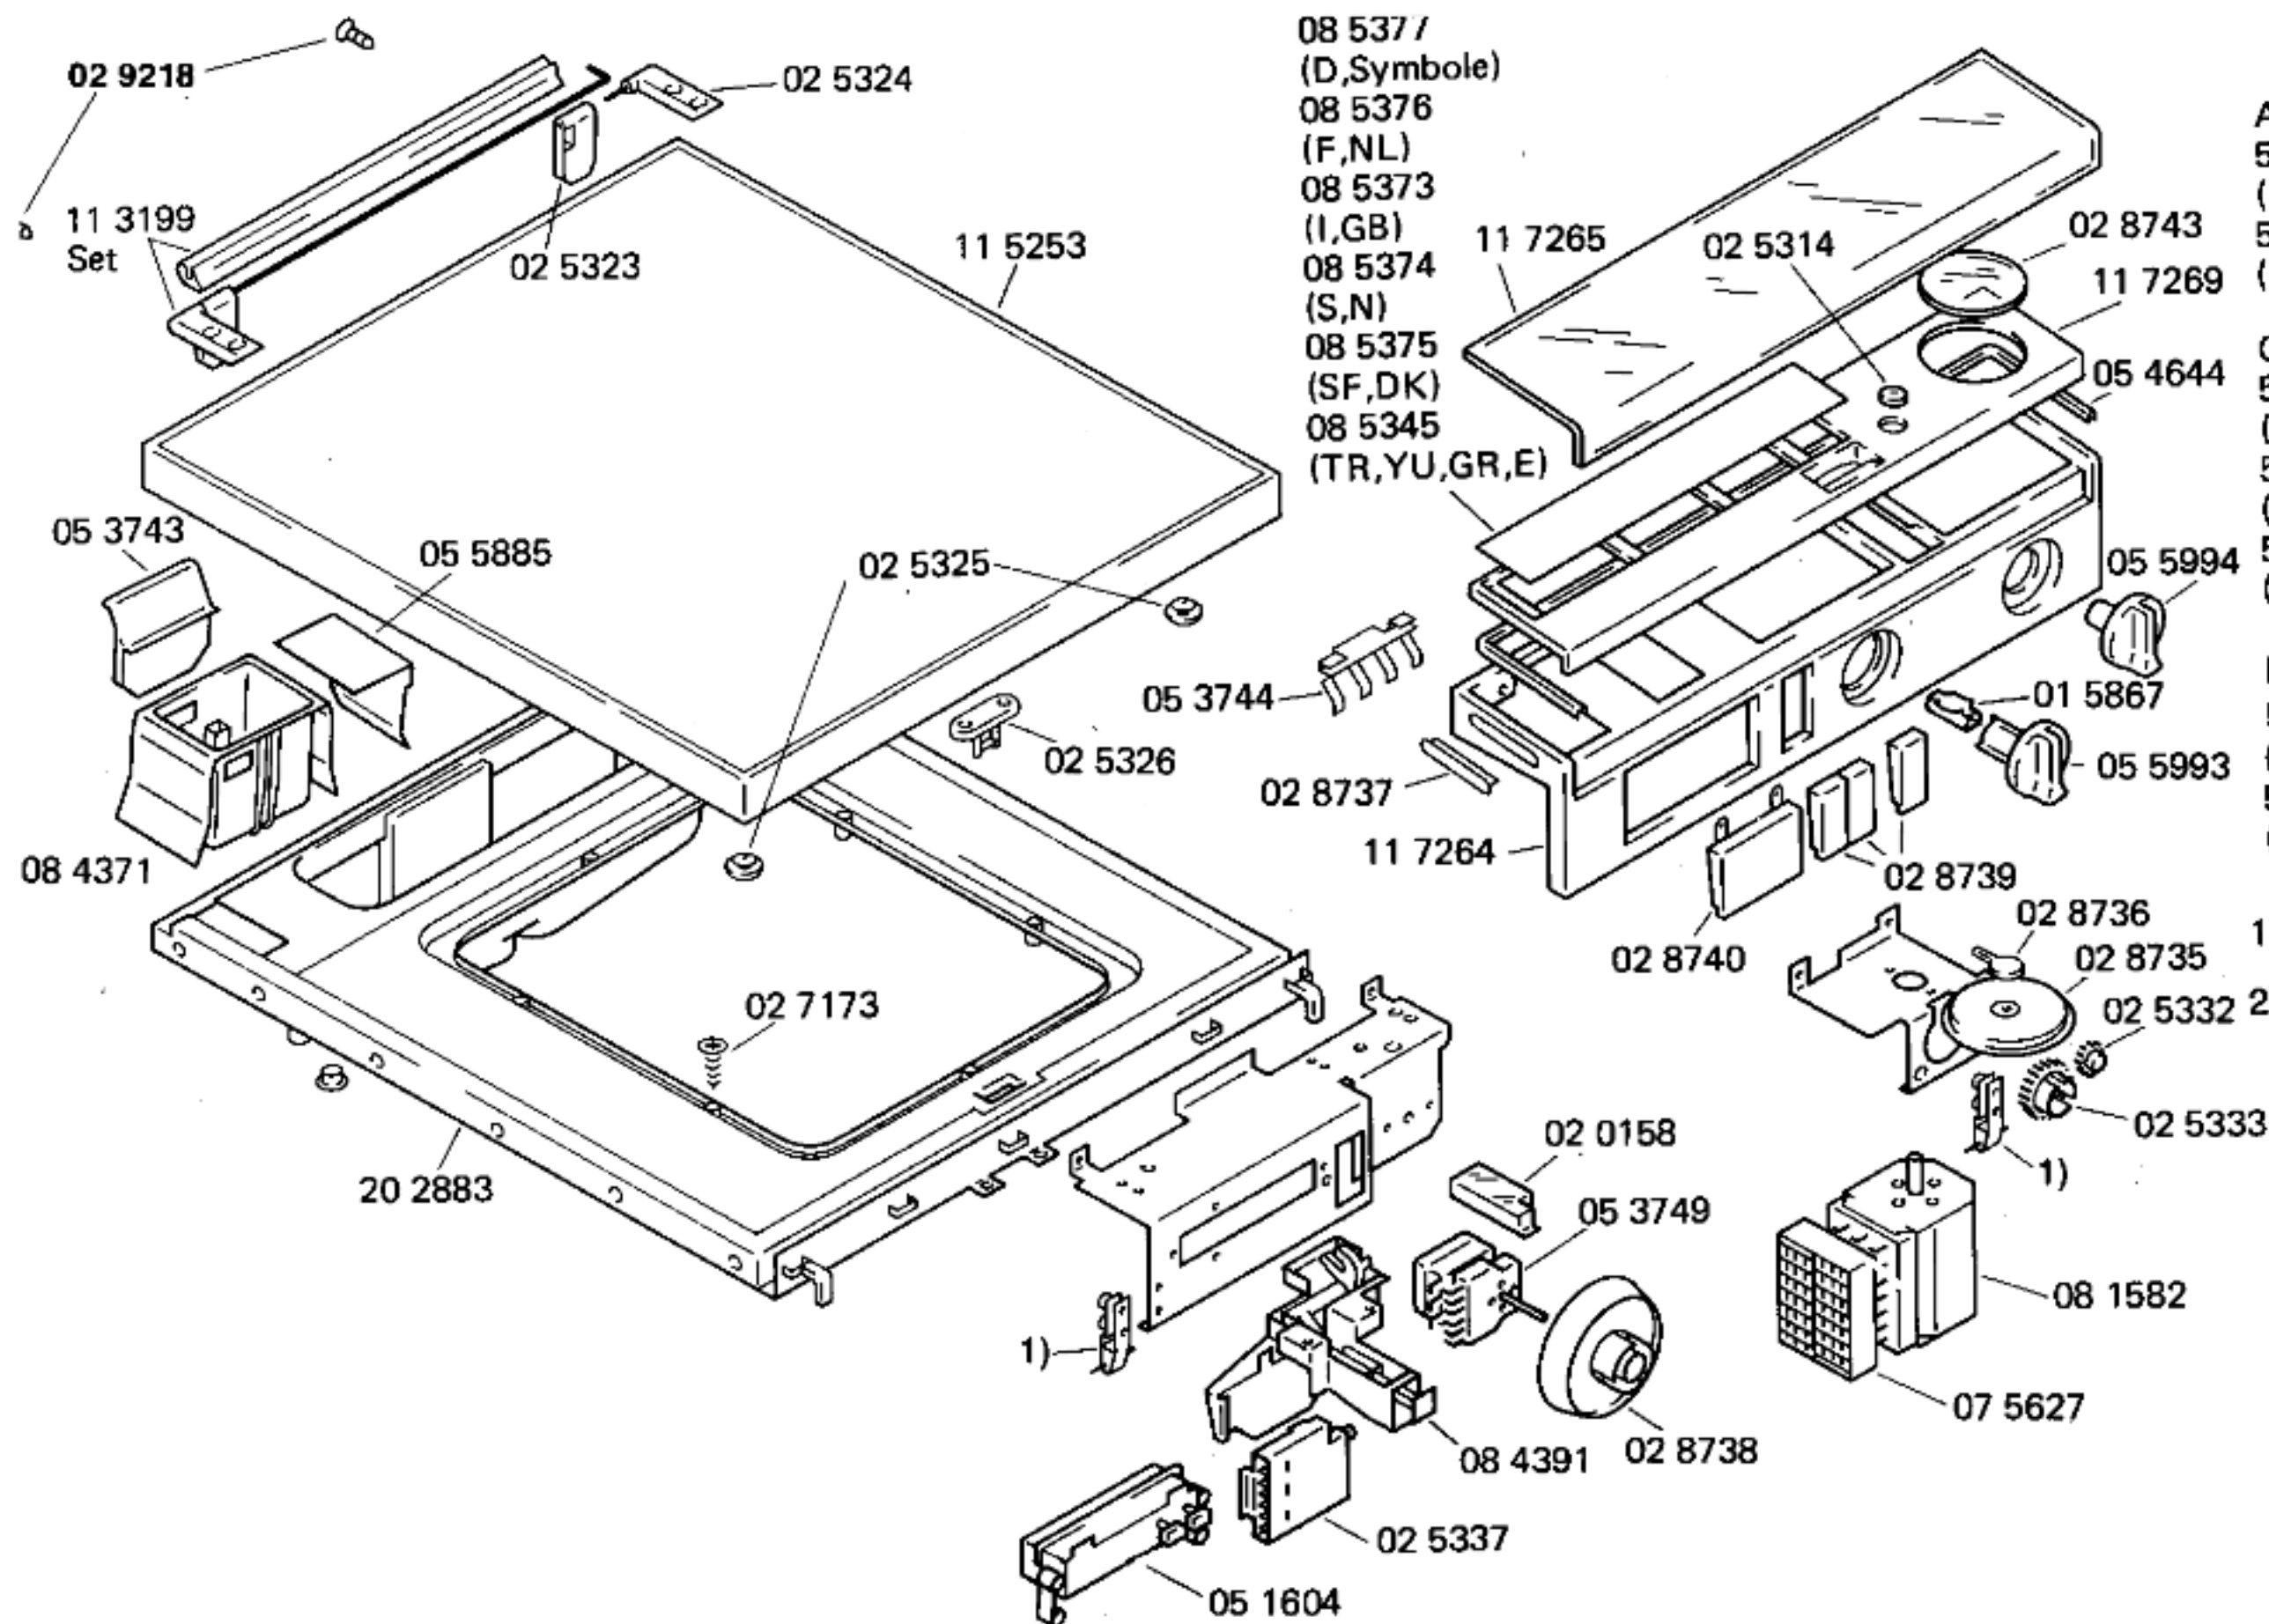**Aufstellanweisungen:**

51 1497
 (D, GB, F, I, NL)
 51 1674
 (D, I, S, DK, N, SF)

Gebrauchsanweisungen:

51 1495
 (D, GB, F, I, NL)
 51 1676
 (D, I, S, DK, N, SF)
 51 1686
 (F)

Programmtabellen:

51 1499
 (D, GB, F, I, NL)
 51 1634
 (D, I, S, DK, N, SF)

1) 02 5334
 2) einschl. 05 4644


**BOSCH**

V340-0722044525-D1,A1
 V340-0722044526-Exp.1
 V340-0722044527-CH1
 V340-0722044528-N1,SF1

V340-0722044529-F1

WASCHGERÄTE
 Waschvollautomaten

Ident - Nummern - Konstante
 3740

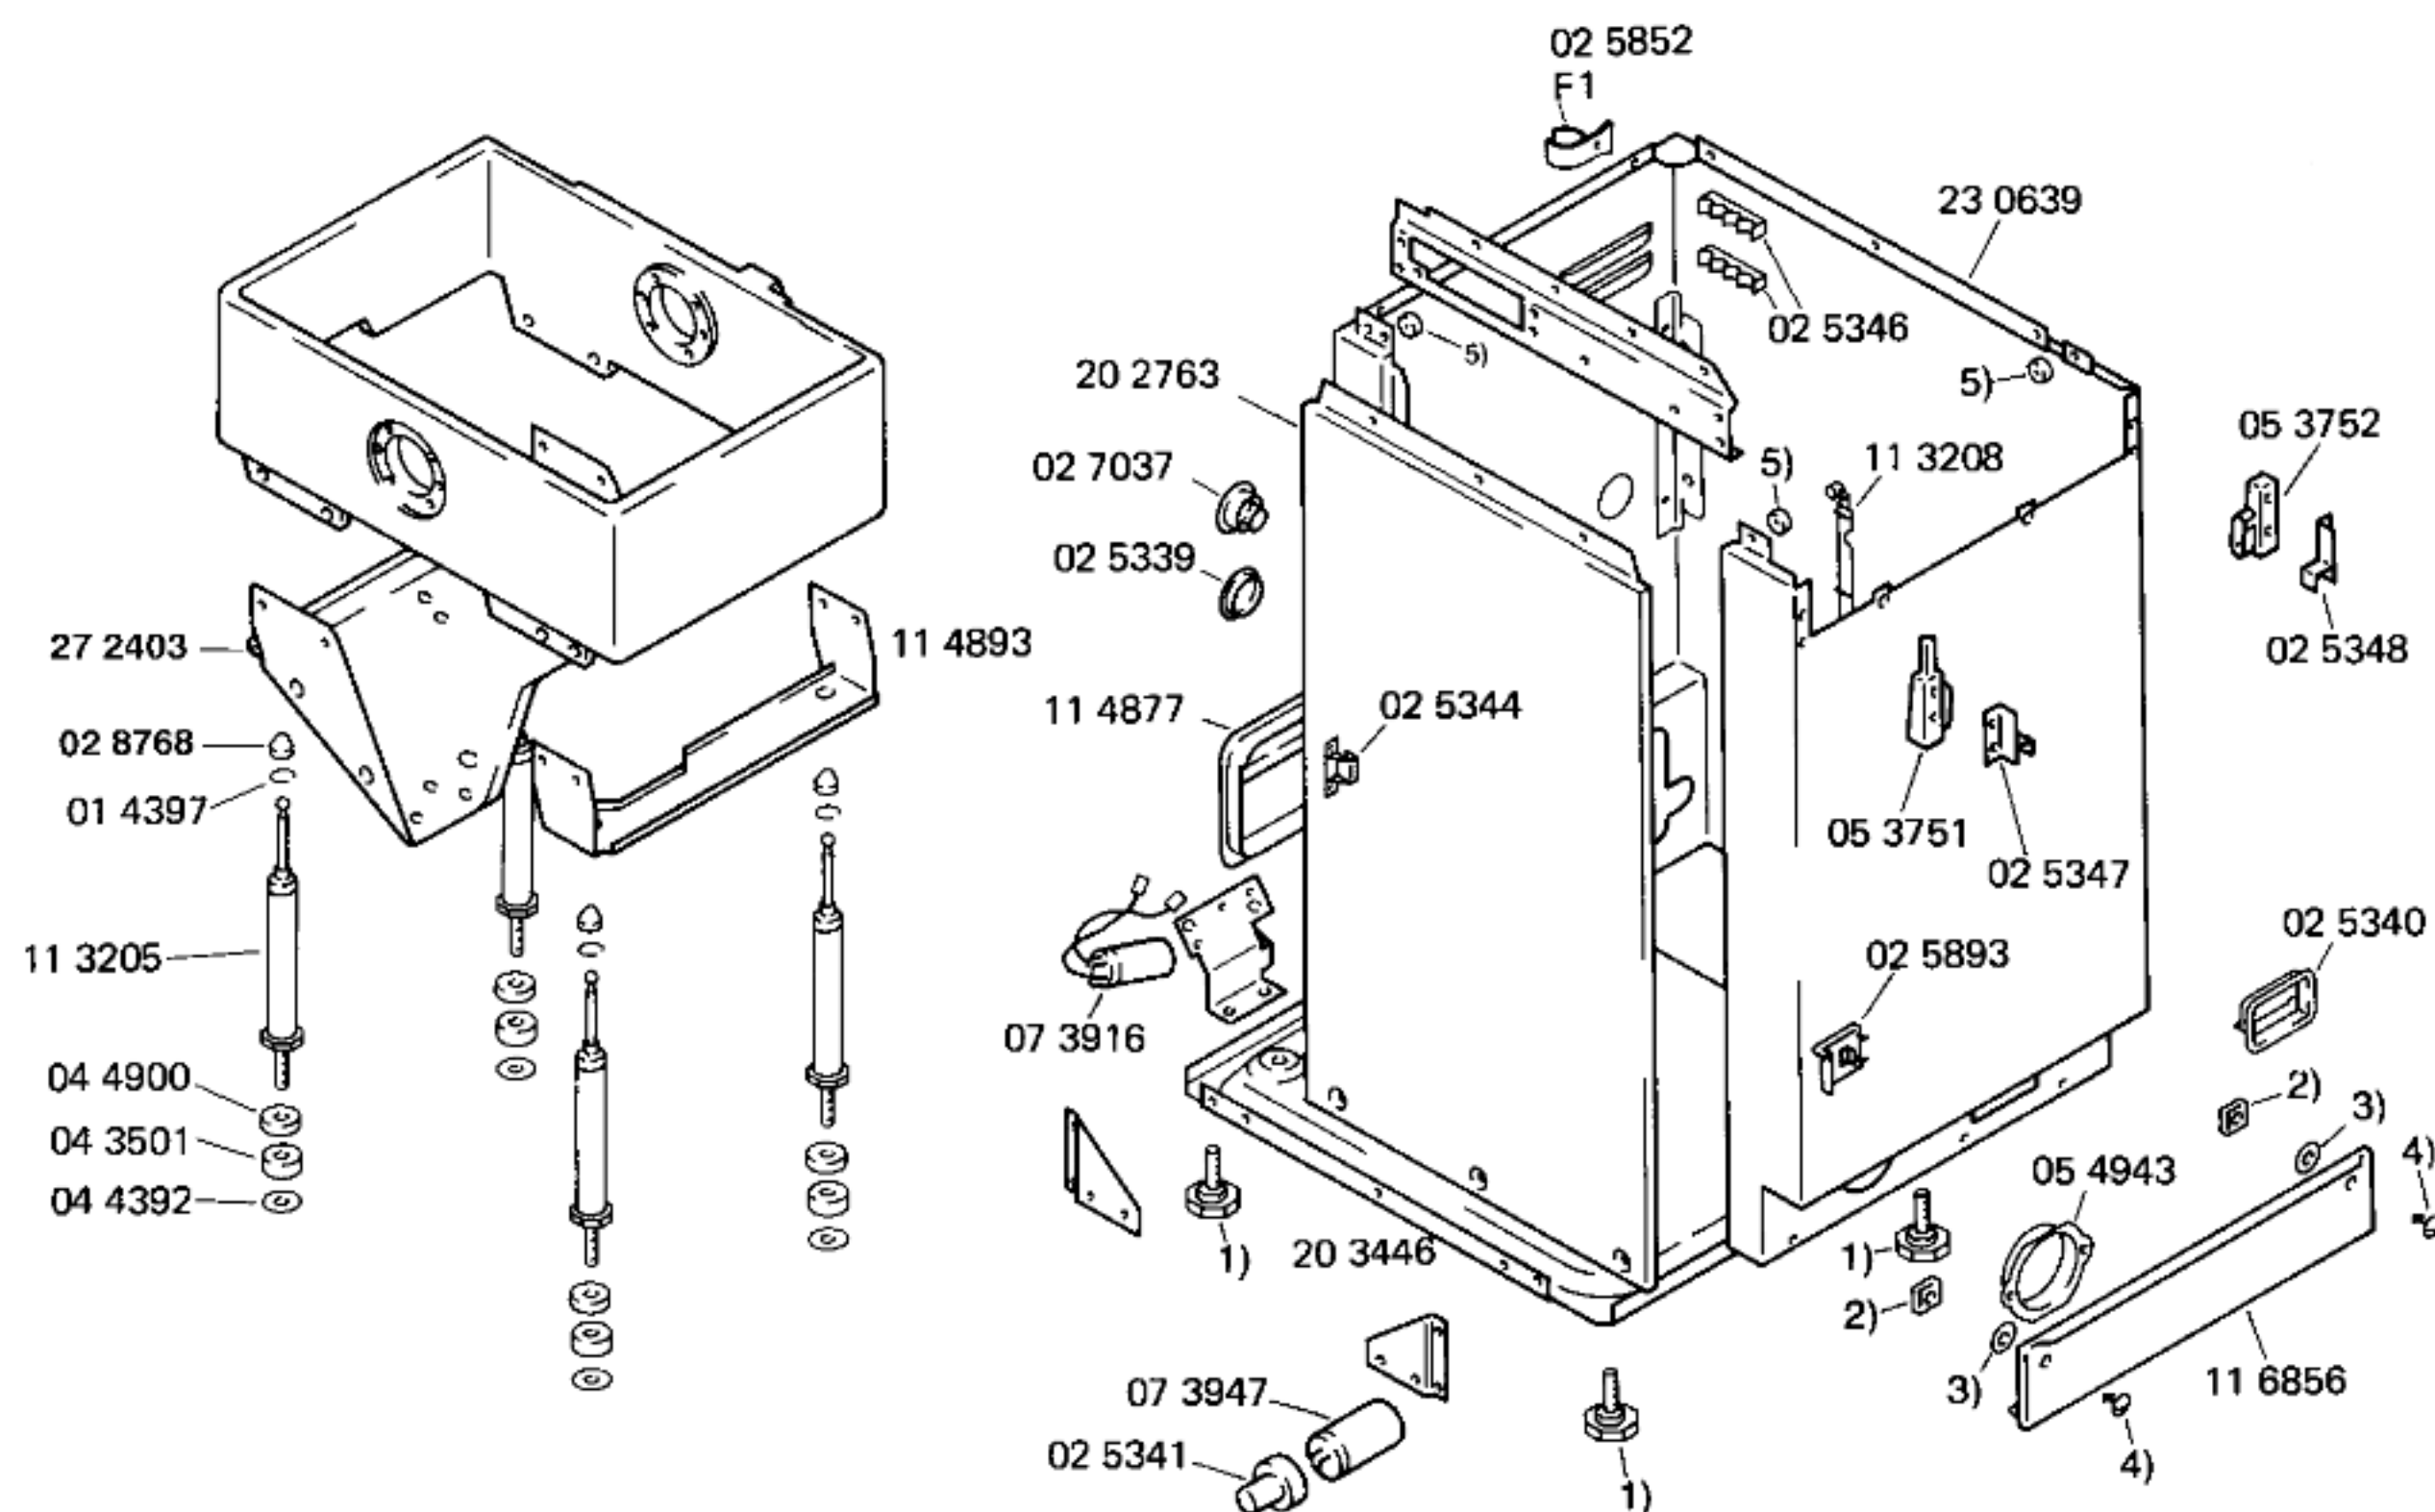

- 1) 04 5561
- 2) 01 4687
- 3) 02 5342
- 4) 02 8437
- 5) 02 5345




BOSCH

V340-0722044525-D1,A1
V340-0722044526-Exp.1
V340-0722044527-CH1
V340-0722044528-N1,SF1

V340-0722044529-F1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

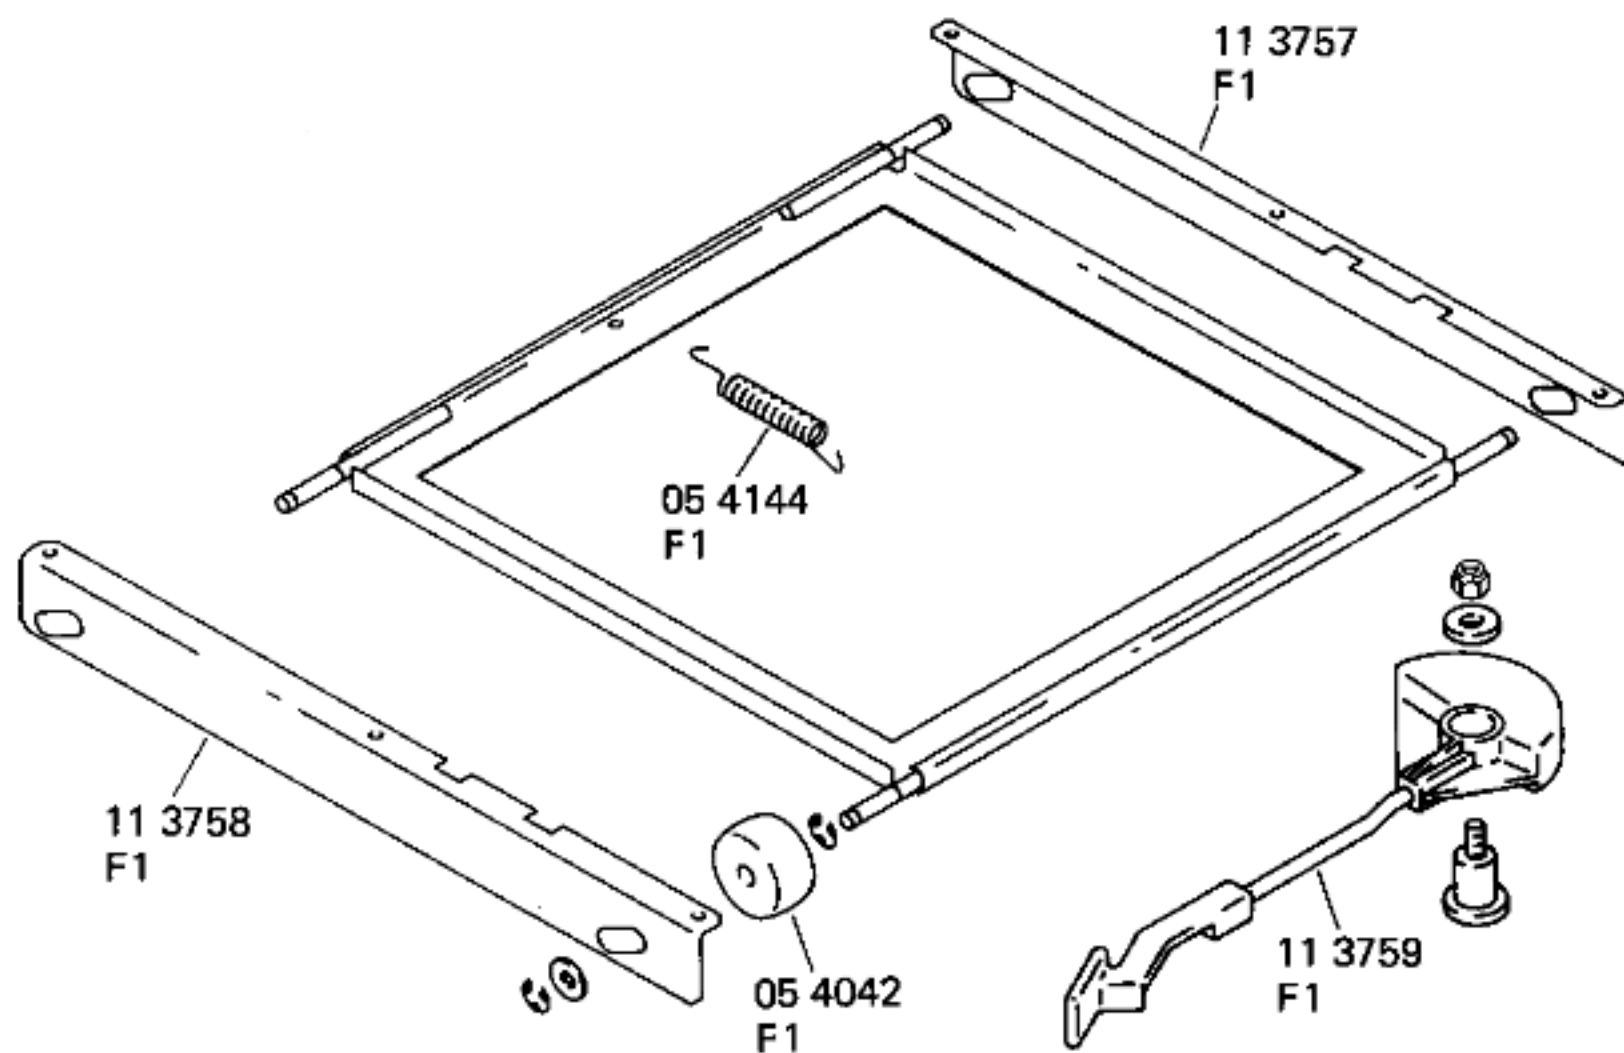


**BOSCH**

V340-0722044525-D1,A1
 V340-0722044526-Exp.1
 V340-0722044527-CH1
 V340-0722044528-N1,SF1

V340-0722044529-F1

WASCHGERÄTE
 Waschvollautomaten

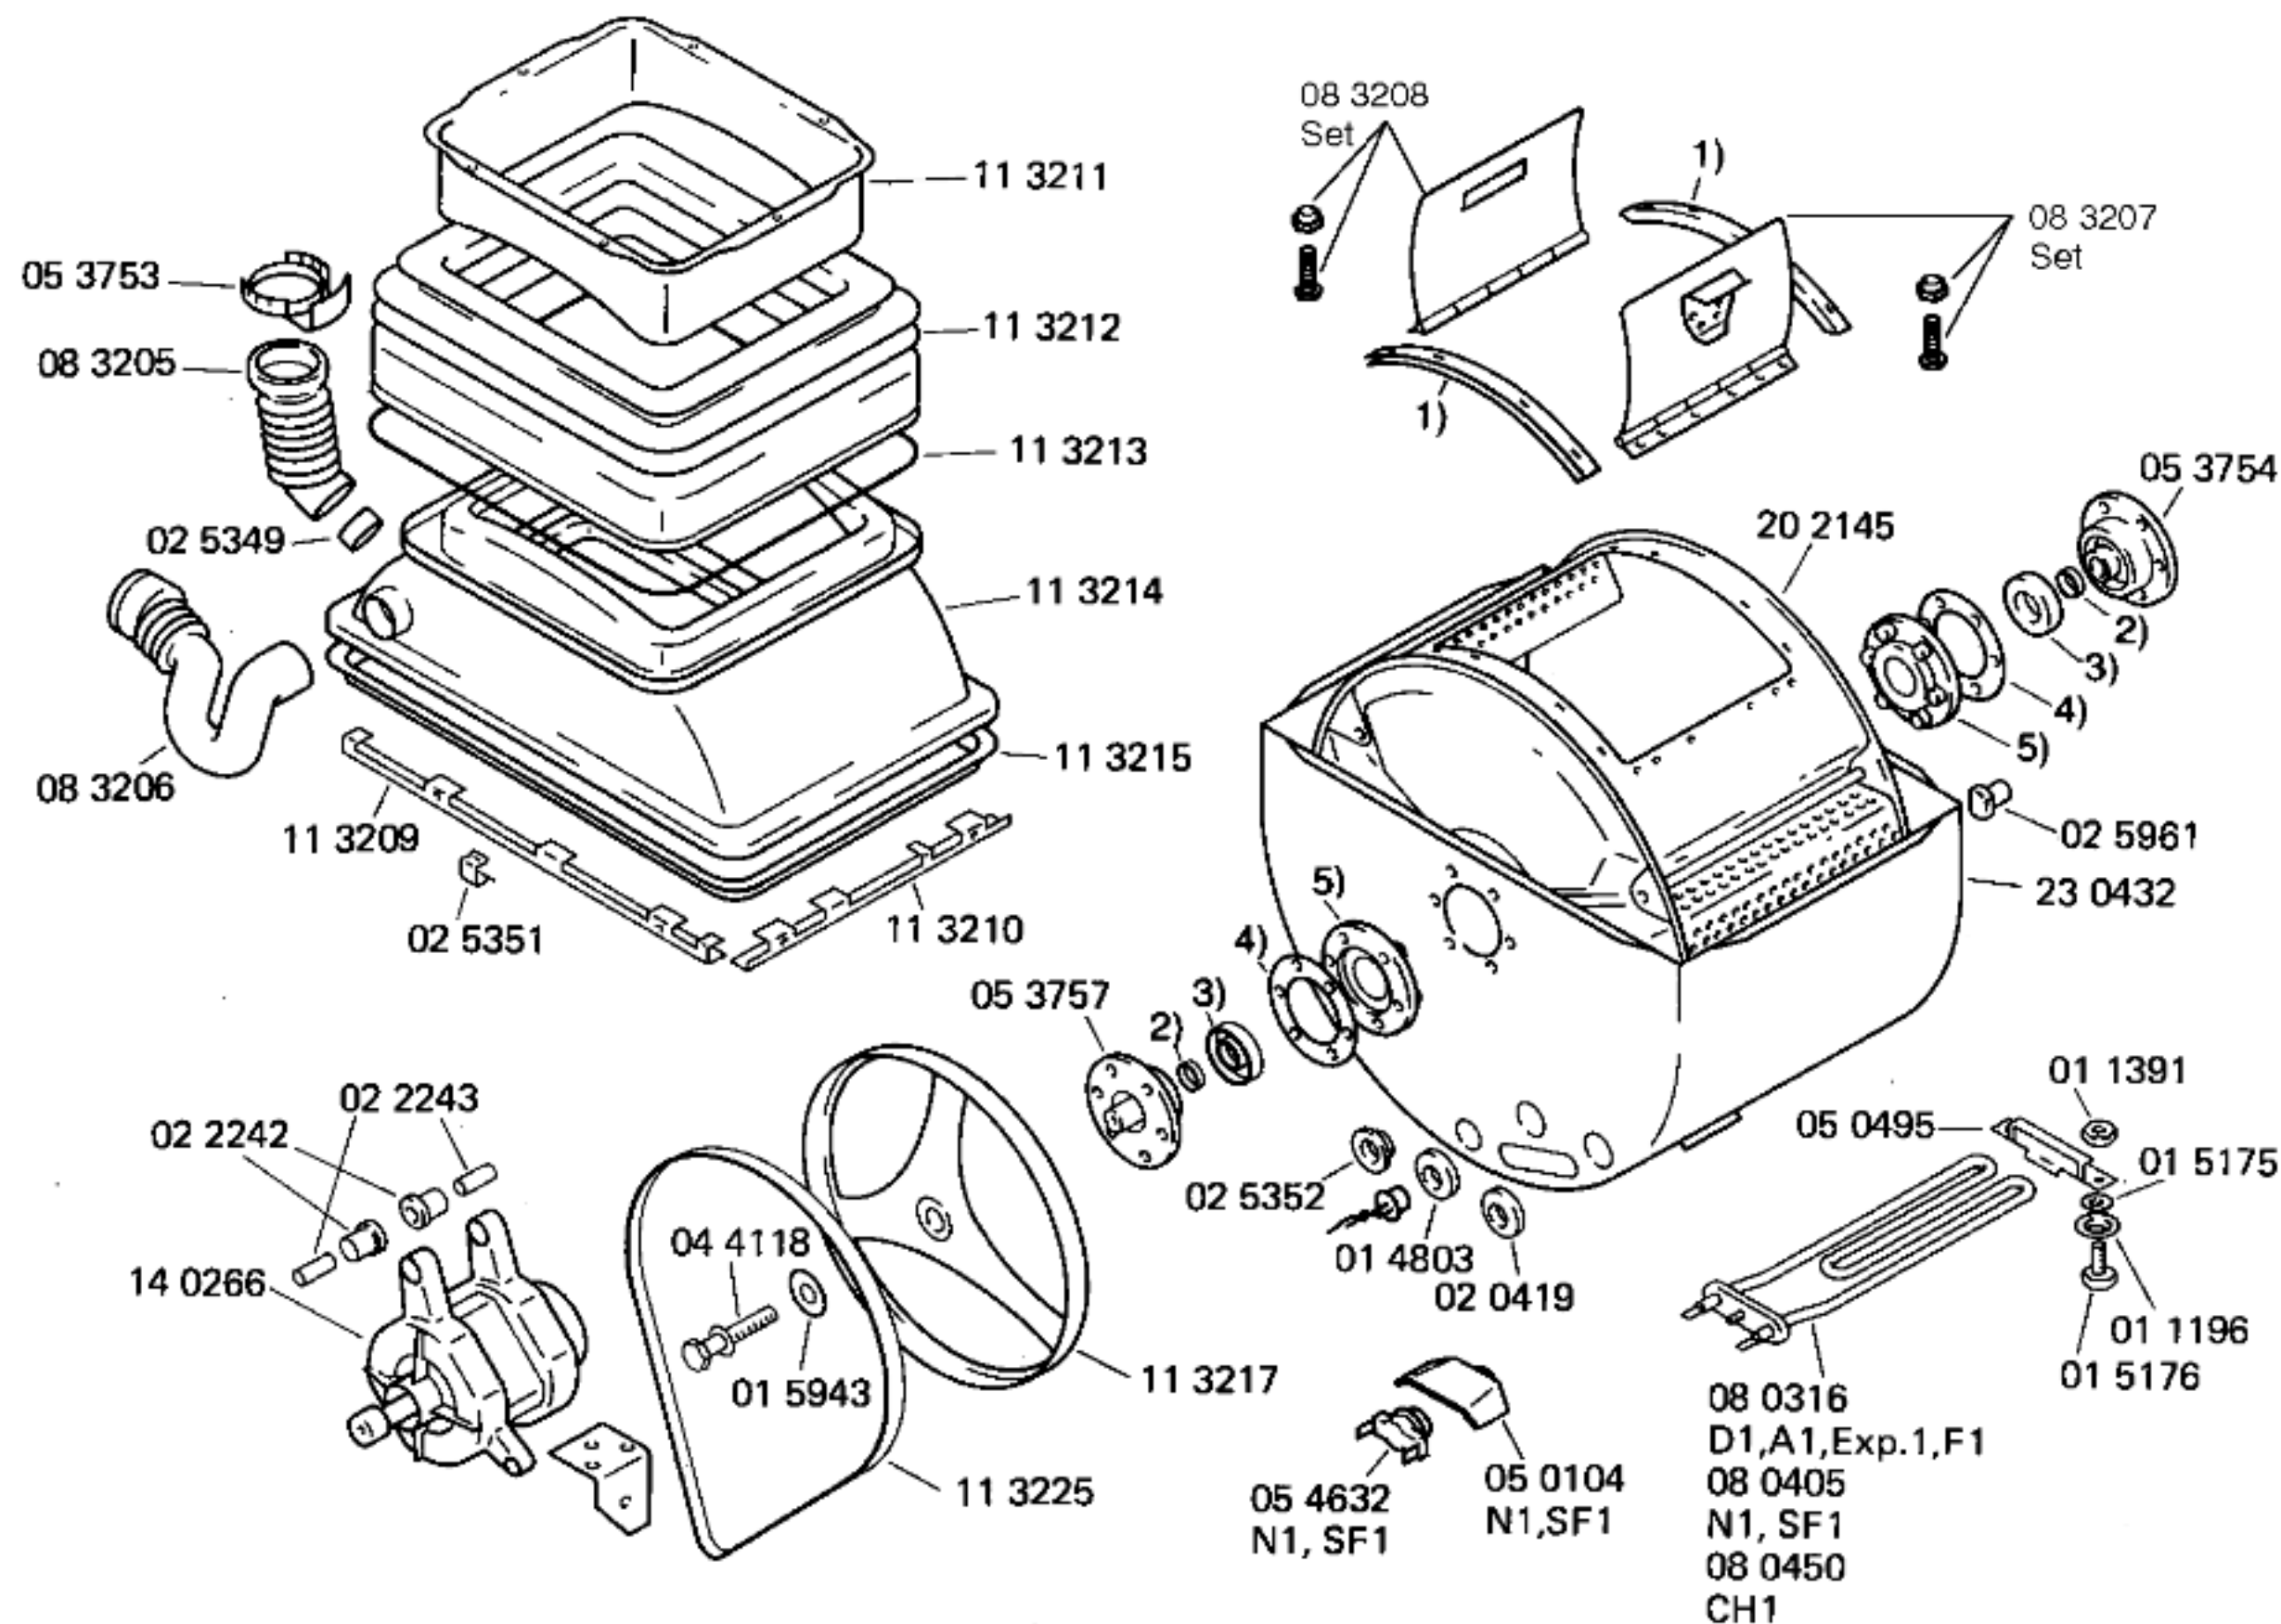

Ident - Nummern - Konstante
 3740

- 1) 11 3216
- 2) 04 2309
- 3) 02 5350
- 4) 05 3755
- 5) 05 3756

**BOSCH**

V340-0722044525-D1,A1
V340-0722044526-Exp.1
V340-0722044527-CH1
V340-0722044528-N1,SF1

V340-0722044529-F1

WASCHGERÄTE
Waschvollautomaten

Ident - Nummern - Konstante
3740

