 
 
 


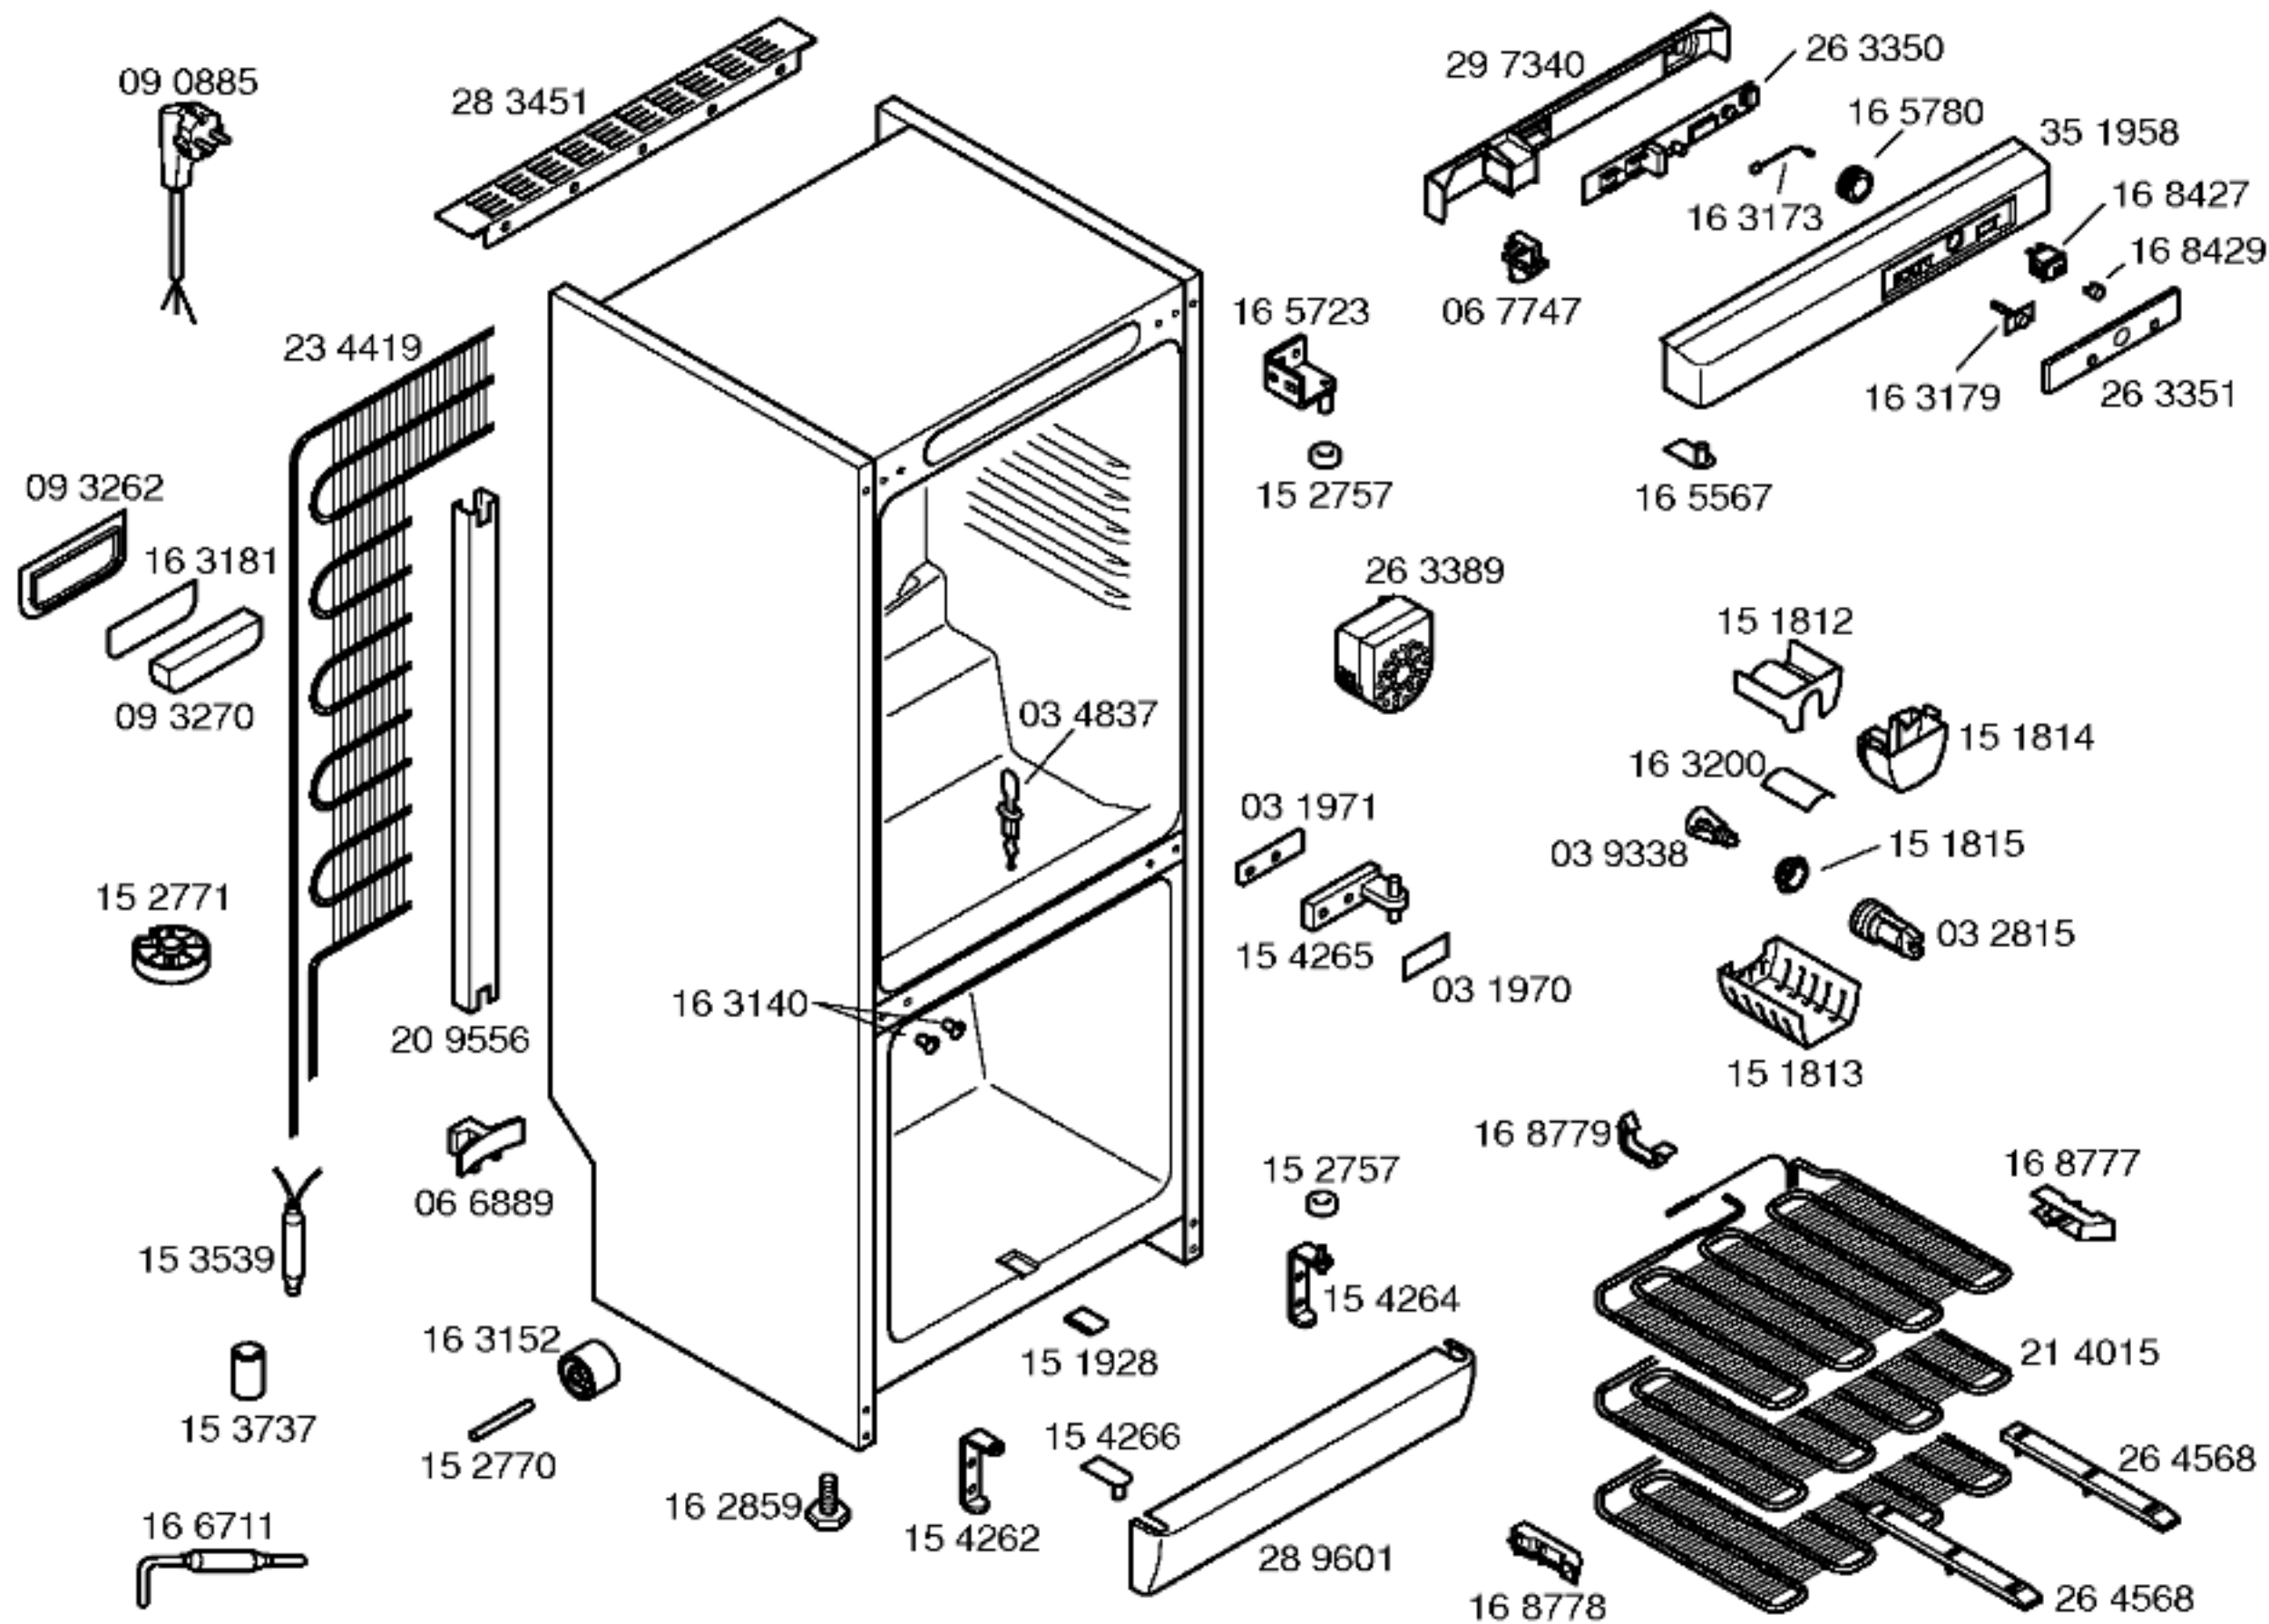

Libro de instrucciones  
52 1432  
(E,P,GB,F,NL,GR)

Instruc. de montage  
52 0178  
(E,P,GB,F,NL,GR)

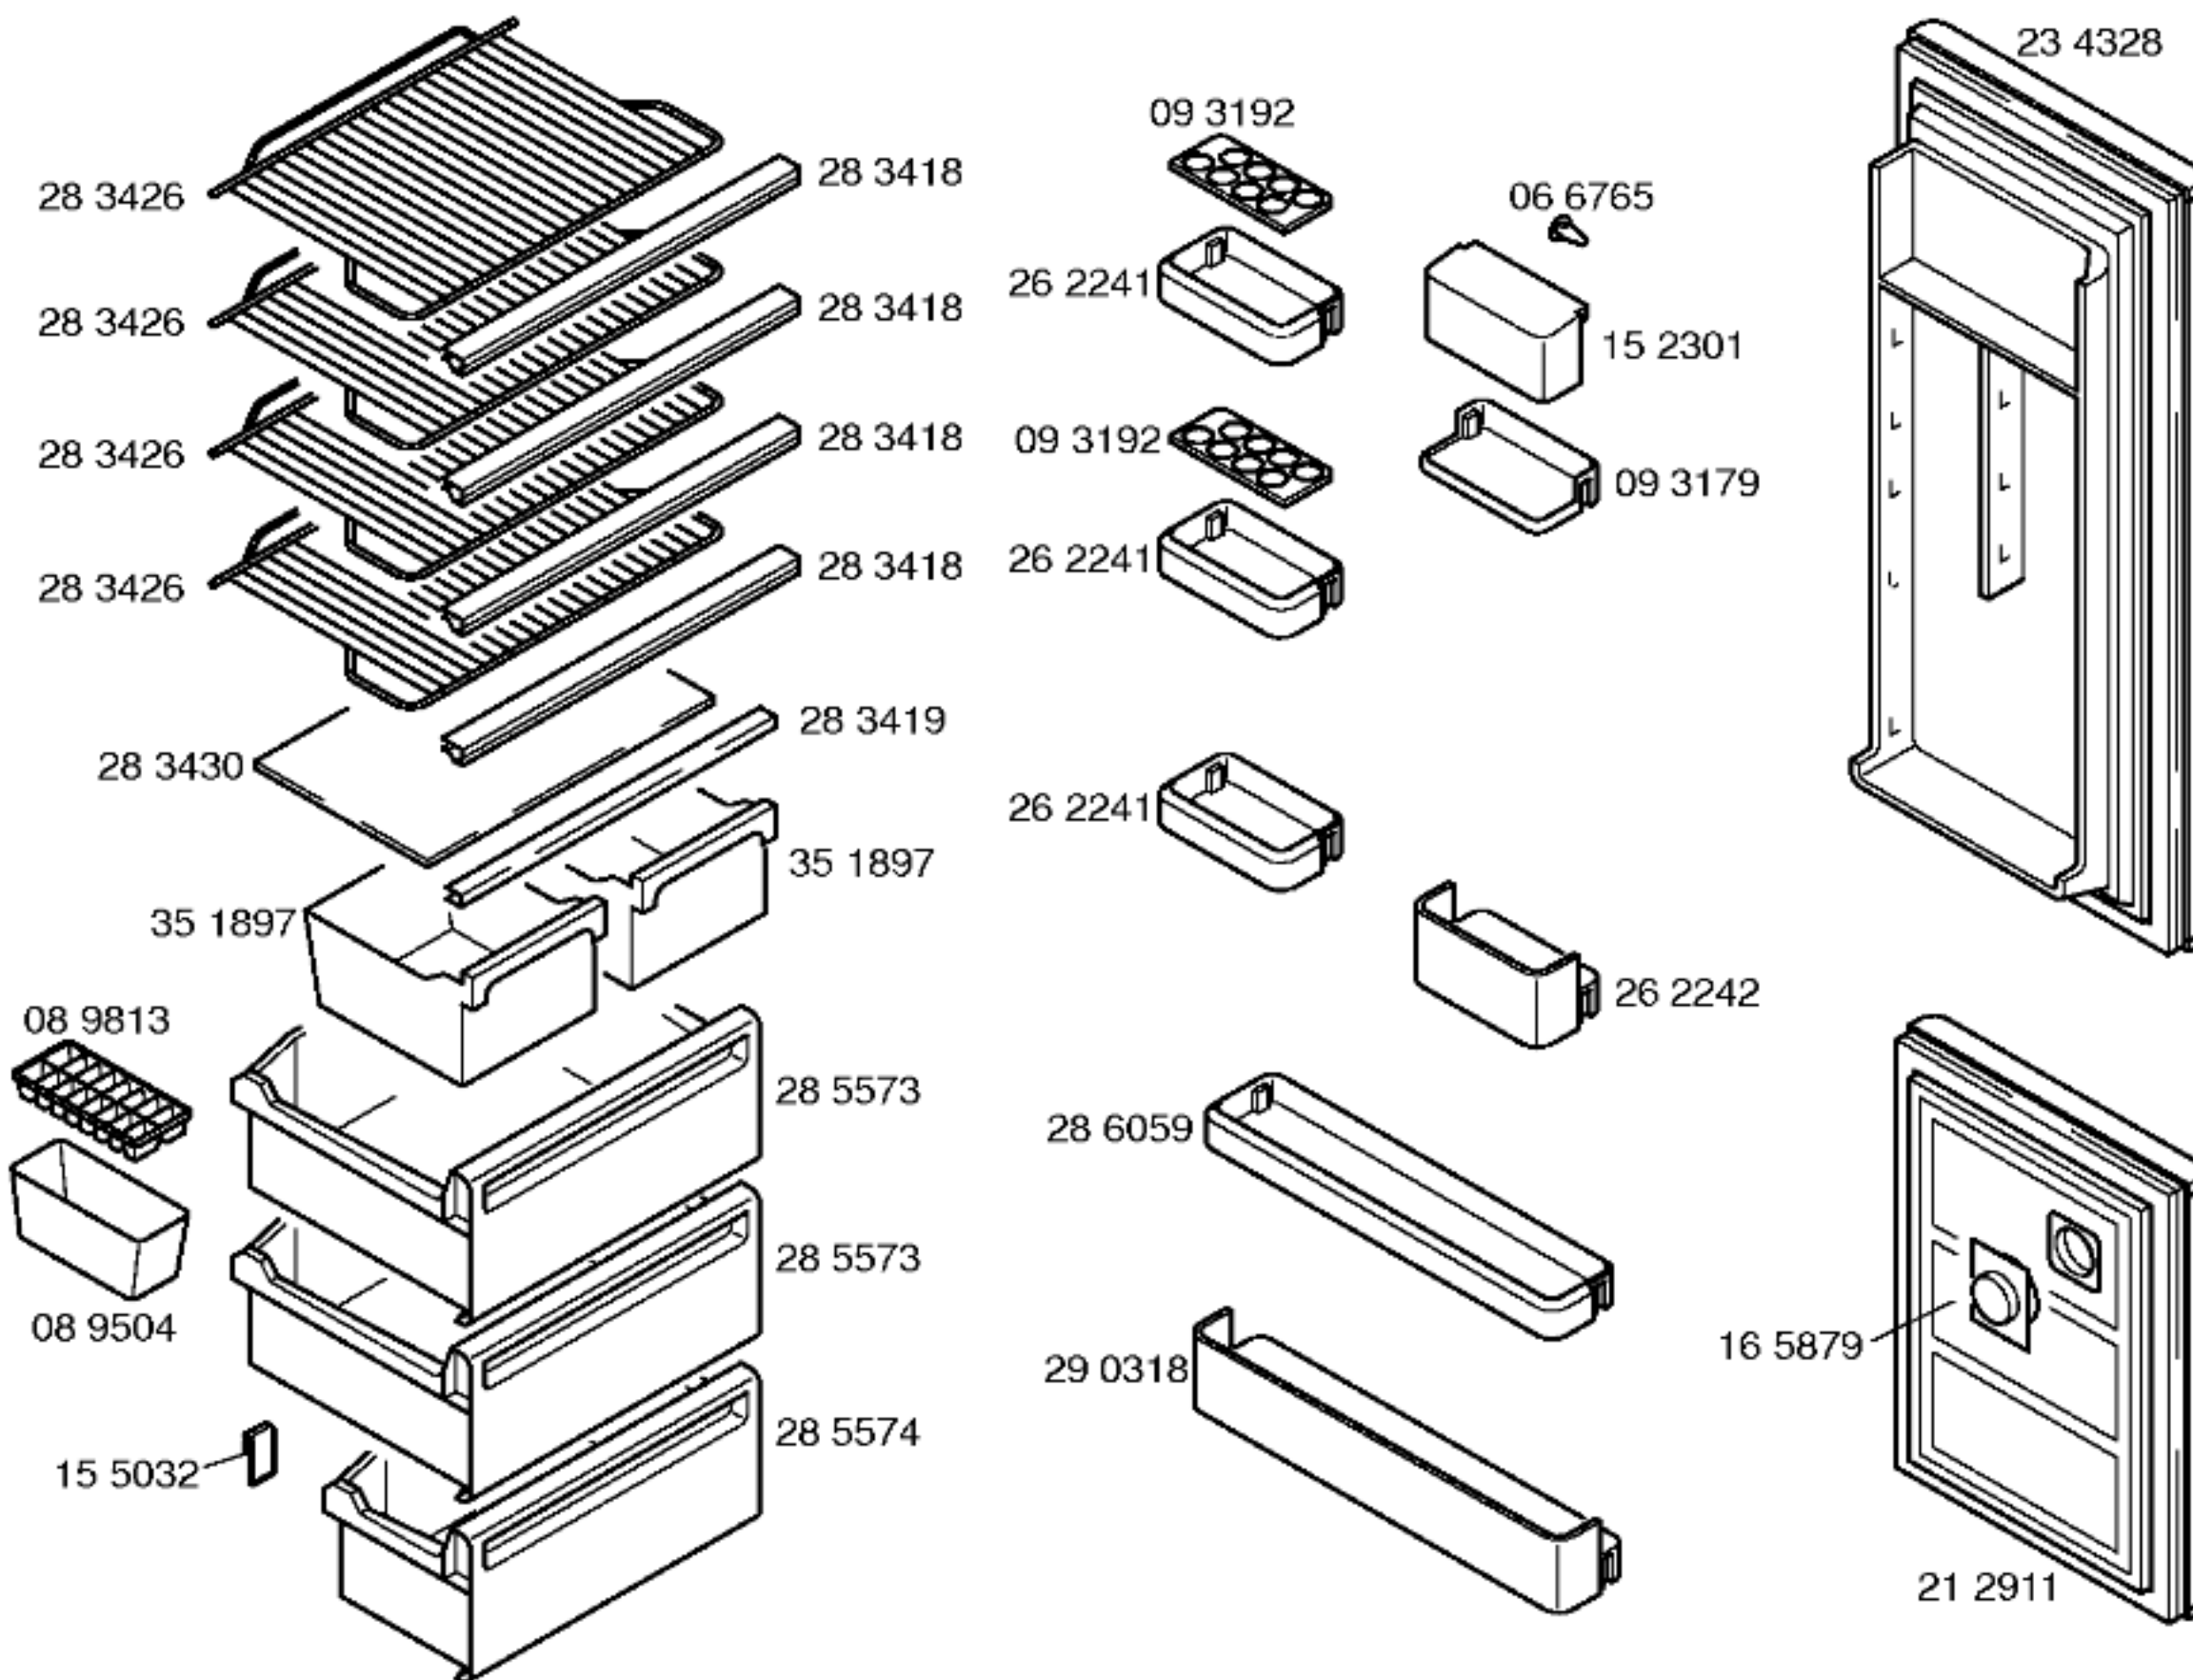

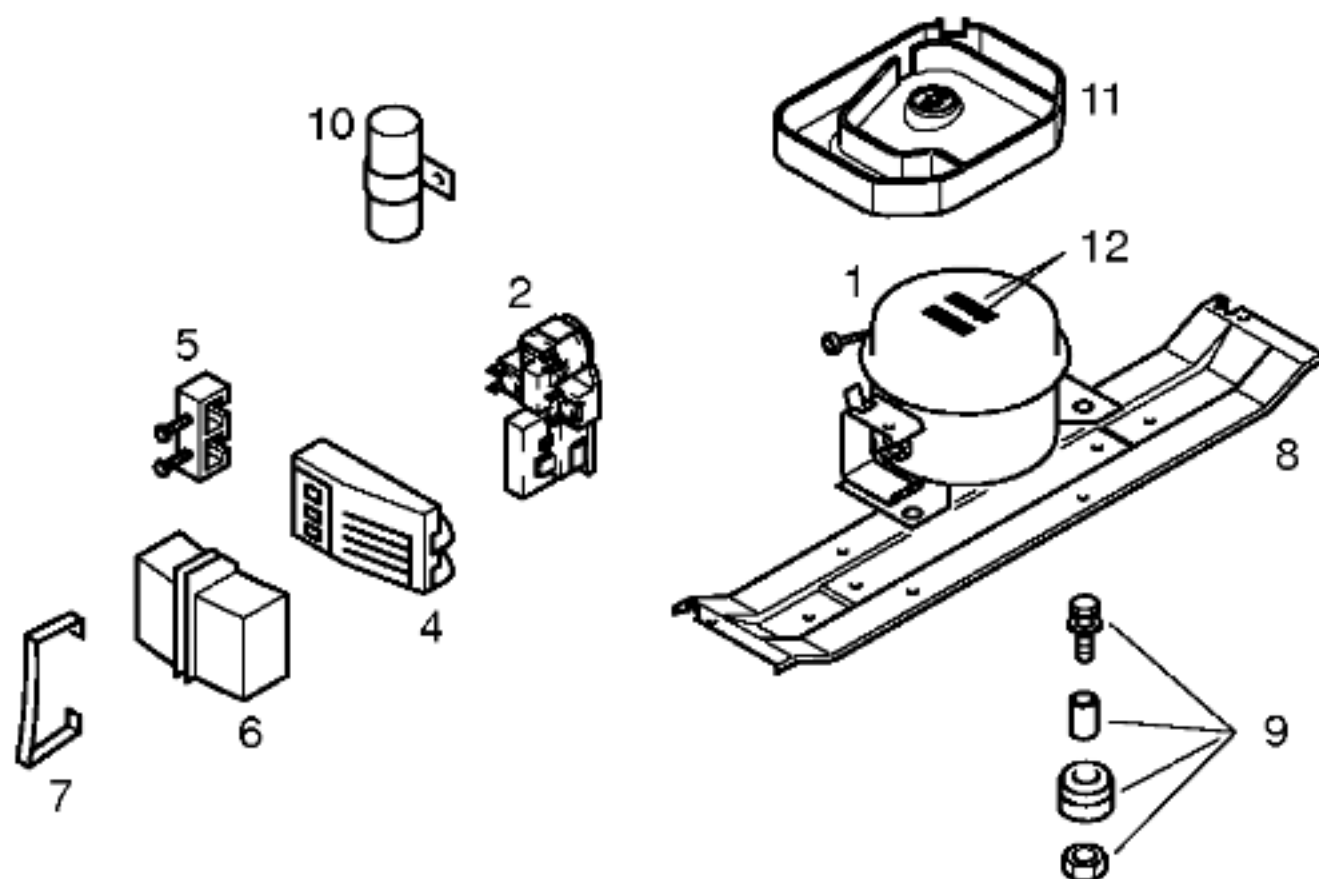

| Pos. | KÜHLGERÄTE        |
|------|-------------------|
|      | DANFOSS<br>NLE13K |
| 1    | 14 1656           |
| 2    | 16 5928           |
| 3    |                   |
| 4    |                   |
| 5    |                   |
| 6    |                   |
| 7    |                   |
| 8    | 28 8253           |
| 9    | 05 0166           |
| 10   |                   |
| 11   | 26 3361           |
| 12   |                   |
| 13   |                   |

## TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS

|                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                      |   |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---|
| Verdichter/Compressor/Compresseur/Compresor<br>Typ/Type/Tipo<br>Förderleistung/Delivery/Debit/Aspiración l/h<br>Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A<br>Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm<br>Hi/aux.                                                                                                                                   | Danfoss<br>NLE13K                                                                    |   |
| Temp.Reyler/Thermostat/Termostato<br>Typ/Type/Tipo<br>Reglerstellung/Position/Conexión<br>Schaltwerte/Switching values/ ..ein/conex.°C<br>Valeurs de commutation/Desconex. ..aus"/descon.<br>(..abtaven' od) ..alarm'<br>Verdampfersensor/Evaporator sensor/Sonda evaporador<br>Schaltwerte/Switching values/ ..ein/conex.°C<br>Valeurs de commutation/Desconex. ..aus"/descon. | BOSCH<br>Electronische<br>MIN. MAX<br>+8°C -3,5°C<br>+6,5°C -5°C<br>+5°C +5°C<br>— — |   |
| Füllmenge/Fill. quantity/Charge/Carga R600a                                                                                                                                                                                                                                                                                                                                     | g                                                                                    | * |
| Anschlusswert/Comm. load/Puiss. Connect./Potenc.                                                                                                                                                                                                                                                                                                                                | W                                                                                    |   |
| Heizung/Heater/Chaufrage/Resistenc.descong.<br>Widerstand/Resistance/Resistencia<br>Leistung/Power/Puissance/Potencia                                                                                                                                                                                                                                                           | Ohm<br>W                                                                             |   |
| Ventilador/Blower/Ventilateur/Ventilador<br>Widerstand/Resistance/Resistencia                                                                                                                                                                                                                                                                                                   | Ohm                                                                                  |   |
| Magnetventil/Magnetic valve/Electrovanne/Electrovalvula<br>Widerstand/Resistance/Resistencia<br>Spannung/Voltage/Tension/Tensión                                                                                                                                                                                                                                                | Ohm<br>V                                                                             |   |
| Temp.Reyler/Thermostat/Termostato ambiente para<br>ventilador refrigerador                                                                                                                                                                                                                                                                                                      |                                                                                      |   |

\* Siehe Typenschild/Ver plaqueta de características