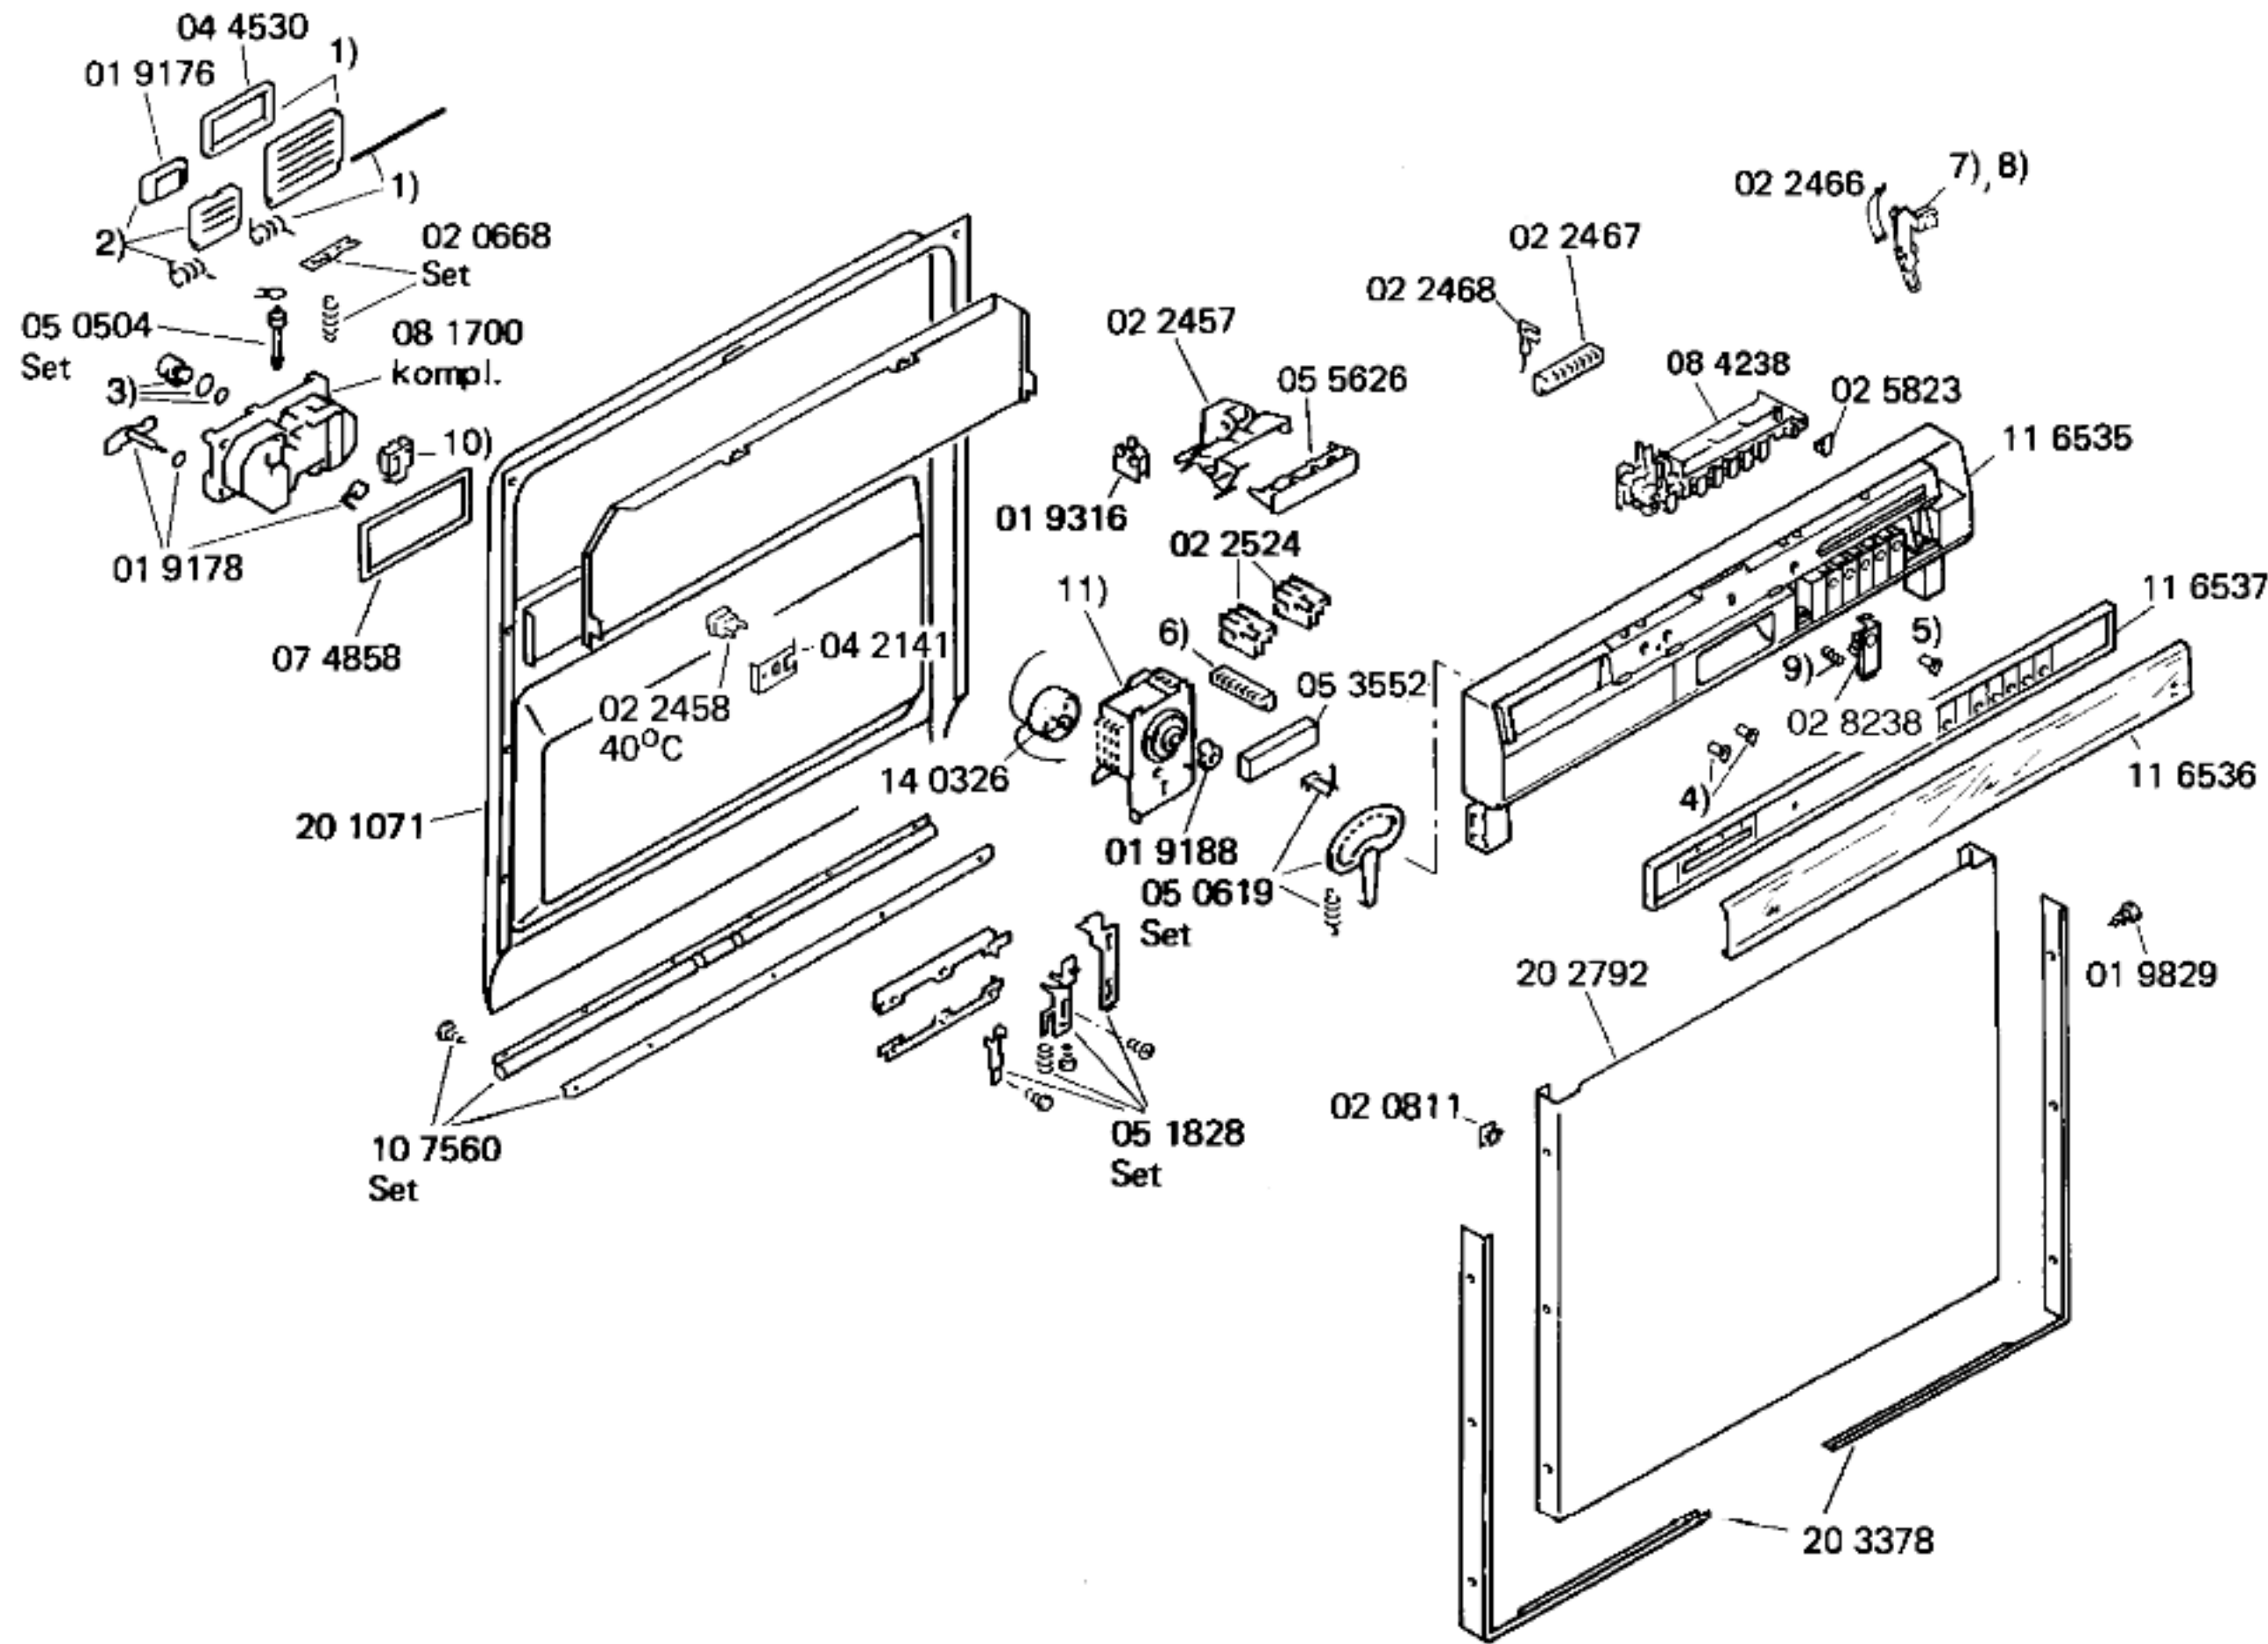
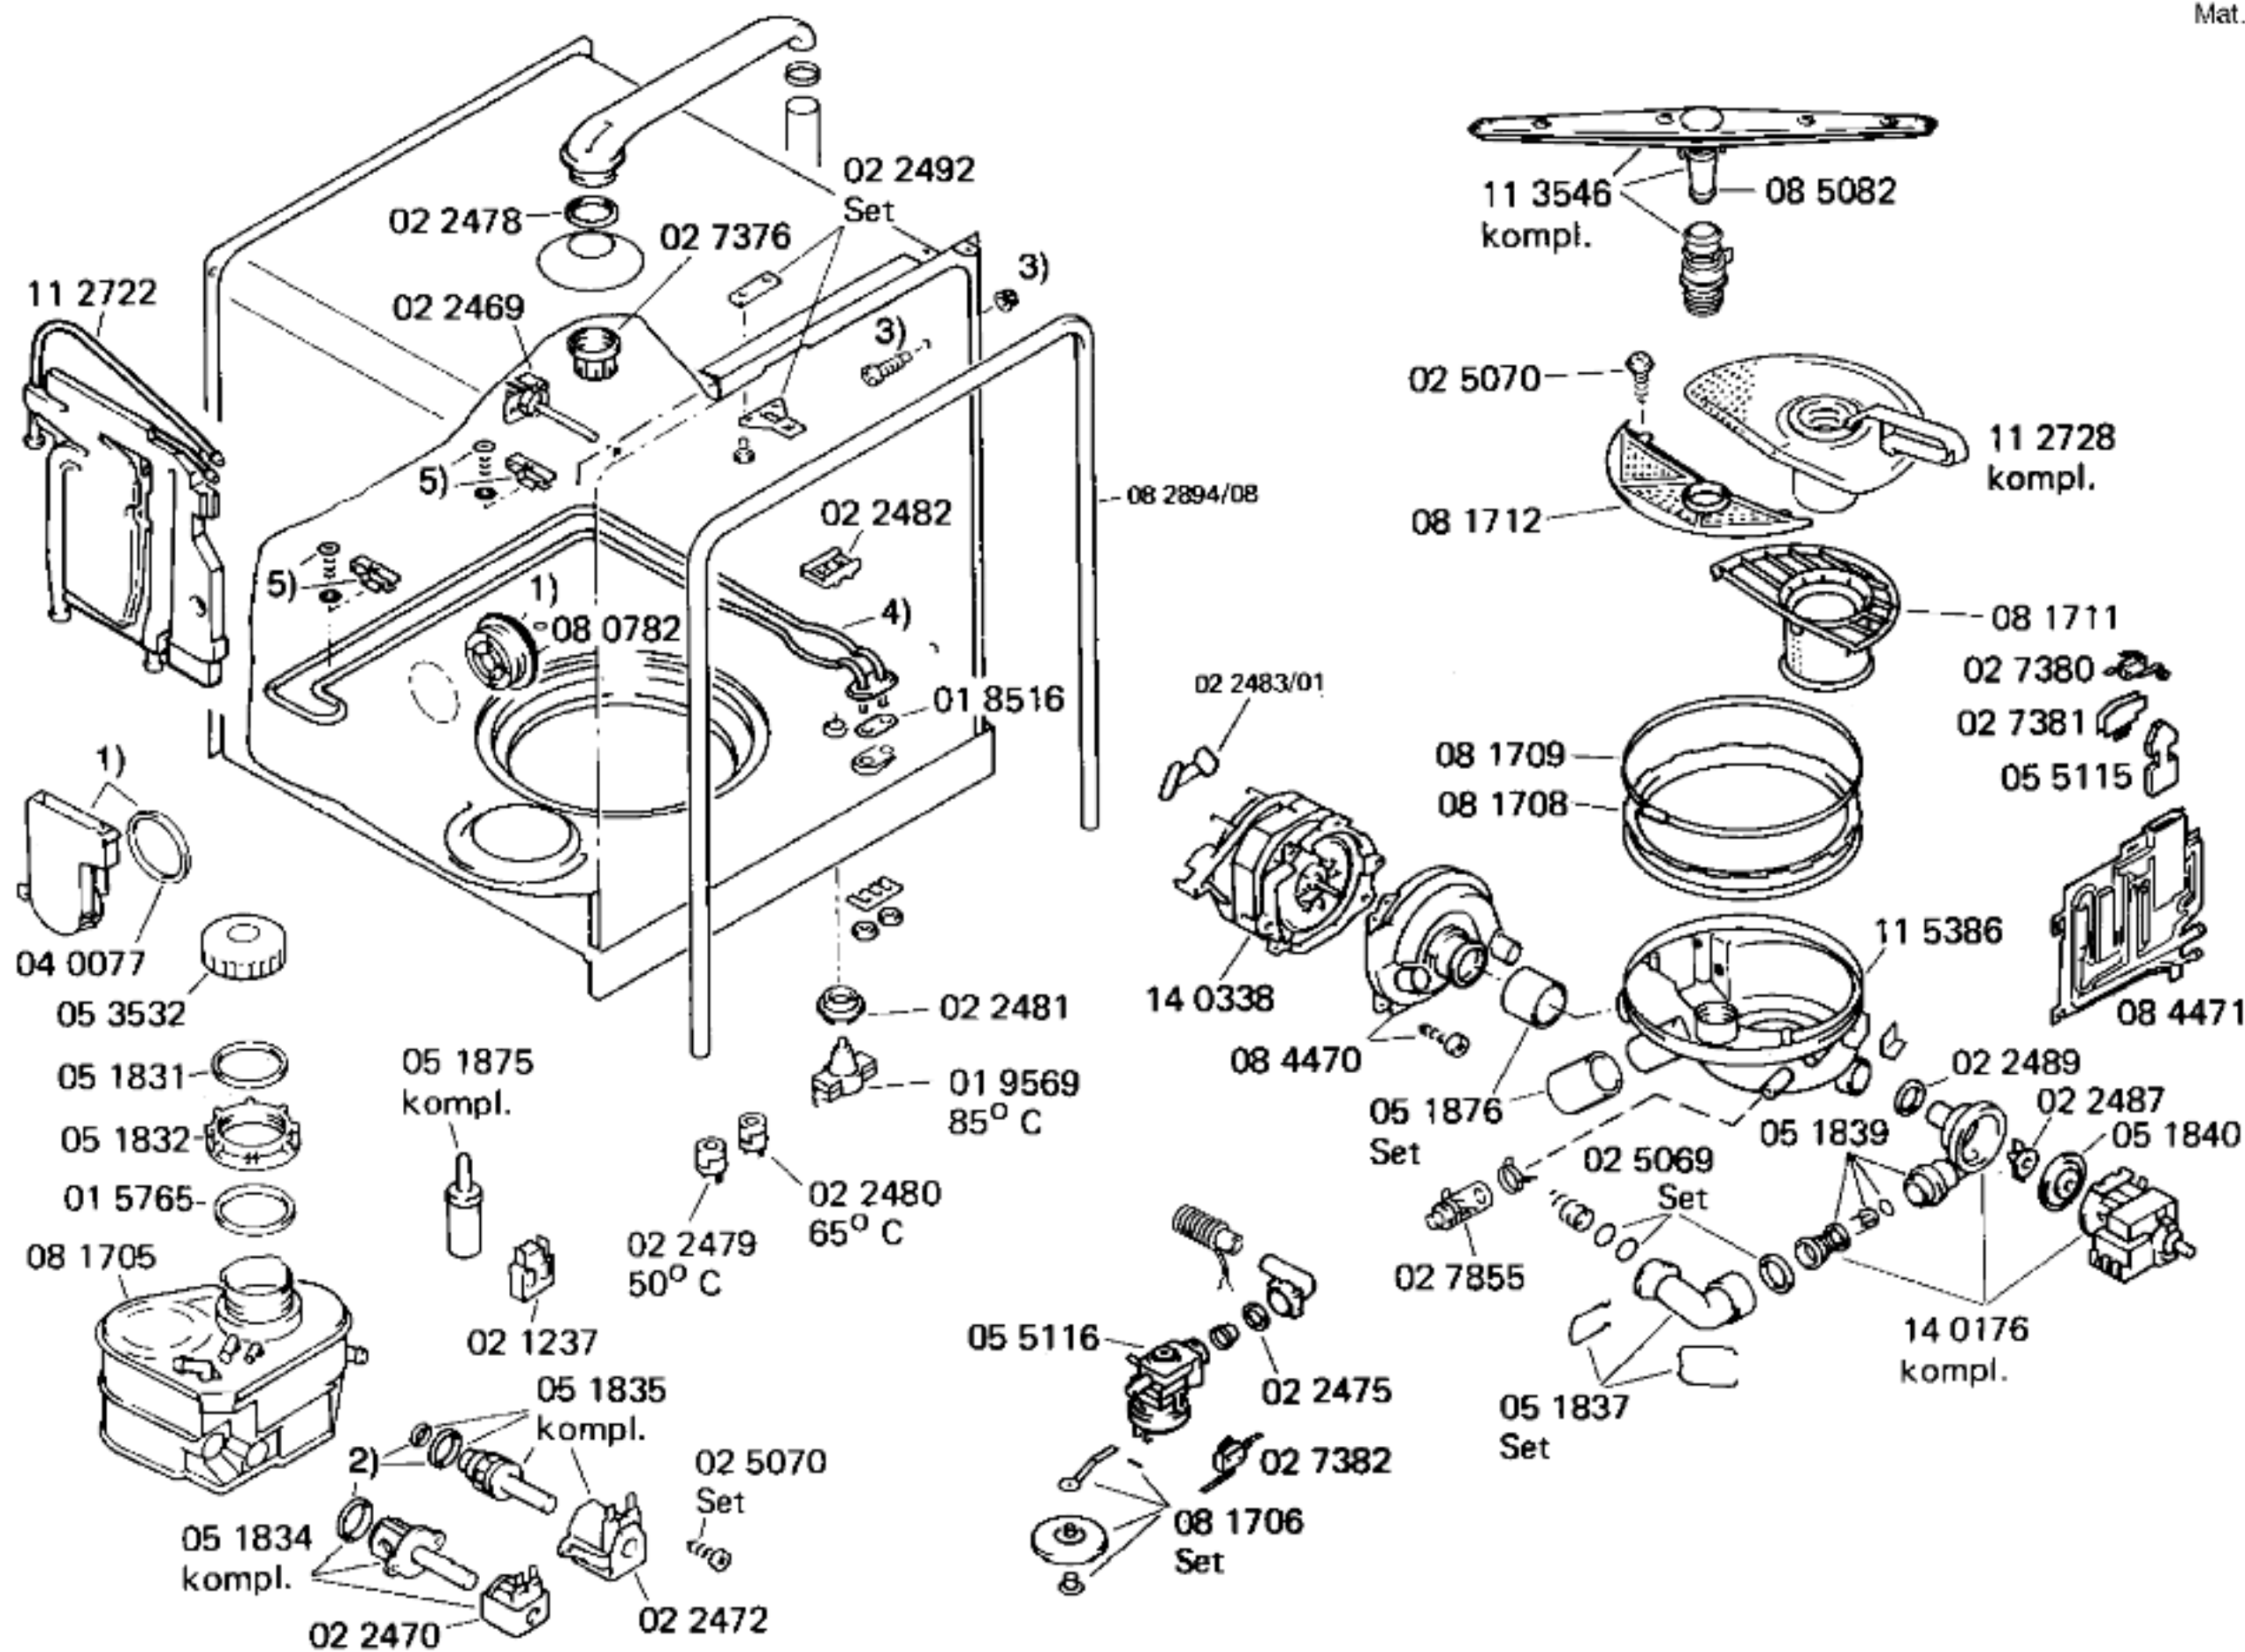


**BOSCH**SMS 7110 – 0 730 100 628–EU1  
SMS 711041 – 0 730 100 630–I1GESCHIRRSPÜLGERÄTE  
StandgeräteMat. – Nr. – Konstante  
3740 . . . . .


Gebrauchsanweisung  
51 2262  
EU1,I1  
(D,GB,F,I,NL,DK)  
bis FD 6604  
51 2825  
EU1,I1  
(D,GB,F,I,NL)  
ab FD 6605  
51 2277  
Aufstellanleitung

- 1) 04 2085 Set
- 2) 04 2105 Set
- 3) 01 9177 Set
- 4) 02 5122
- 5) 02 5123
- 6) 02 2459
- 7) 02 5657 rot
- 8) 02 5658 grün
- 9) 02 5824
- 10) 02 1237
- 11) 08 4059 bis FD 6603  
08 5079 ab FD 6604

**BOSCH**SMS 7110 - 0 730 100 628-EU1  
SMS 711041 - 0 730 100 630-I1GESCHIRRSPÜLGERÄTE  
StandgeräteMat. - Nr. - Konstante  
3740 . . . . .

- 1) 08 0781 Set
- 2) 02 5067 Set
- 3) 01 9204 Set
- 4) 20 1073 EU1  
20 2256 I1
- 5) 05 1838


Mat. – Nr. – Konstante  
3740 . . . . .

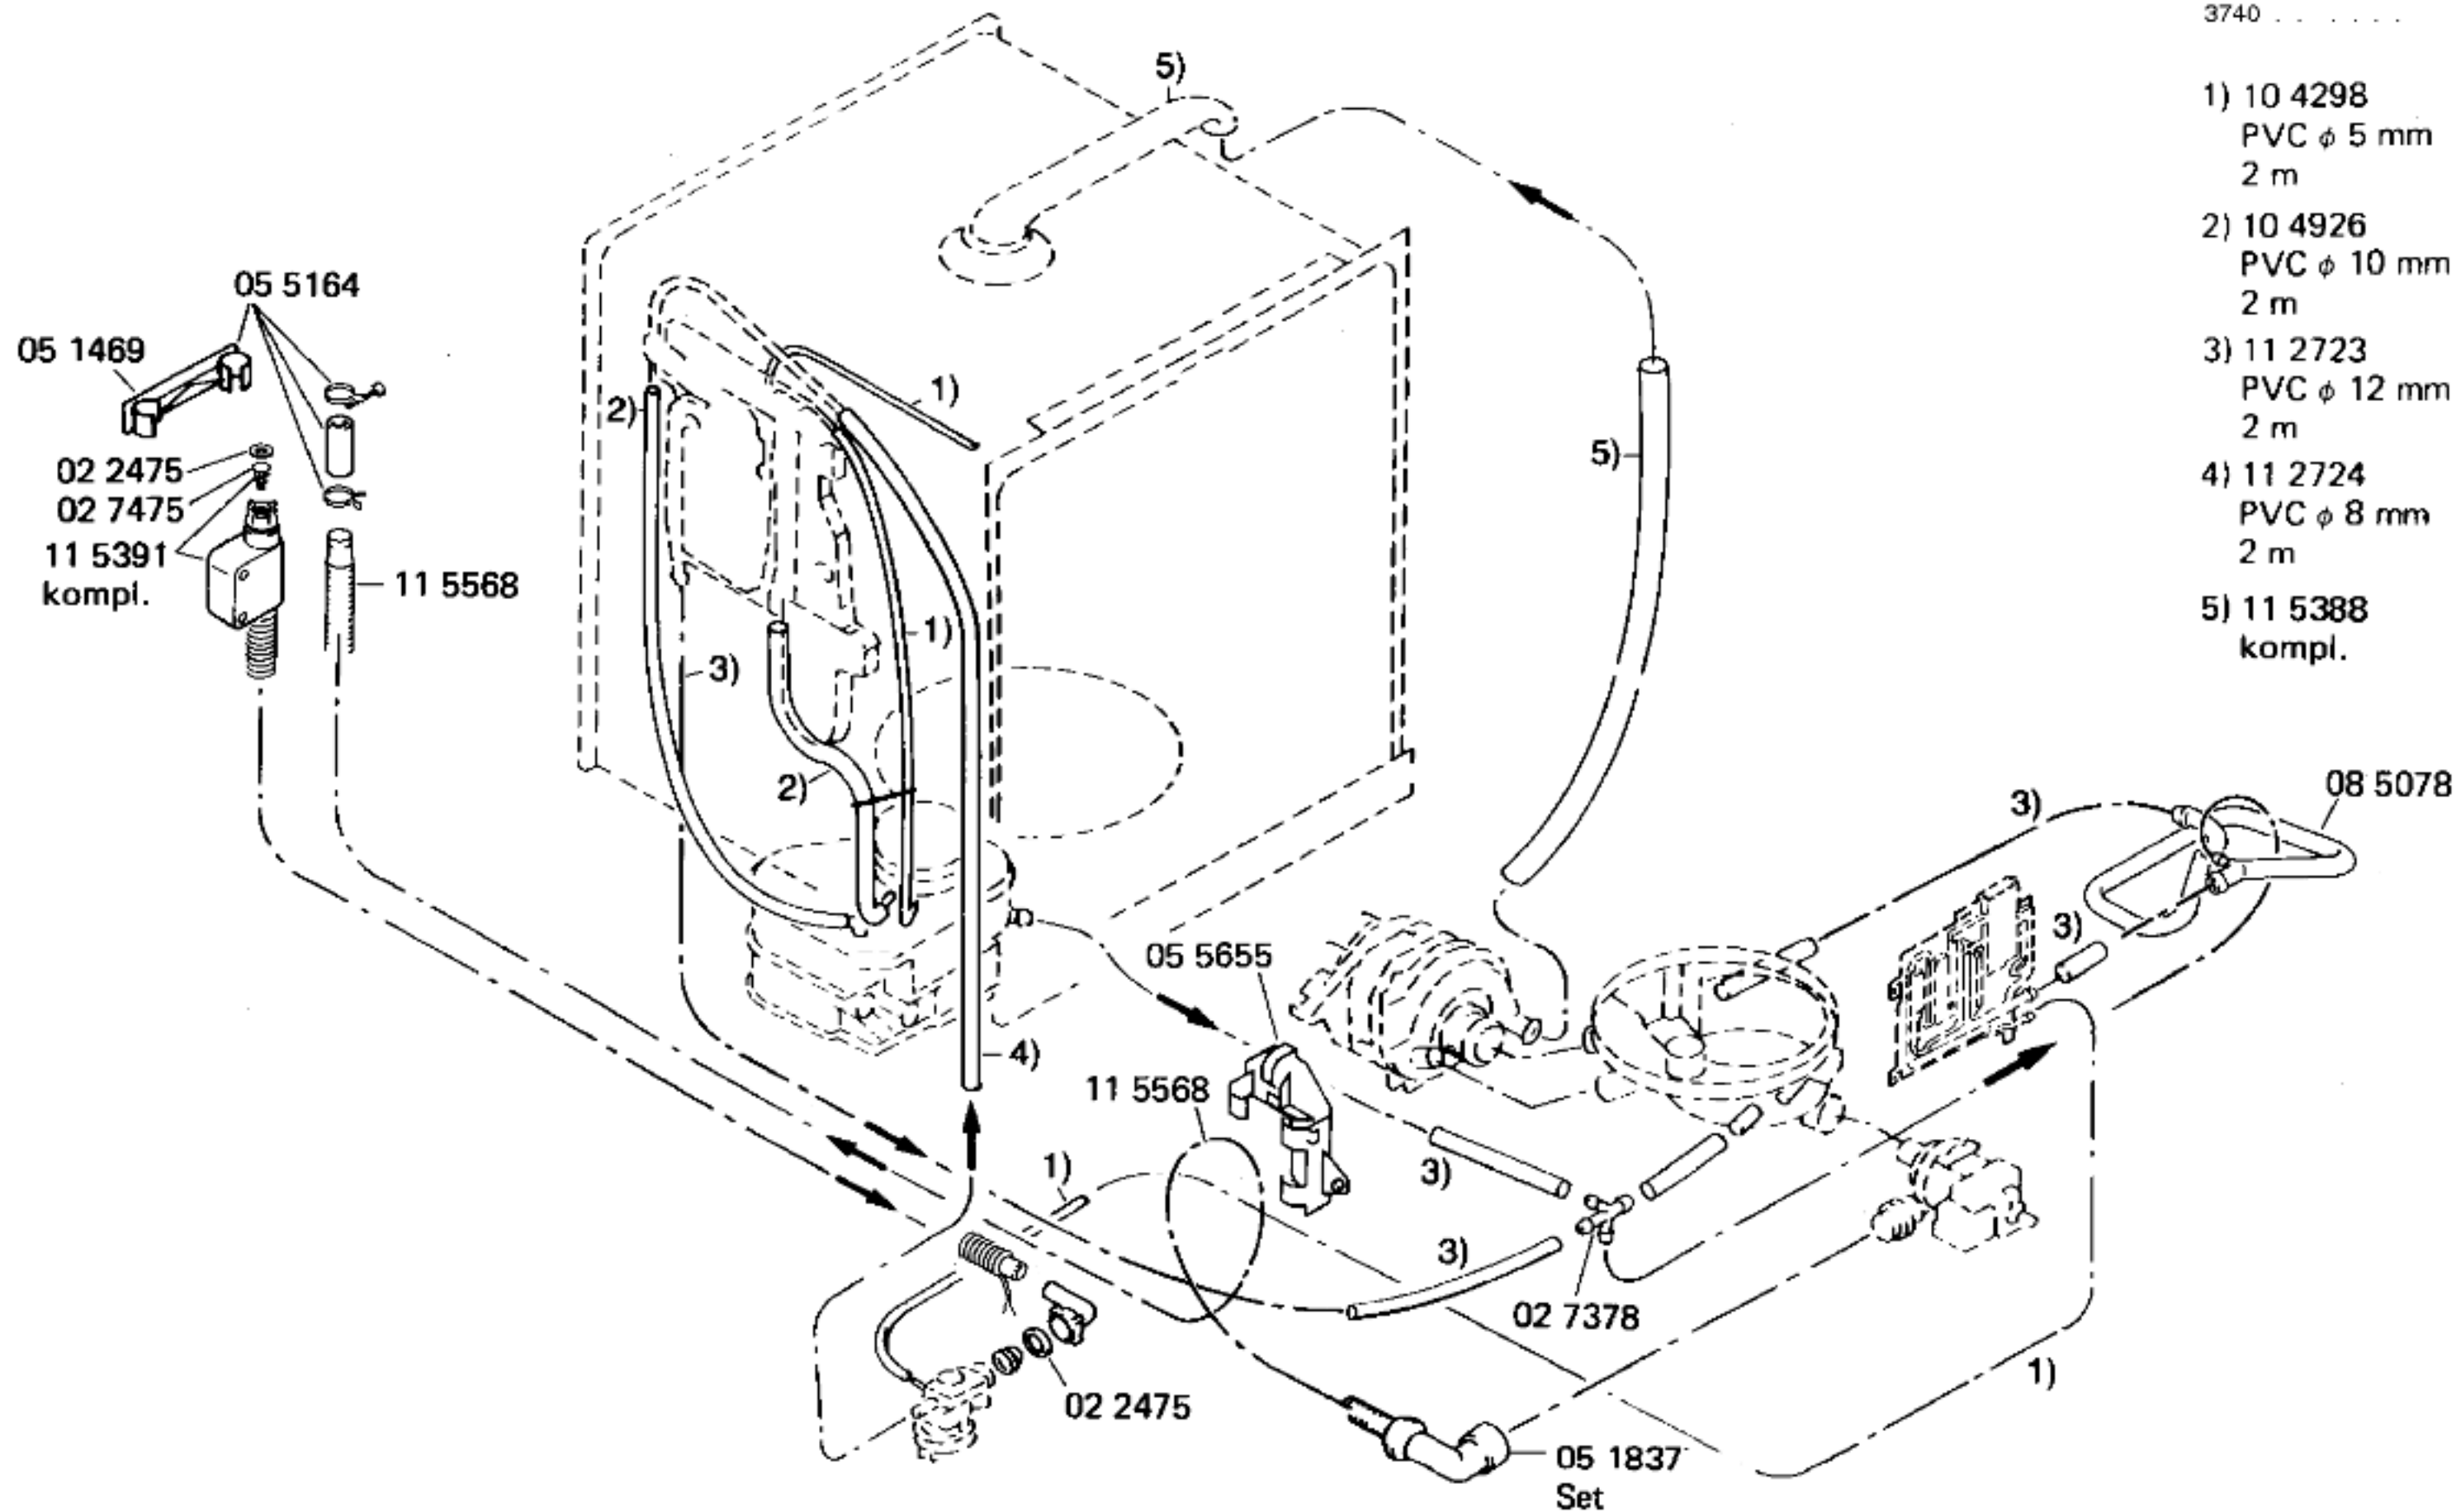

- 1) 10 4298  
PVC  $\phi$  5 mm  
2 m
- 2) 10 4926  
PVC  $\phi$  10 mm  
2 m
- 3) 11 2723  
PVC  $\phi$  12 mm  
2 m
- 4) 11 2724  
PVC  $\phi$  8 mm  
2 m
- 5) 11 5388  
kompl.

Mat. – Nr. – Konstante  
 3740 . . . . .

1) 01 3861  
 2) 02 7386

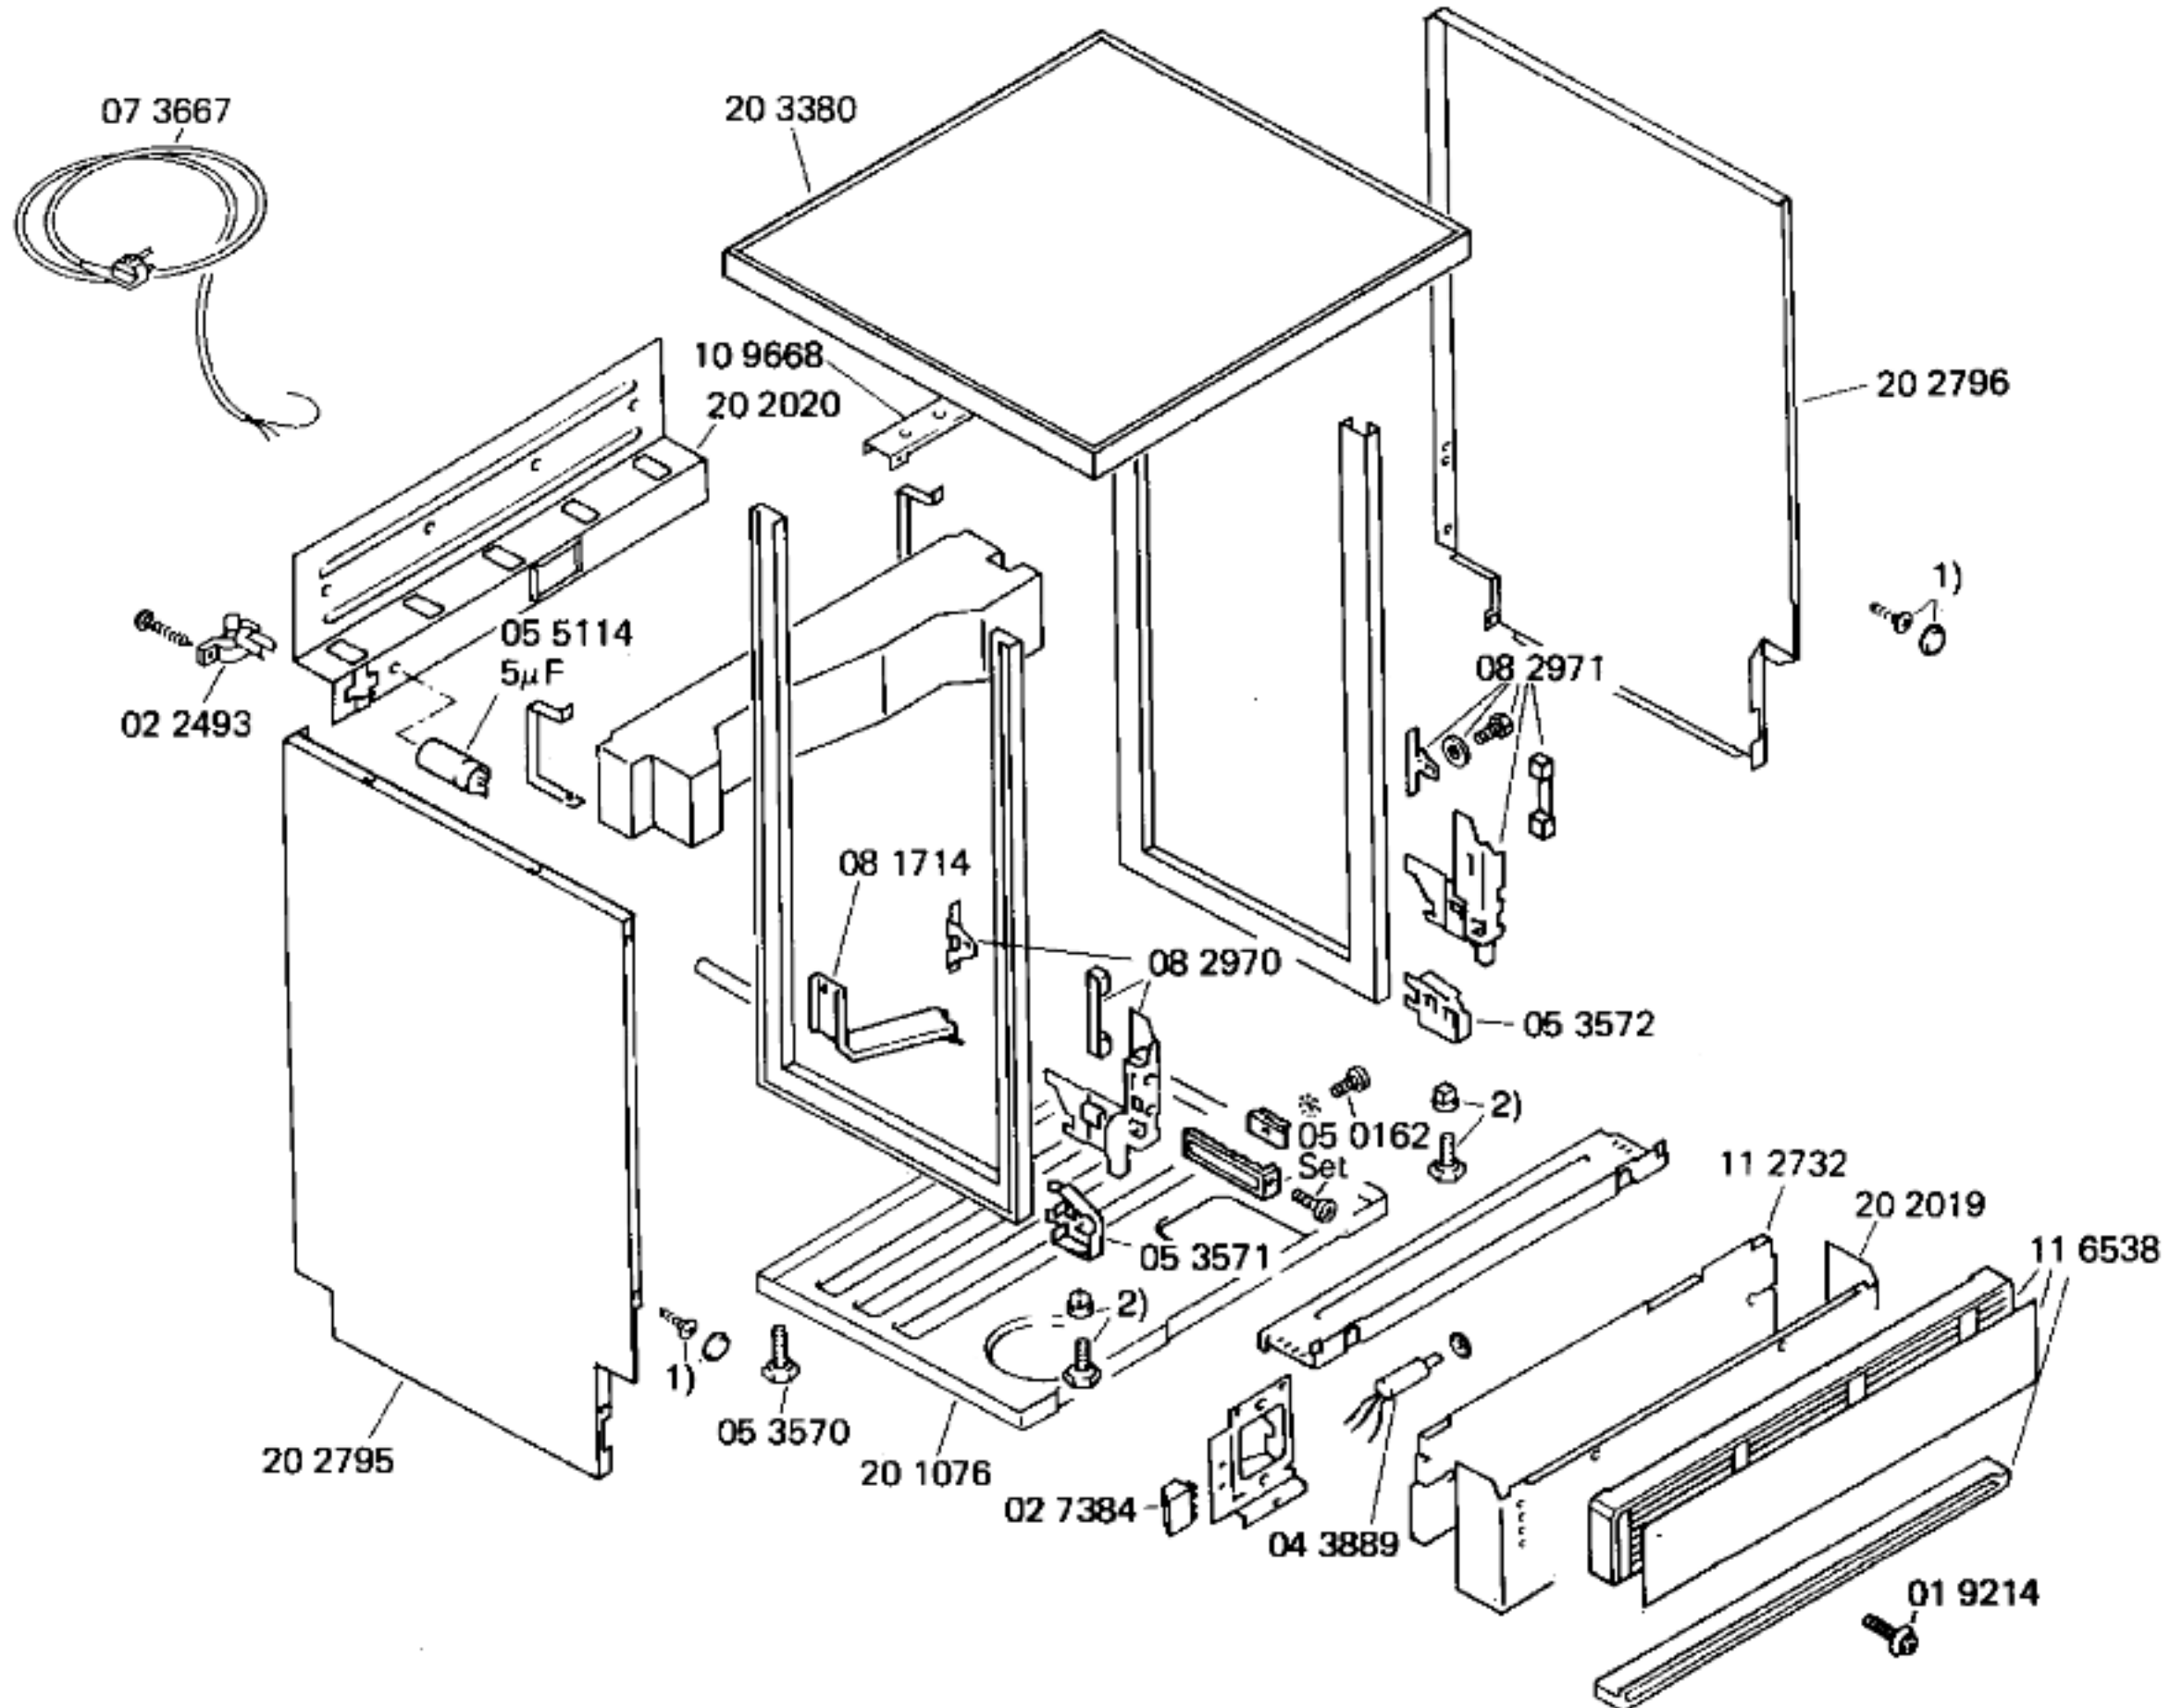



**BOSCH**

SMS 7110 - 0 730 100 628-EU1  
SMS 711041 - 0 730 100 630-I1

GESCHIRRSPÜLGERÄTE  
Standgeräte

