


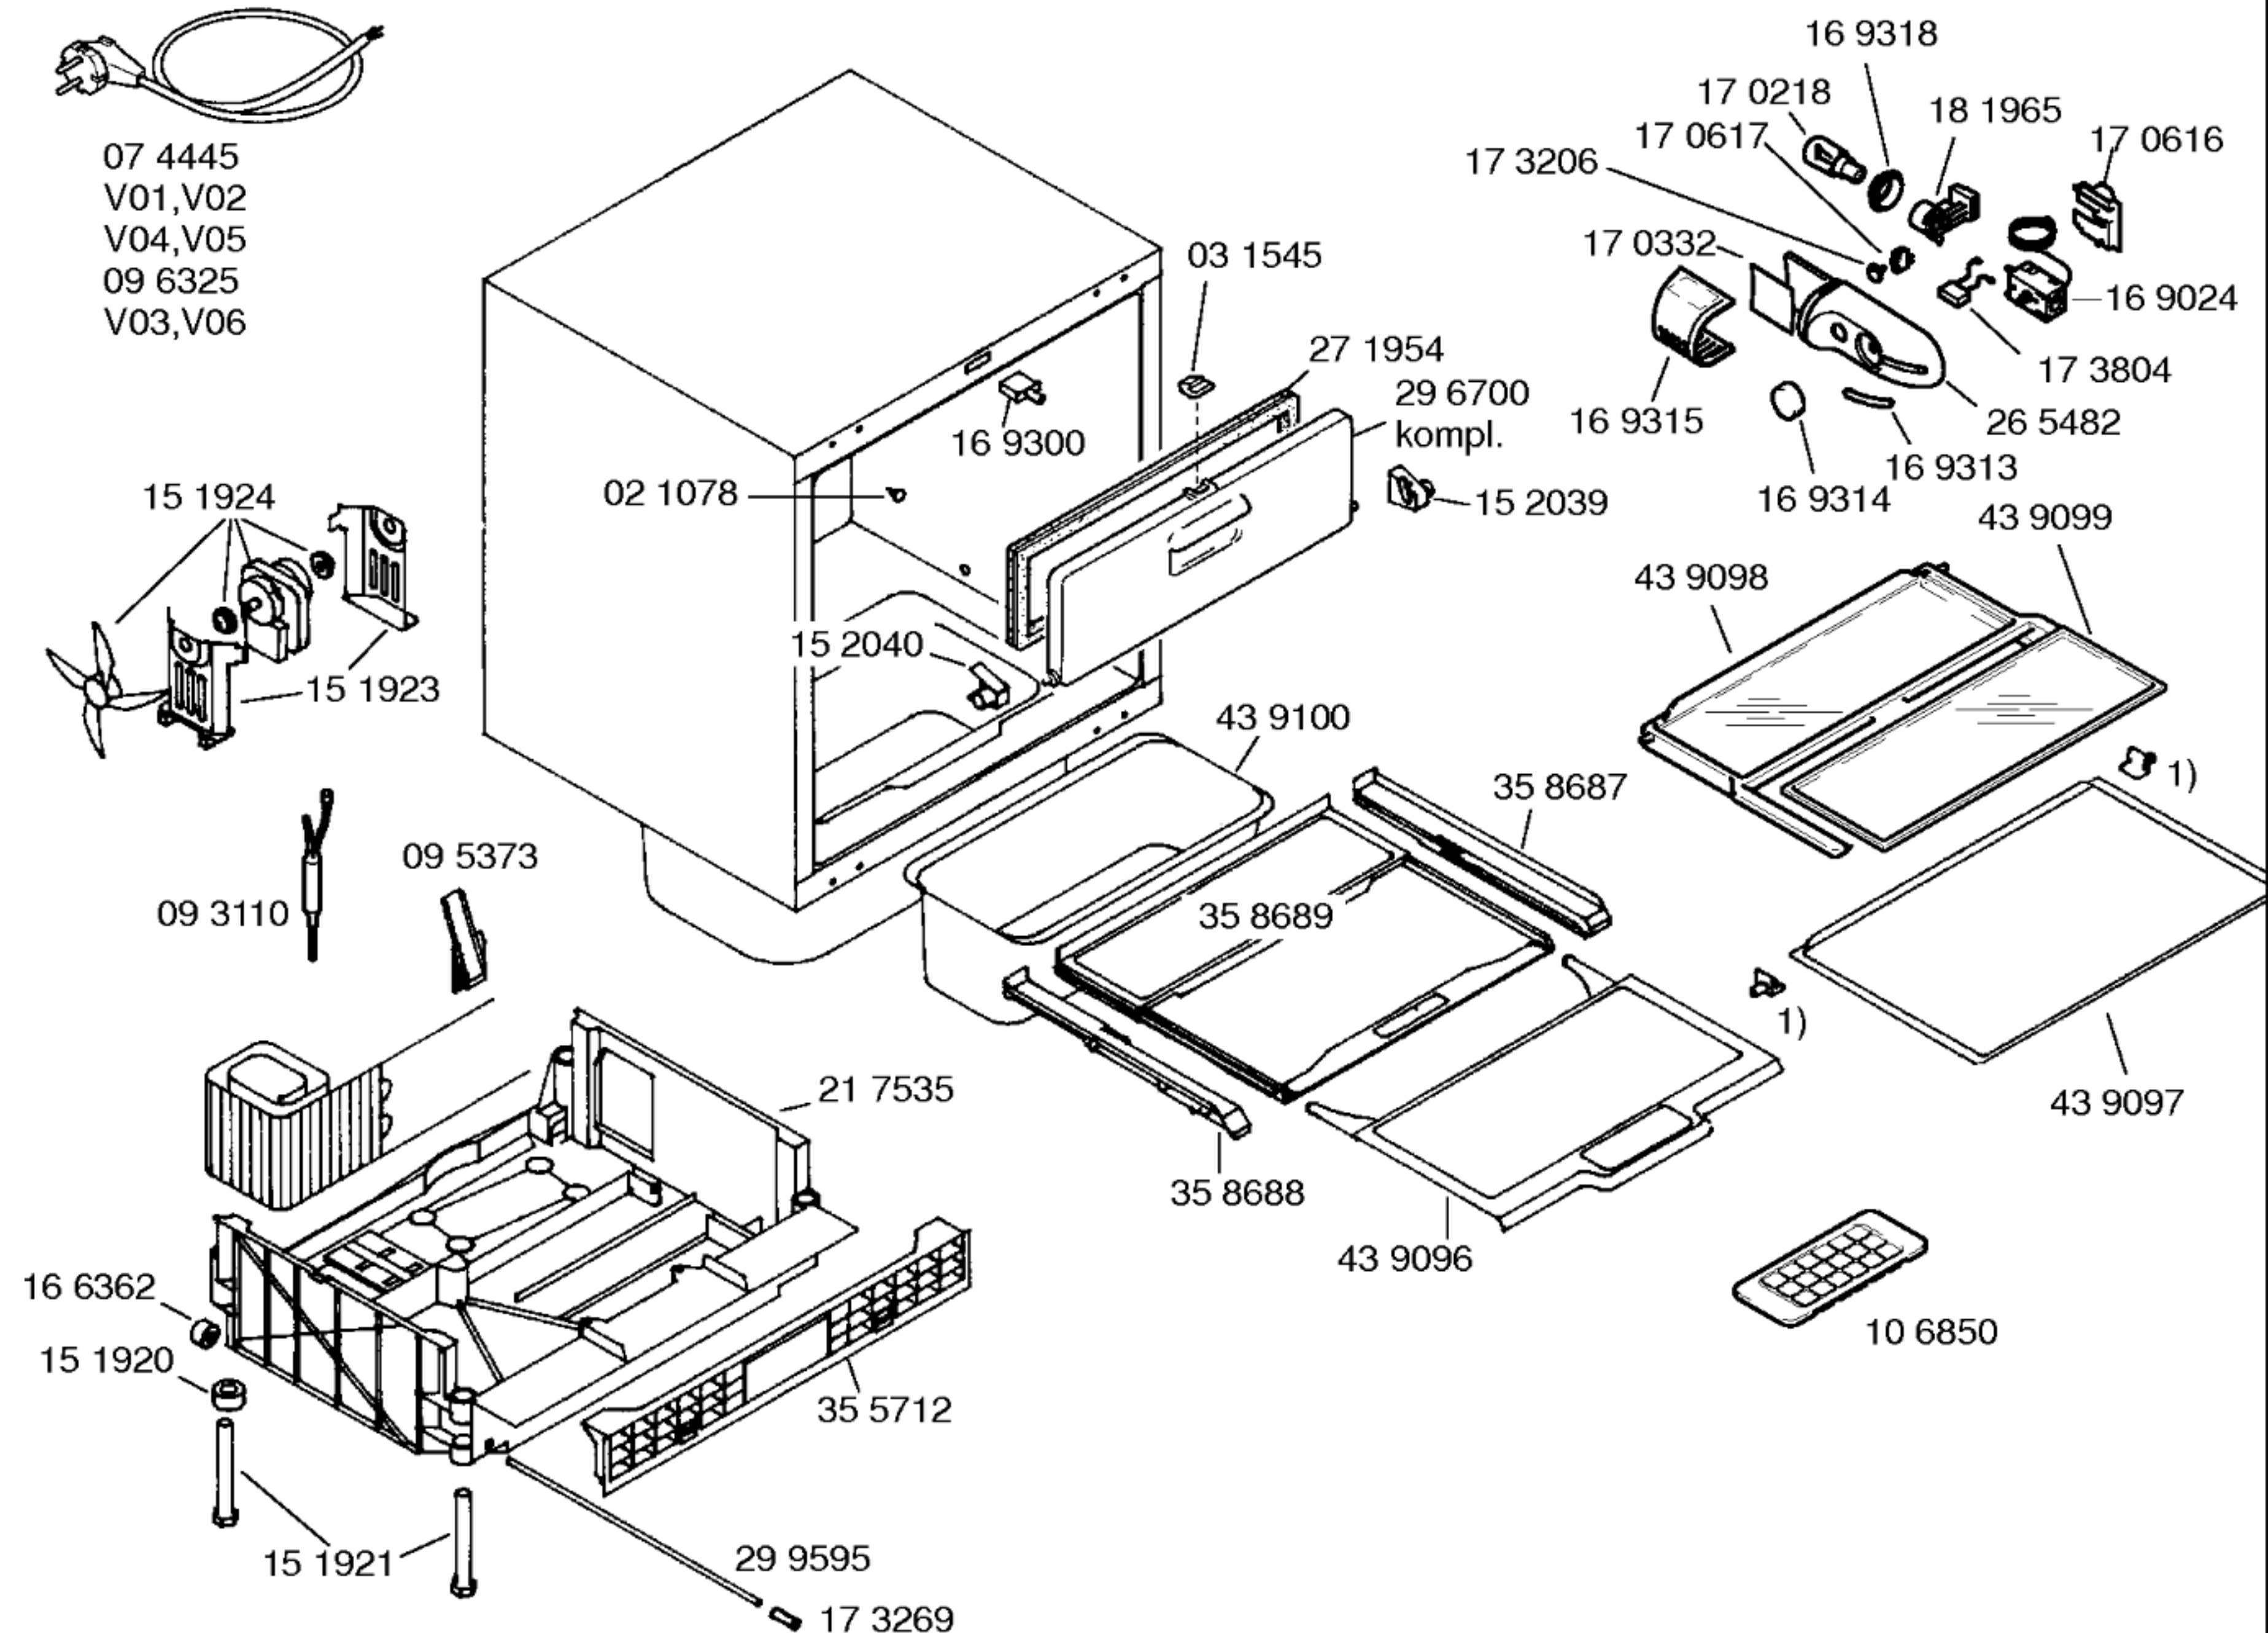



Gebrauchsanweisung
59 0318
(de,en,fr,it,nl
Montageanleitung
52 7913

Beistellsatz
26 8429

1)16 5789

Listerien Rep.Satz
41 7589
V01

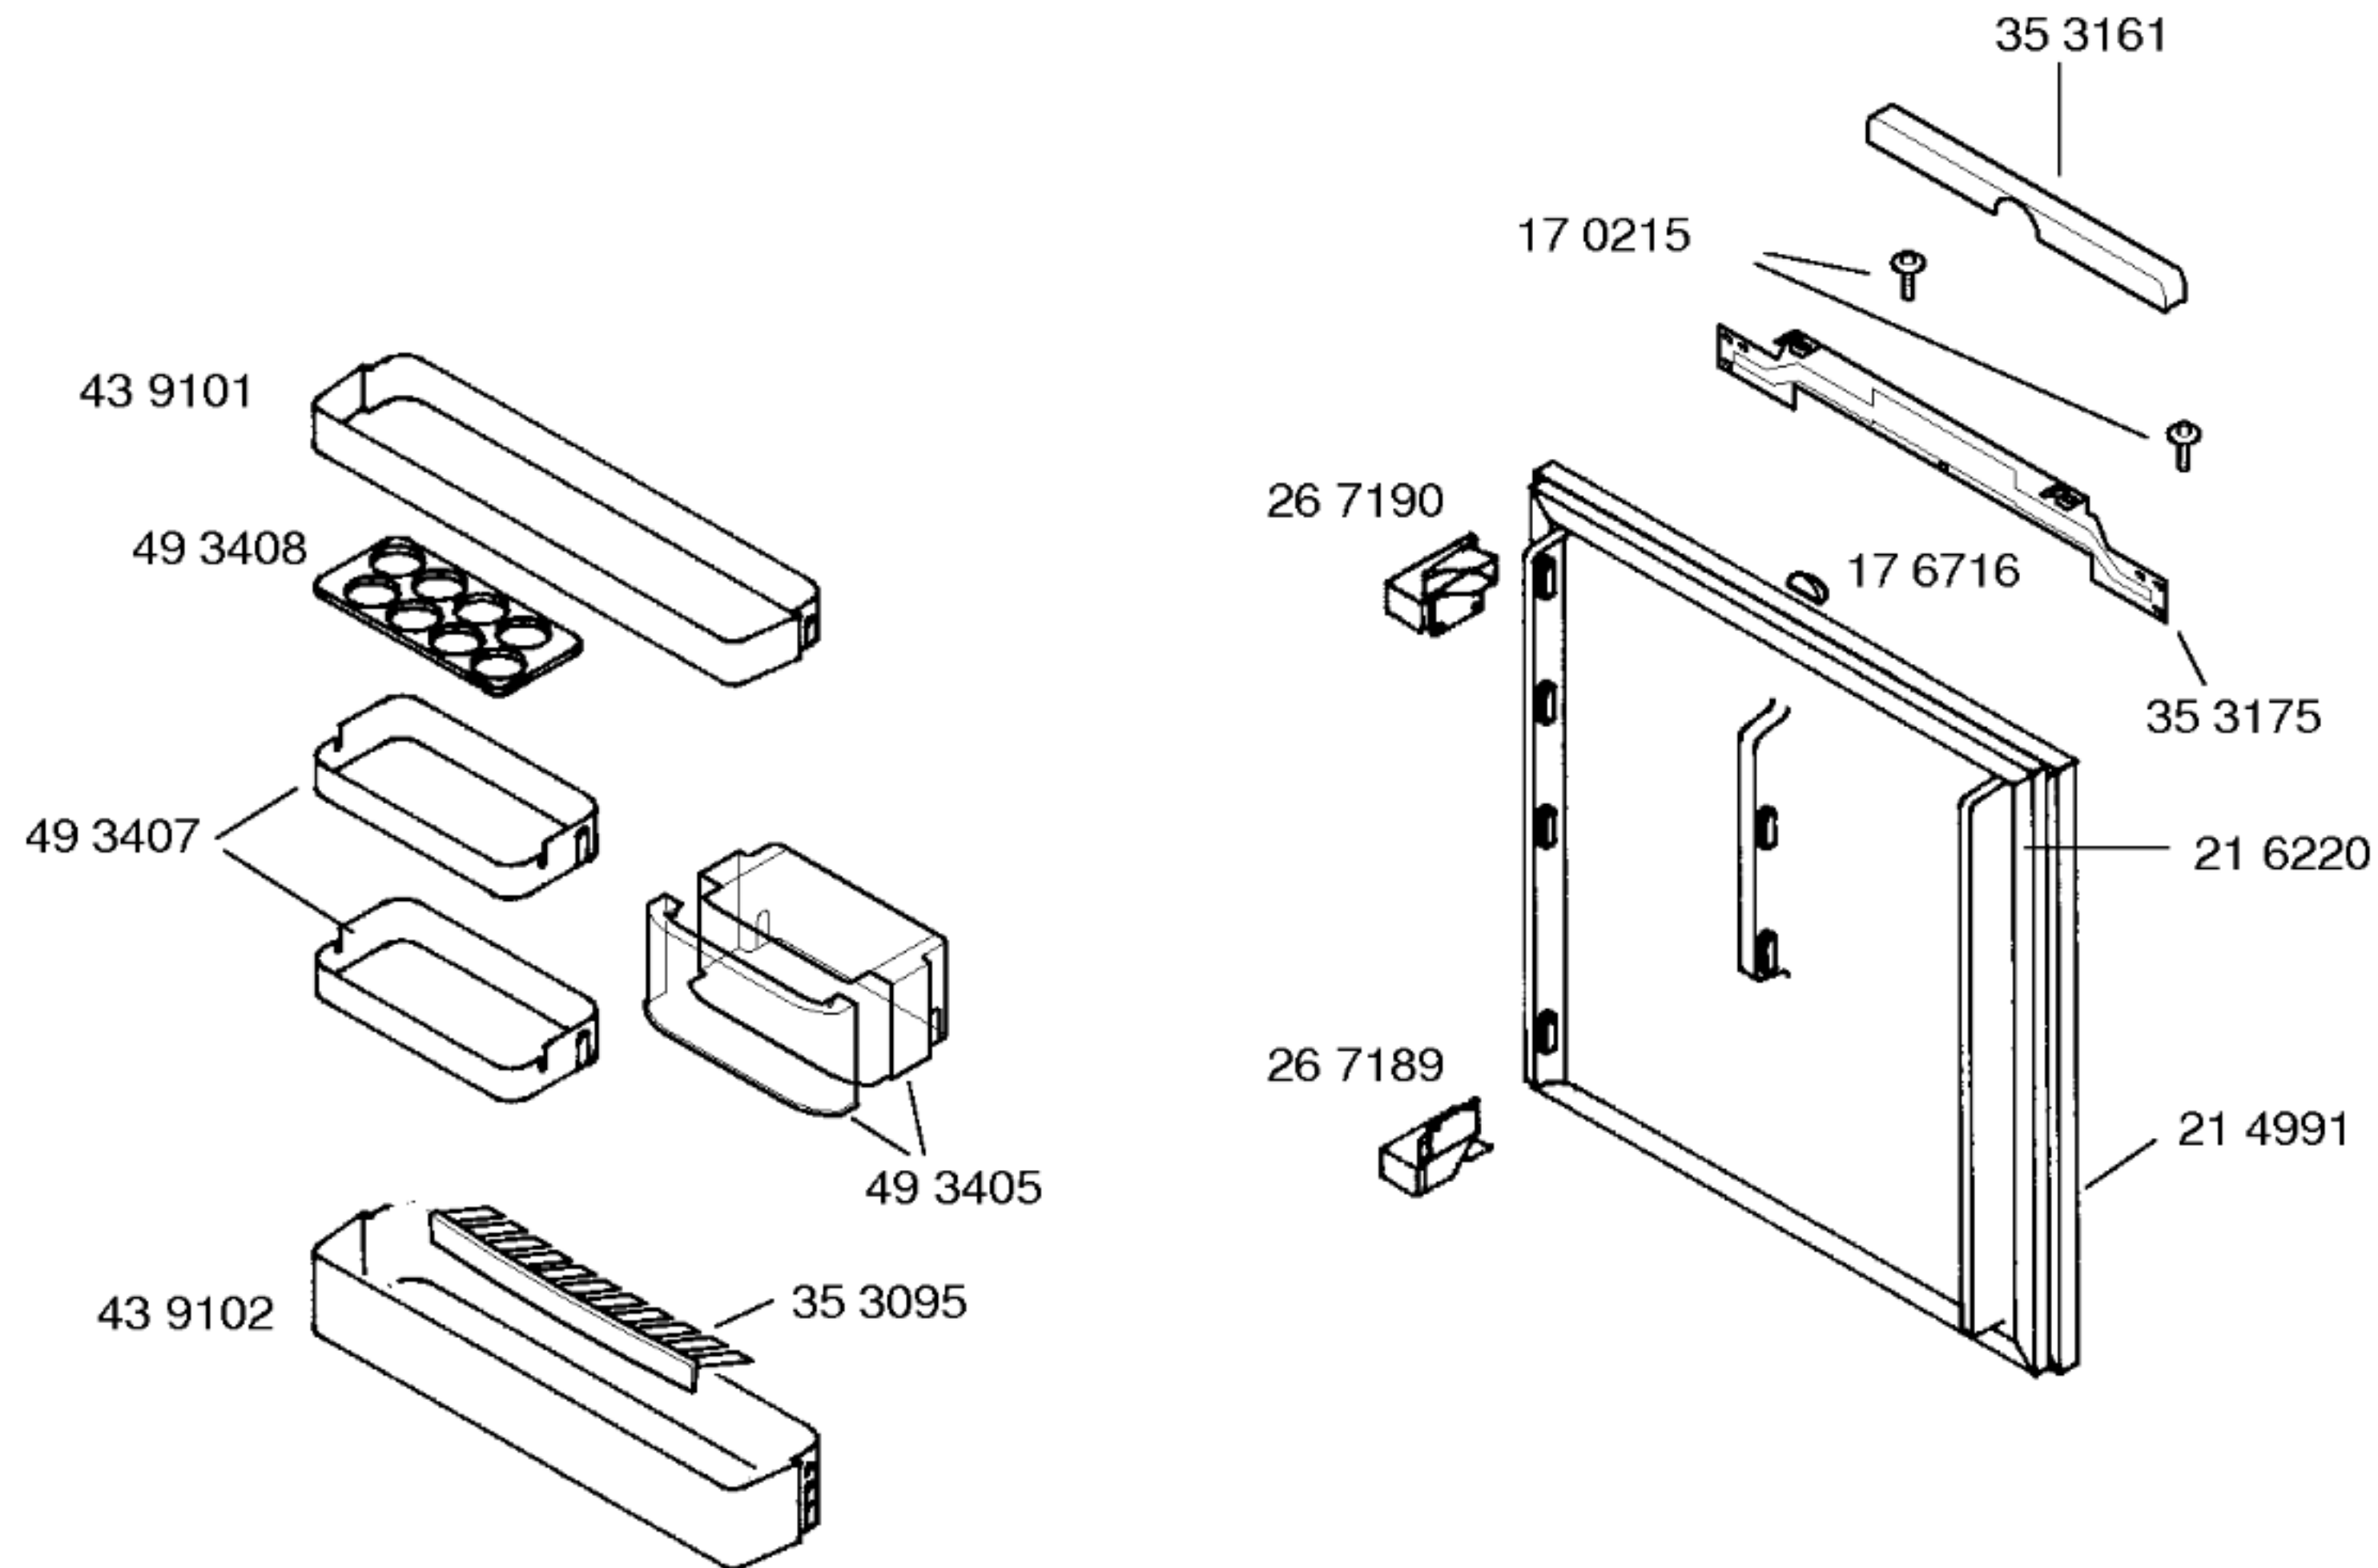

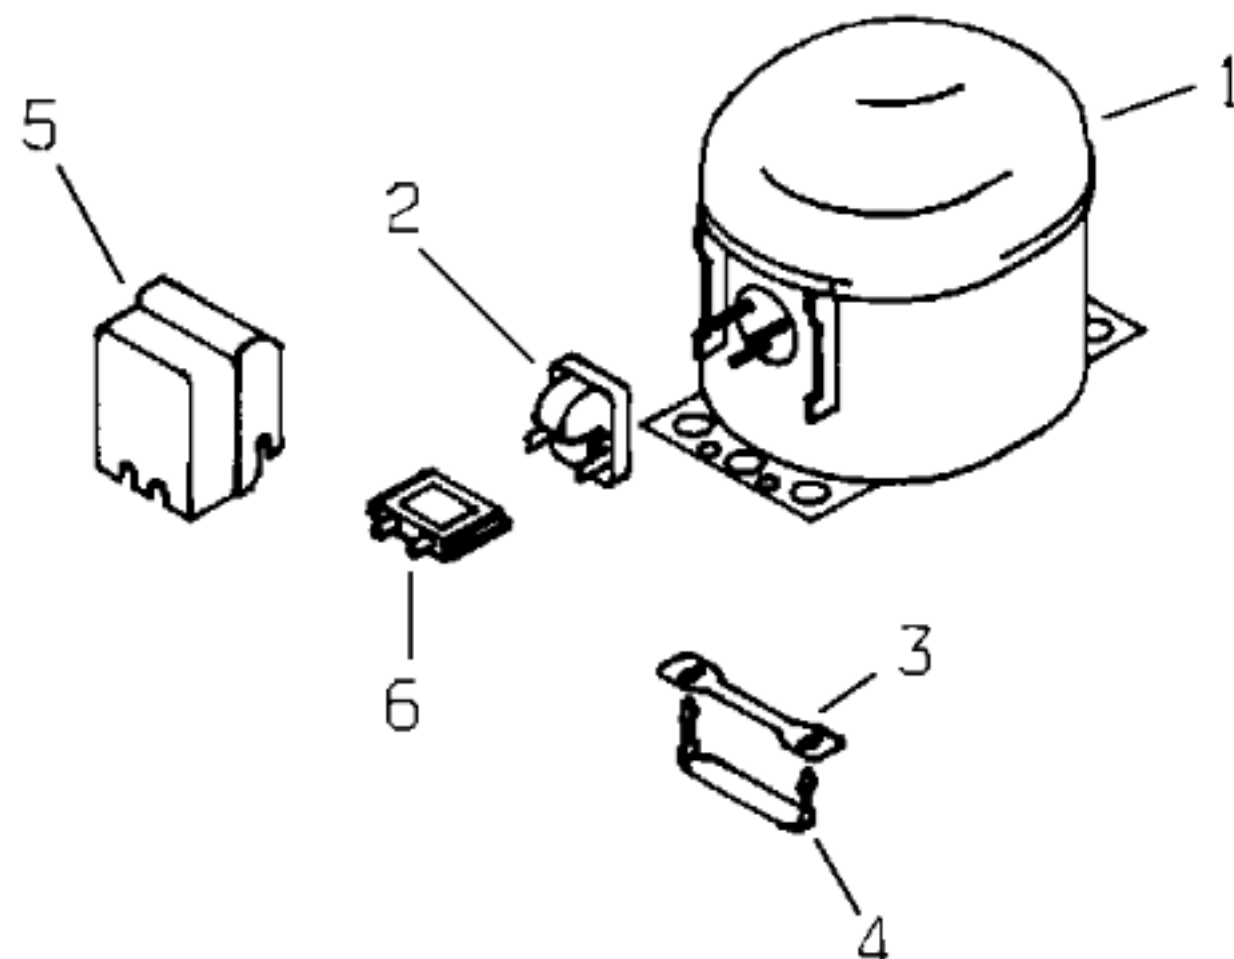

	V01 -V06	V07 -V08	
Pos.	Danfoss	Danfoss	
	TLES 7 KK2	TLES 6,5 KK3	
1	14 1903	14 4891	
2	15 1055	15 1055	
3	18 3656	18 3656	
4	18 3655	18 3655	
5	15 1072	15 1072	
6	15 0760	15 0760	
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Danfoss
Typ/Type		TLES 7 KK2	TLES 6,5 KK3
Förderleistung/Delivery/Débit	l/h	1168	1168
Anlaufstrom/Starting current/Cour de démarrage	A	7,5	7,1
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	18,9	28,2
	Hi/aux Ω	15,3	17,8
Temp.-Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$		
Valeurs de commutation	„aus“		
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a g	*	
Anschlußwert/Conn.load/Puiss. connectée	W	75	80
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild