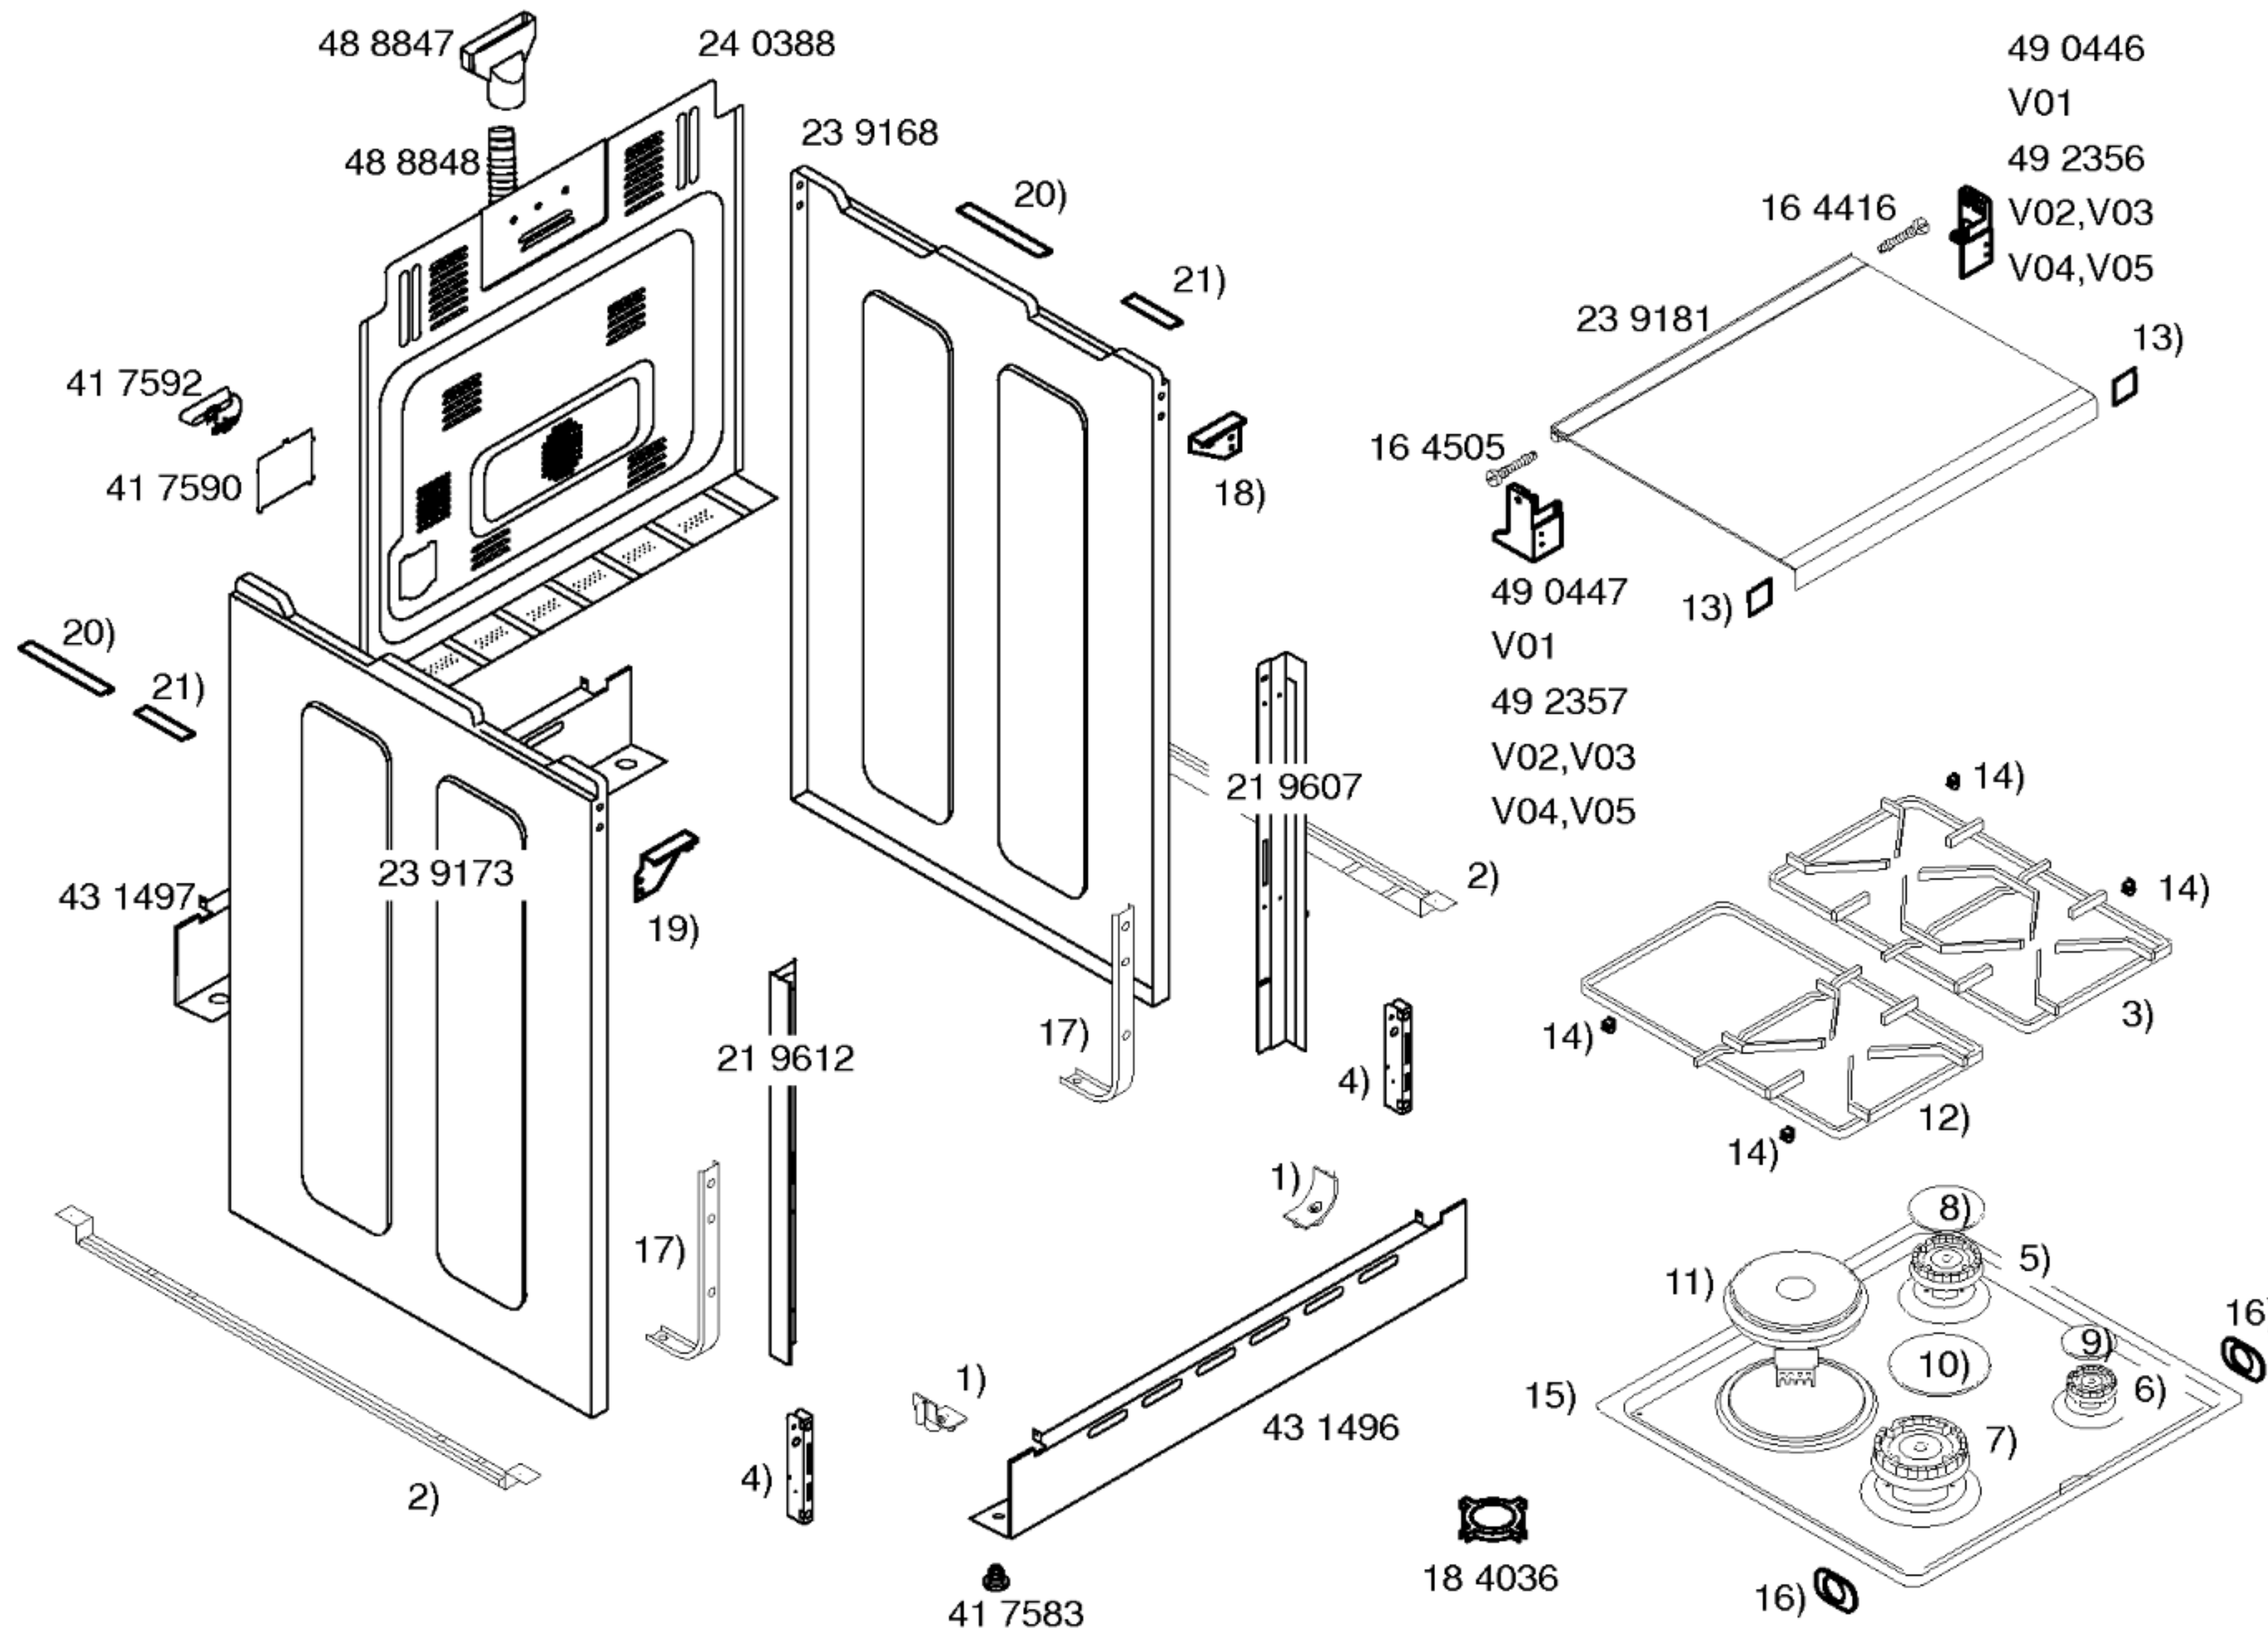


Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
58 7098

- 1) 41 7587
- 2) 43 1499
- 3) 26 8009
- 4) 41 7579
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 17 3897
- 9) 17 3898
- 10) 17 3896
- 11) 26 8644
- 12) 26 8010

13) 18 4302
14) 16 8053
15) 23 9178

V01	
24 1371	
V02	
16)41 6914	
V01	
17)43 1502	
18)42 3351	
V02,V03,V04,V05	
19)42 3352	
V02,V03,V04,V05	
20)42 3353	
V02,V03,V04,V05	
21)42 3354	
V02,V03,V04,V05	


49 1091

V01

49 2609

V02,V03

V04,V05

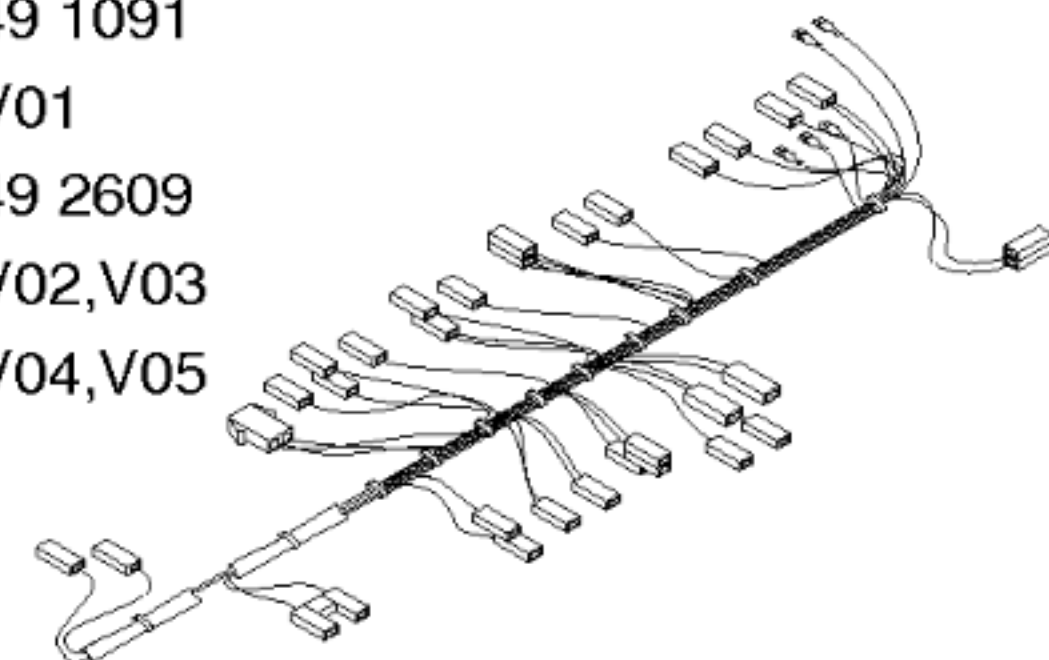

41 8396

41 8396

36 2893

16 4474

26 2730


42 1180

43 1504

V01

36 2805

18 4045

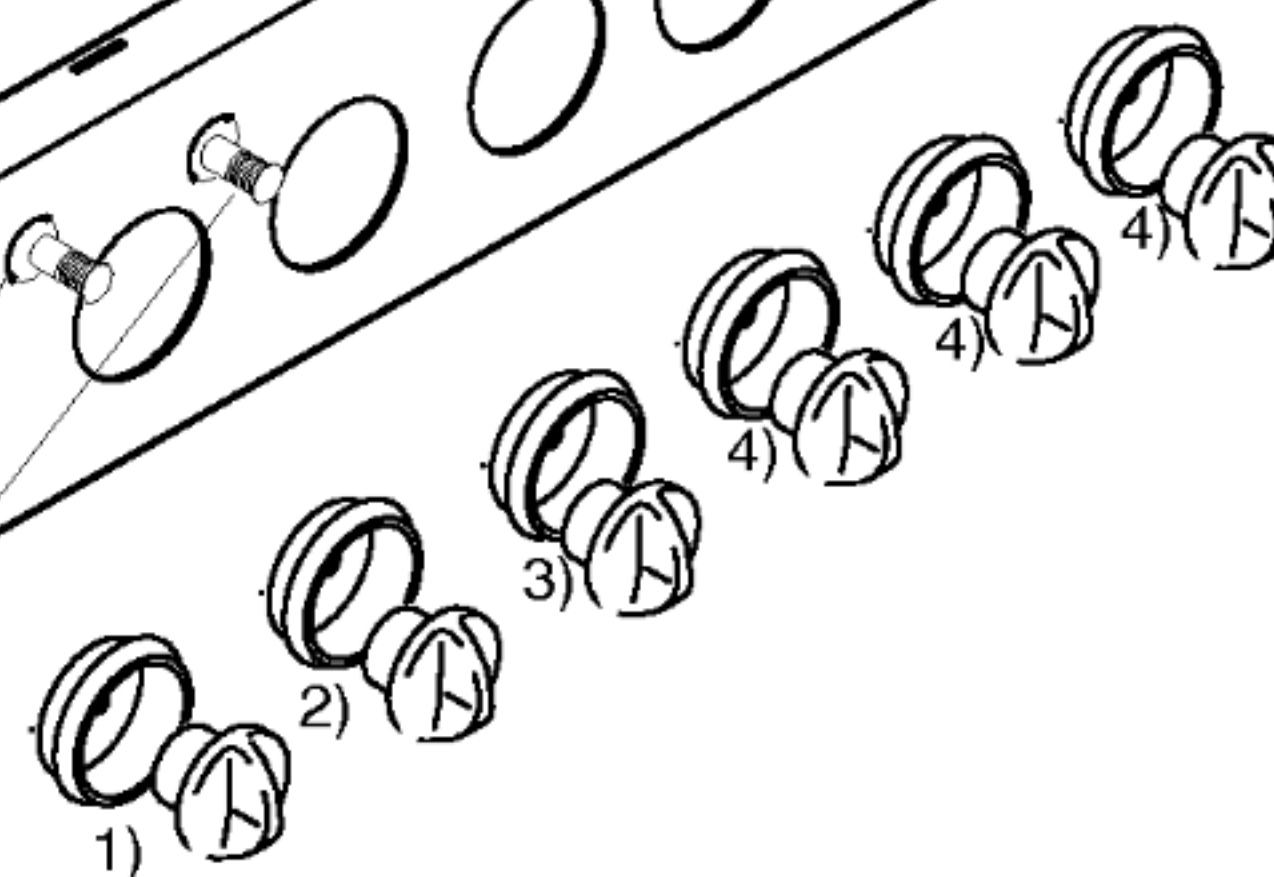

Mat. - Nr. - Konstante
3740

1) 42 1181

2) 18 8161


3) 18 8156

4) 18 8160

V01,V02,V03


42 5190

V04,V05

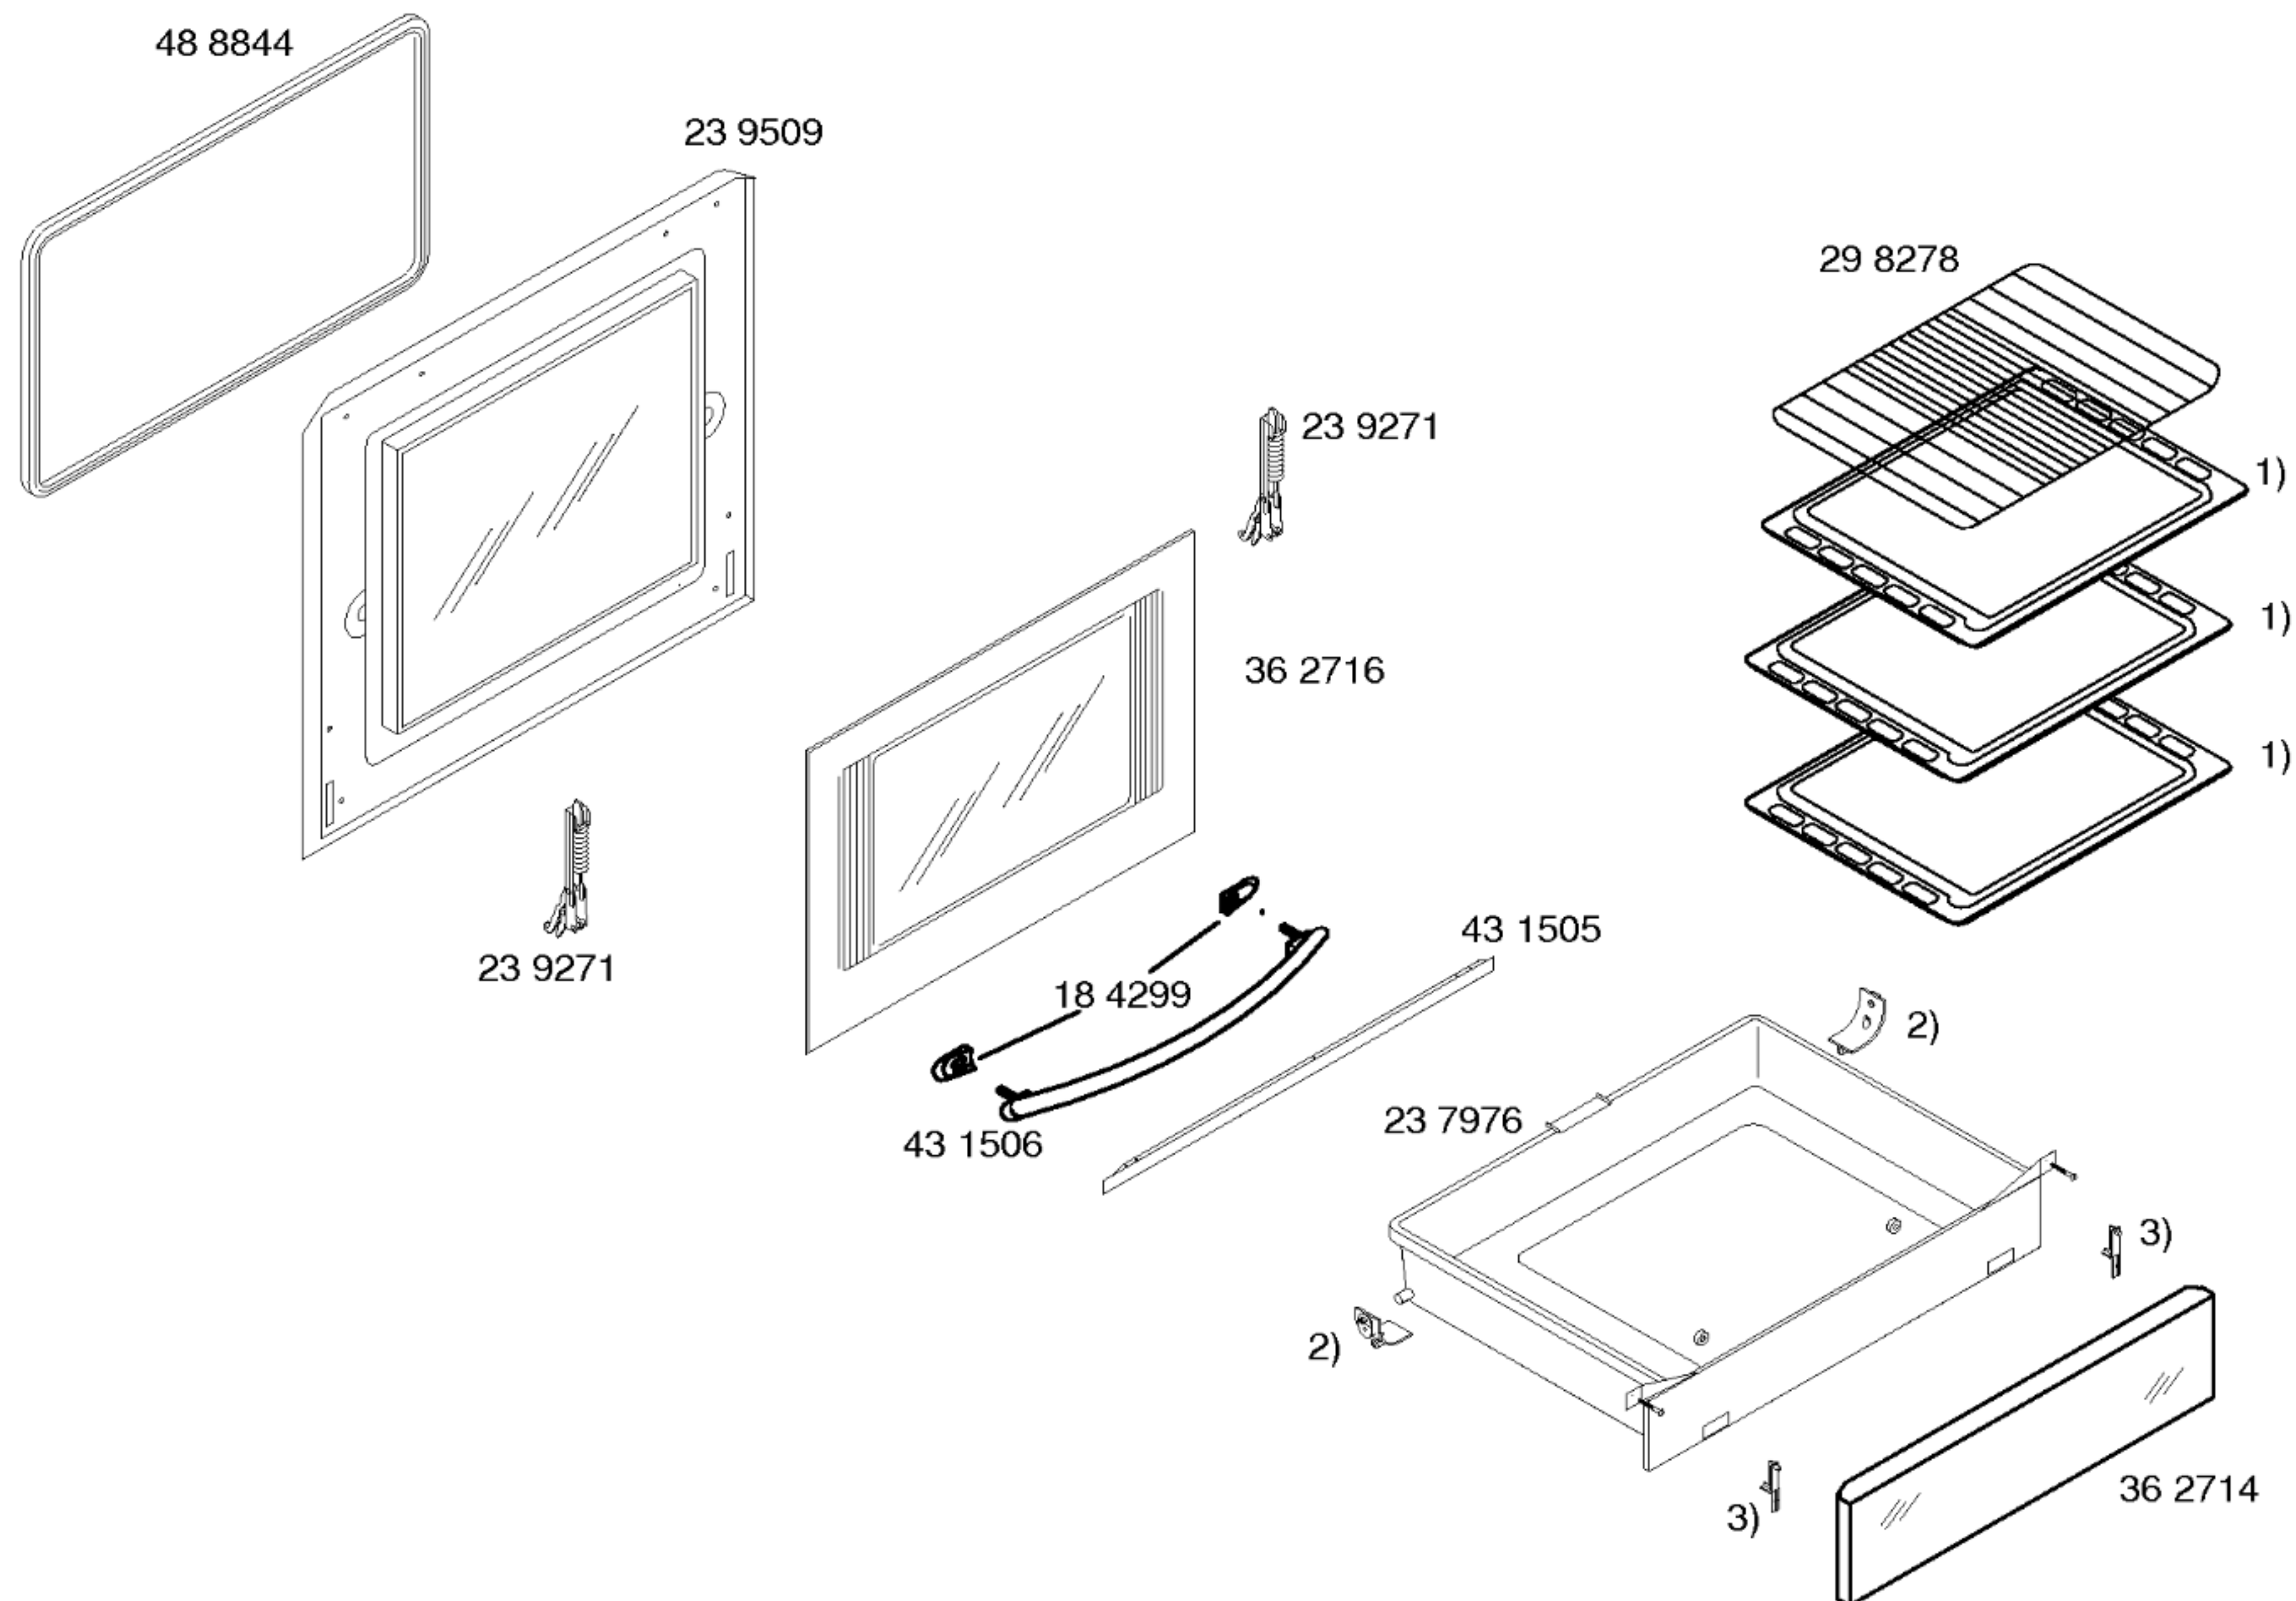


Mat. – Nr. – Konstante
3740

- 1) 35 3489
- 2) 41 7587
- 3) 41 7588

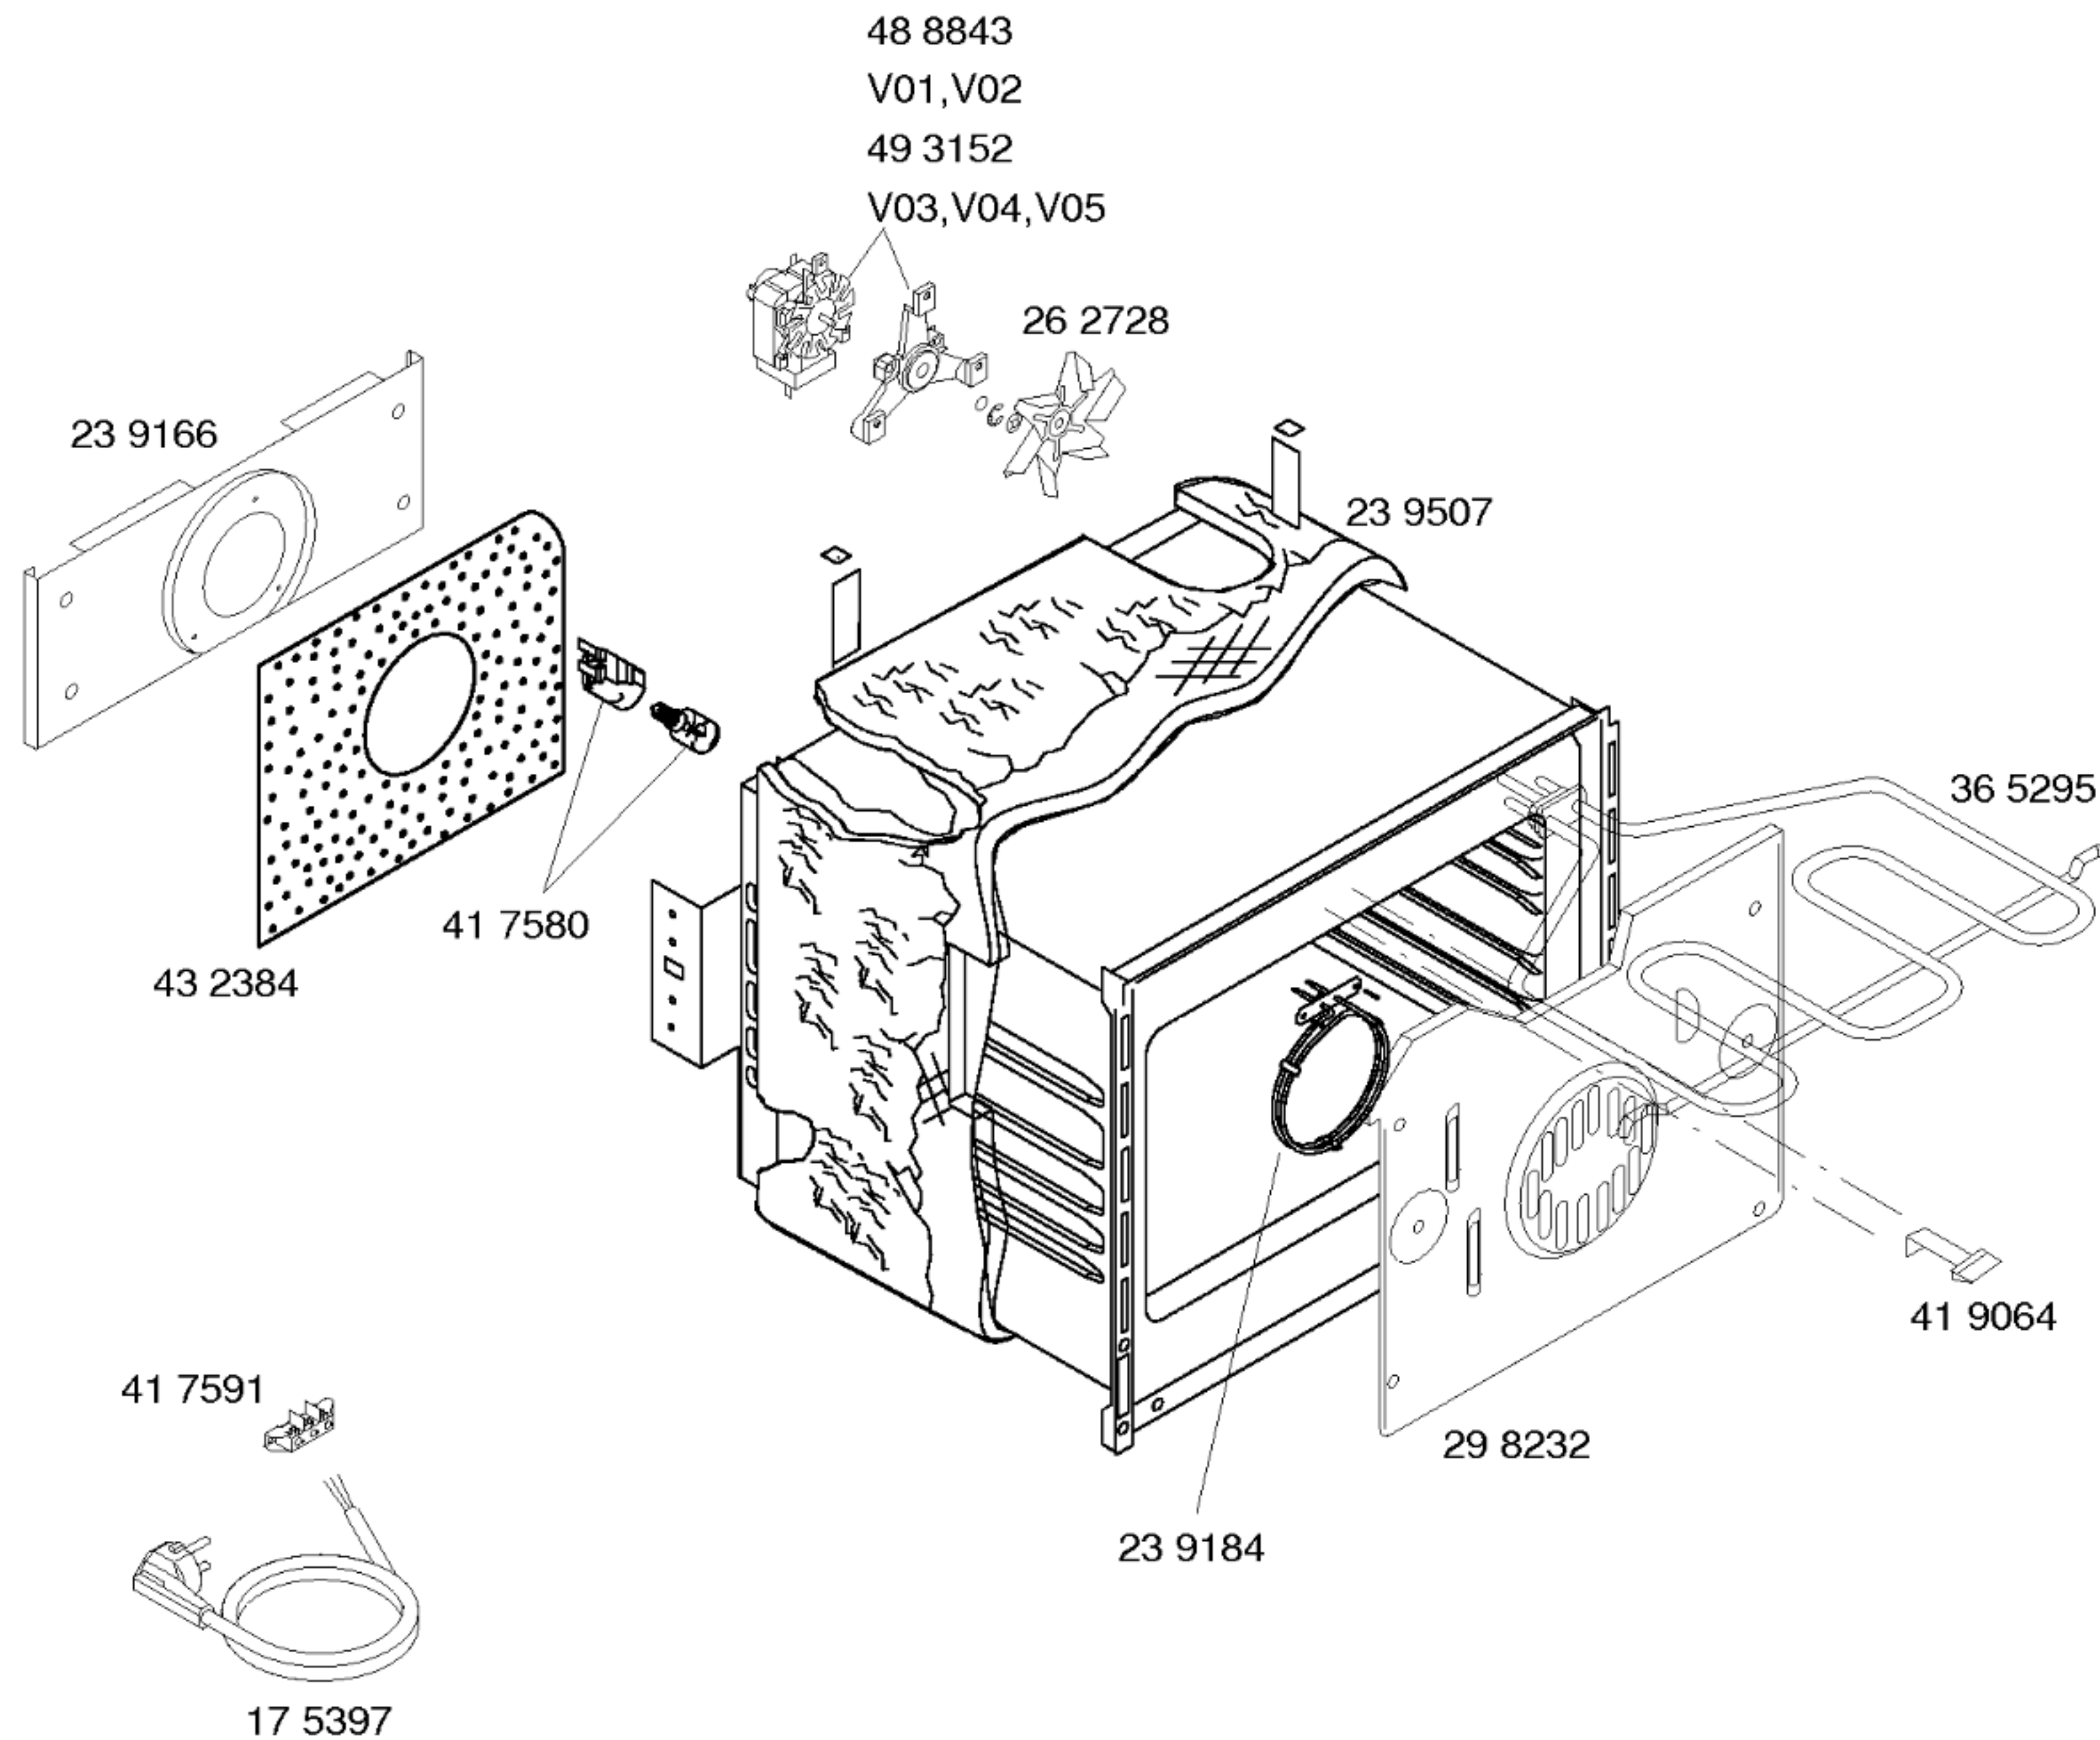

Mat. – Nr. – Konstante
 3740

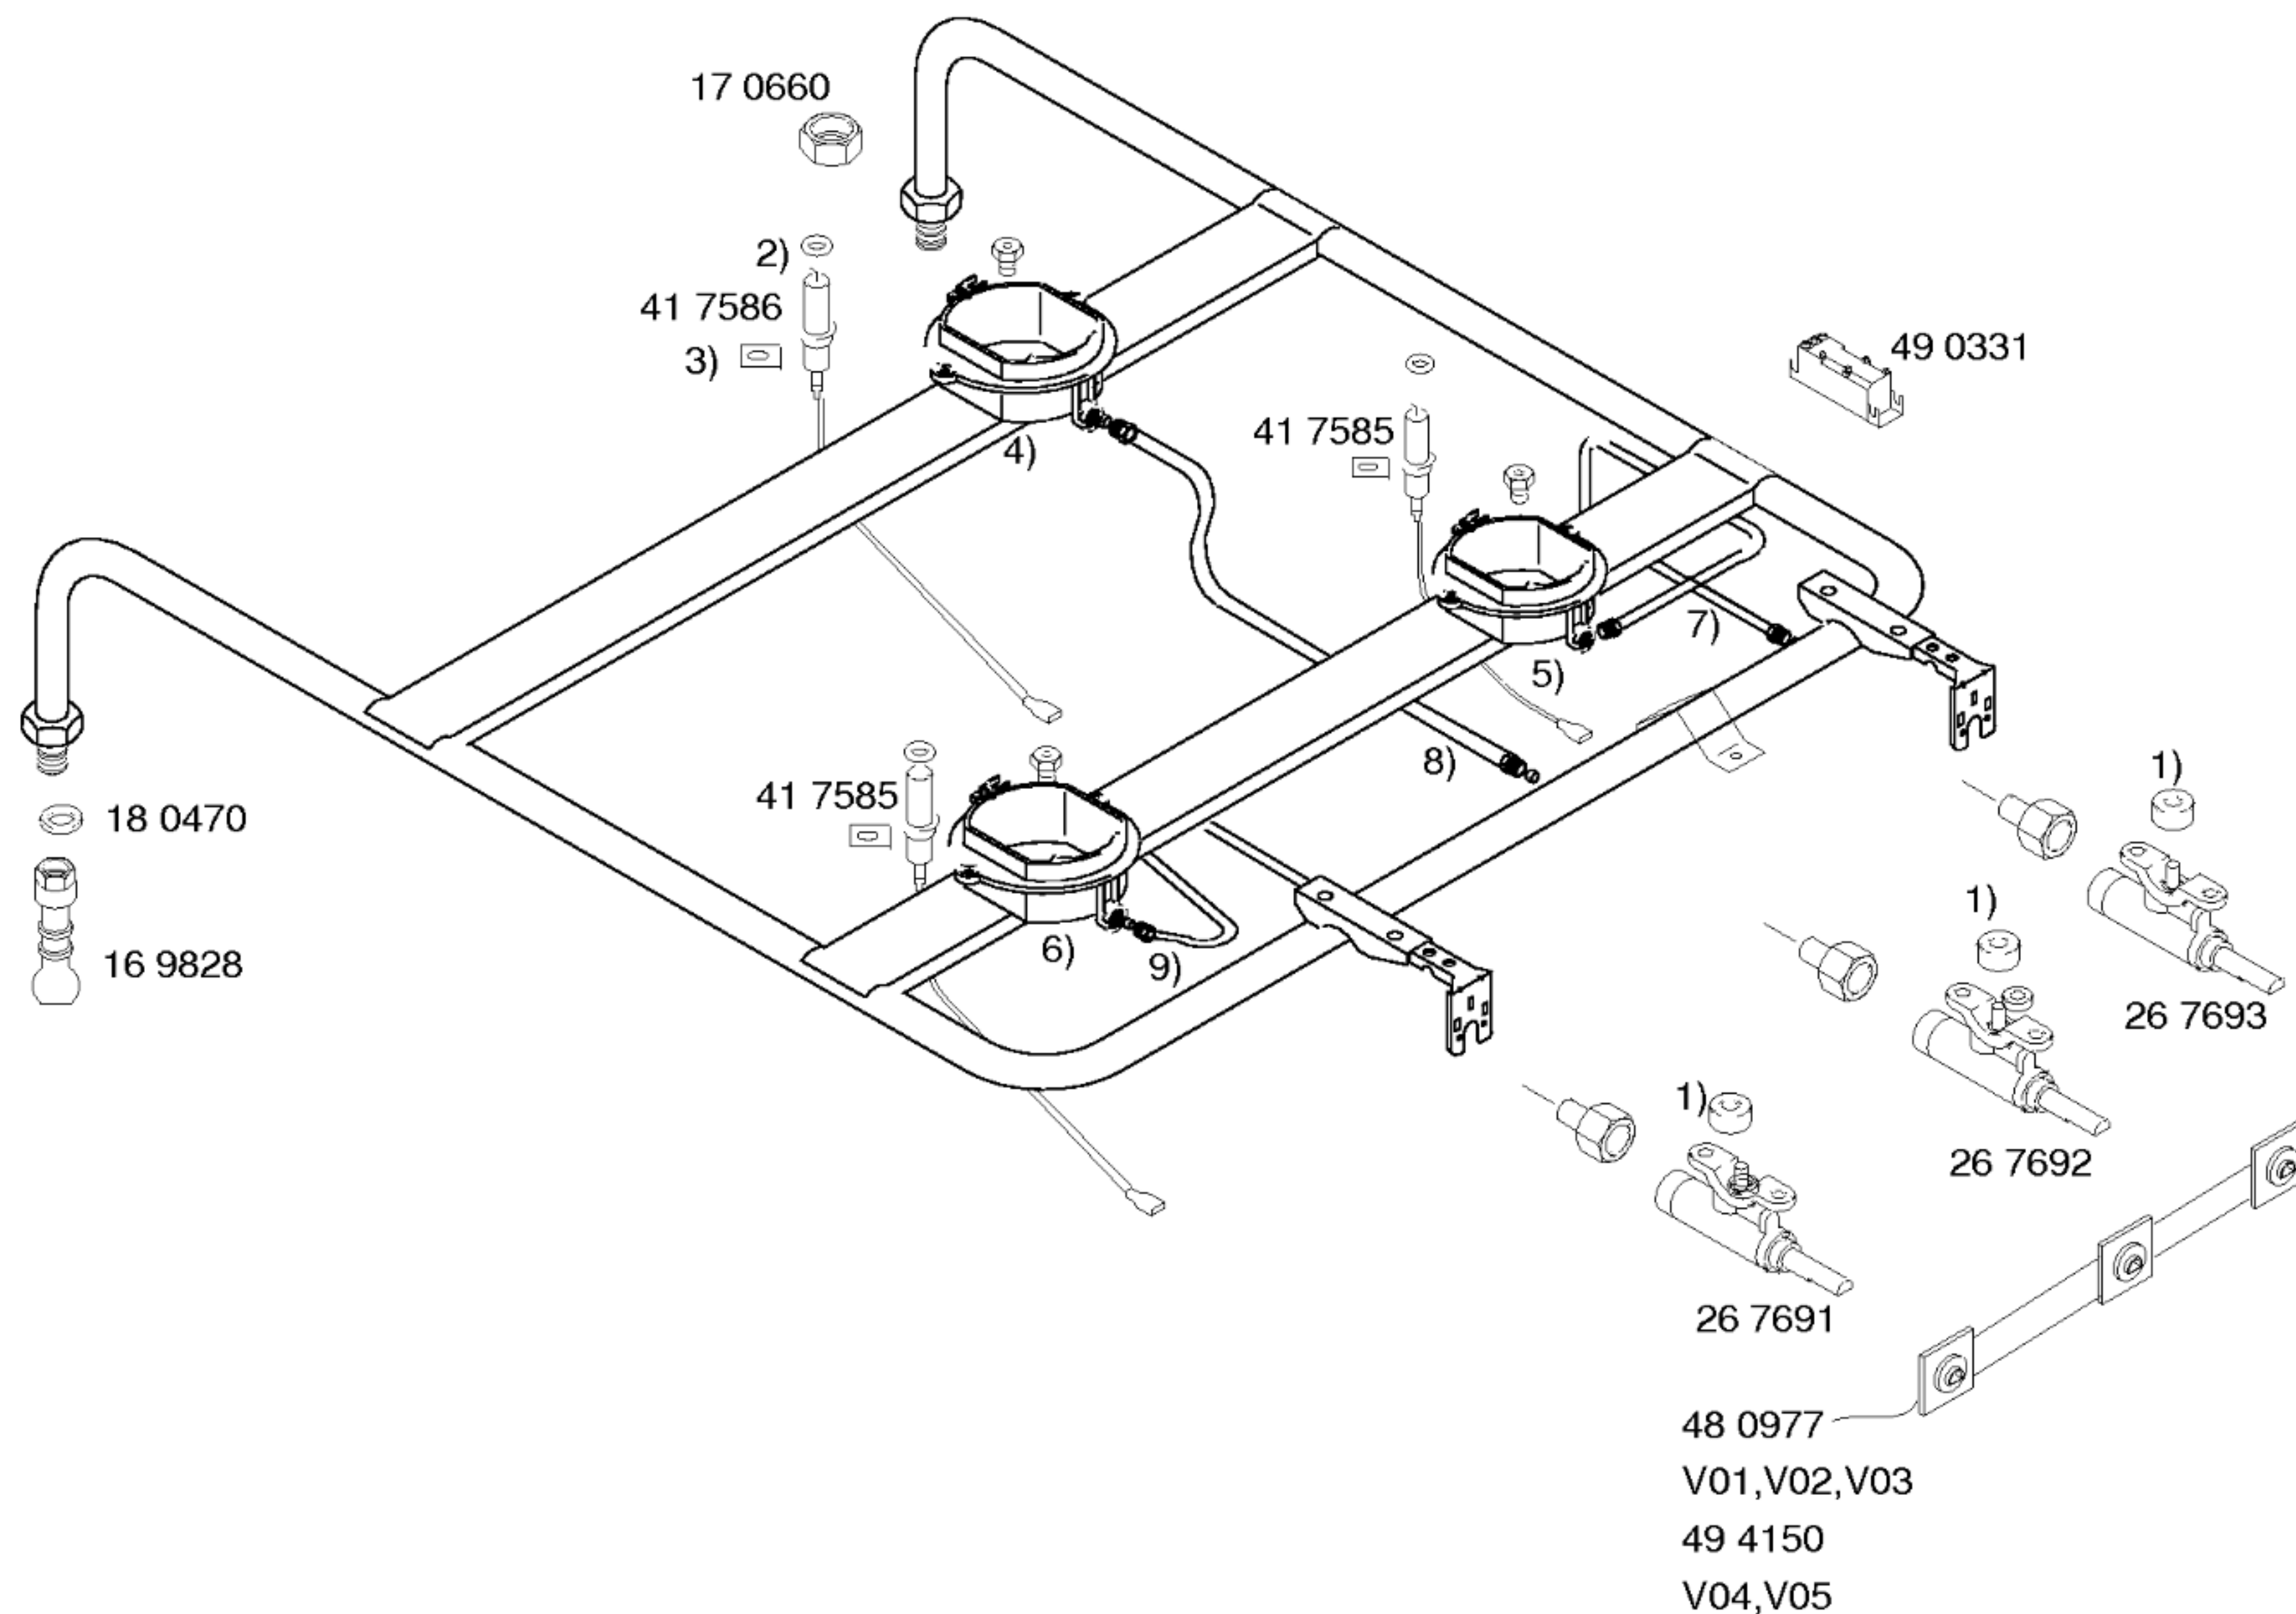

Mat. - Nr. - Konstante
3740

- 1) 16 9339
- 2) 17 3894
- 3) 17 3895
- 4) 26 7362
- 5) 26 7363
- 6) 26 7360
- 7) 35 7810
- 8) 35 7811
- 9) 35 8205

Duesensatz Für:
EG H/E G20 20mbar
17 3900

FG G30/31 30mbar
17 3899

EG H/E G20 20mbar
(inkl.Bypassdusen)
41 7595

FG G30/31 30mbar
(inkl.Bypassdusen)
41 7838