 


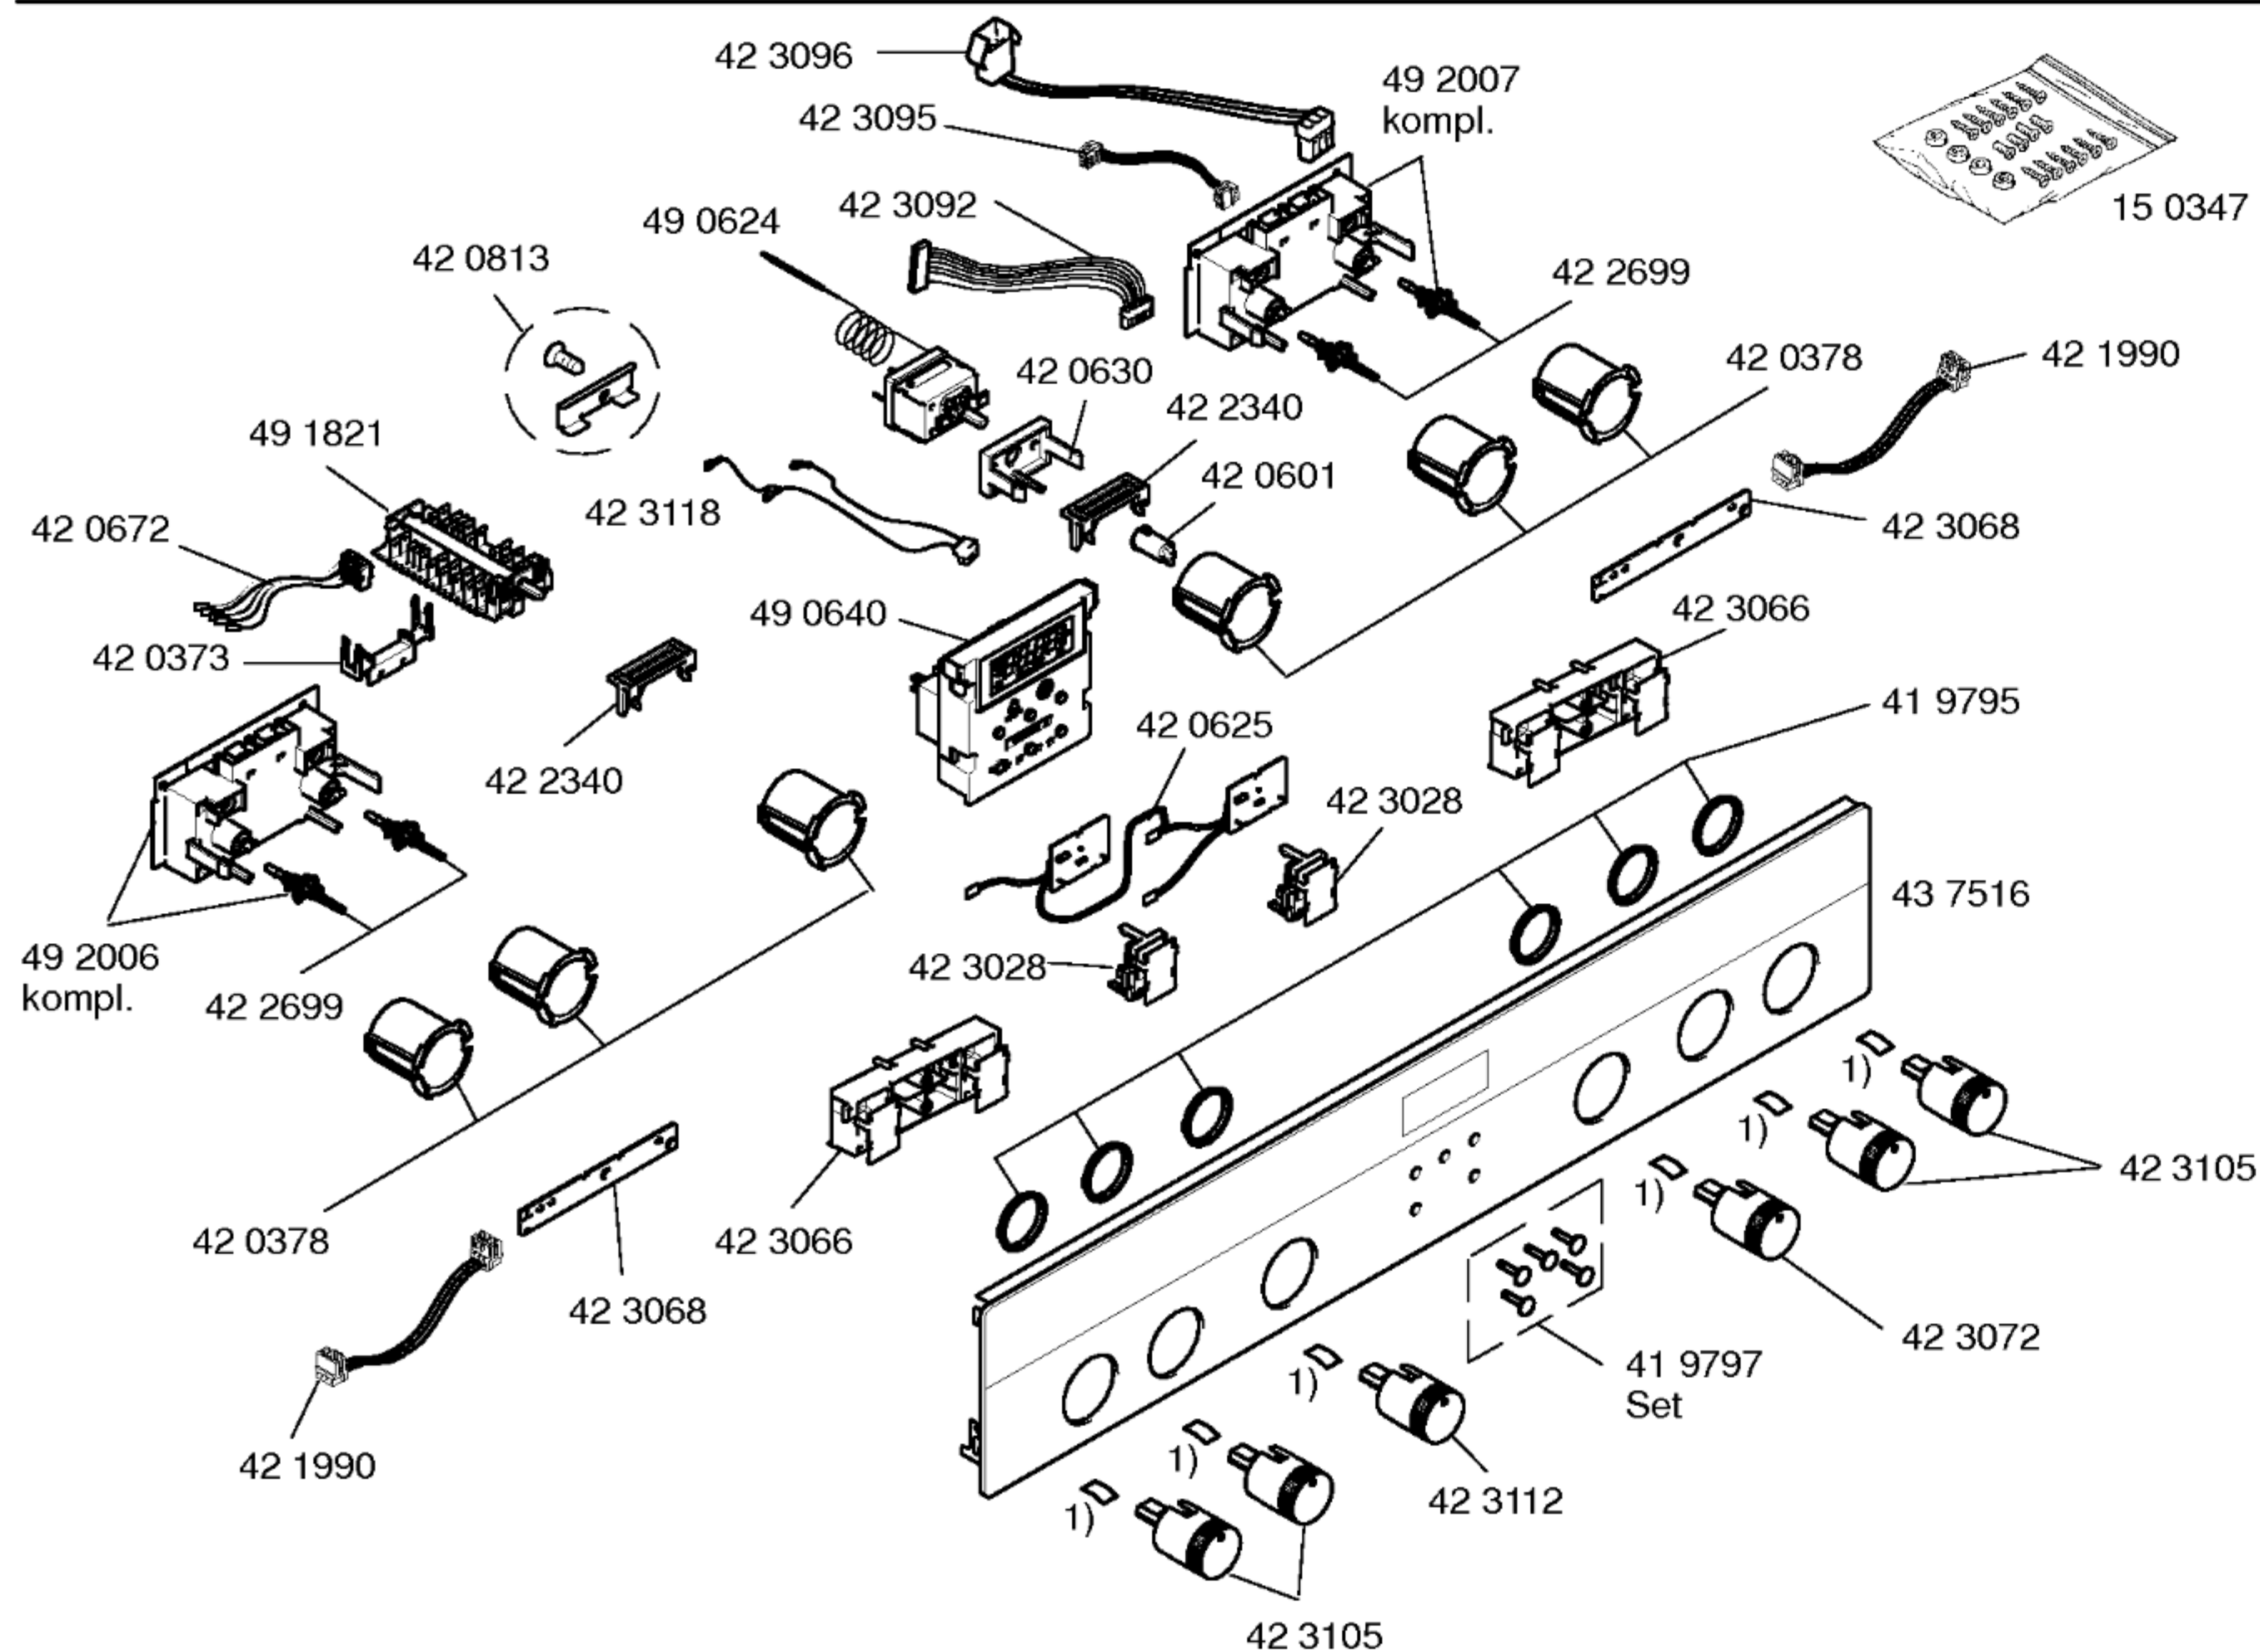


Gebrauchsanweisung
58 7722 (de)
58 8807 (el)


Montageanweisung
58 8262
(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)


Zubehoer:
HZ331000
Backblech emailliert
HZ331010
Backblech Antihaft
HZ332000
Universalpfanne
HZ332010
Universalpfanne
Antihaft
HZ333000
Profipfanne
HZ333001
Deckel f. Profipfanne
HZ334000
Kombirost
HZ324000
Einlegerost
HZ325000
Grillblech 2-teilig
HZ336000
Glaspfanne
HZ26001
Backform
Auslaufsicher

   1) 01 4254



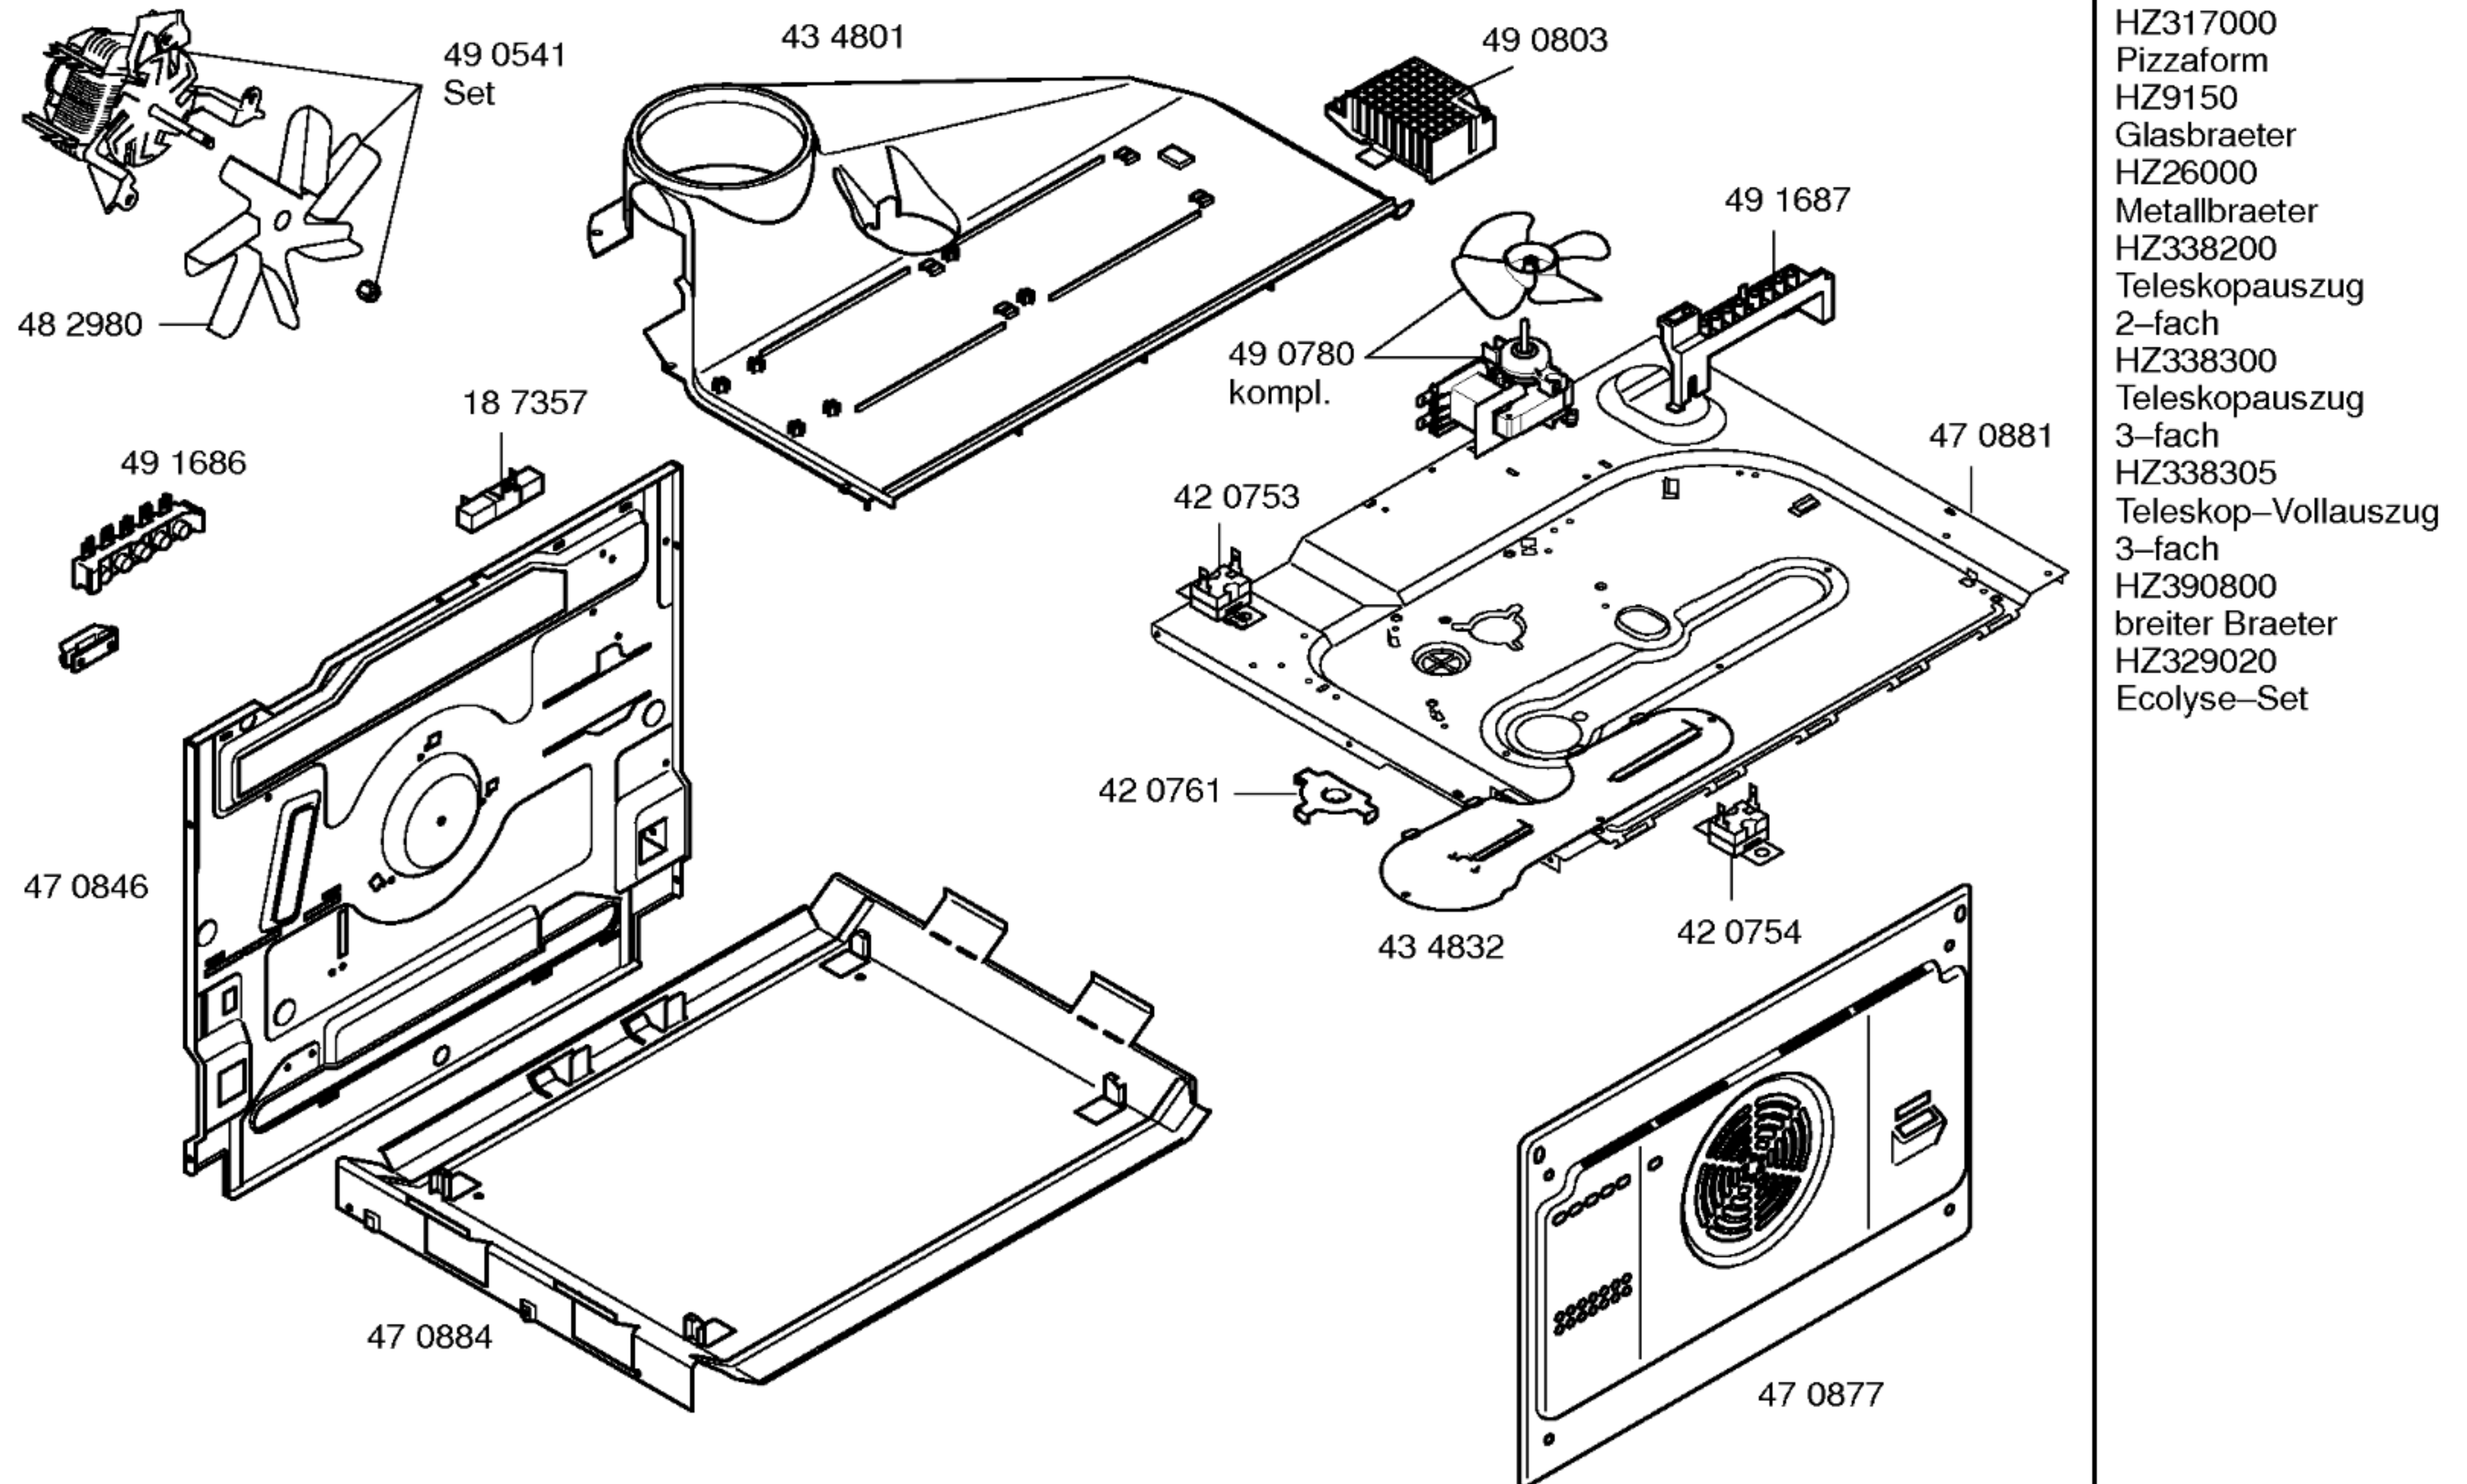

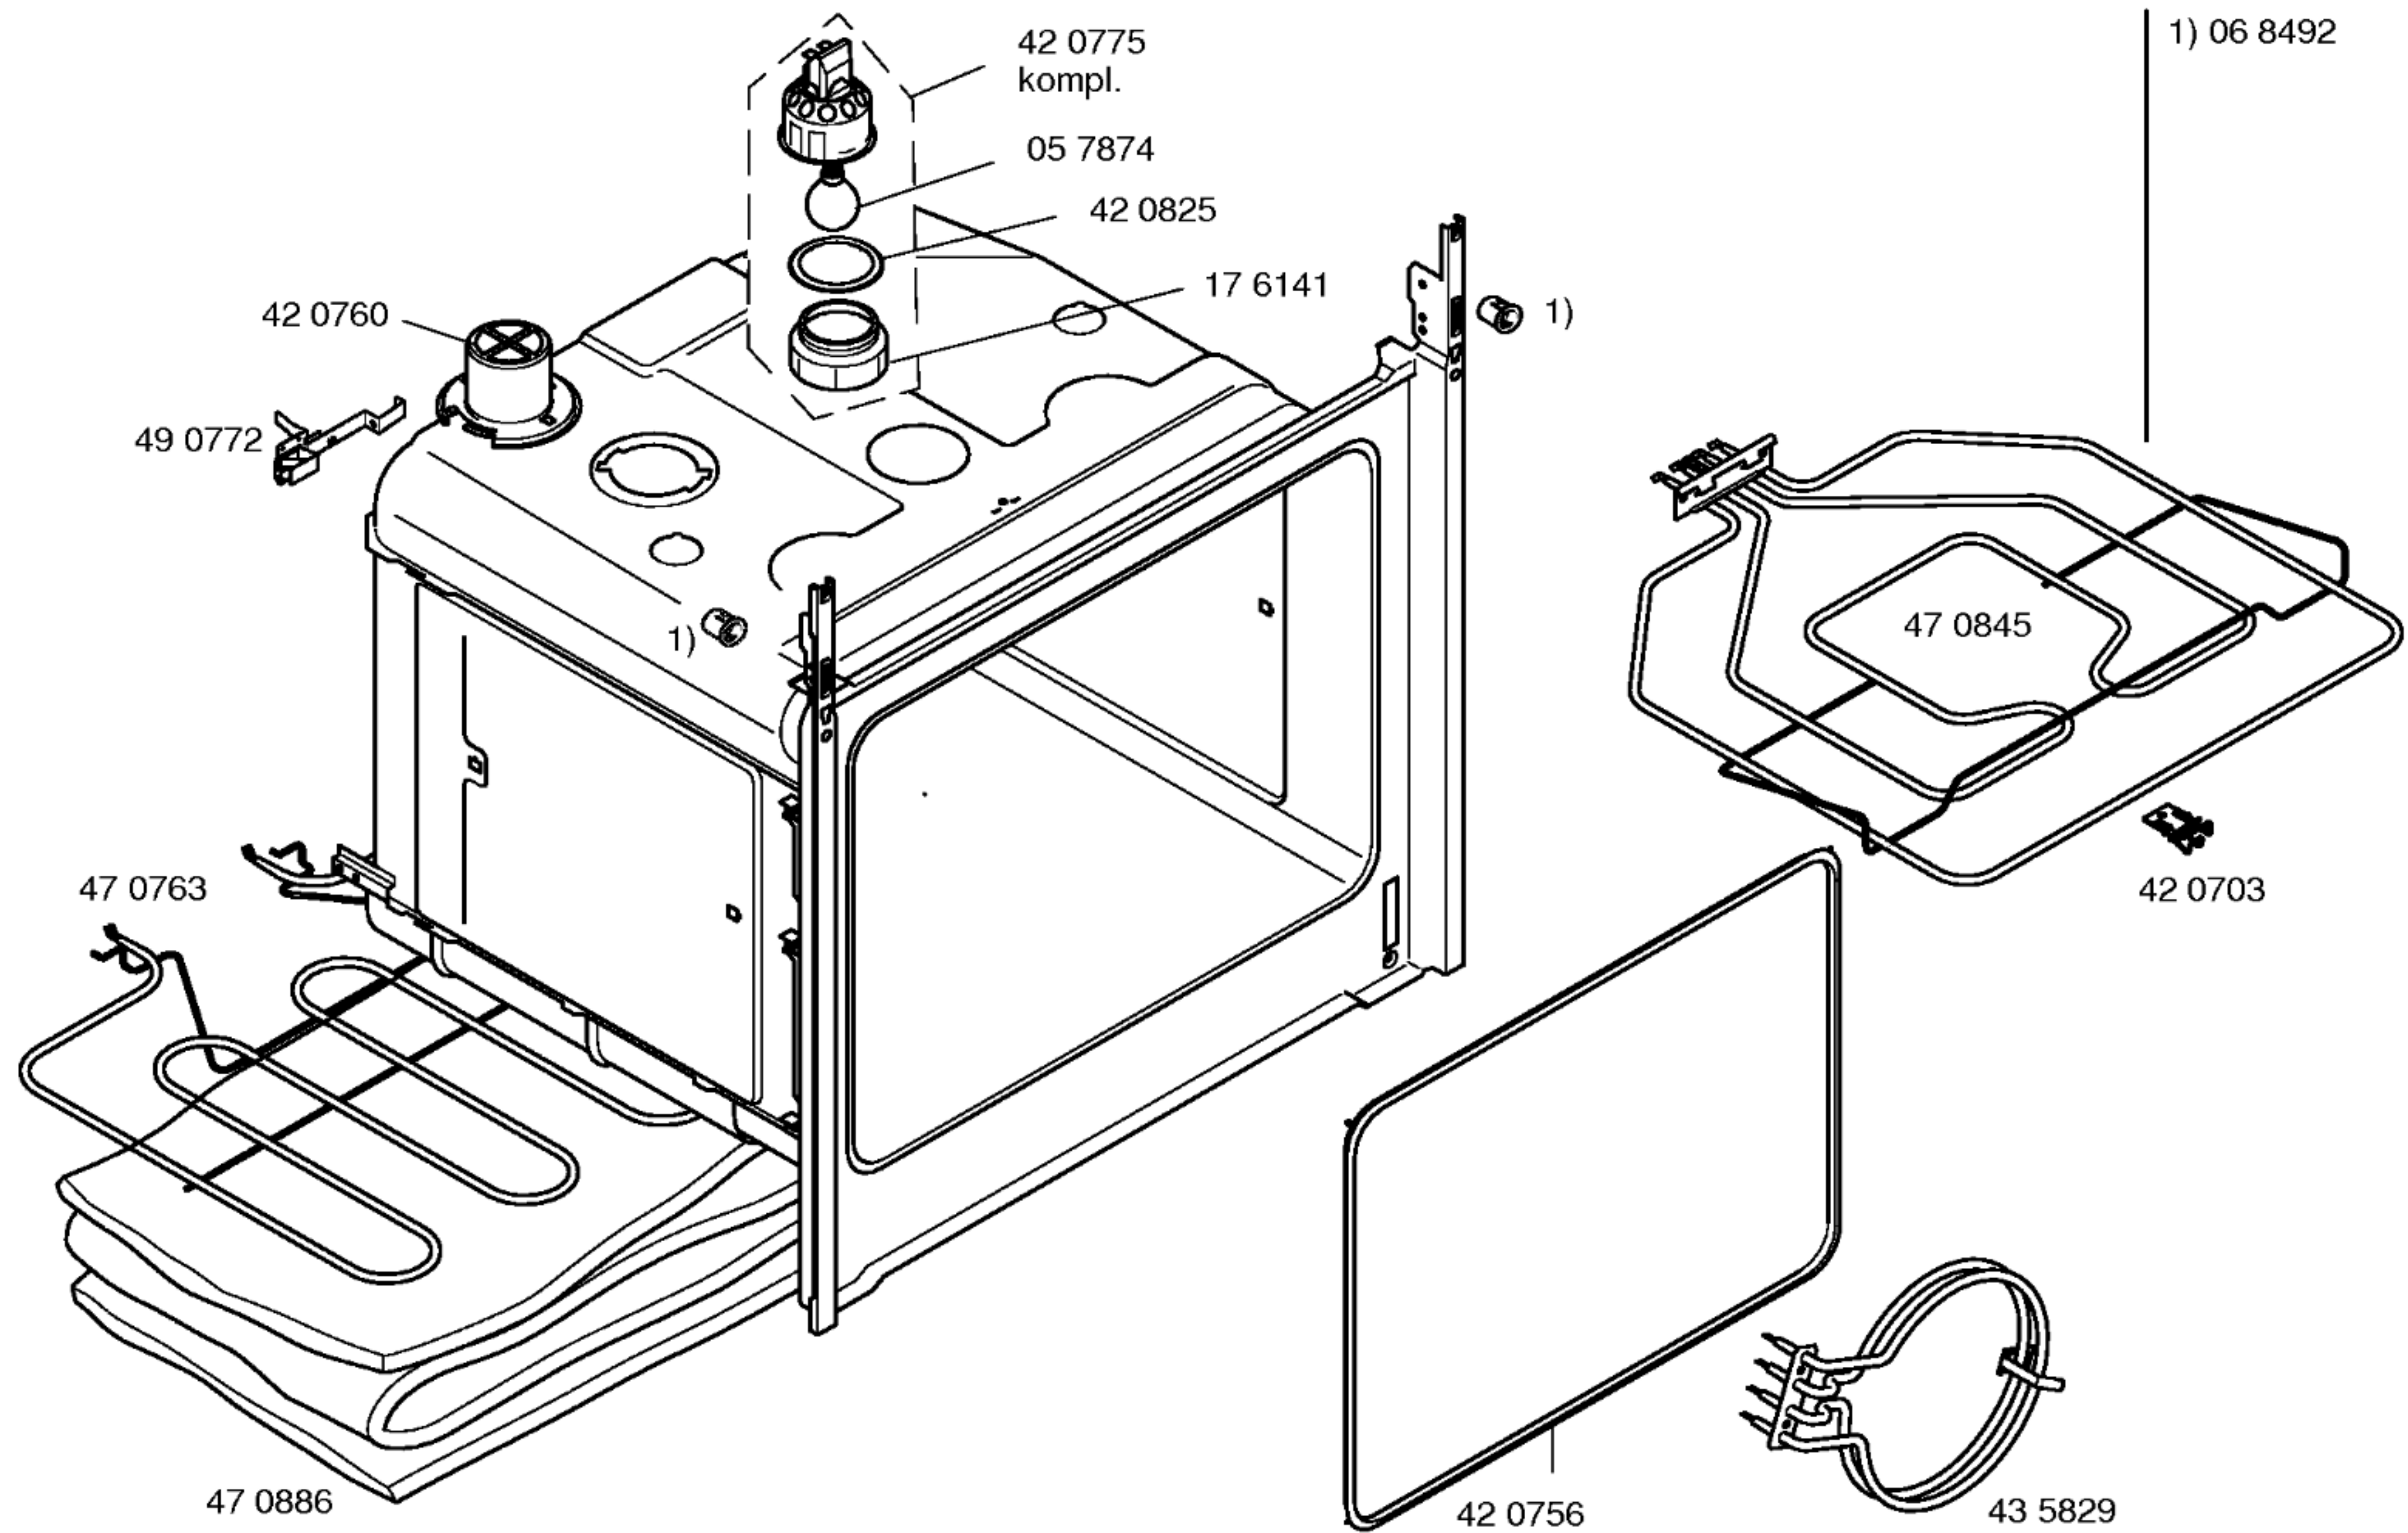

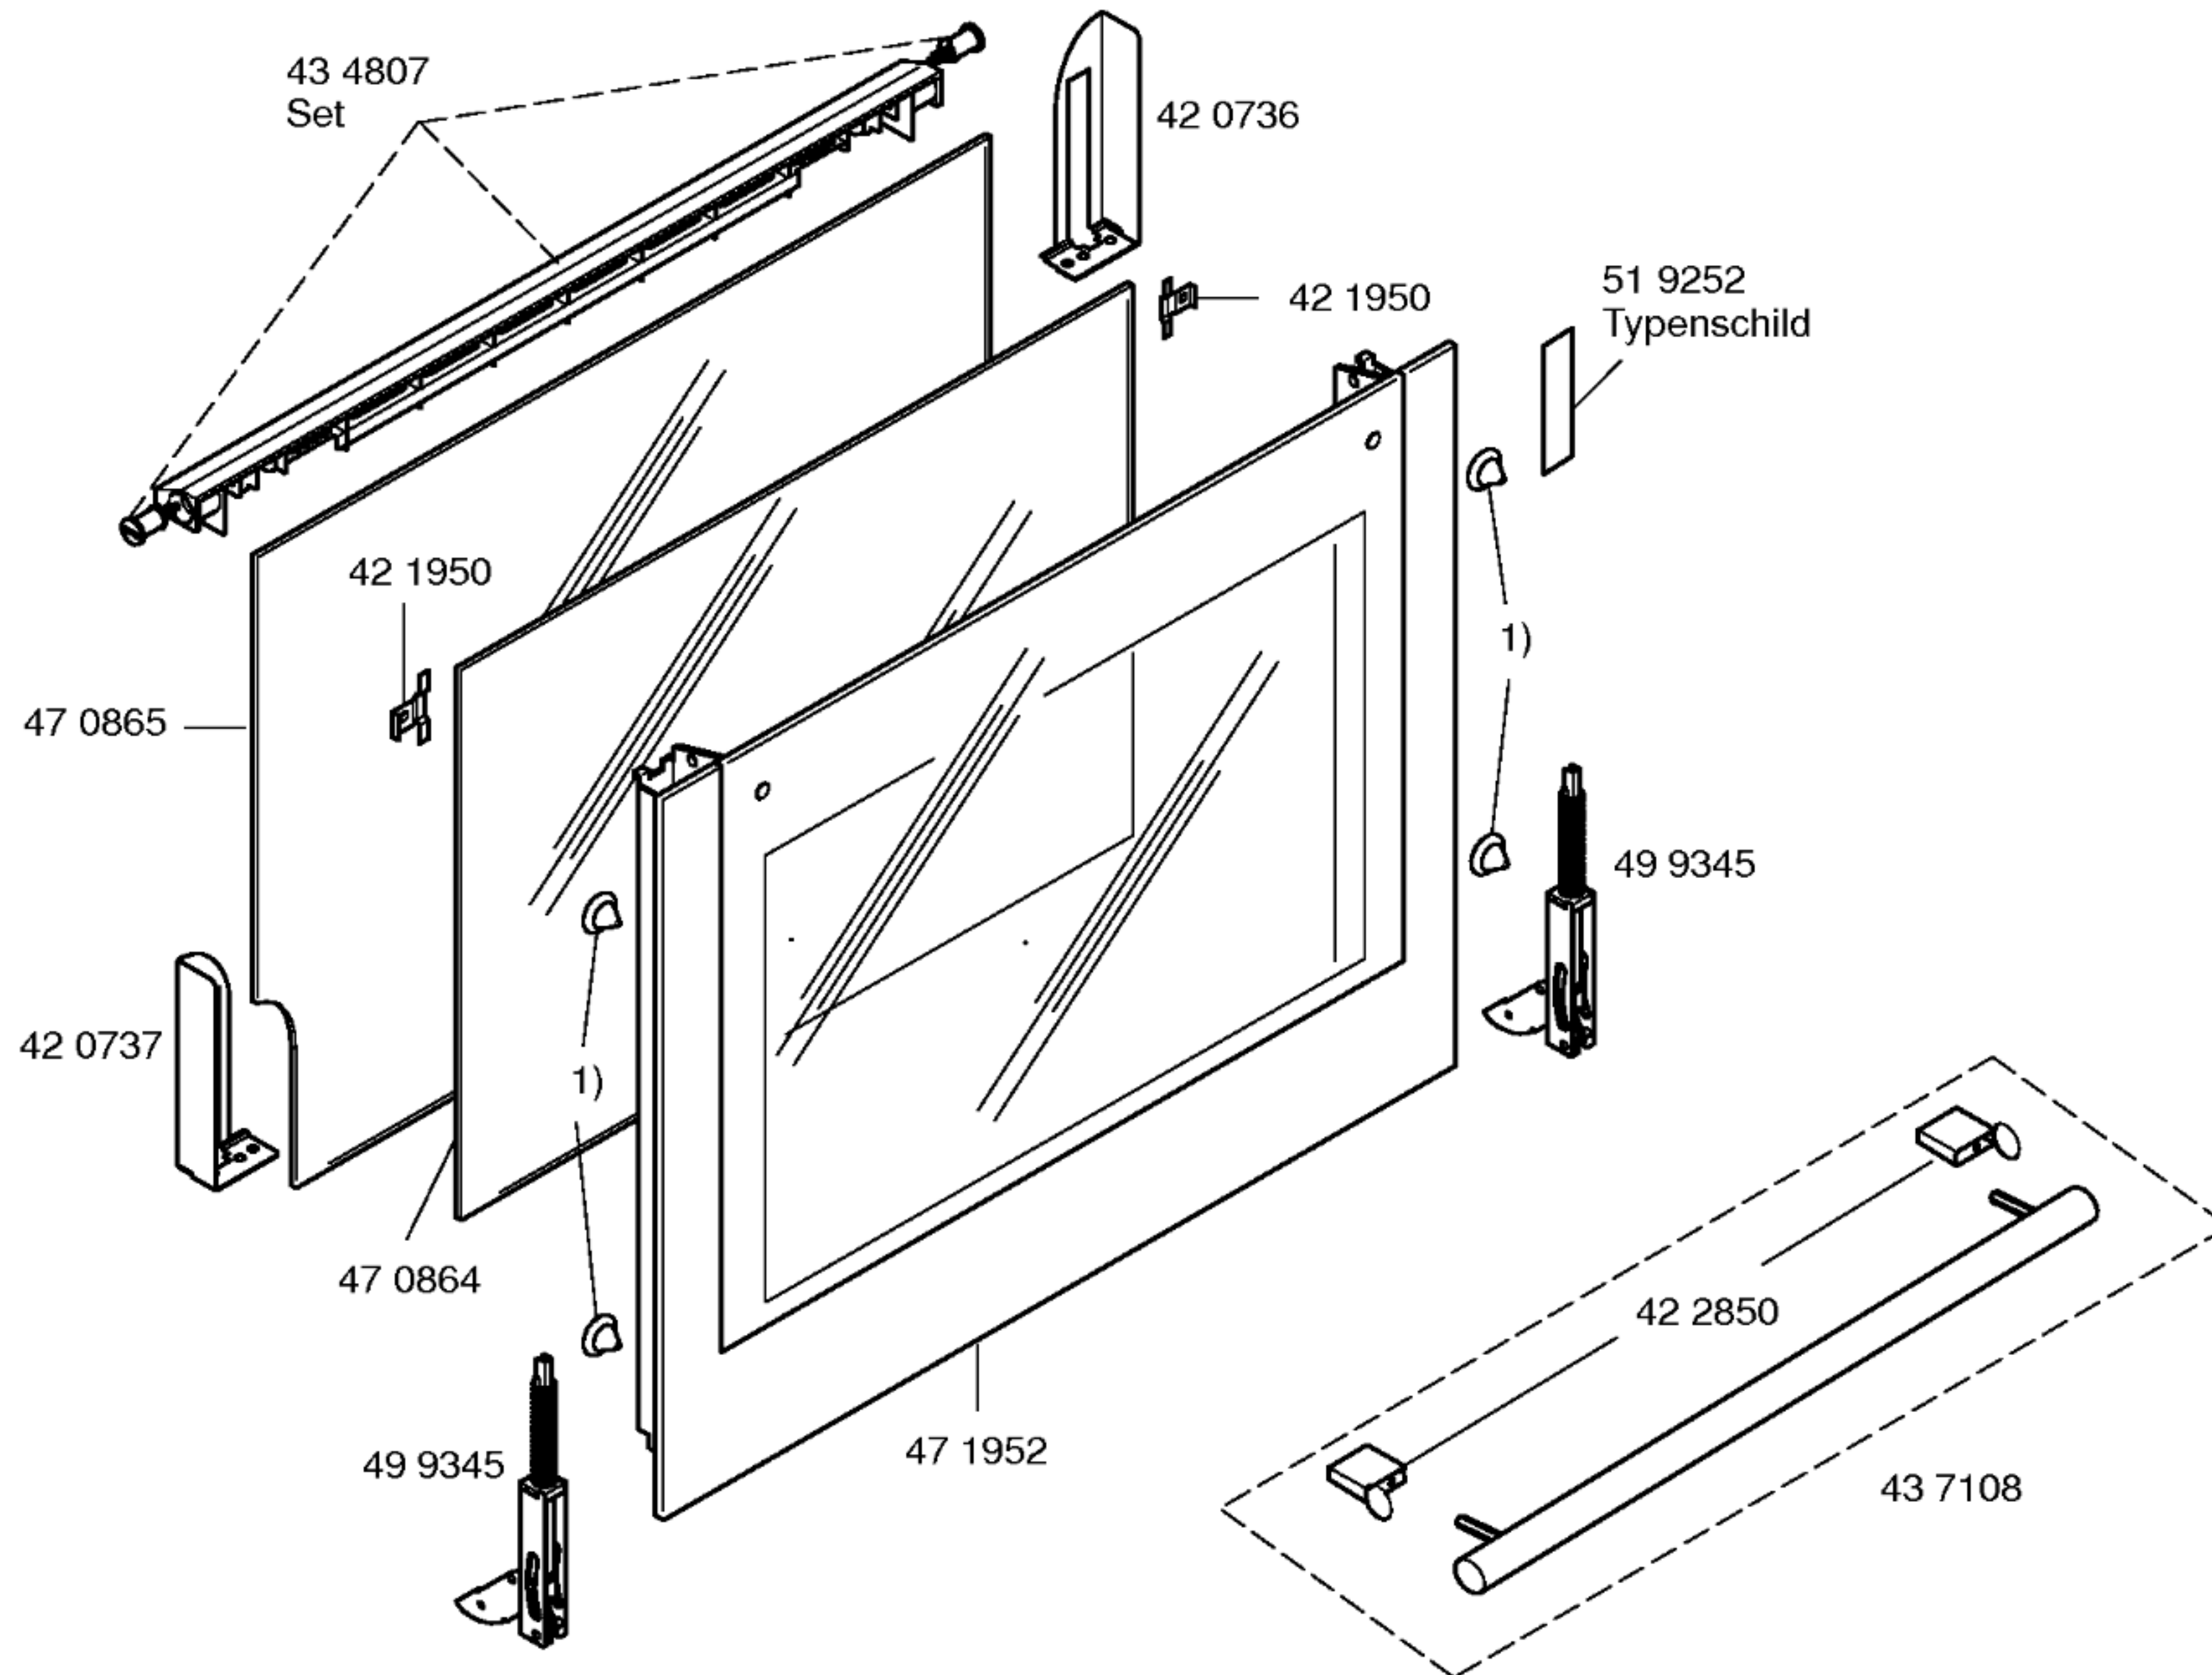

1) 42 0735

