 


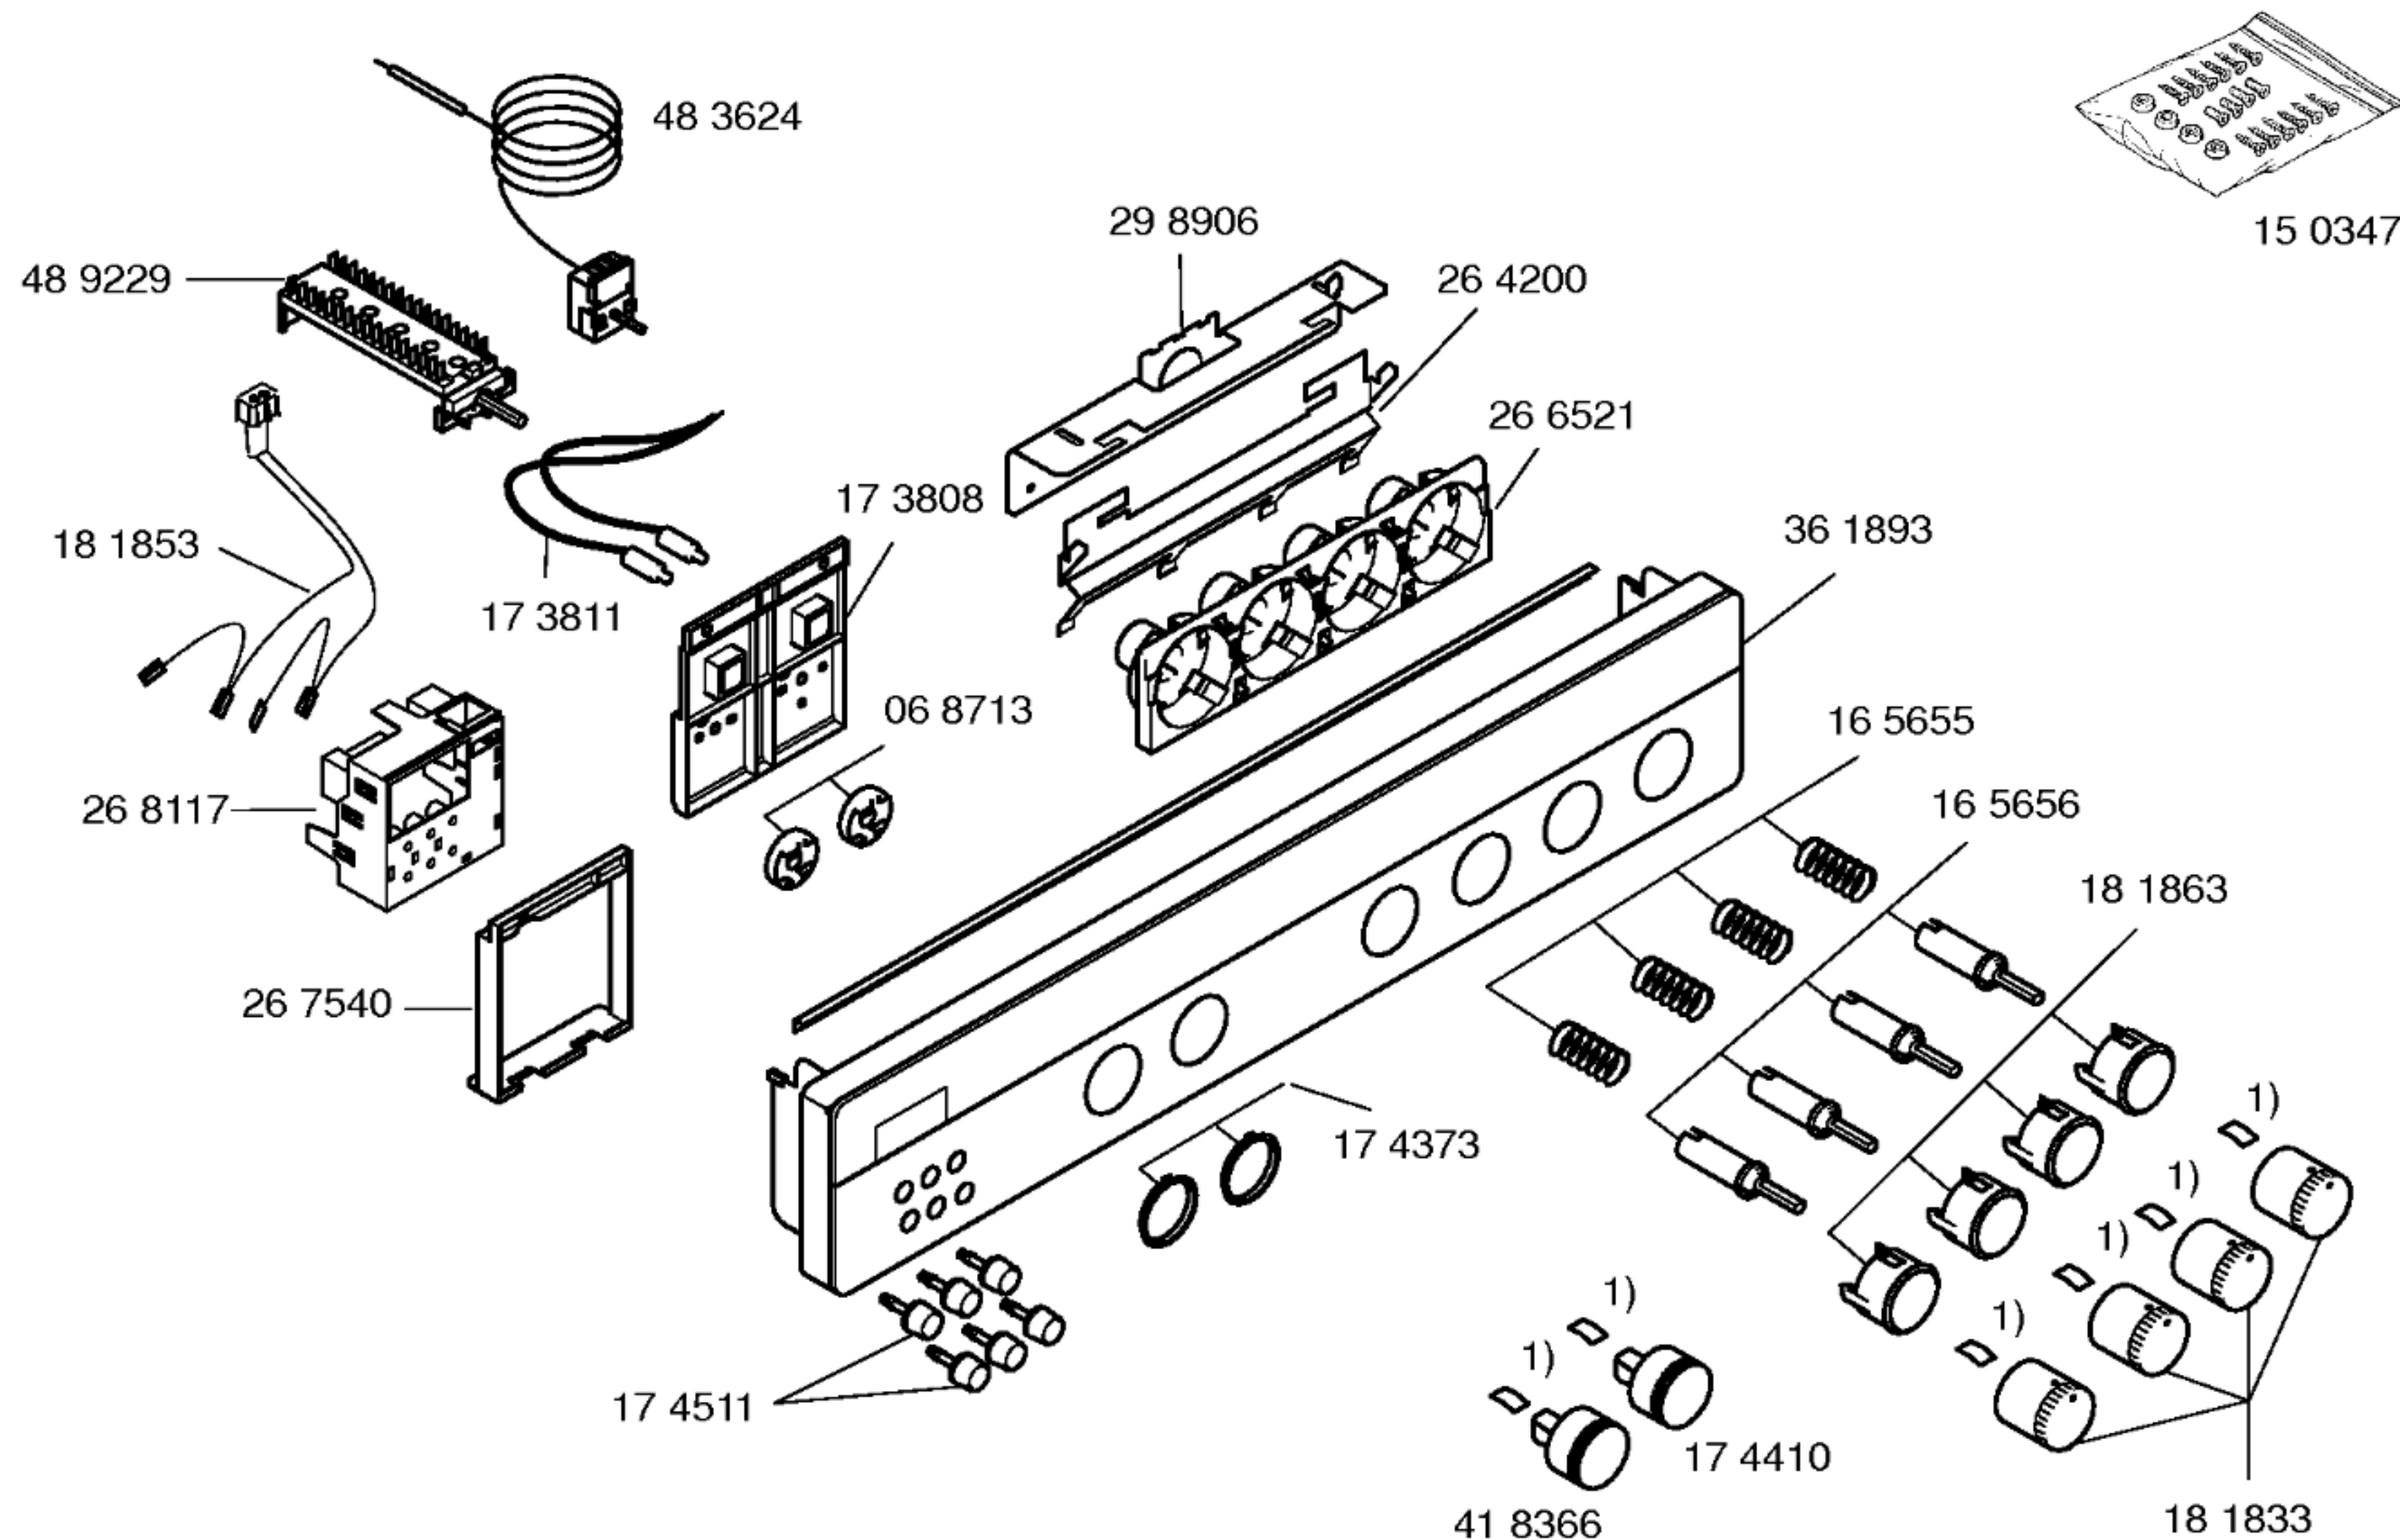

Gebrauchsanweisung

58 4116 (de)
58 4117 (en)
58 4118 (fr)
58 4119 (nl)
58 4120 (ru)
58 4121 (cs)

Montageanweisung


52 7698
(de,en,fr,it,nl,pt,es,el)

Zubehoer:

HZ24000
Backblech Alu
HZ24100
Backblech emailliert
HZ24200
Backblech (Auszug)
HZ24300
Universalpfanne
HZ24400
Kombirost
HZ22400
Einlegerost
HZ24700
Profi-Pfanne
HZ24800
Profipfanne + Rost
HZ24701
Deckel f. Profipfanne
HZ22500
Grillblech

 
1) 01 4254




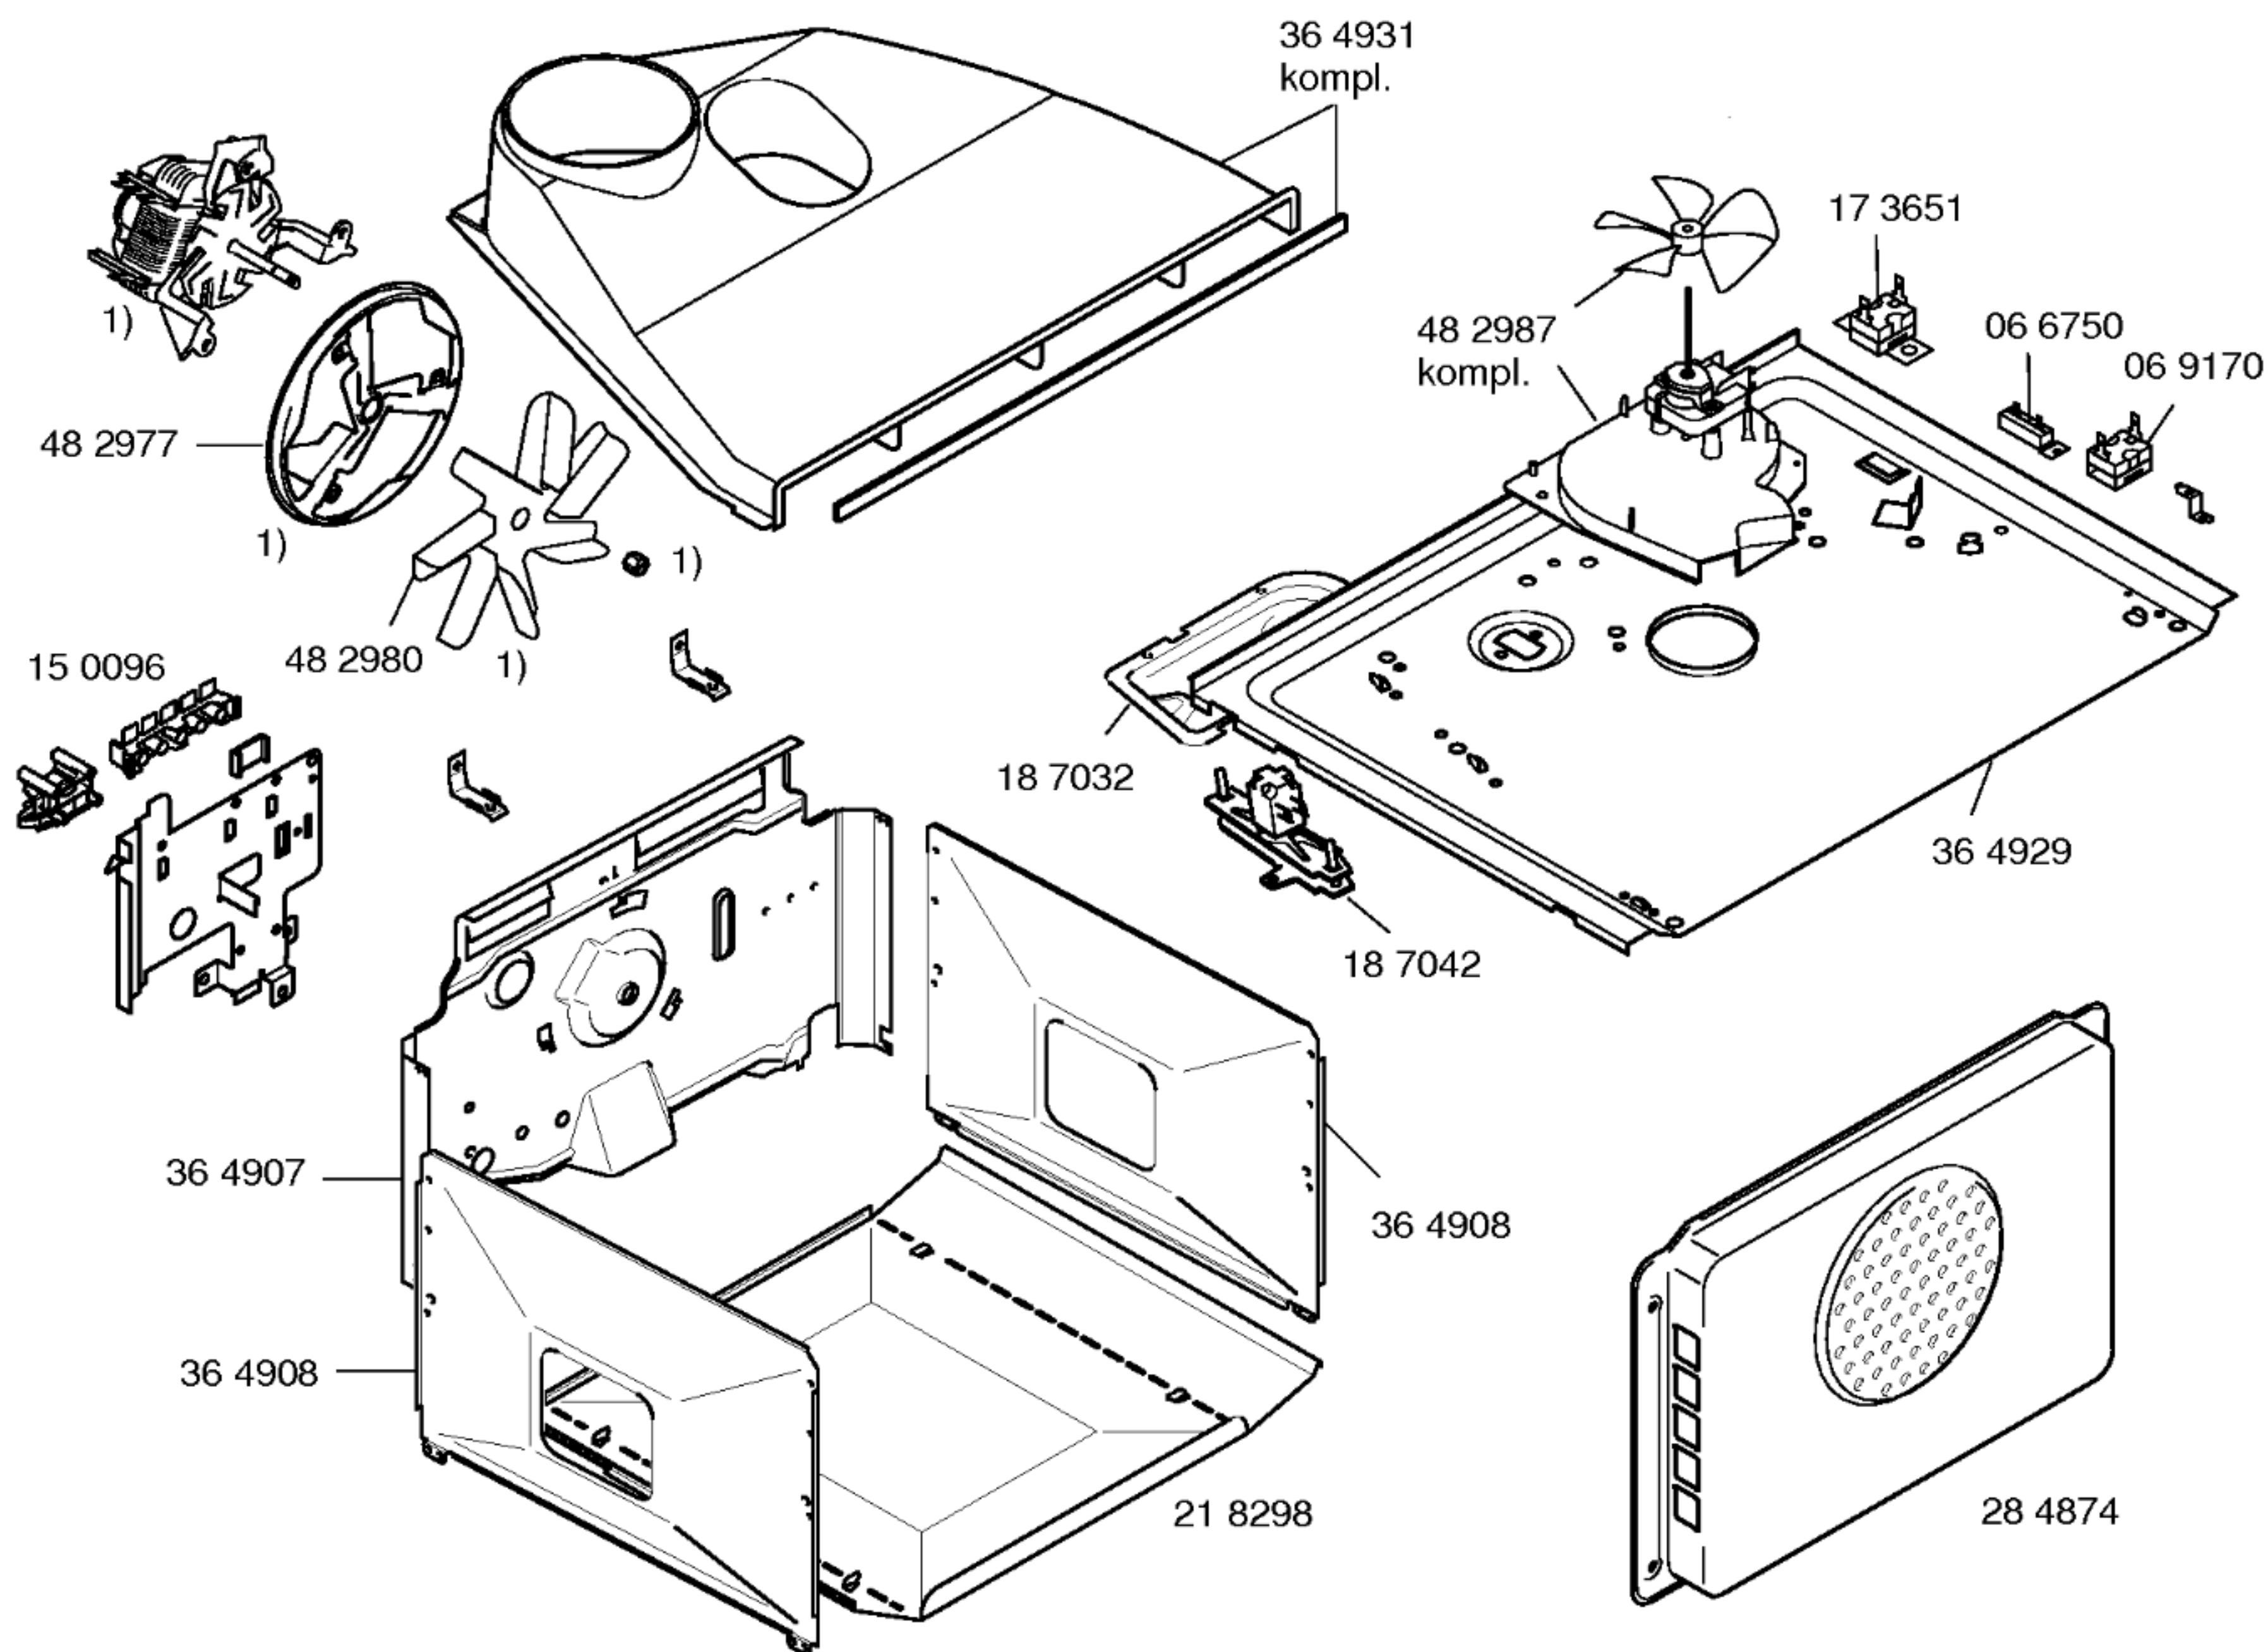

1) 48 2981
Set

  Zubehoer:
HZ9150
Glasbraeter
HZ26000
Metallbraeter
HZ26001
Backform
Auslaufsicher

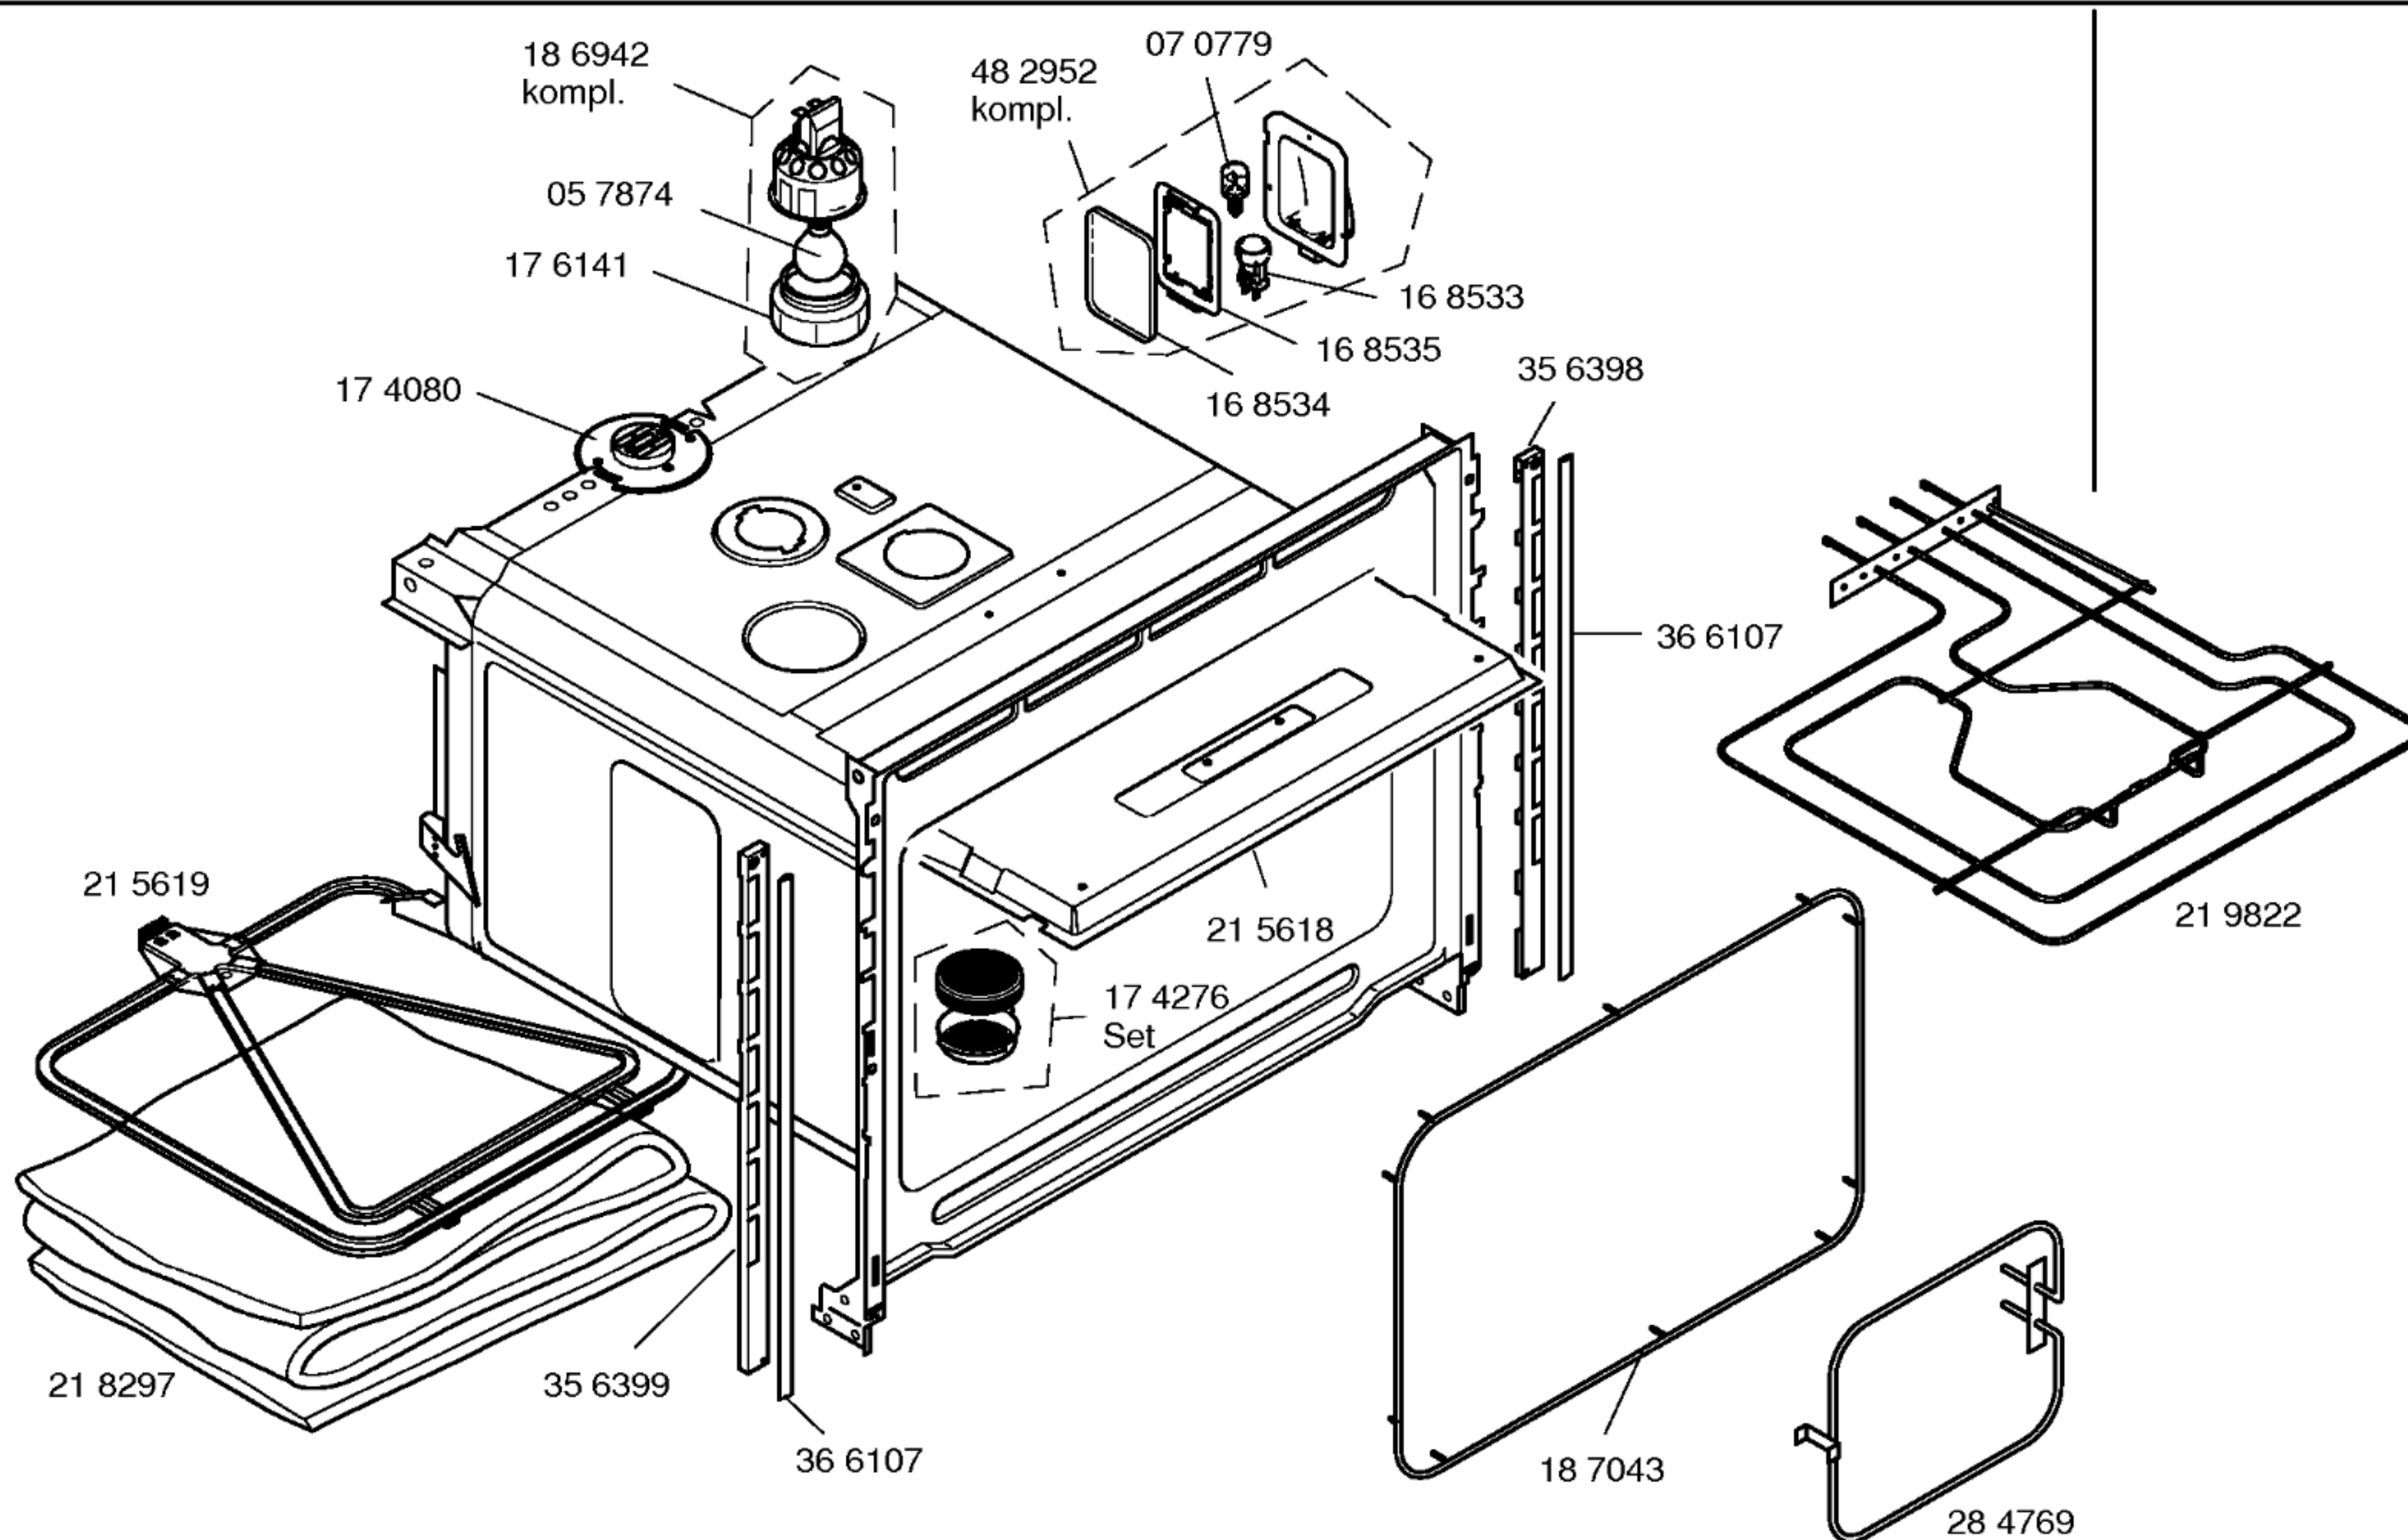

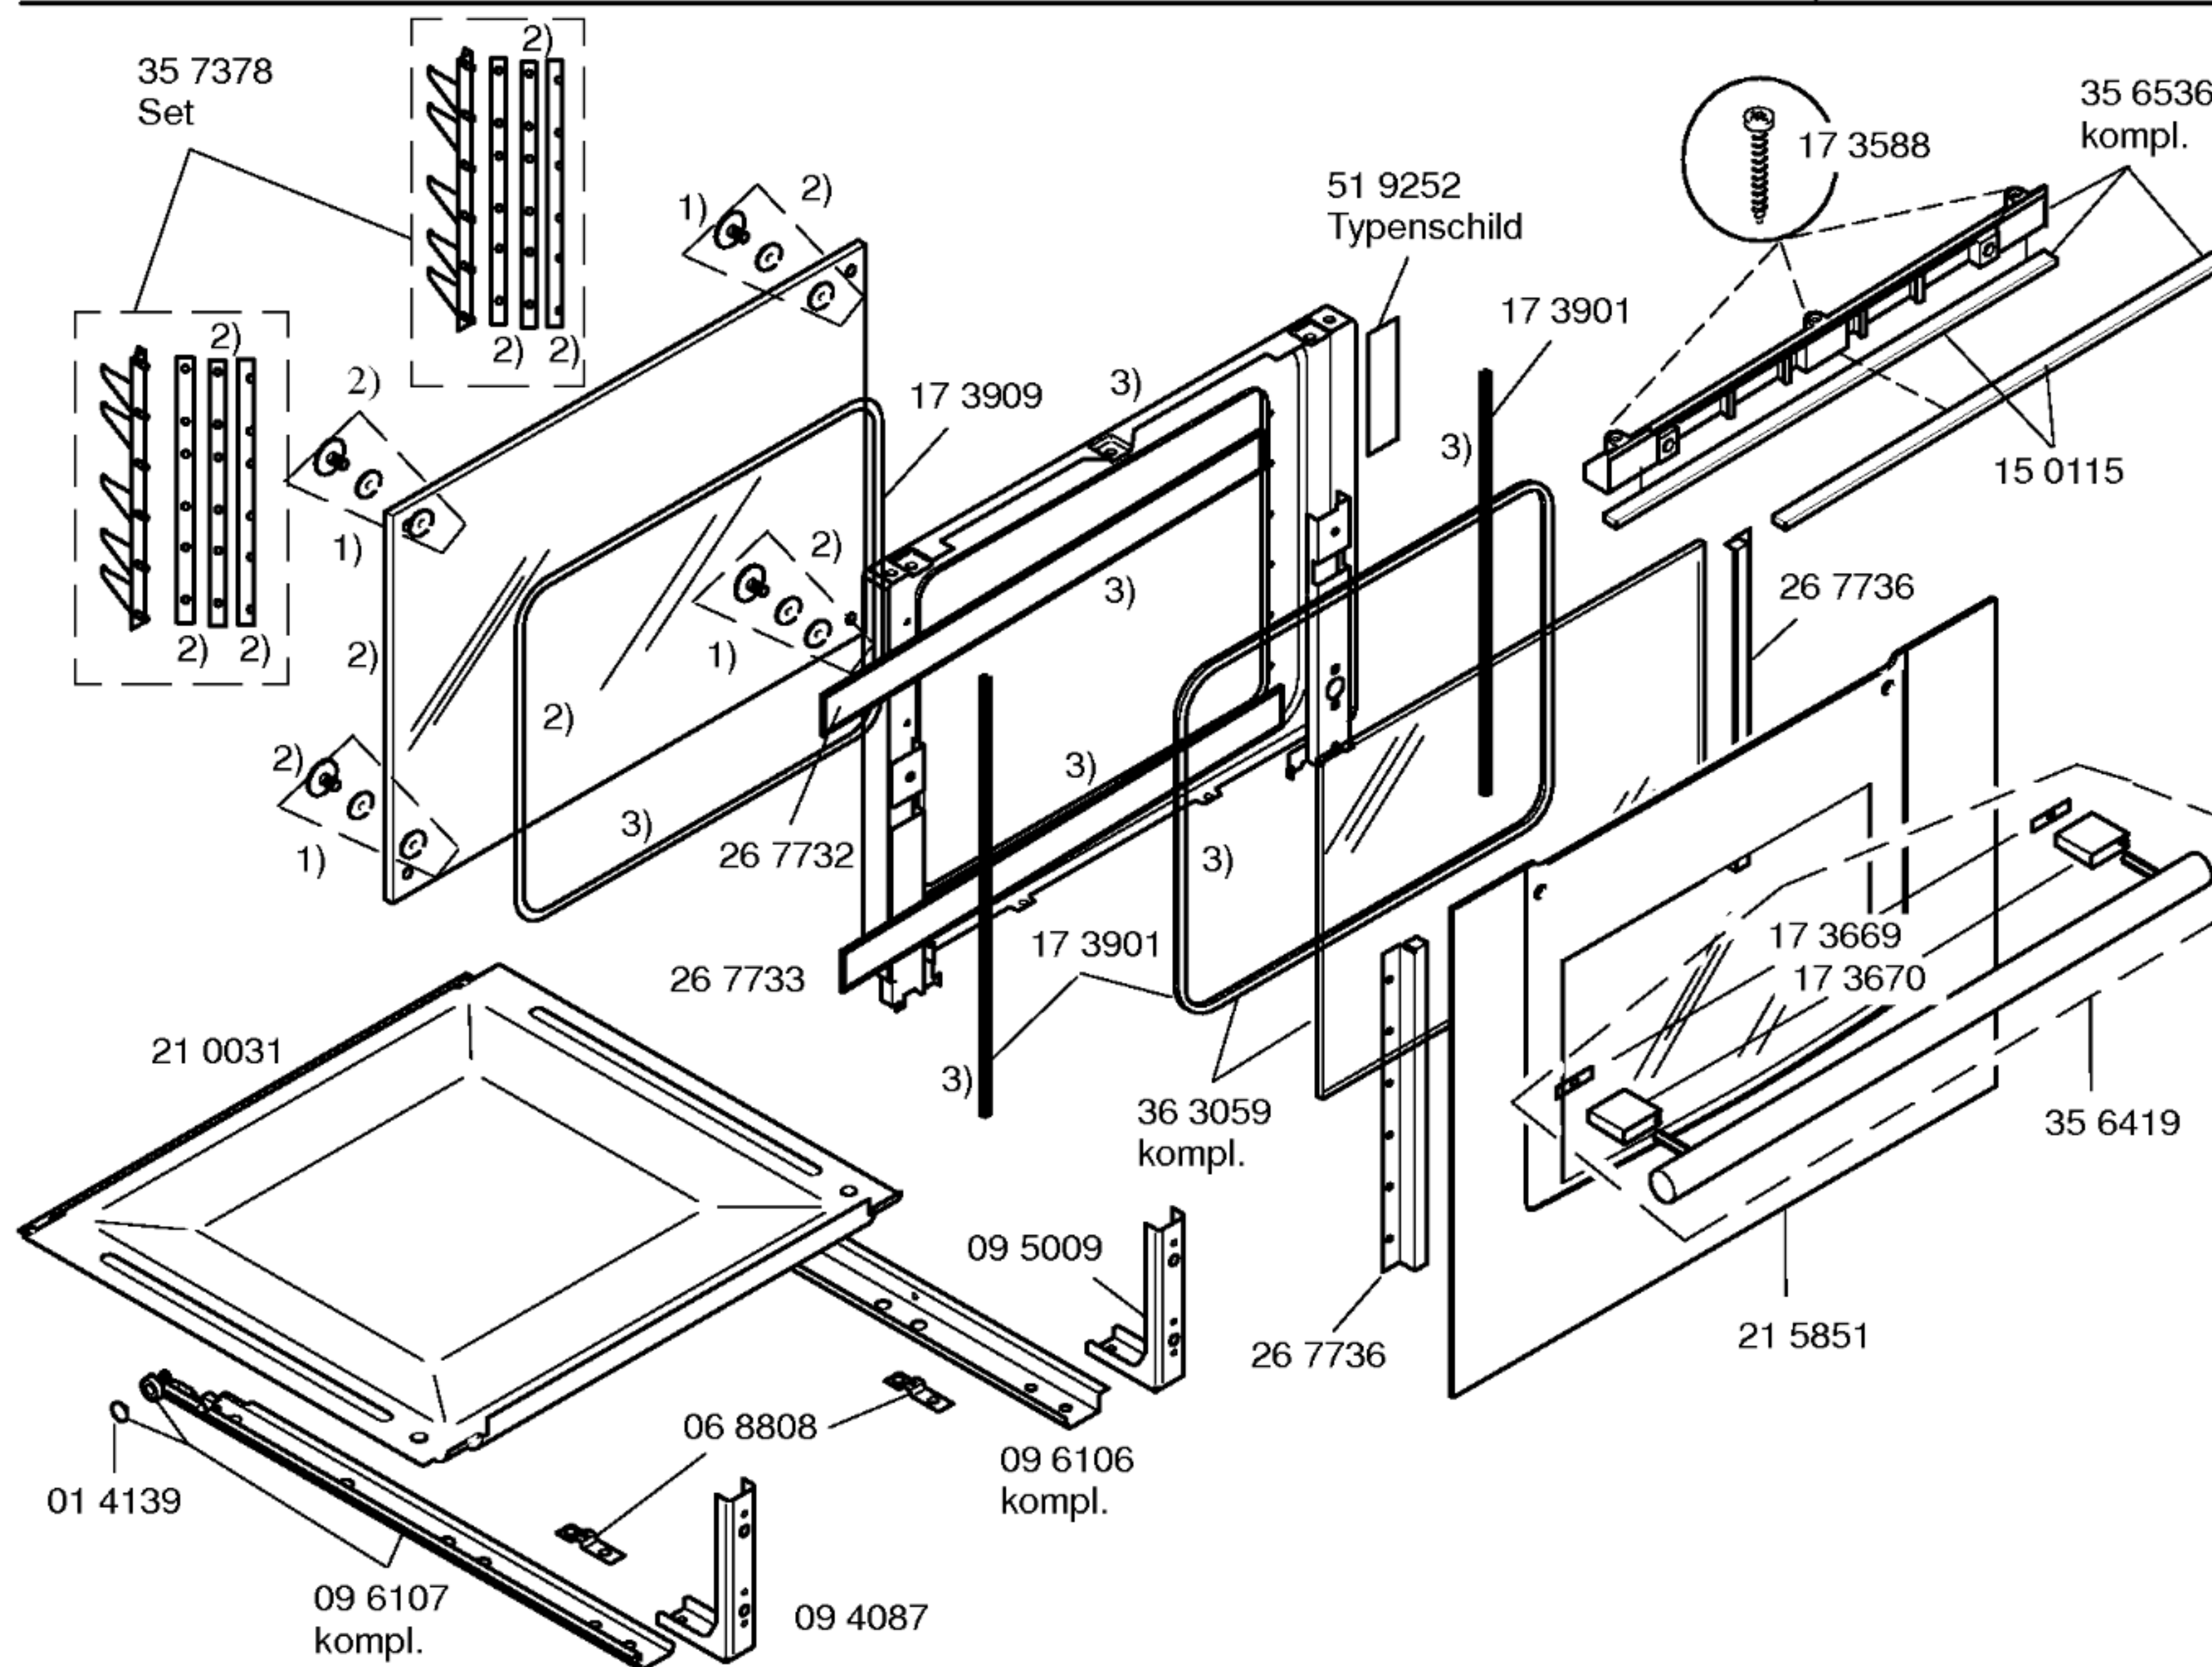

- 1) 17 4791 Set
- 2) 21 5852 Set
- 3) 21 5832 Set

