 
 


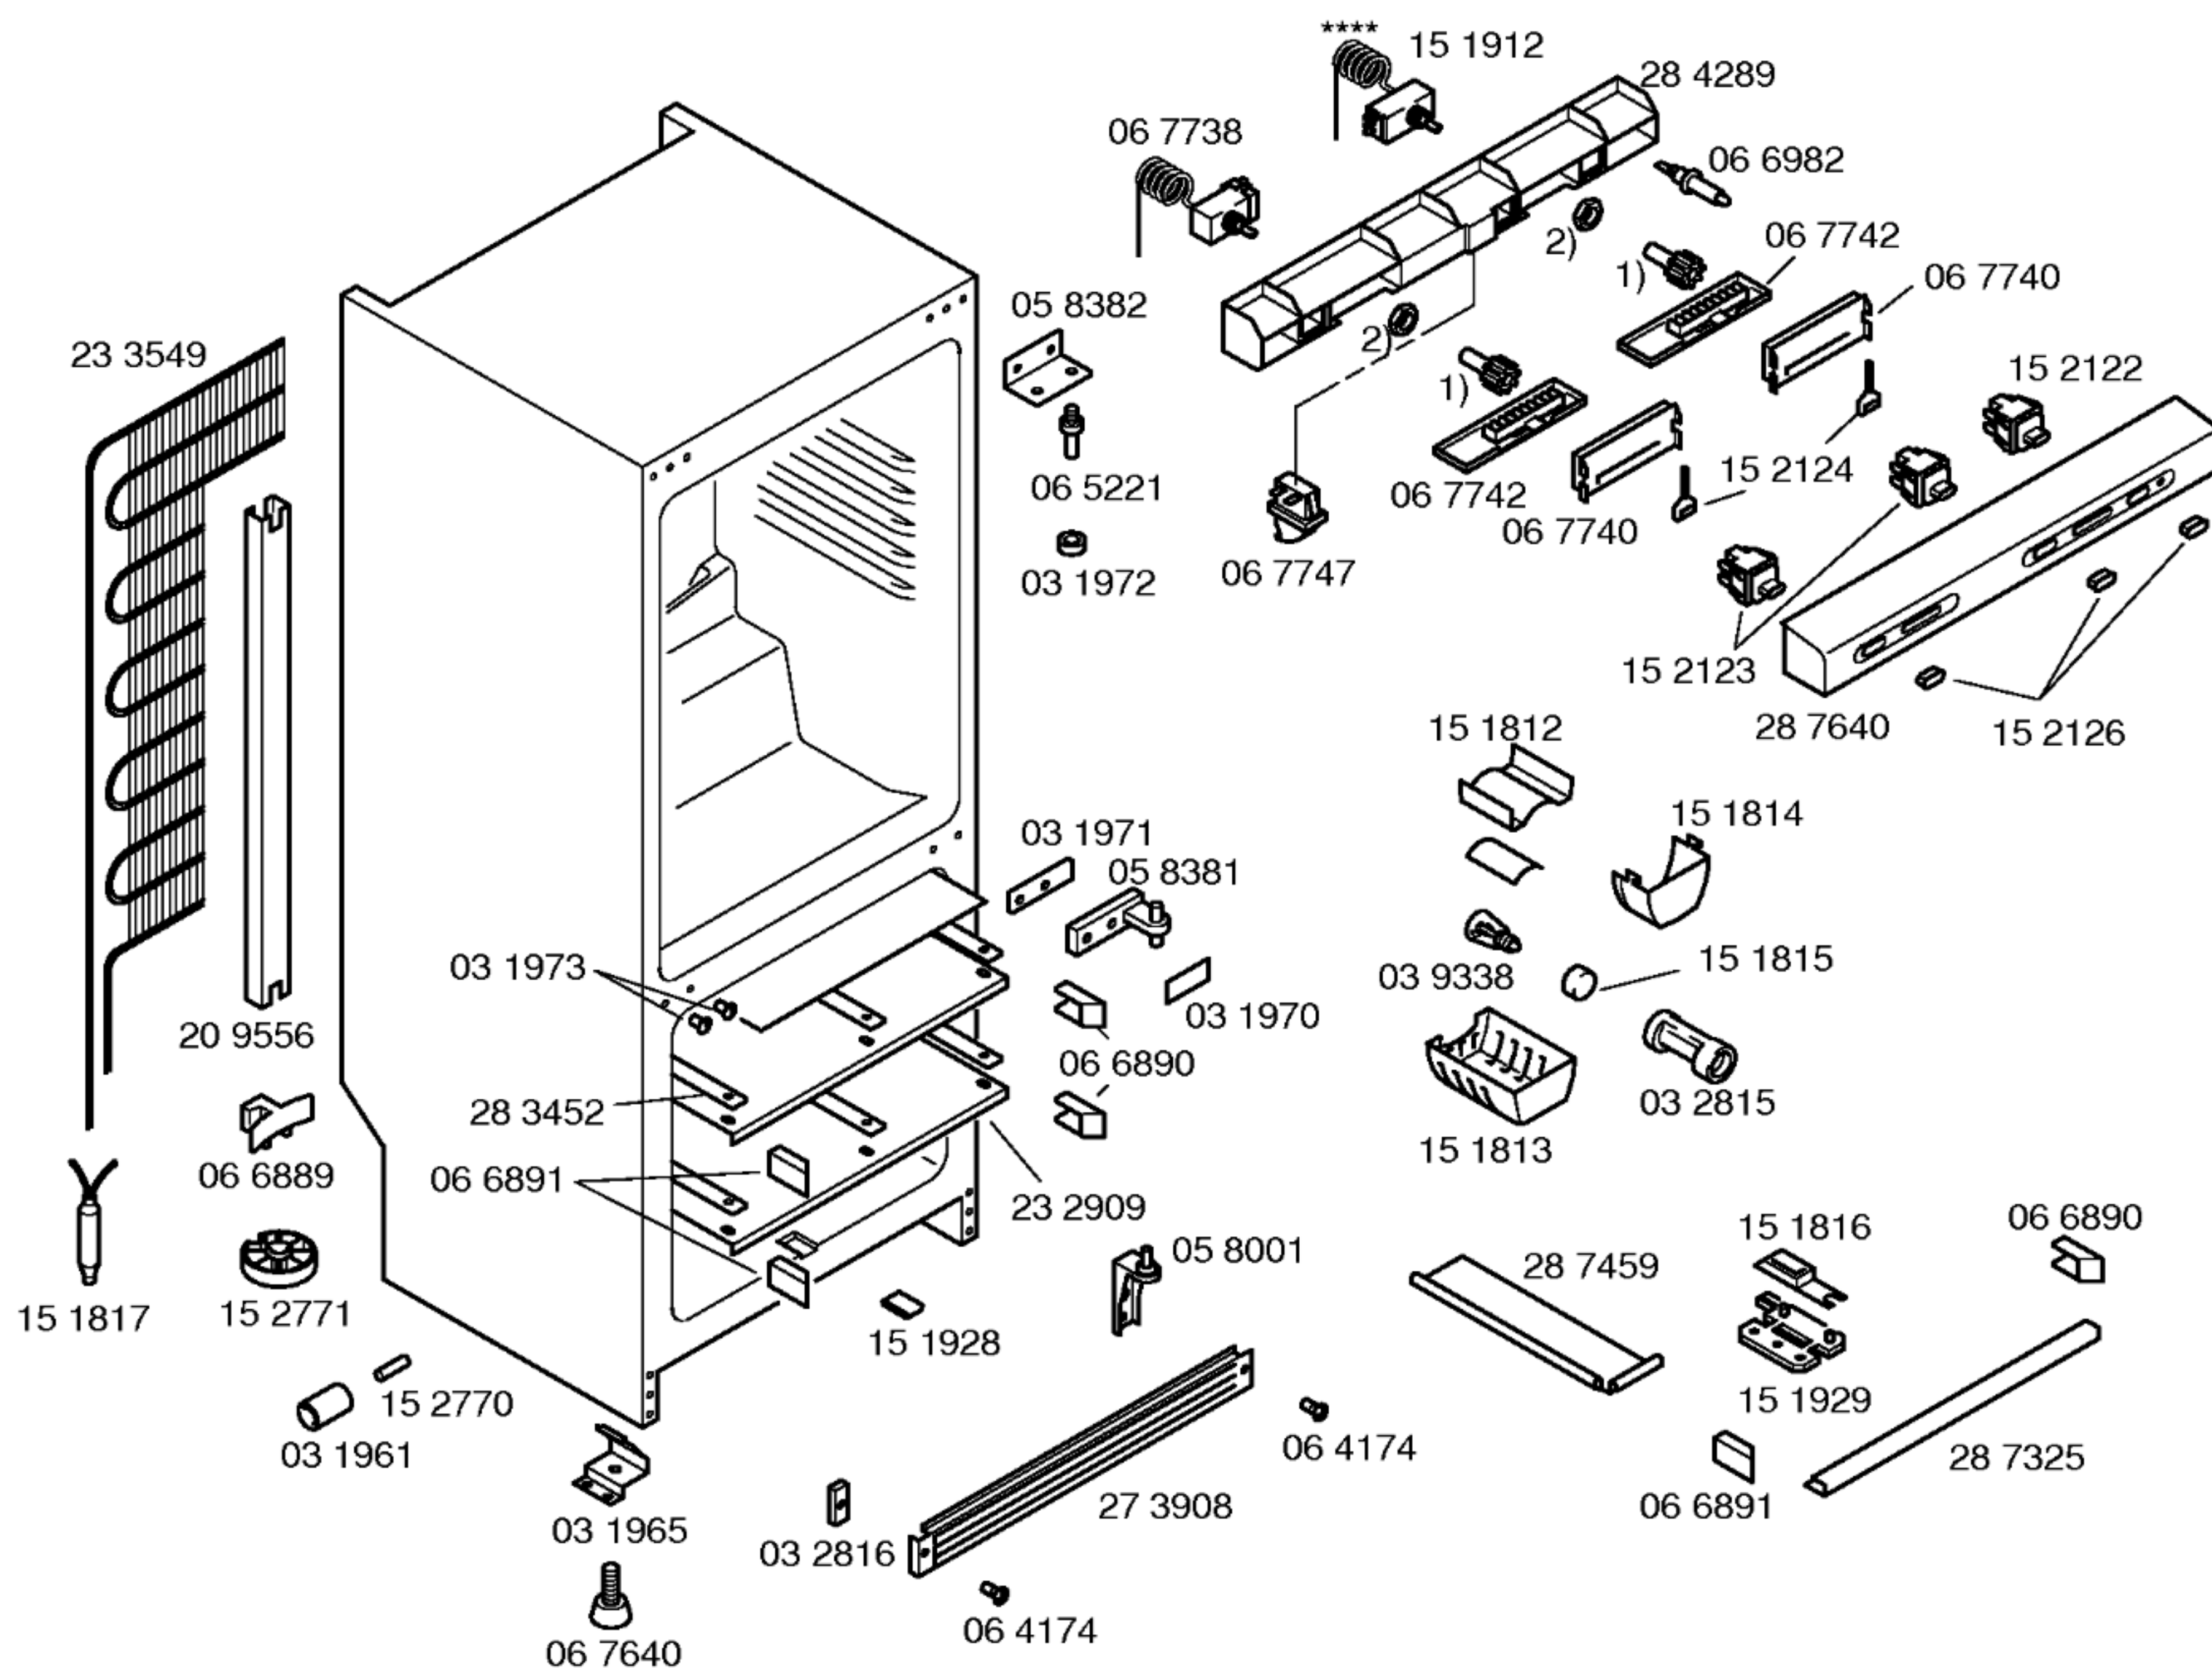 


Libro de instrucciones
51 7462
(es,pt,en,fr,nl,gr)

Libro de instrucciones
del dispensador
51 6722
(es,pt,en,fr,nl,gr)

1) 06 7746
2) 03 3055

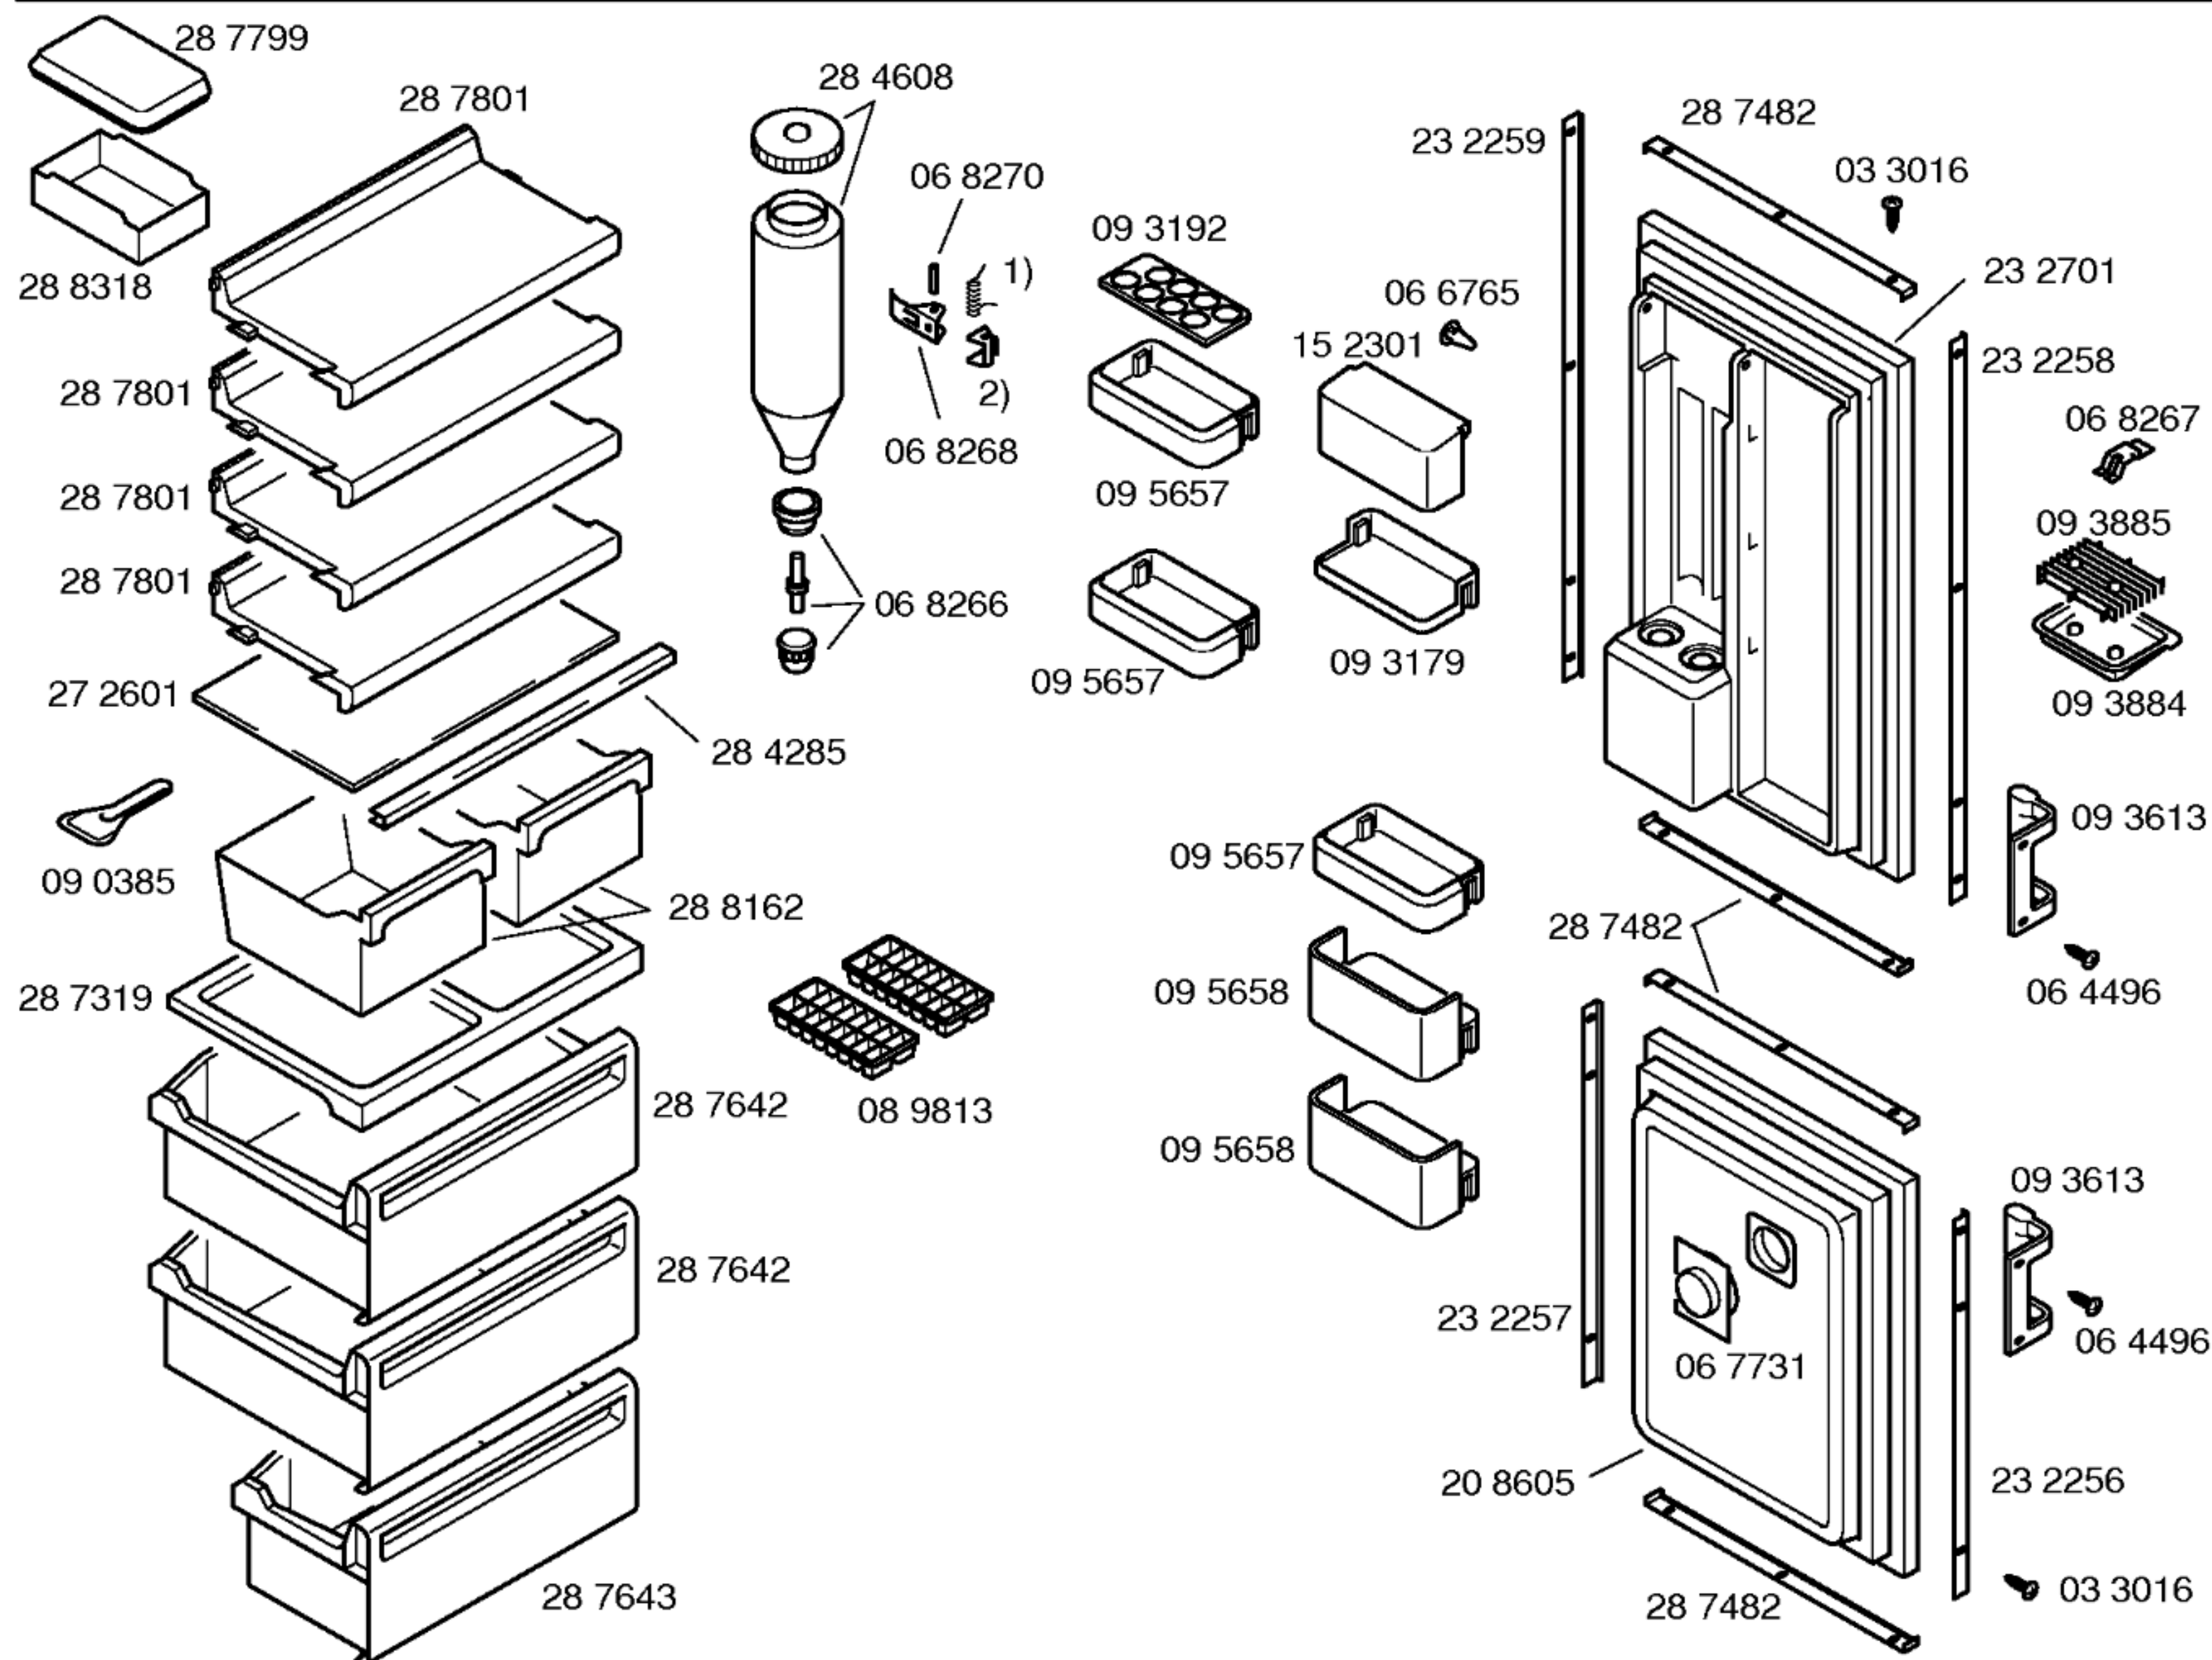

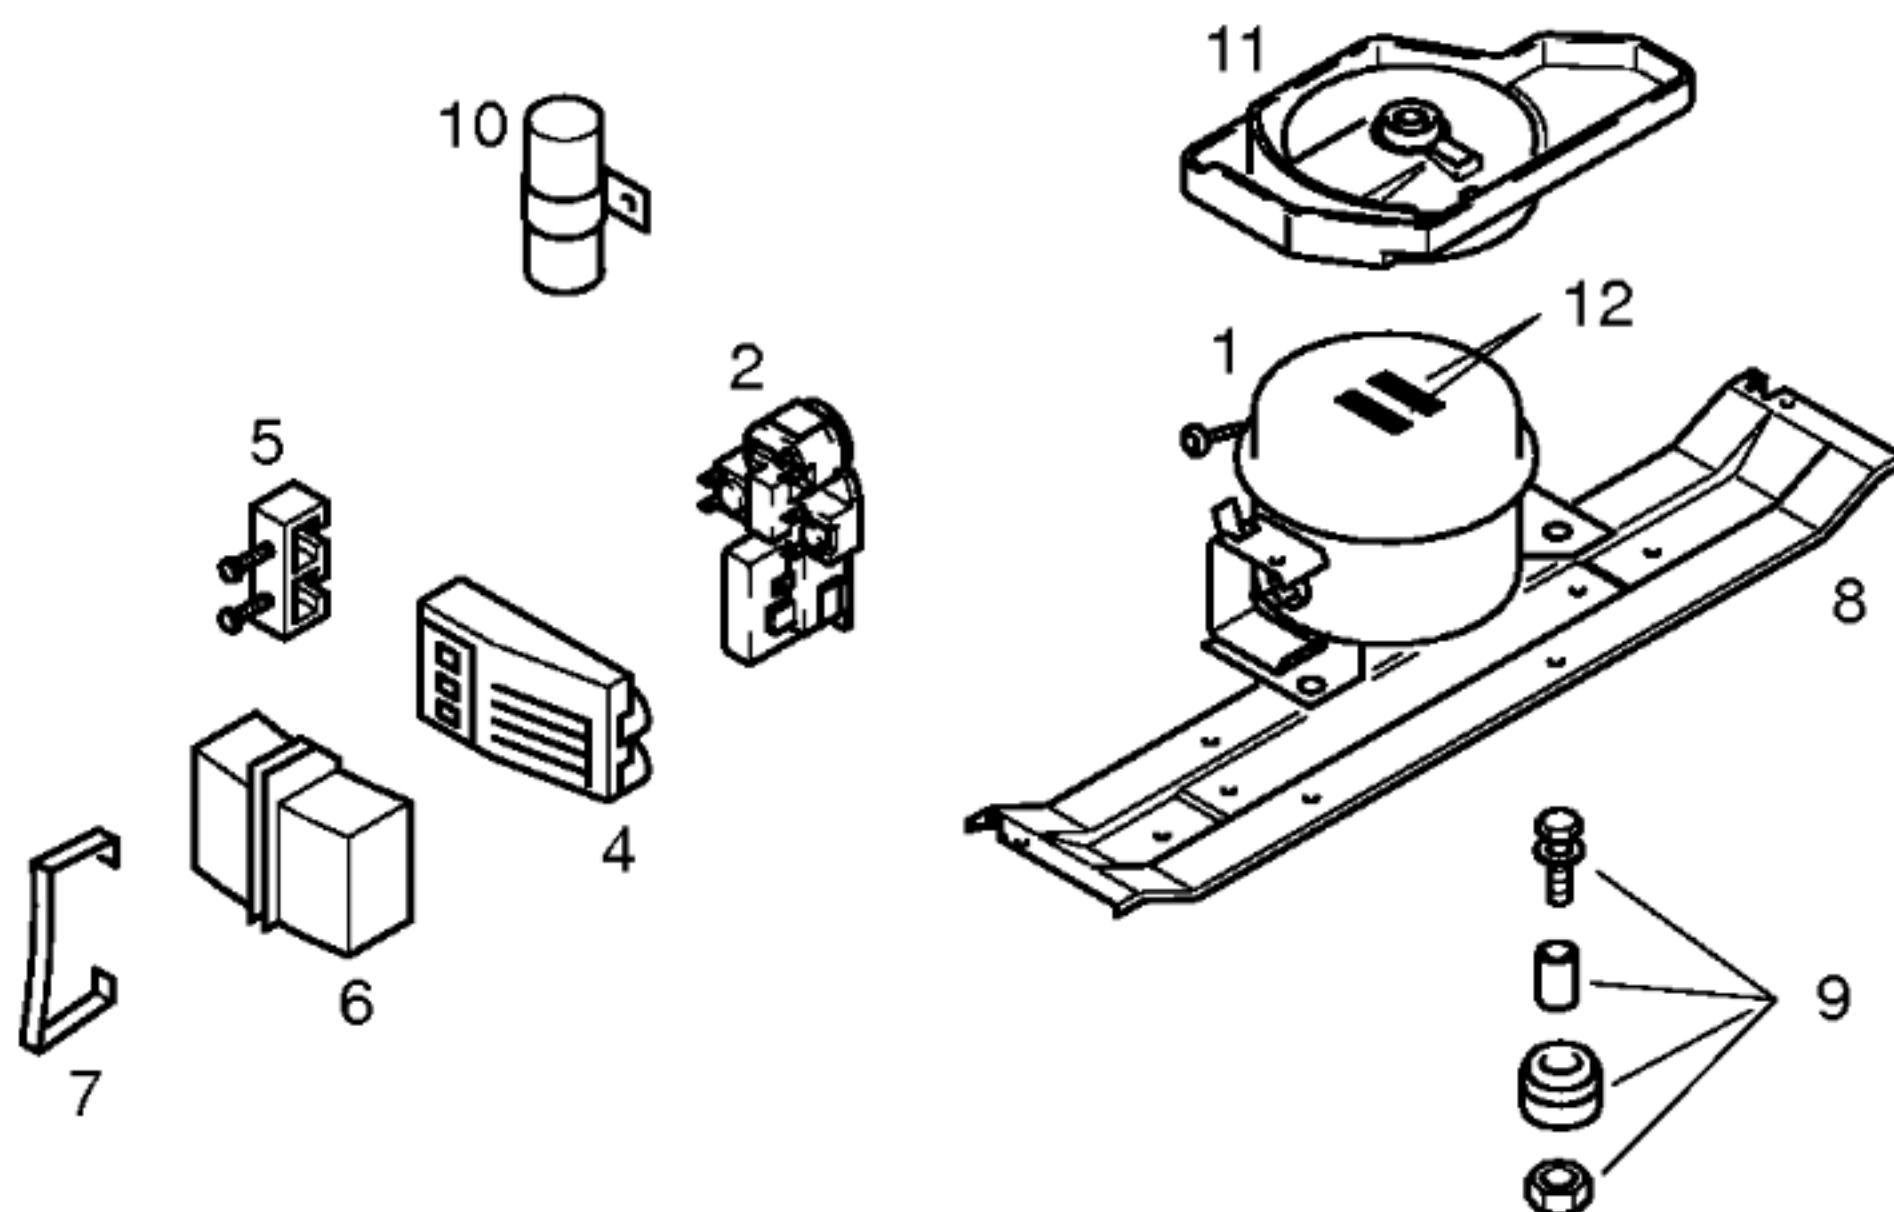

Pos.	U. Hermética	U.Hermetica	ZEM
	GL45AA	GL45AA	GL45AA
1	14 1374	14 1374	14 1374
2	15 5130	15 5130	16 1555
3			
4			
5			
6			
7			
8	28 0162	28 0162	28 0162
9	05 0166	05 0166	05 0166
10			
11	09 6864		
12			
13			

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	U.Hermetica GL45AA	ZEM GL45AA	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/.. Valeurs de commutation/Desconex. (..abtaven' od)	DANFOSS 077B62 MIN. MAX +6° -13° -28° ..alarm'	RANCO K54 L1924 MIN. MAX -14° -24 -21° -31° -15°	
Füllmenge/Fill. quantity/Charge/Carga 134a	g	60	125
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W	87	87
Heizung/Heater/Chaufrage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	Ohm W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión	Ohm V		
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			