


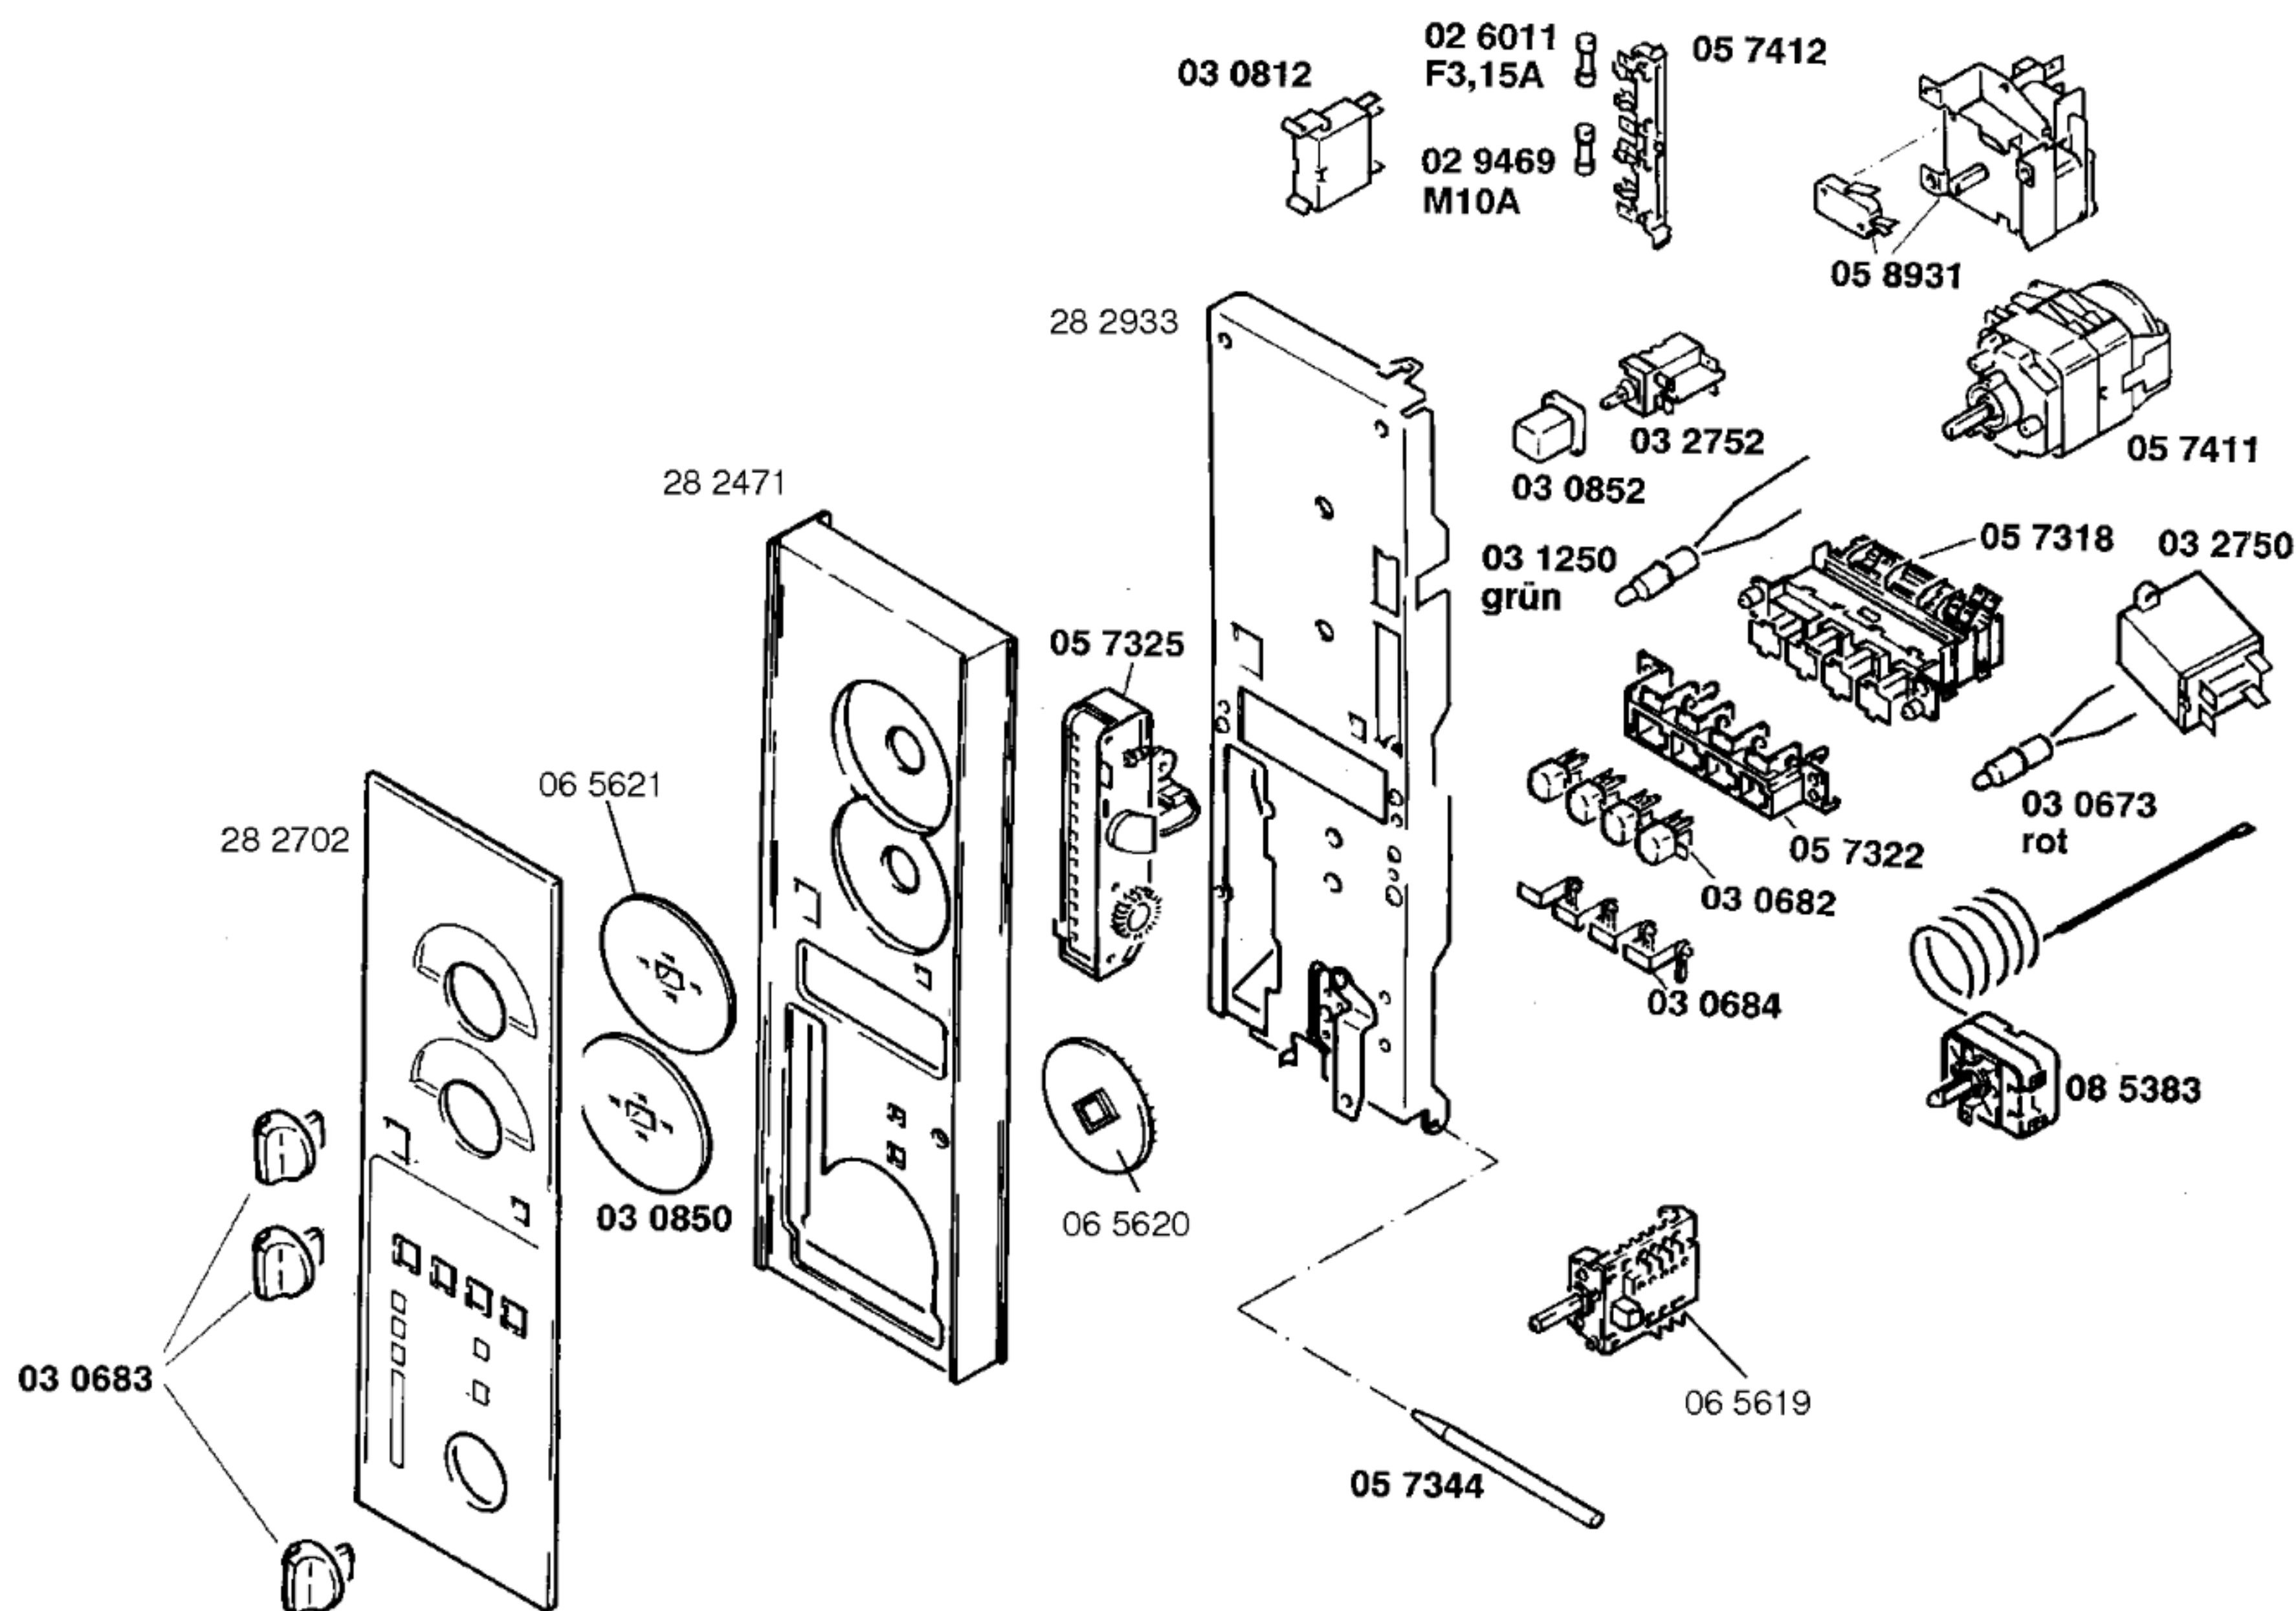

Gebrauchsanweisung
51 5854
(D,GB,F,I,NL,E)

Tips und Rezepte
51 5848
(F)
51 5849
(NL)

Zubehör:

HZ67020
Einbaurahmen


HZ67720
Abdeckung, kratzfest

HZ8056
Glaspfanne

HZ8055
Alu-Backblech

HZ67615
Universalpfanne

HZ9150
Glasbräter

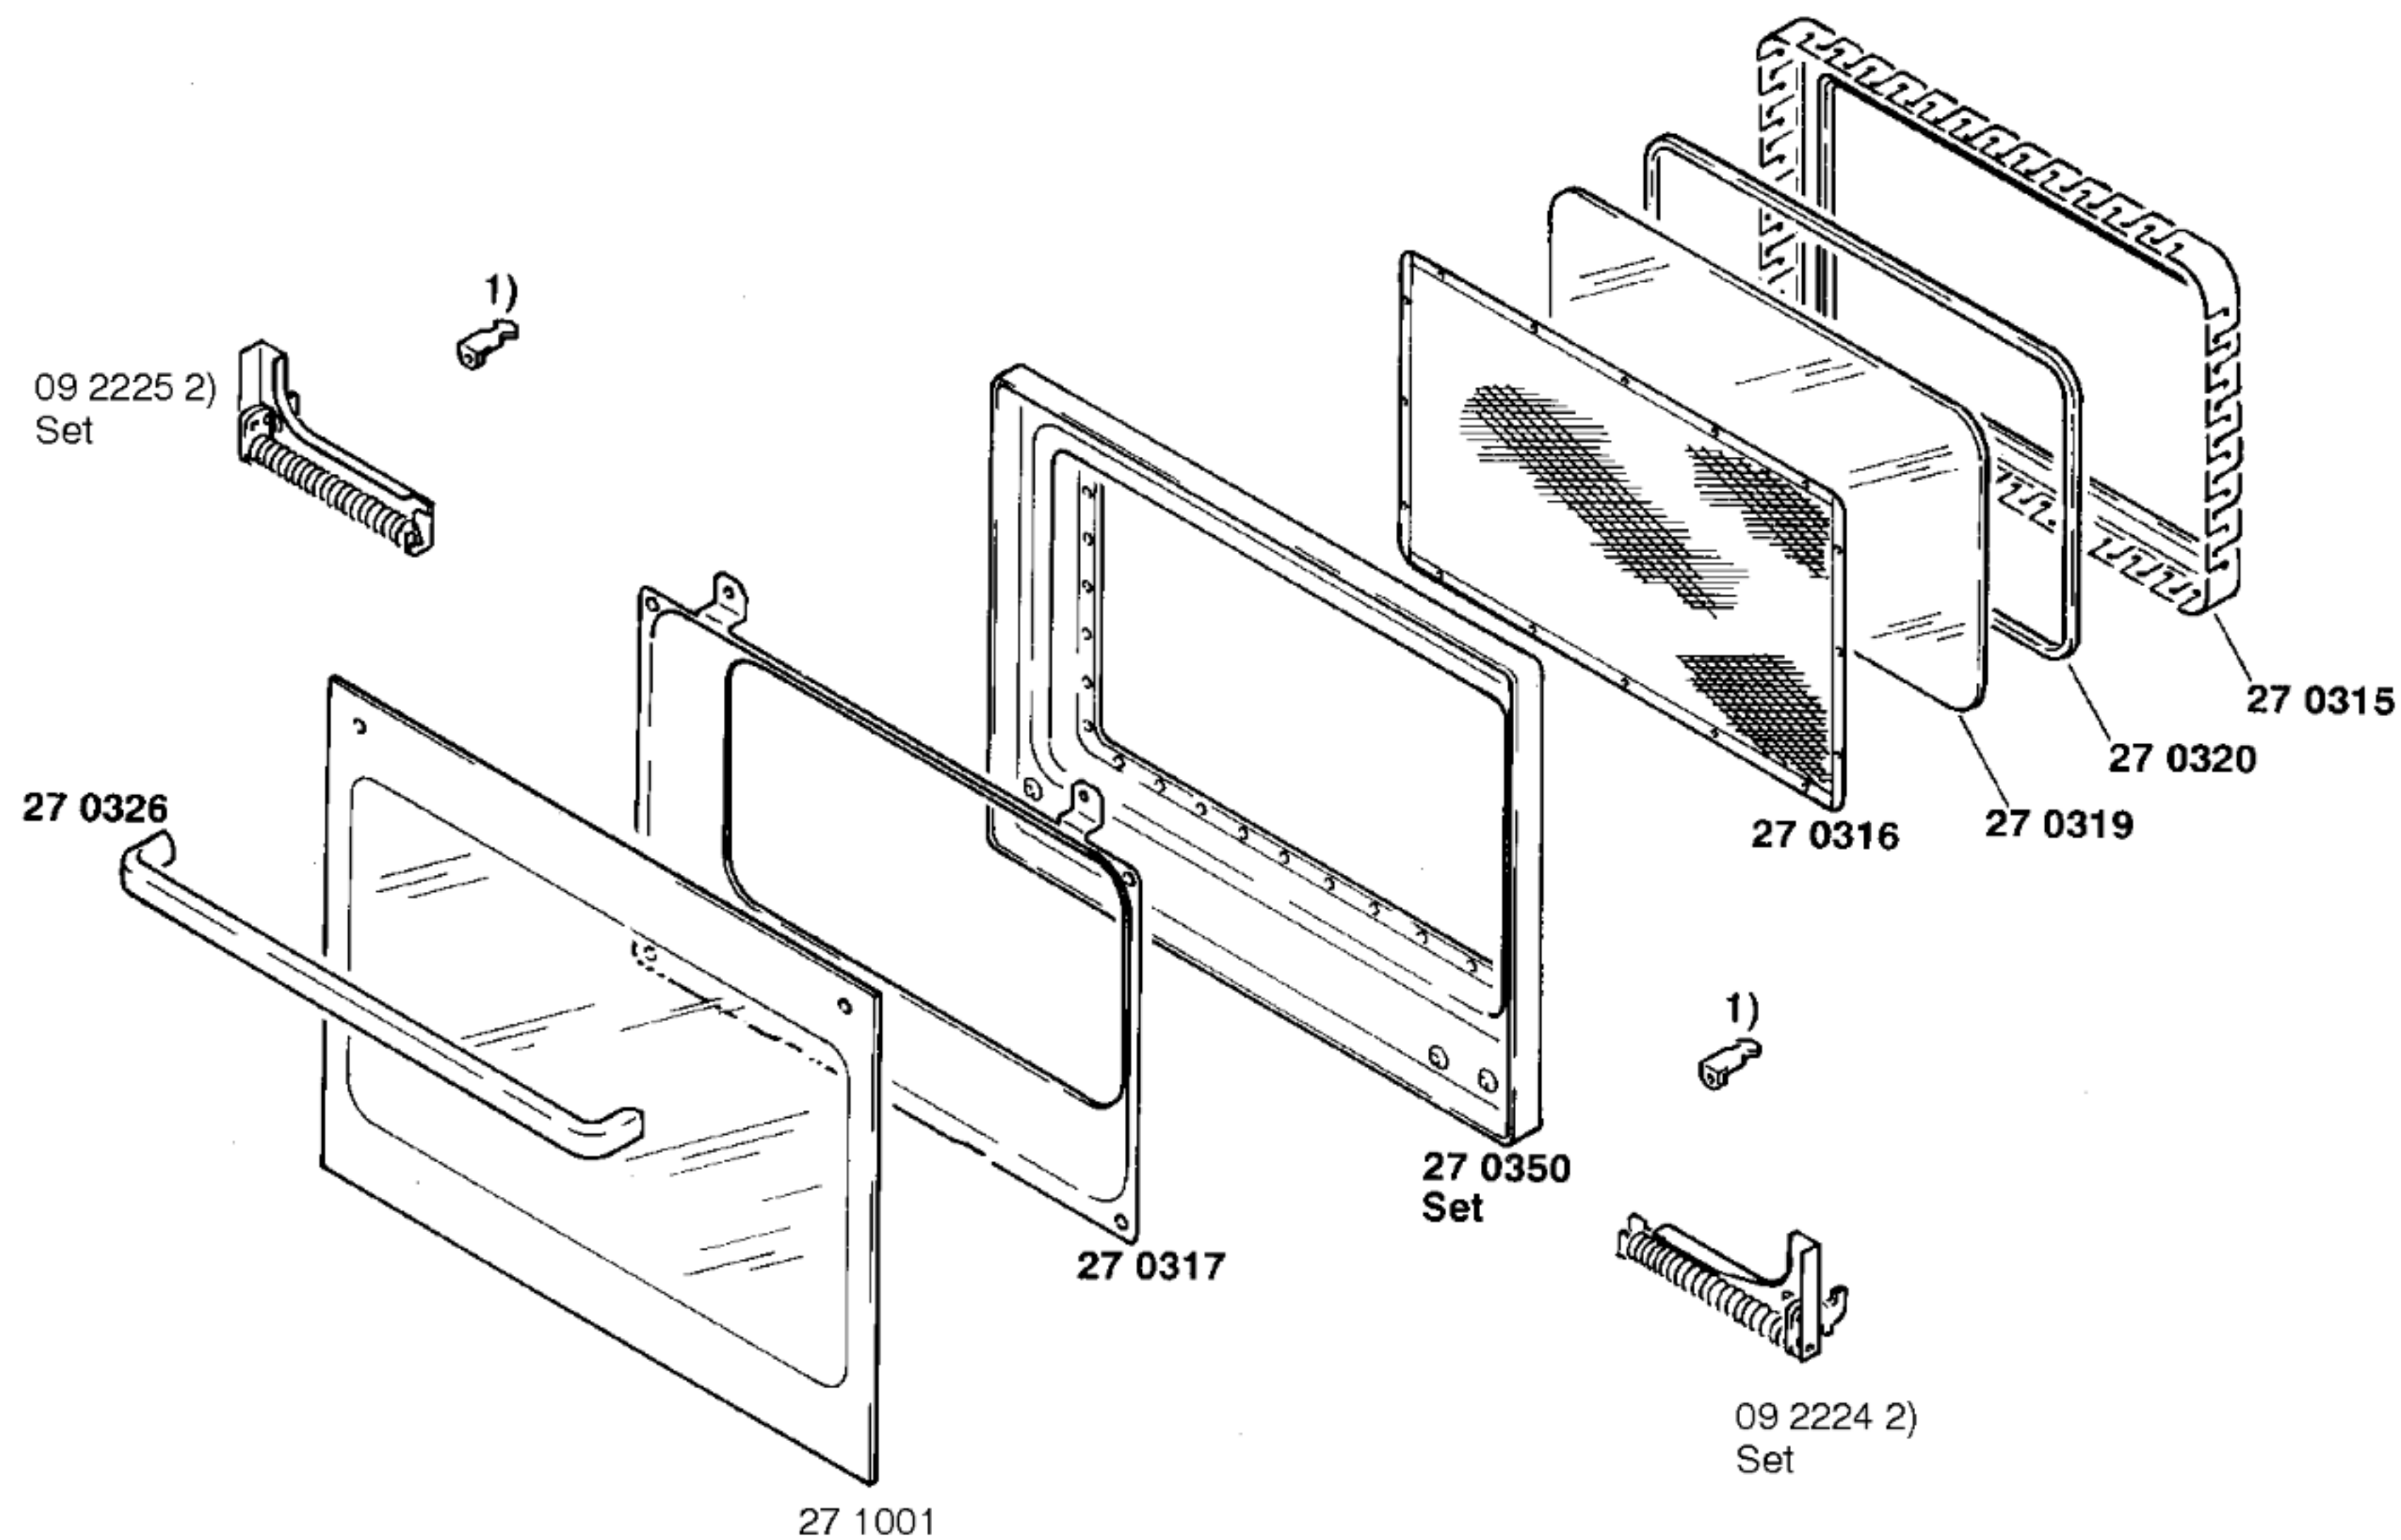


- 1) 03 0671
- 2) 03 0813
- Arretierstift

HF73220FF/01-F1, weiss
 HF73220NL/01-NL1, weiss
 HF73220BB/01-B1, weiss
 HF73220FF/02-F2, weiss


HF73220NL/02-NL2, weiss
 HF73220BB/02-B2, weiss
 HF73220FF/03-F3, weiss
 HF73220NL/03-NL3, weiss

HF73220BB/03-B3, weiss

HERDE
 Mikrowellenherde

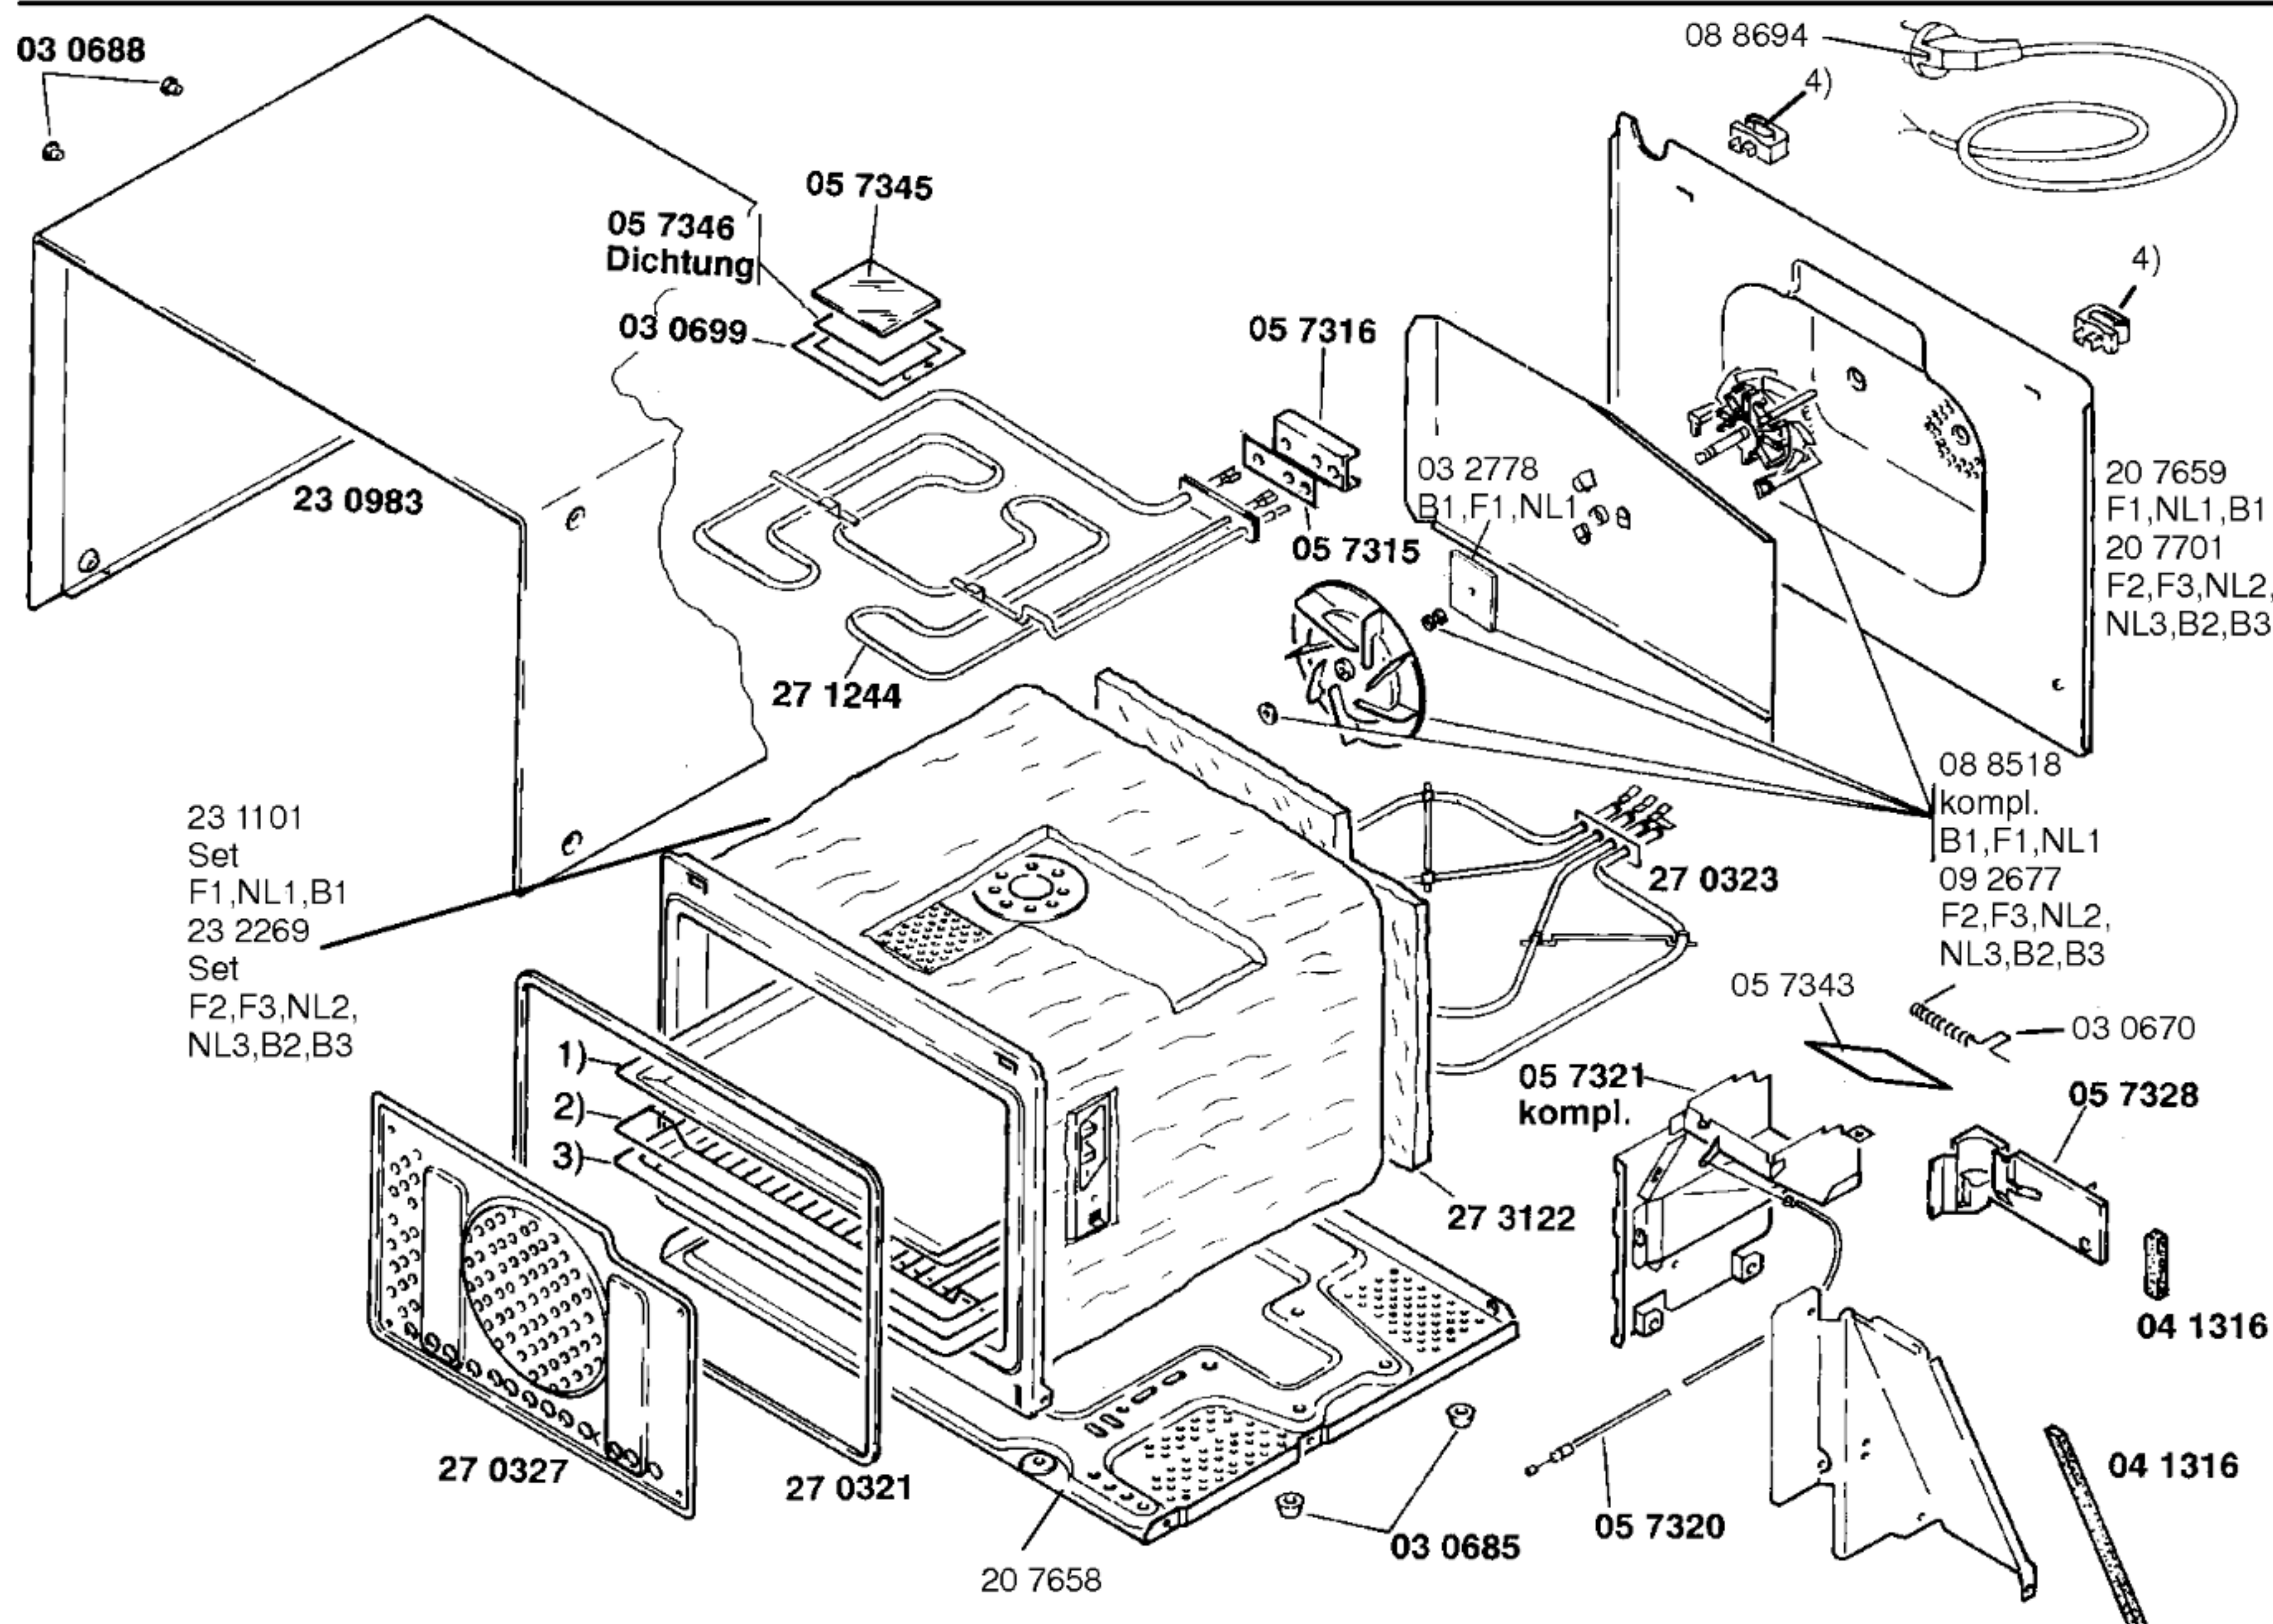

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 27 3844
Universalpfanne
- 4) 03 0667
F1, F2, F3, NL1, NL2, NL3
05 9830
B1, B2, B3
- 02 8732
Anschlag-Backblech

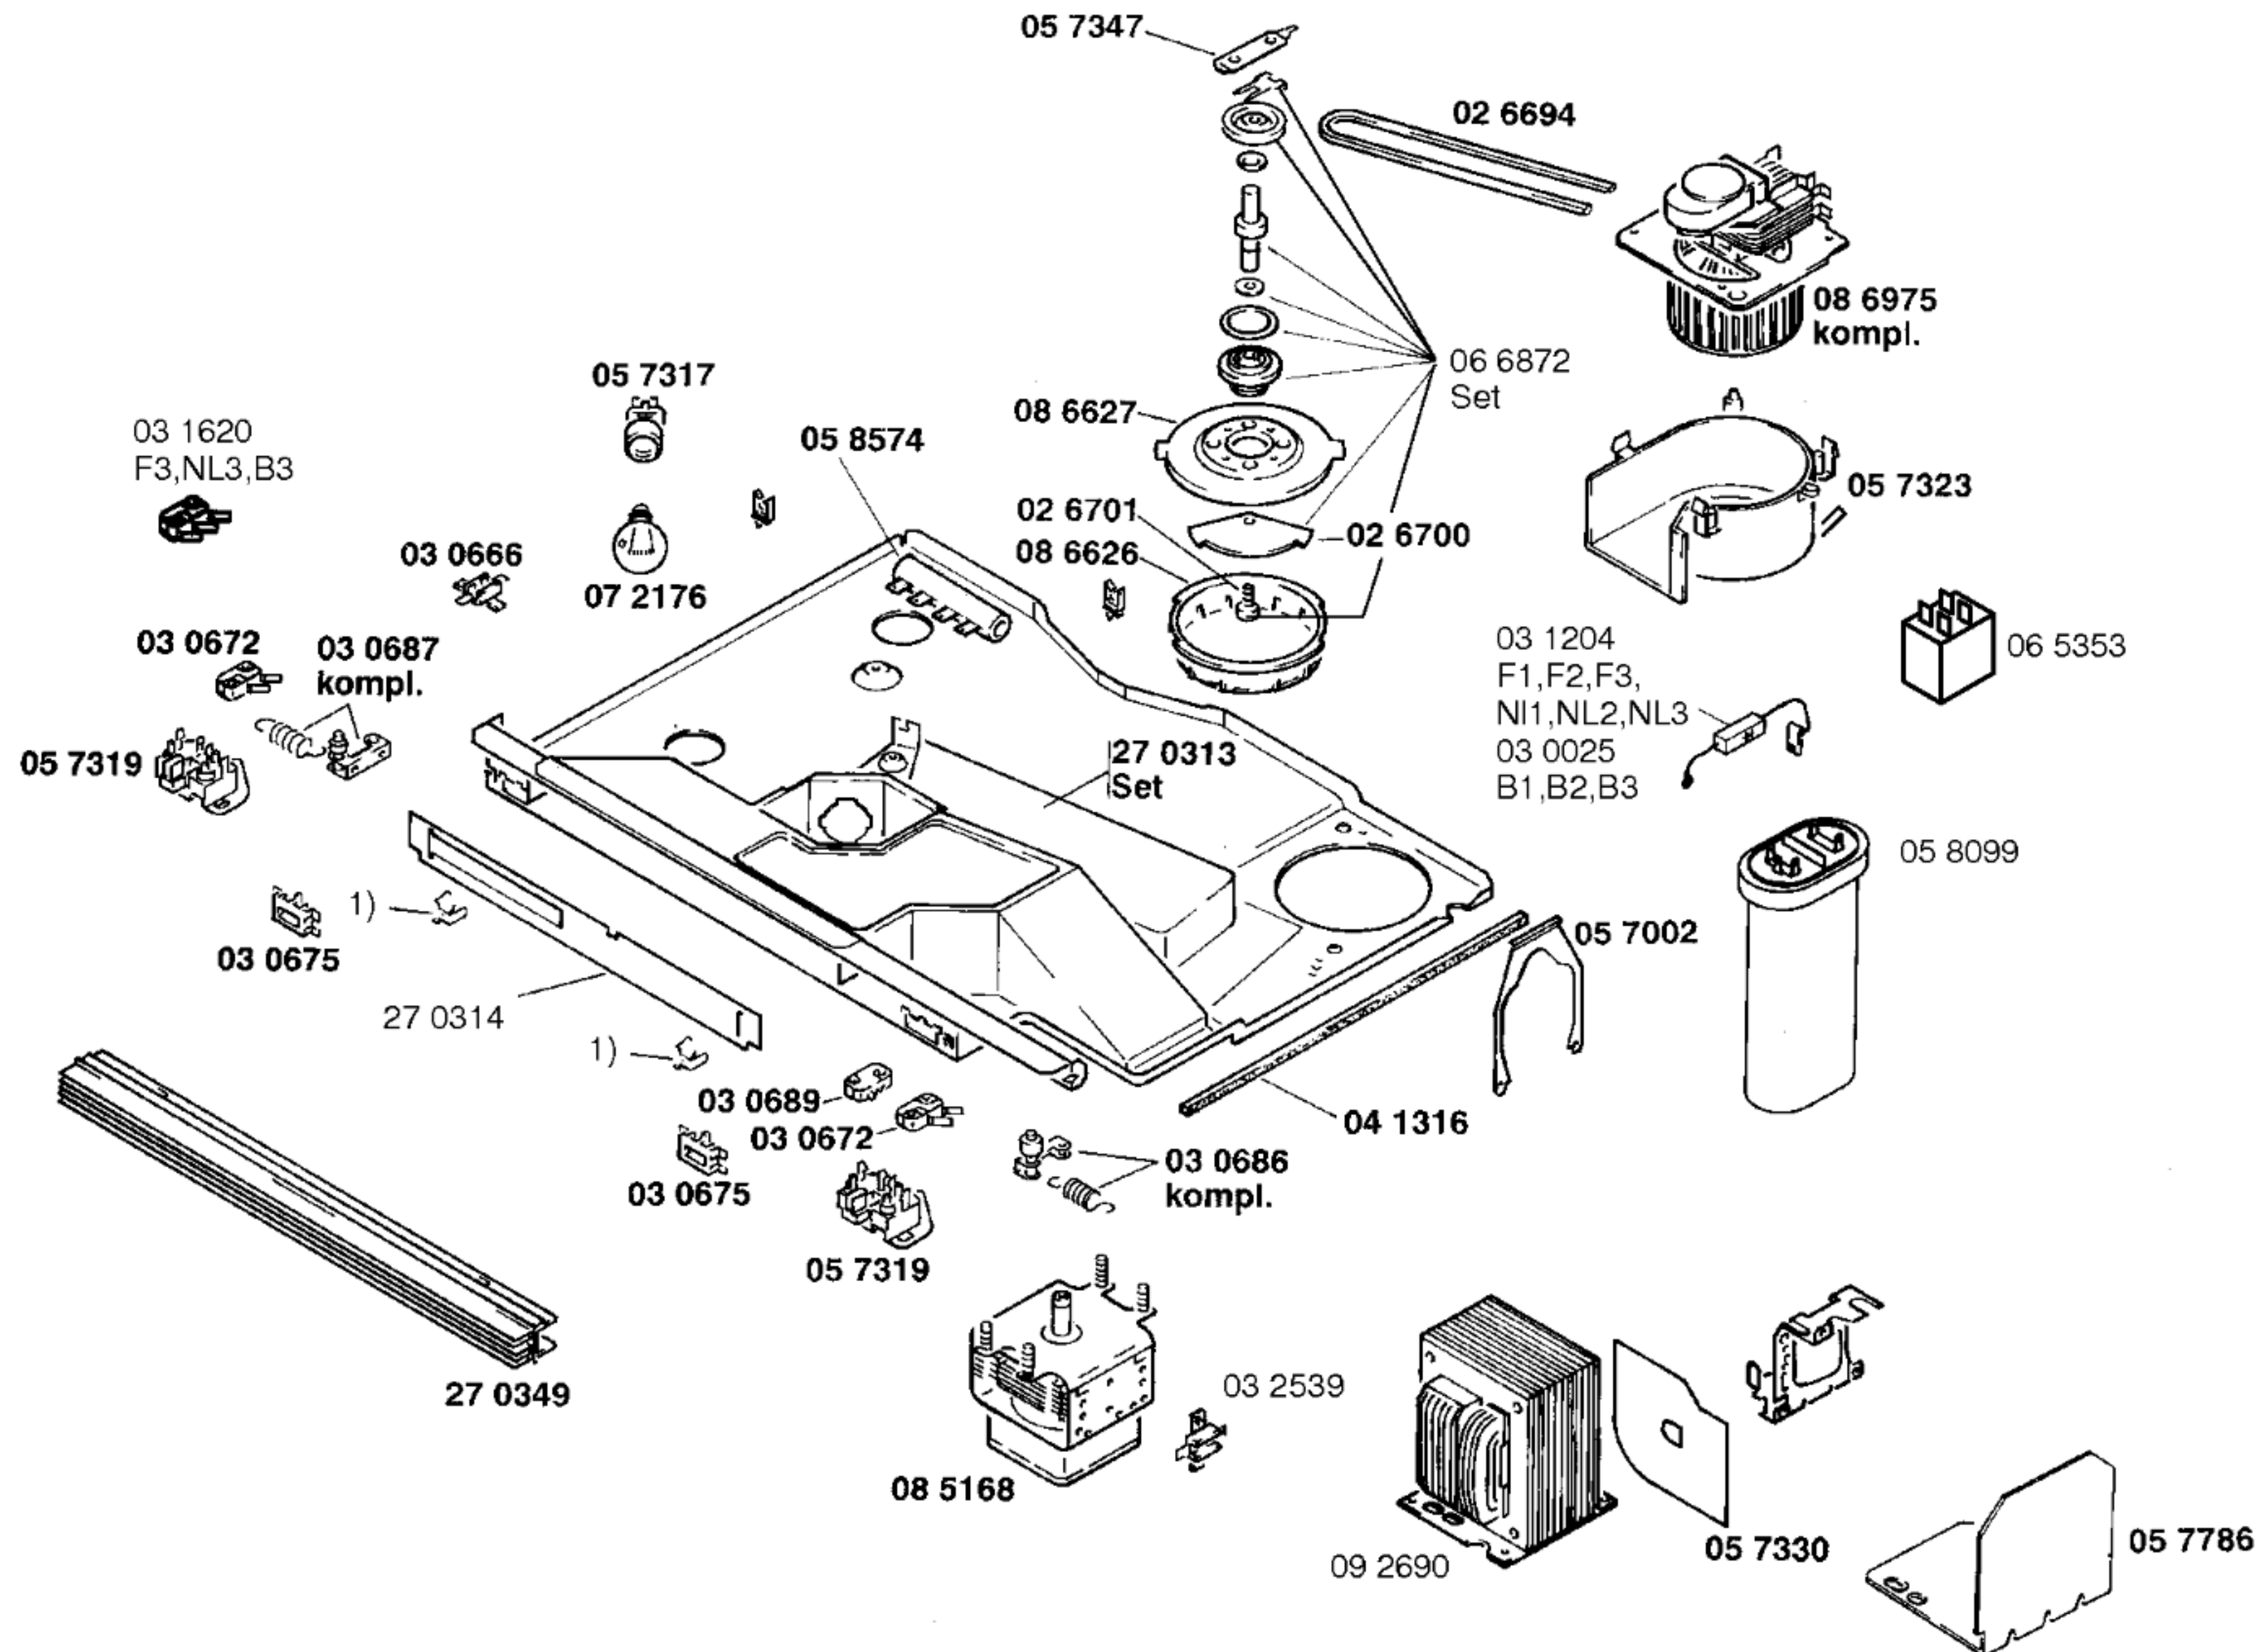

1) 03 0678