


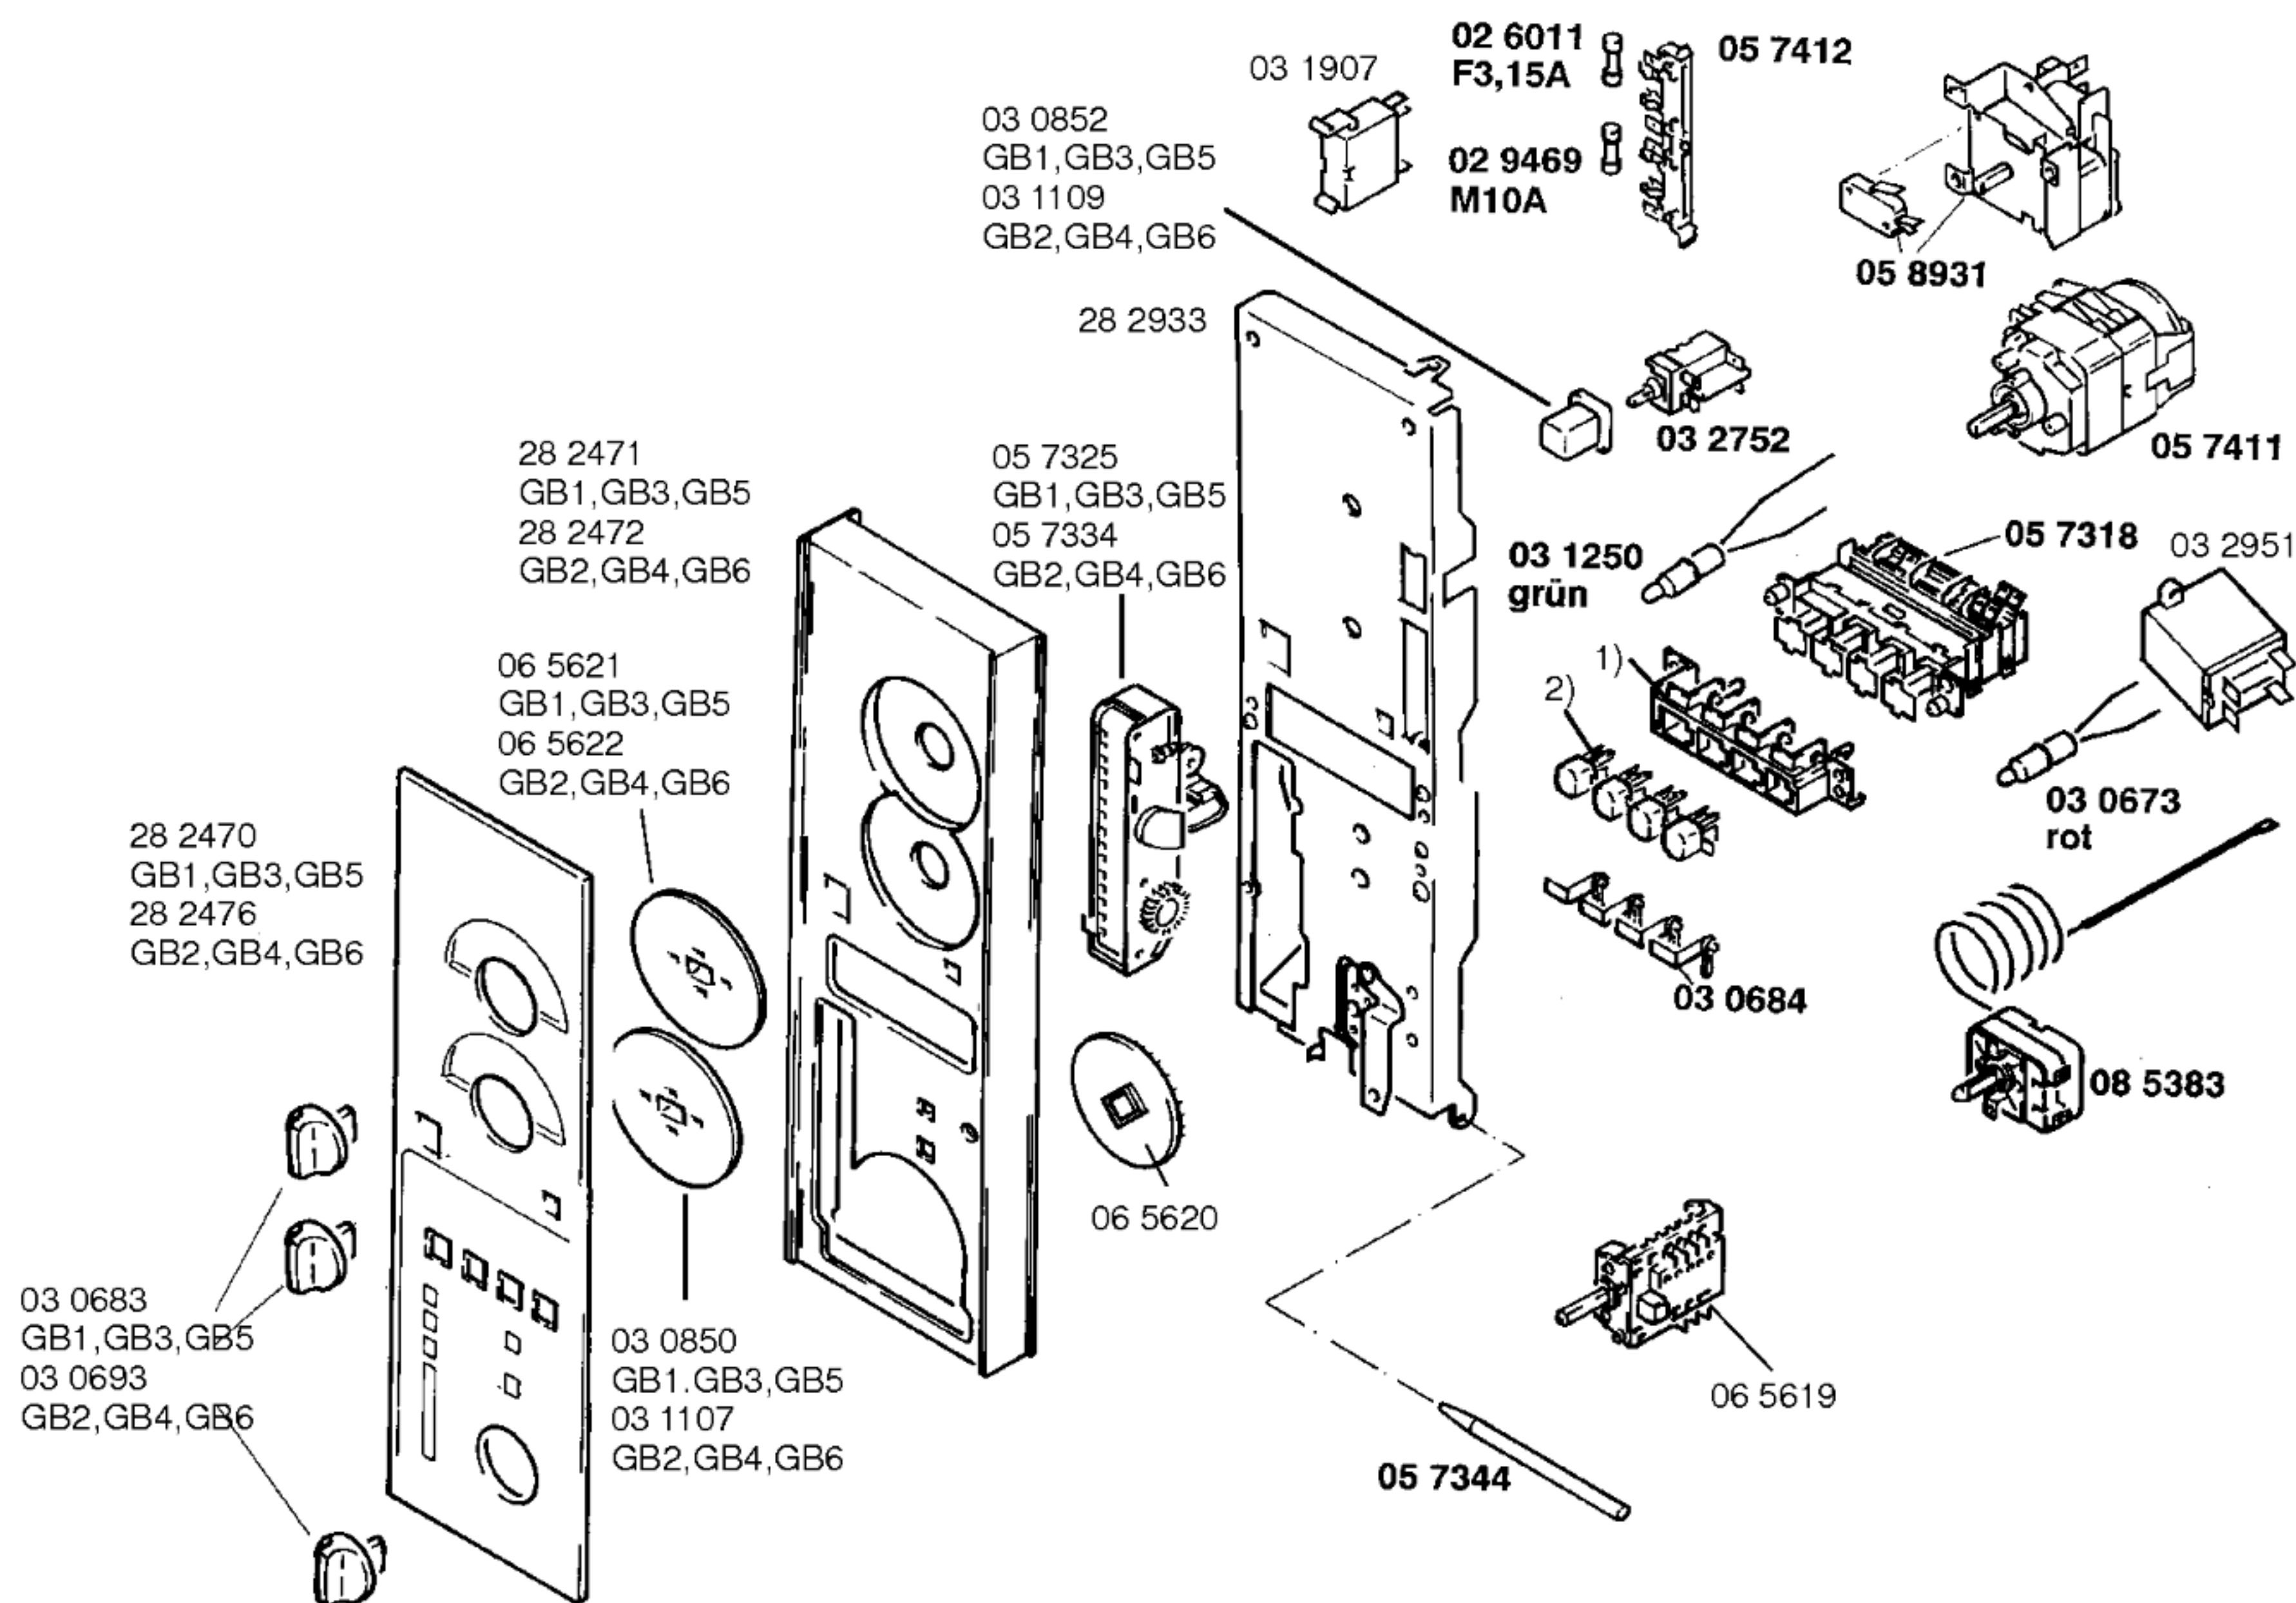

Gebrauchsanweisung
51 5939
(D,GB,F,I,NL)

Tips und Rezepte
51 6252
(GB)

Zubehör:
HZ67022
GB1,GB3,GB5
HZ67042
GB2,GB4,GB6
Einbaurahmen

HZ67720
GB1,GB3,GB5
HZ67740
GB2,GB4,GB6
Abdeckung,kratzfest

HZ8056
Glaspfanne


HZ8055
Alu-Backblech


HZ67615
Universalpfanne

HZ9150
Glasbräter

- 1) 05 7322
GB1,GB3,GB5
05 7333
GB2,GB4,GB6
- 2) 03 0682
GB1,GB3,GB5
03 0692
GB2,GB4,GB6

- 1) 03 0671
2) 03 0813
Arretierstift

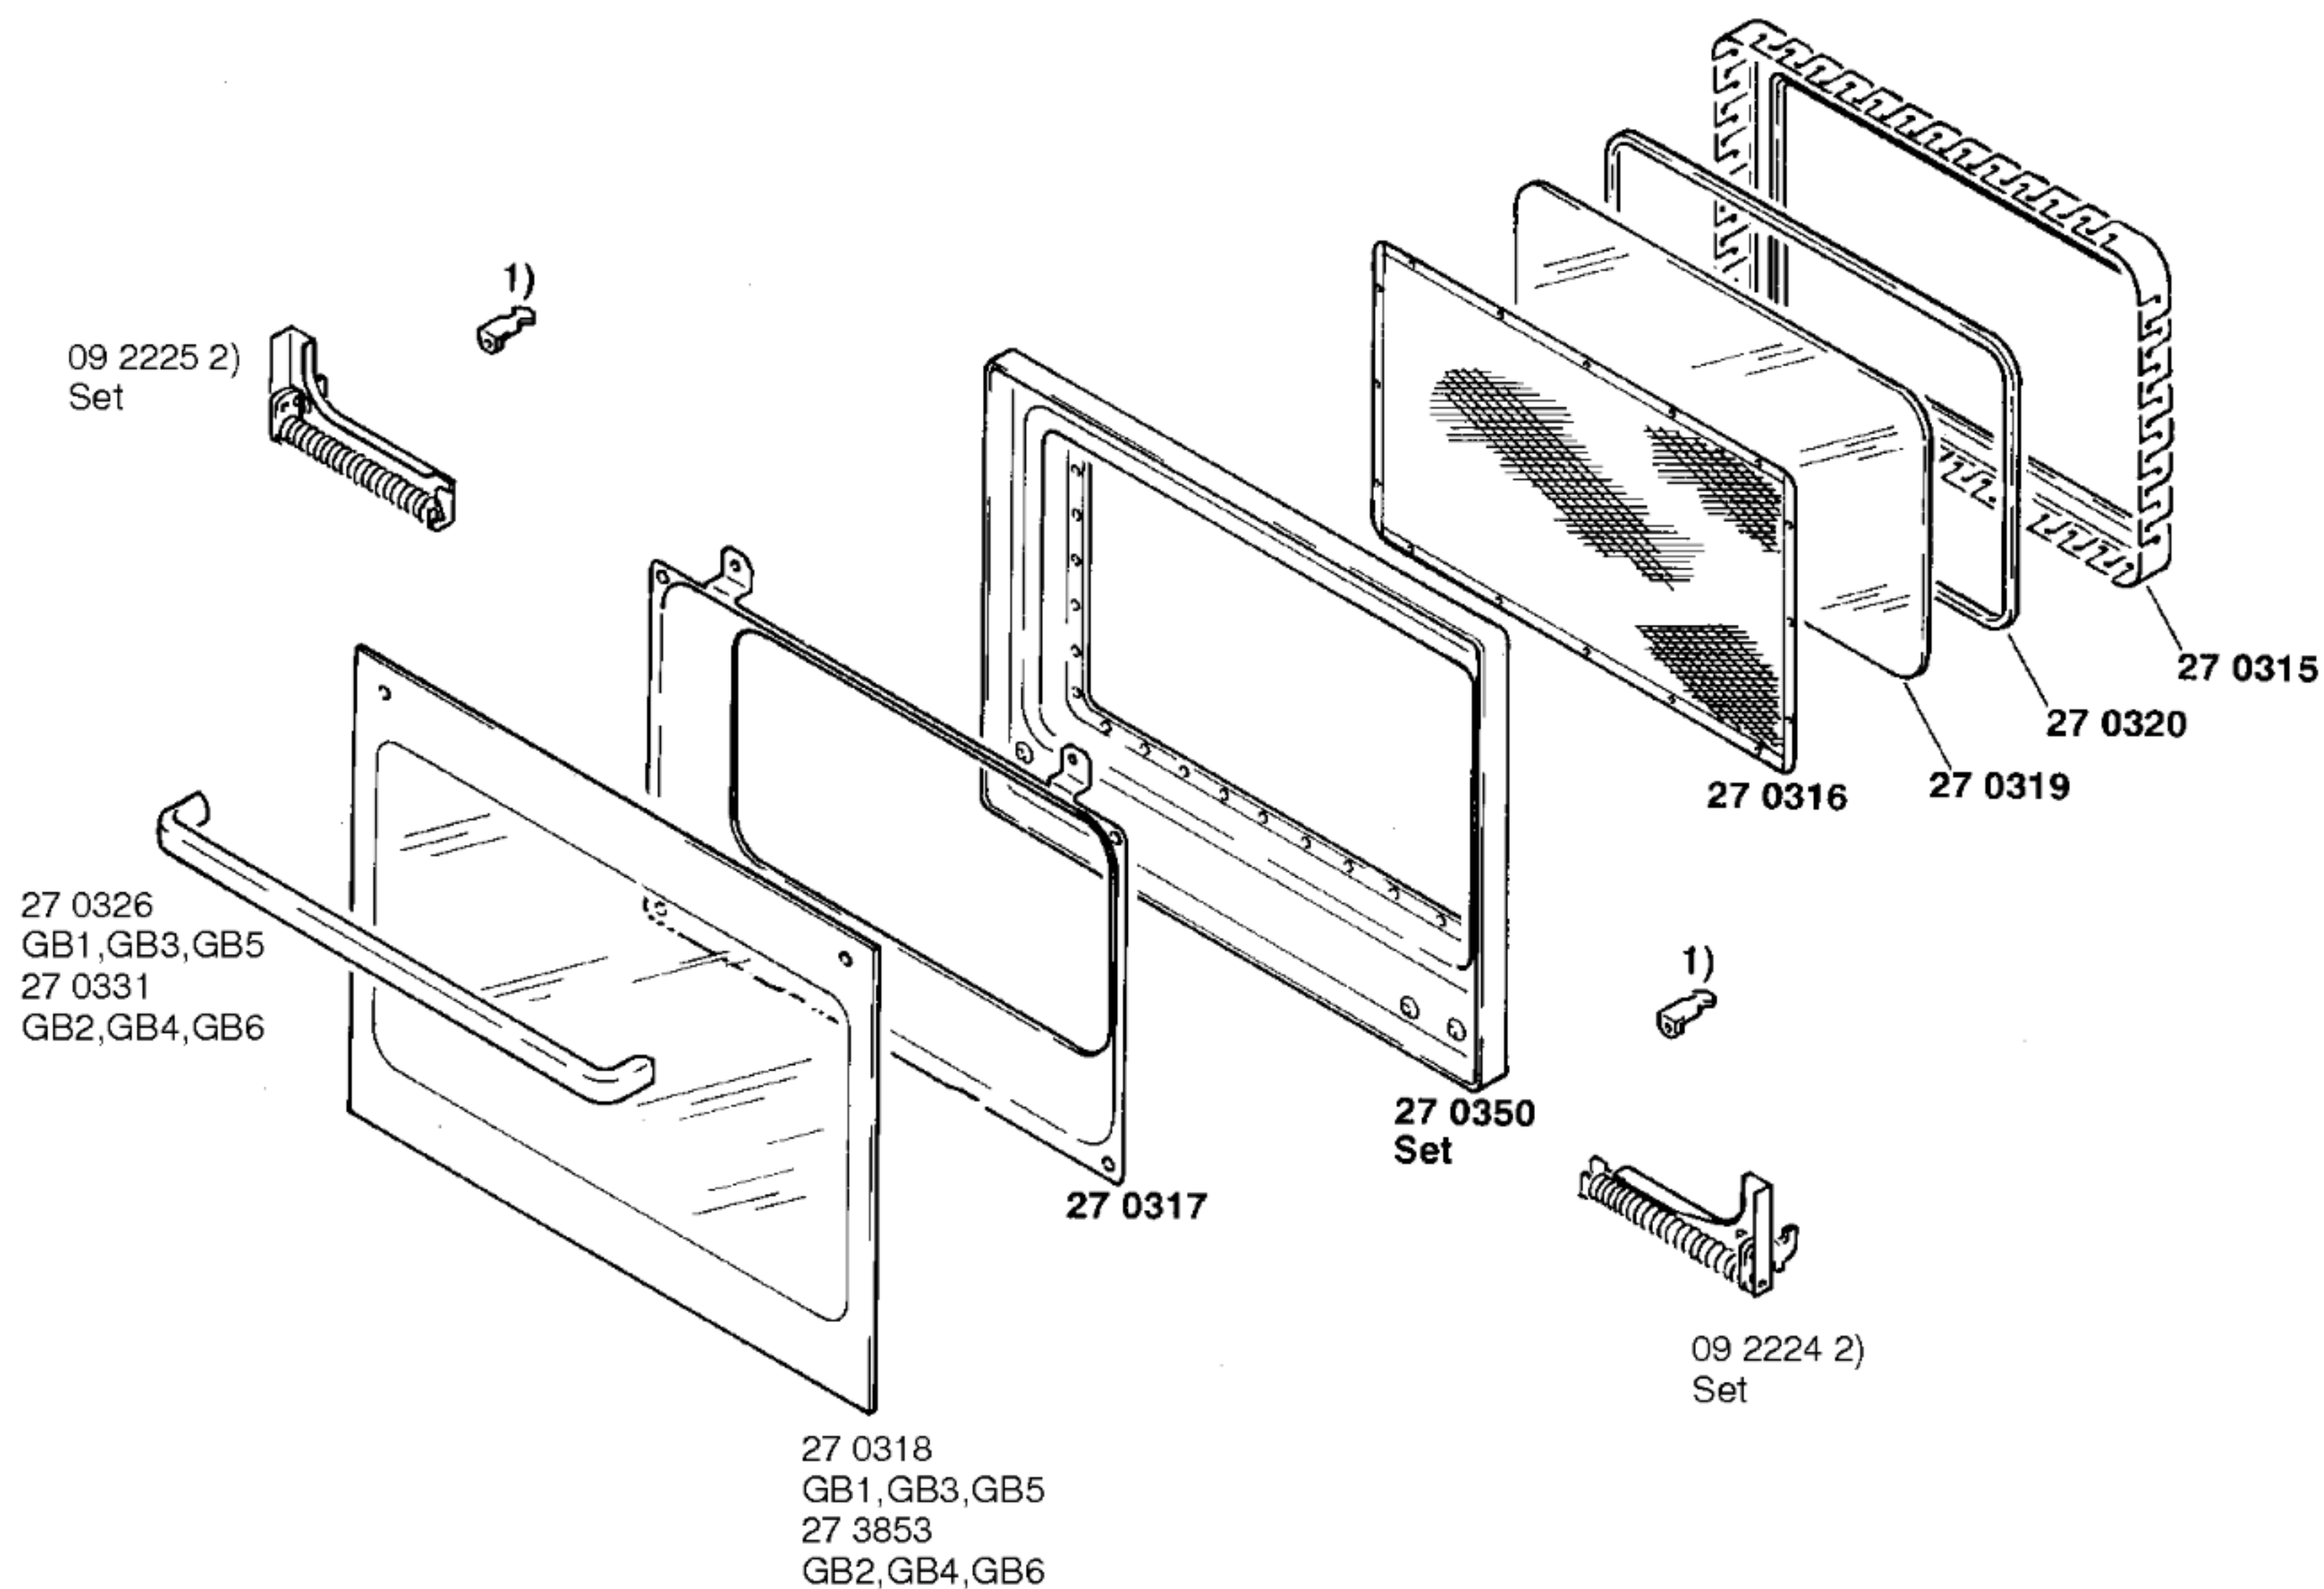


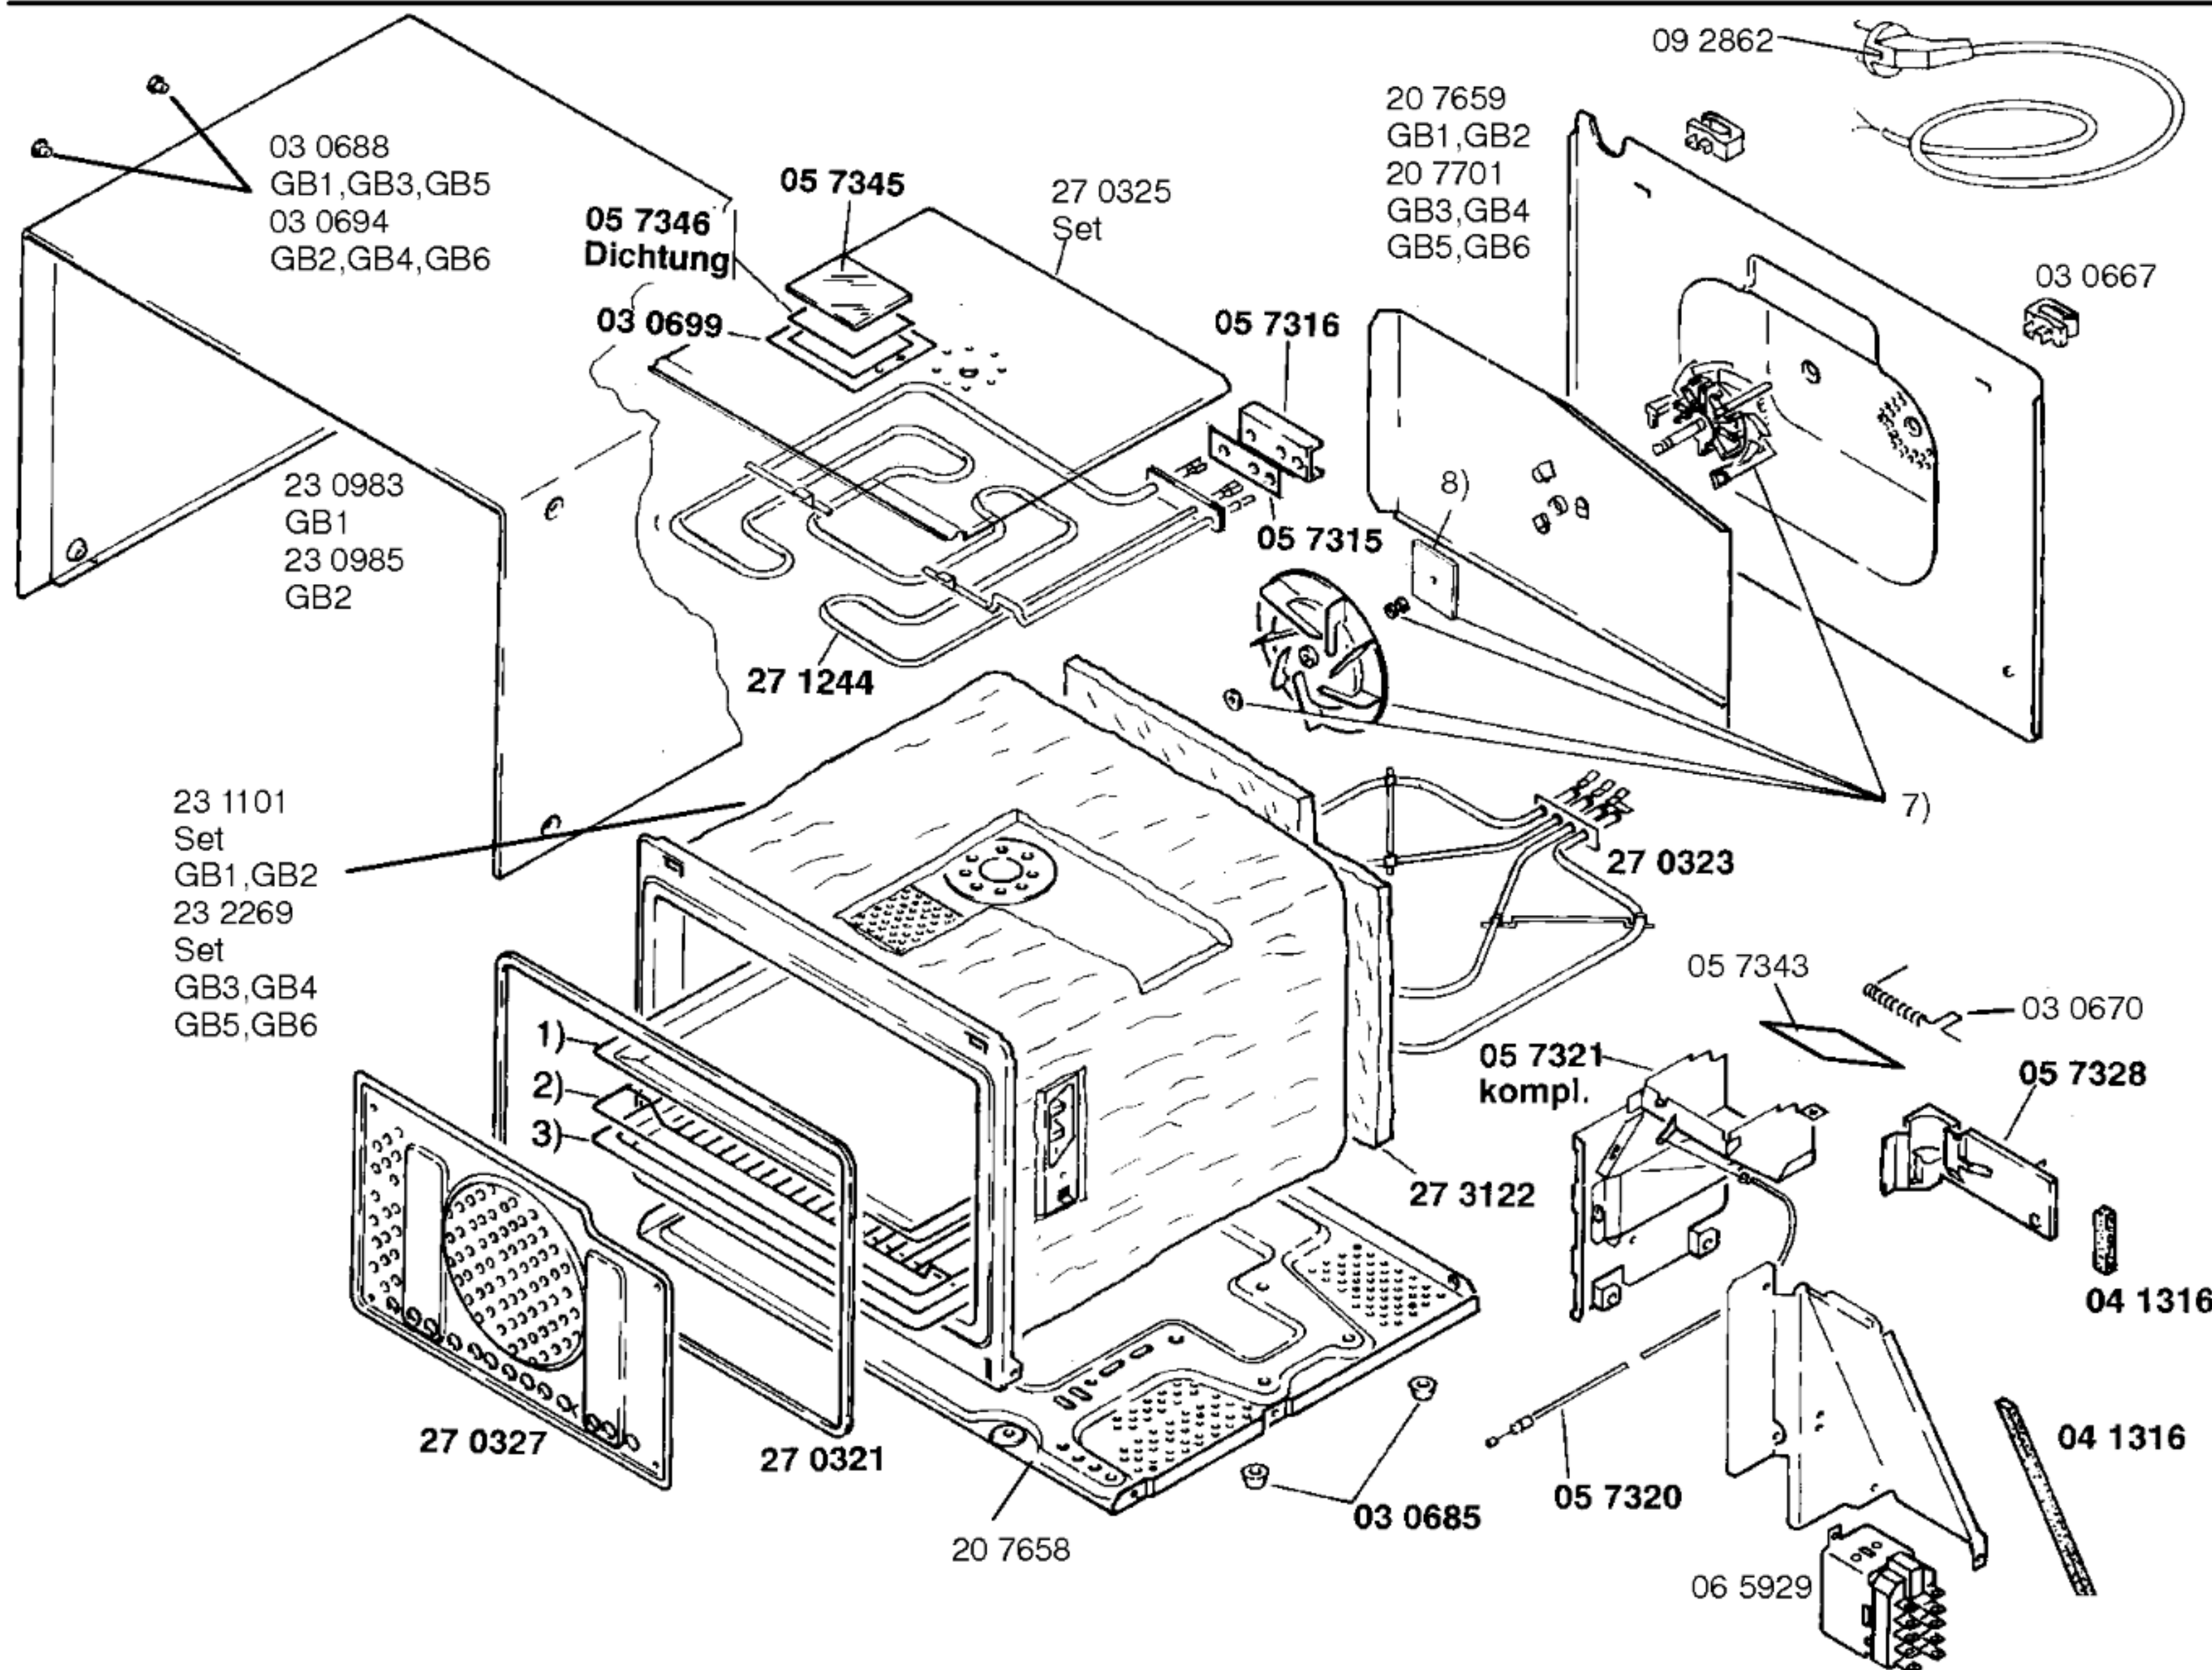

- 1) 11 4538
Backblech
- 2) 11 4539
- 3) 27 3844
Universalpfanne
- 5) 27 1620
- 6) 27 1621
- 7) 08 8591
GB1,GB2
09 2676
GB3,GB4,GB5,GB6
kompl.
- 8) 03 2778
GB1,GB2

02 8732
Anschlag Backblech

05 8370
Lüfternachlauf

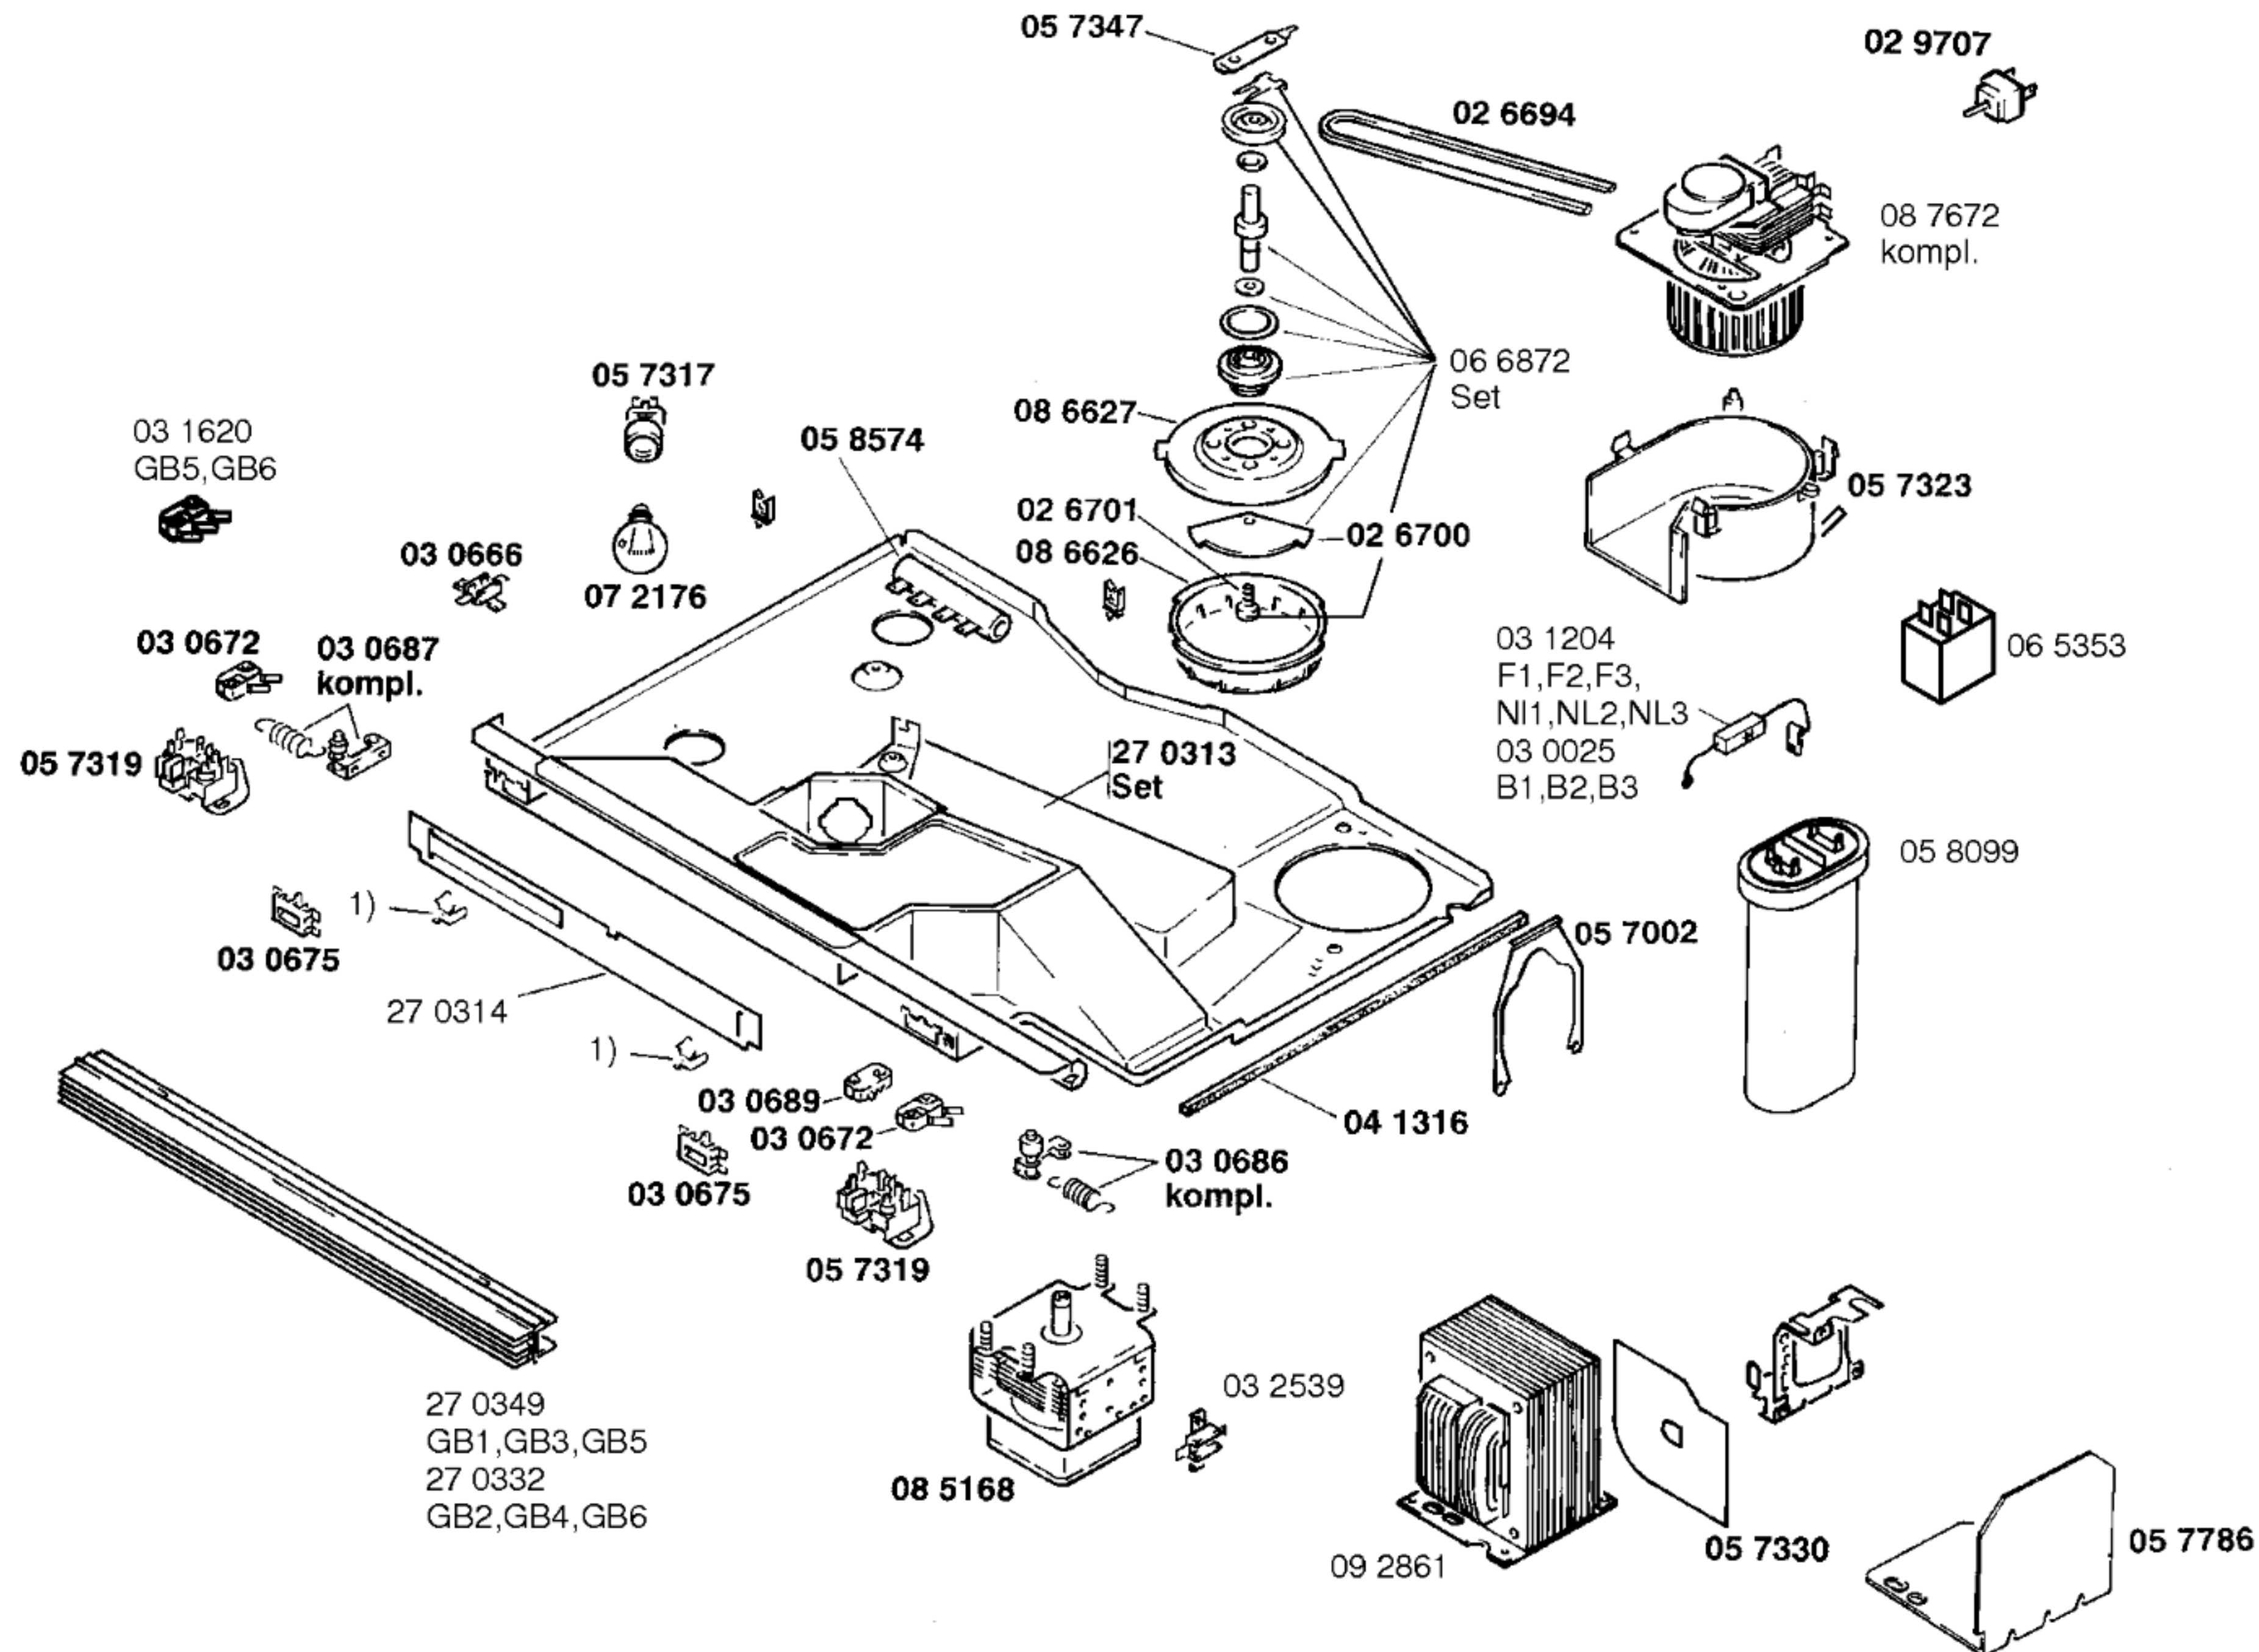

1) 03 0678