 


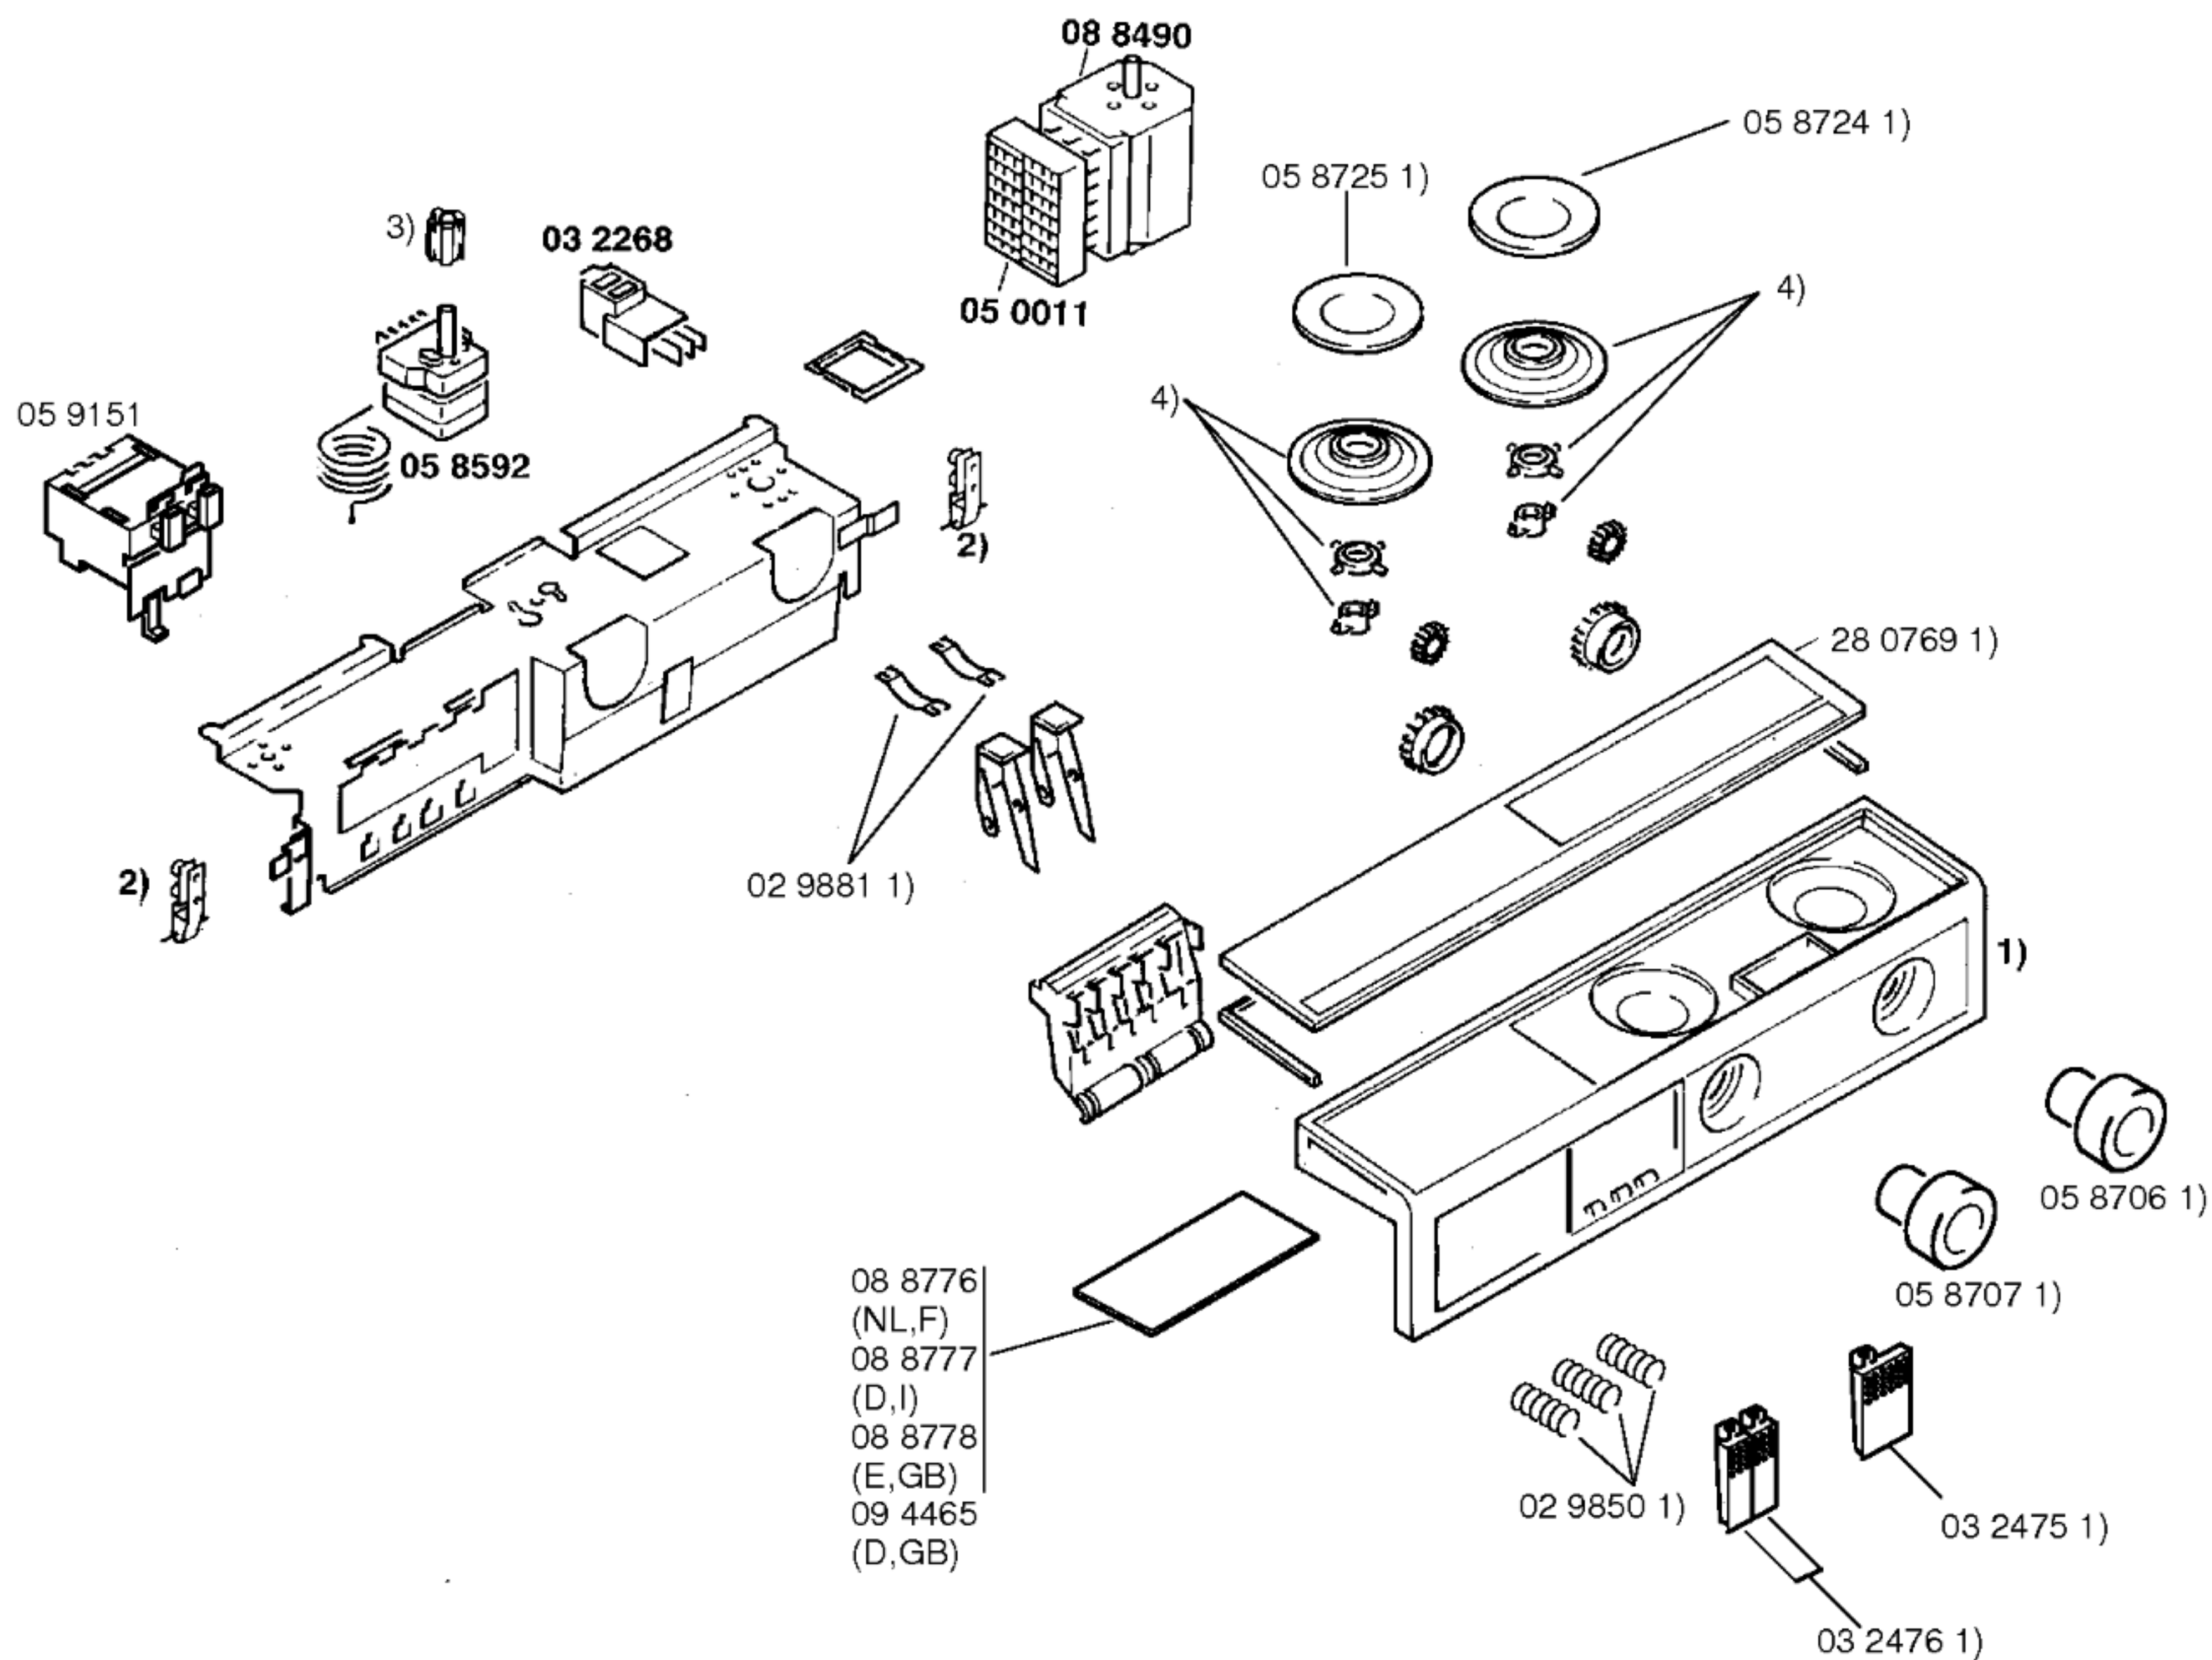

Gebrauchsanweisung

51 4962

 (D, I)

51 5423

(D, GB)

Aufstellanweisung

51 4934

(D,I,SF,N,S)

51 4750

(D,GB,F,I,NL,E)

Programmtabelle

51 4936

(D,I,SF,N,S)

51 4840

(D, GB)

1) 28 0768

Blende kompl.

2) 03 2288

3) 02 9845

4) 05 9344 1)

Zubehör:

Bodenbefestigung


CZ 1106


Wäsche-Top

CZ 11330

Entkalker

  46 0038

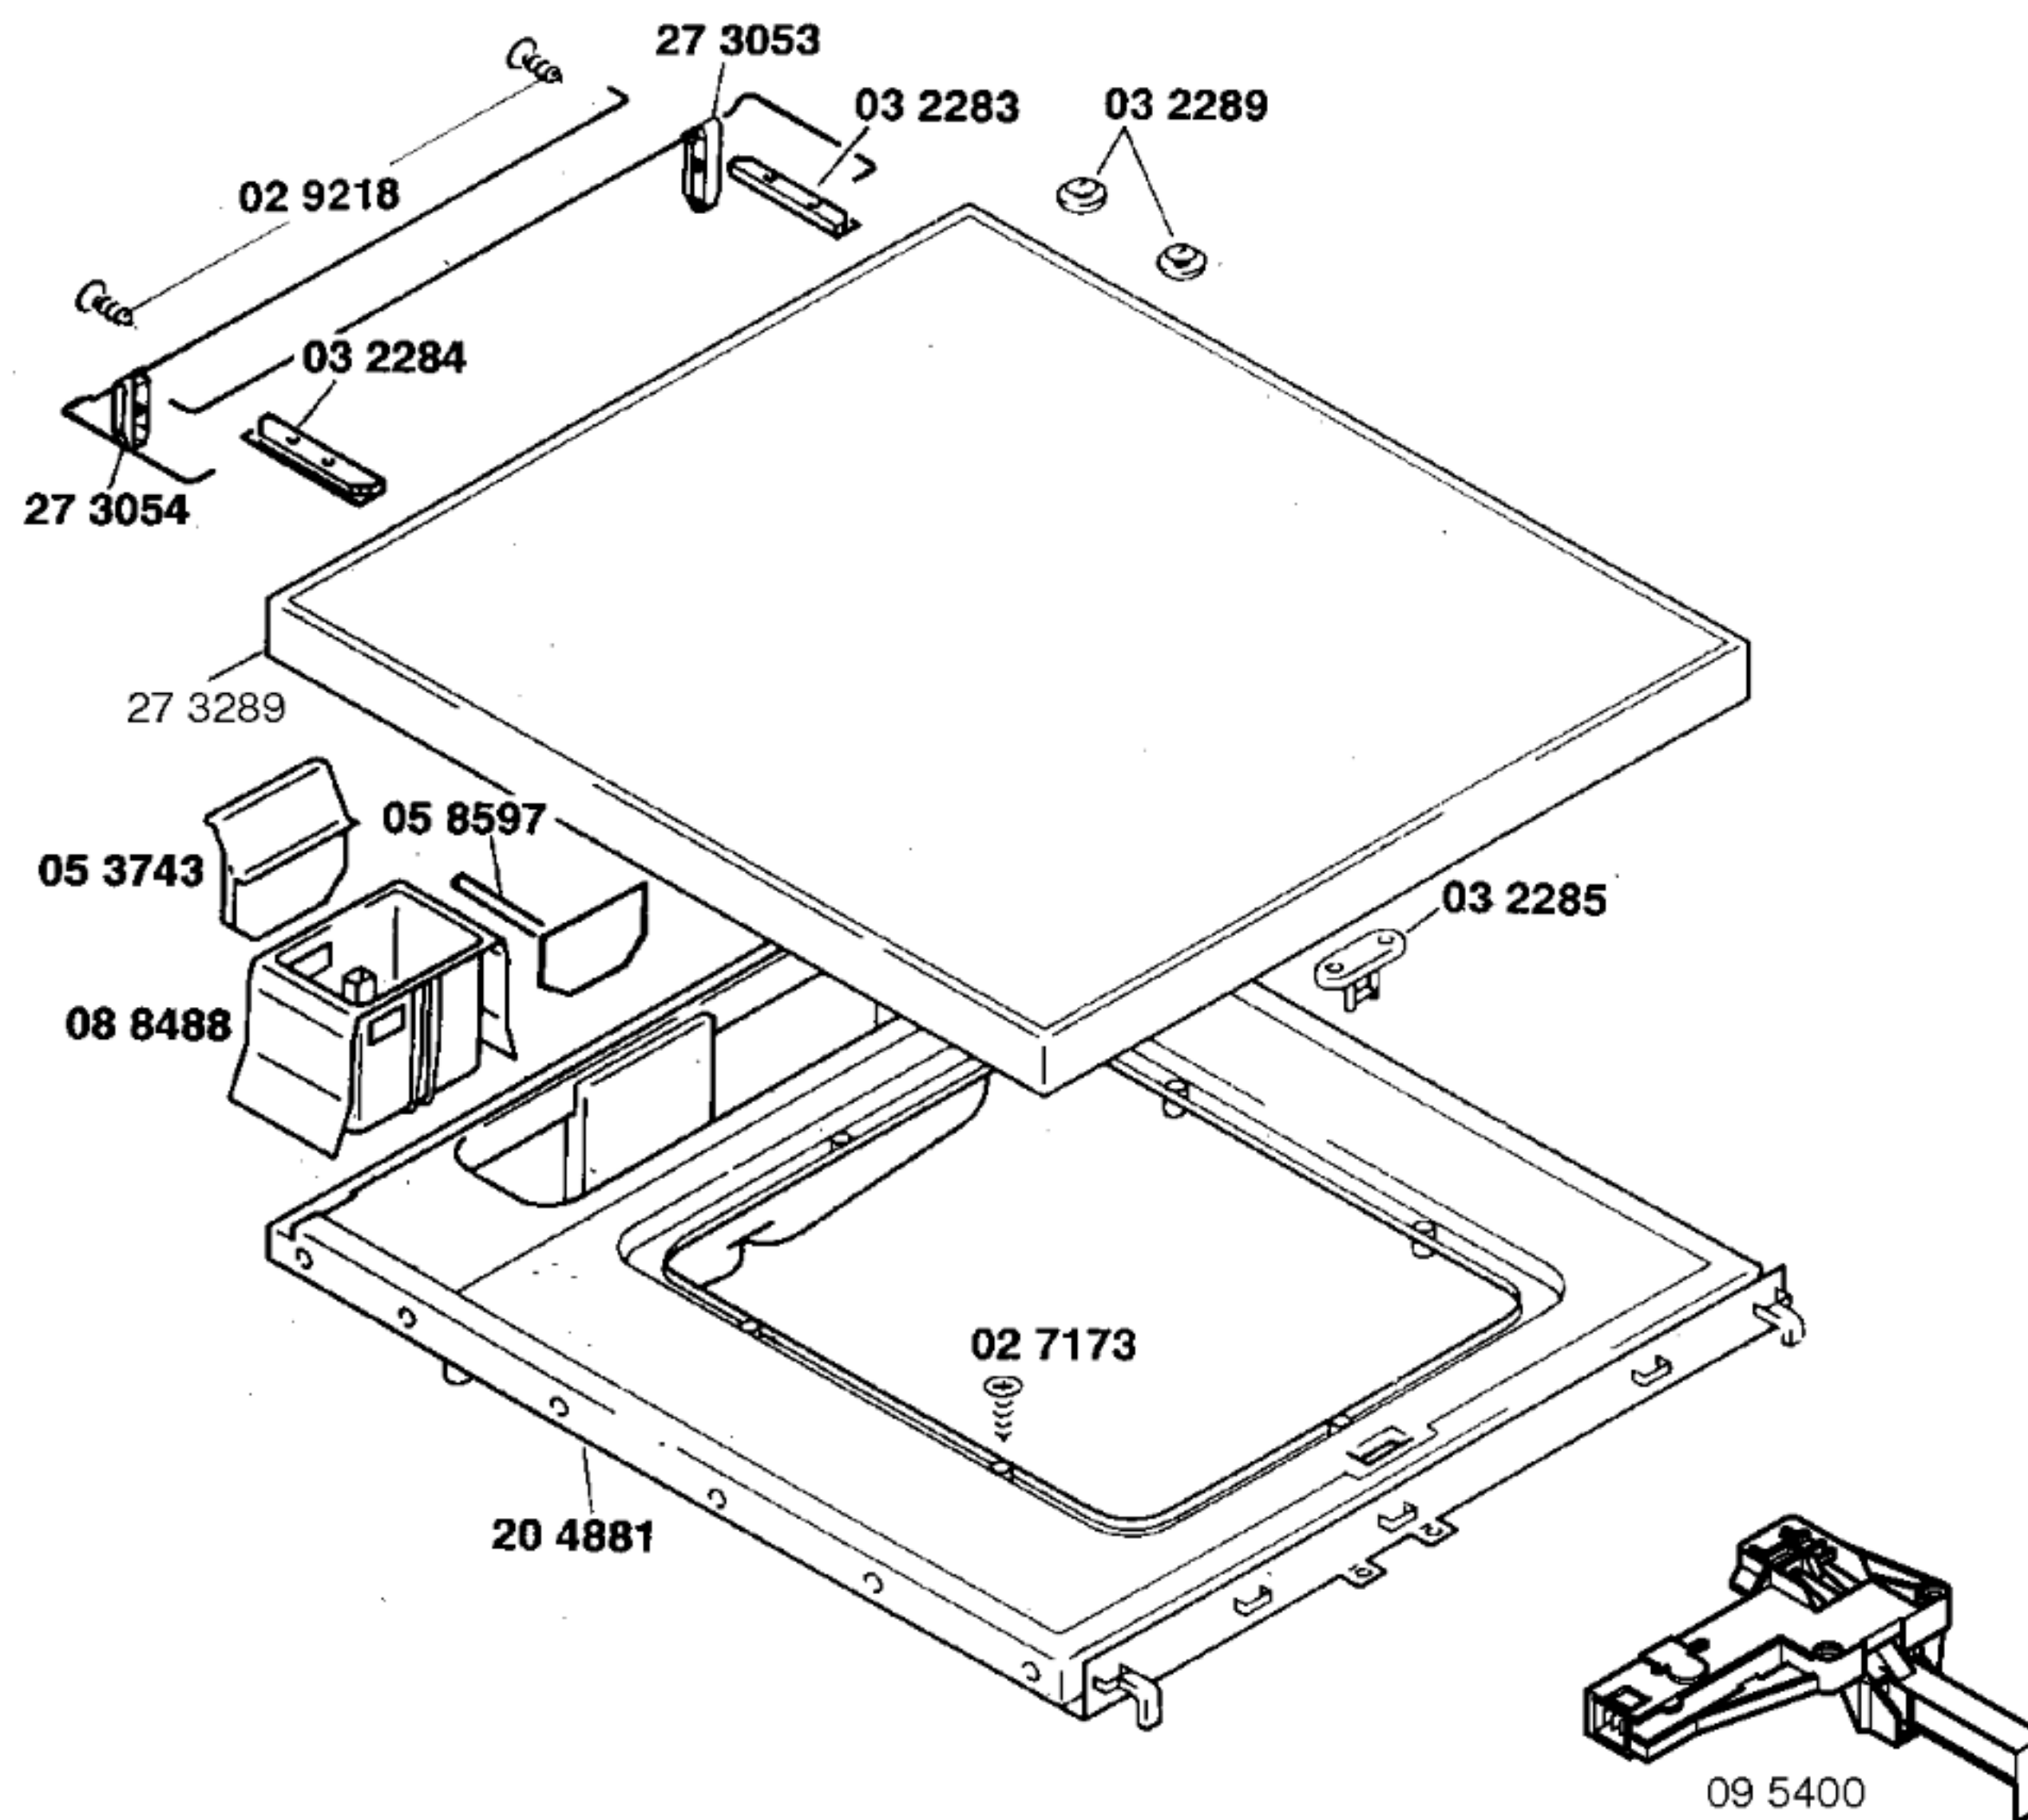

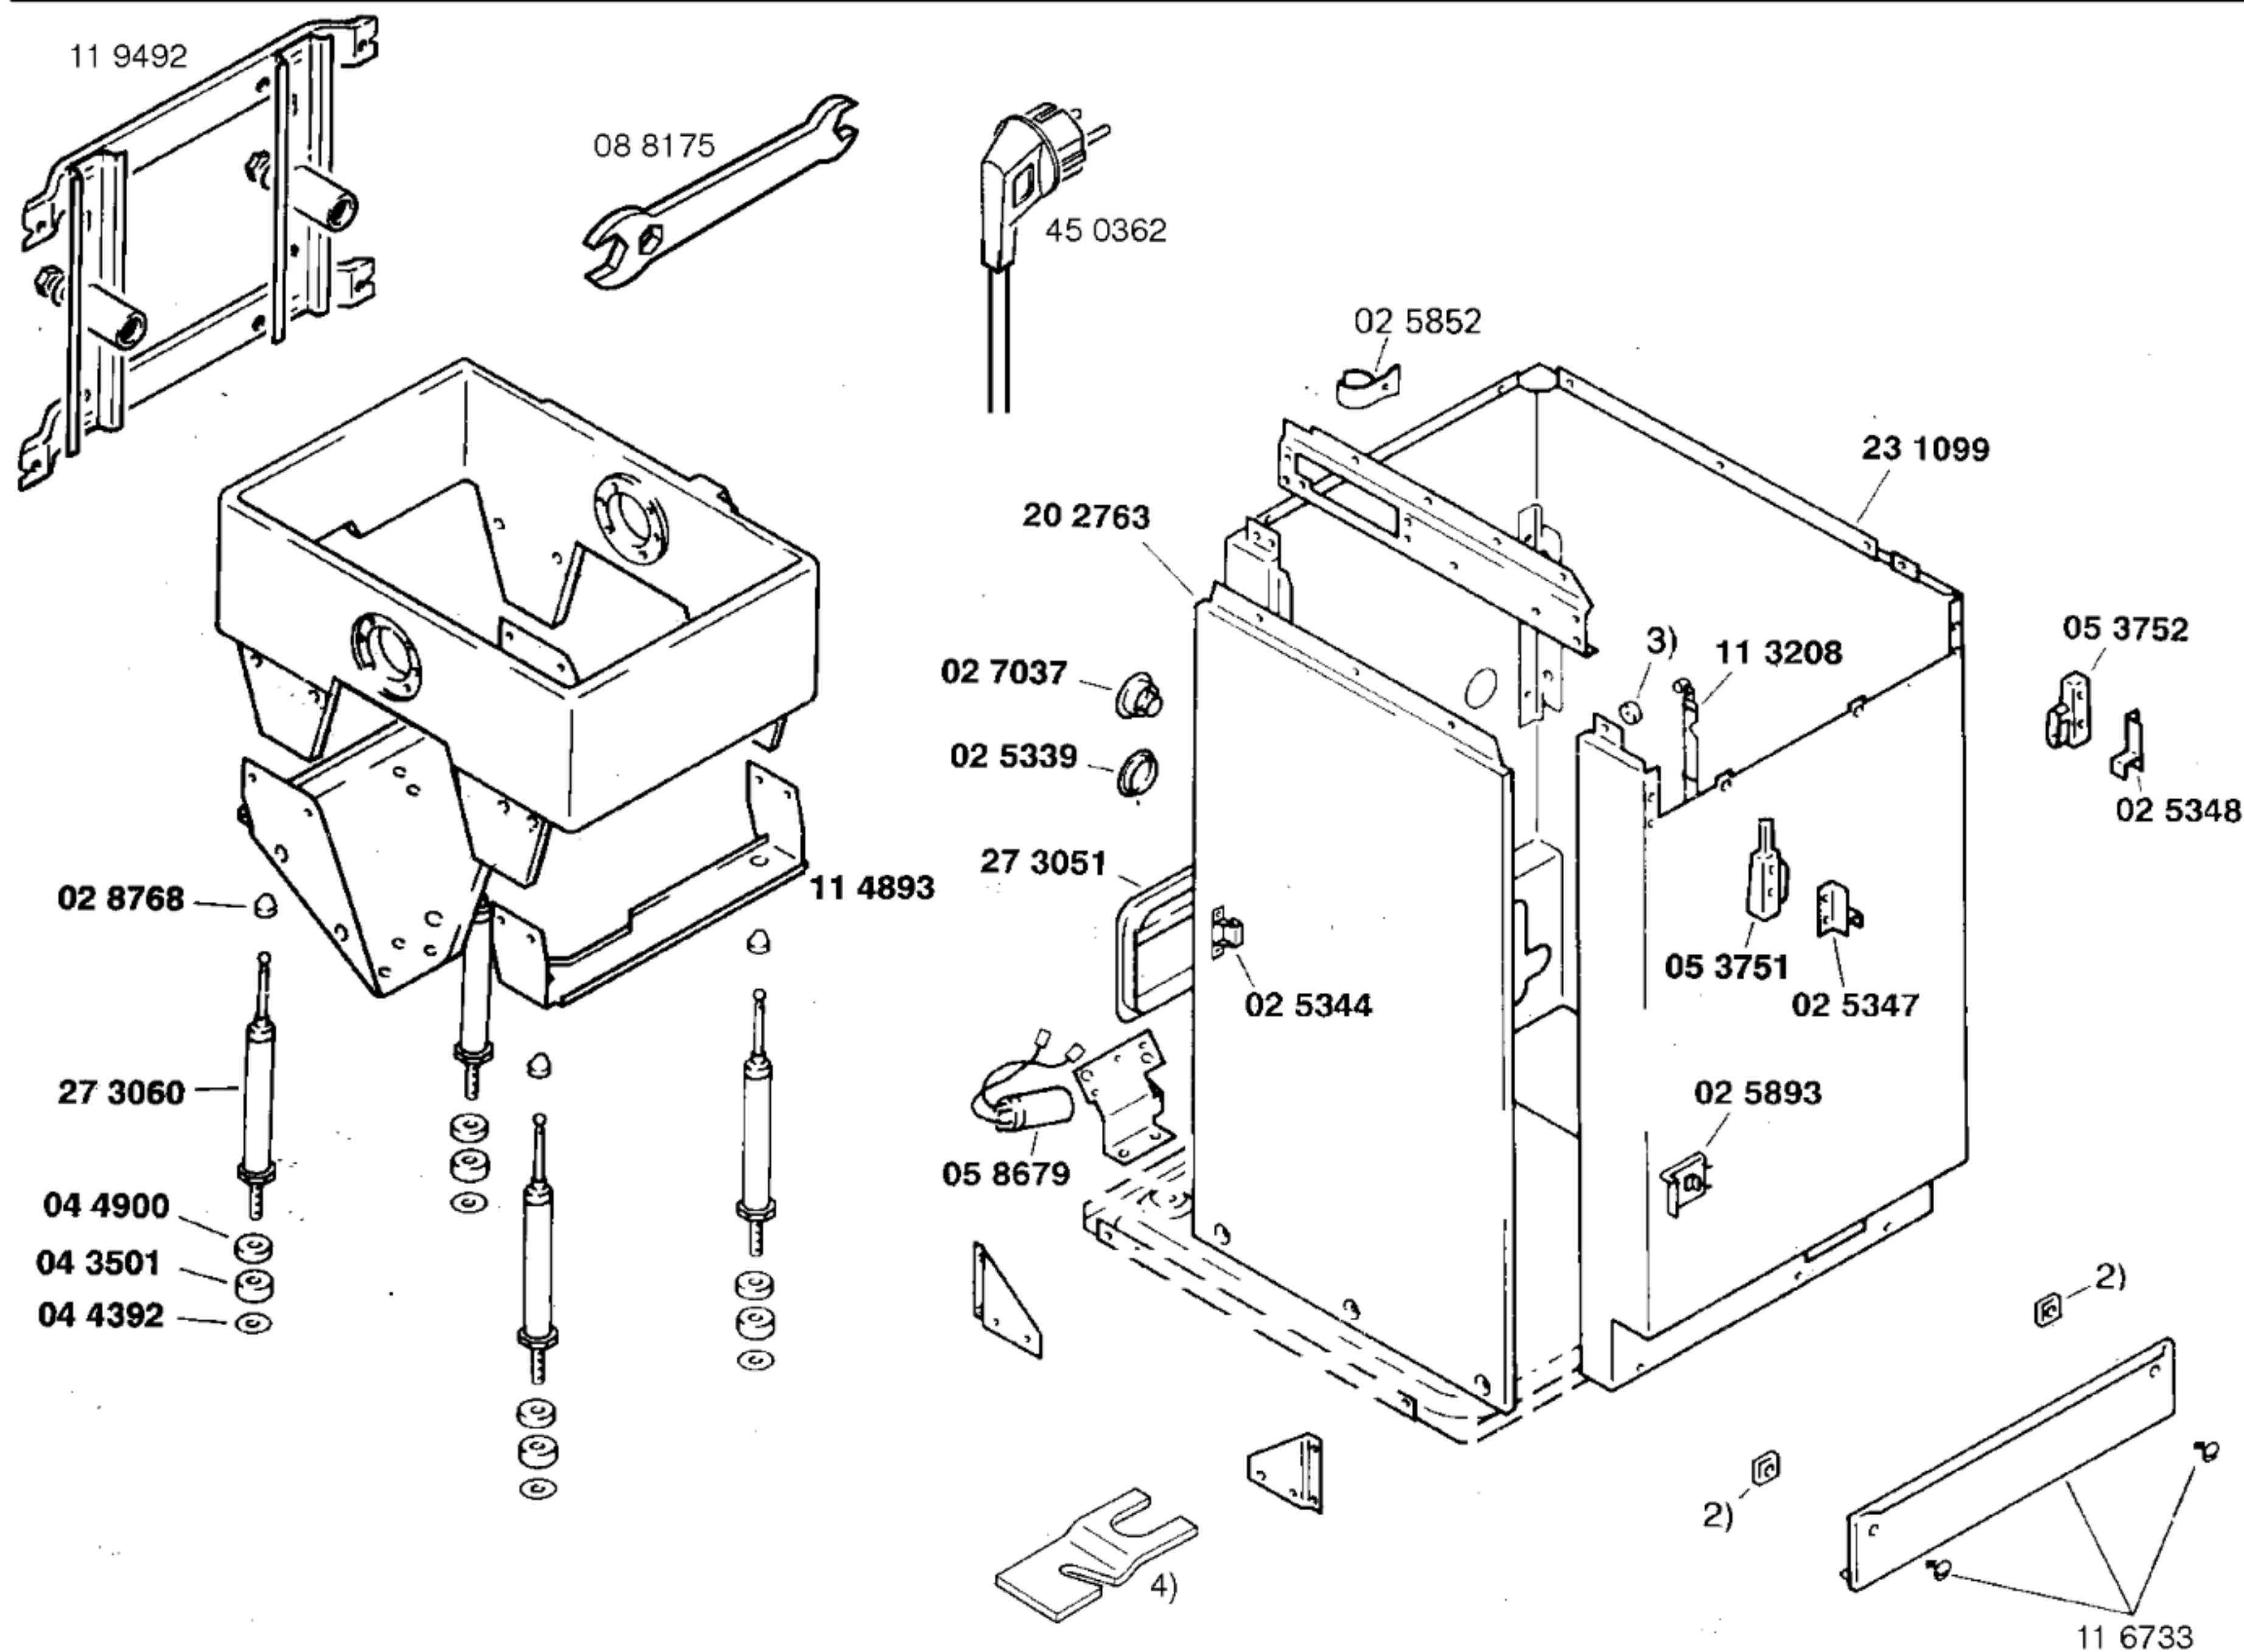

- 2) 01 4687
- 3) 02 5345
- 4) 08 0451
- Set

