


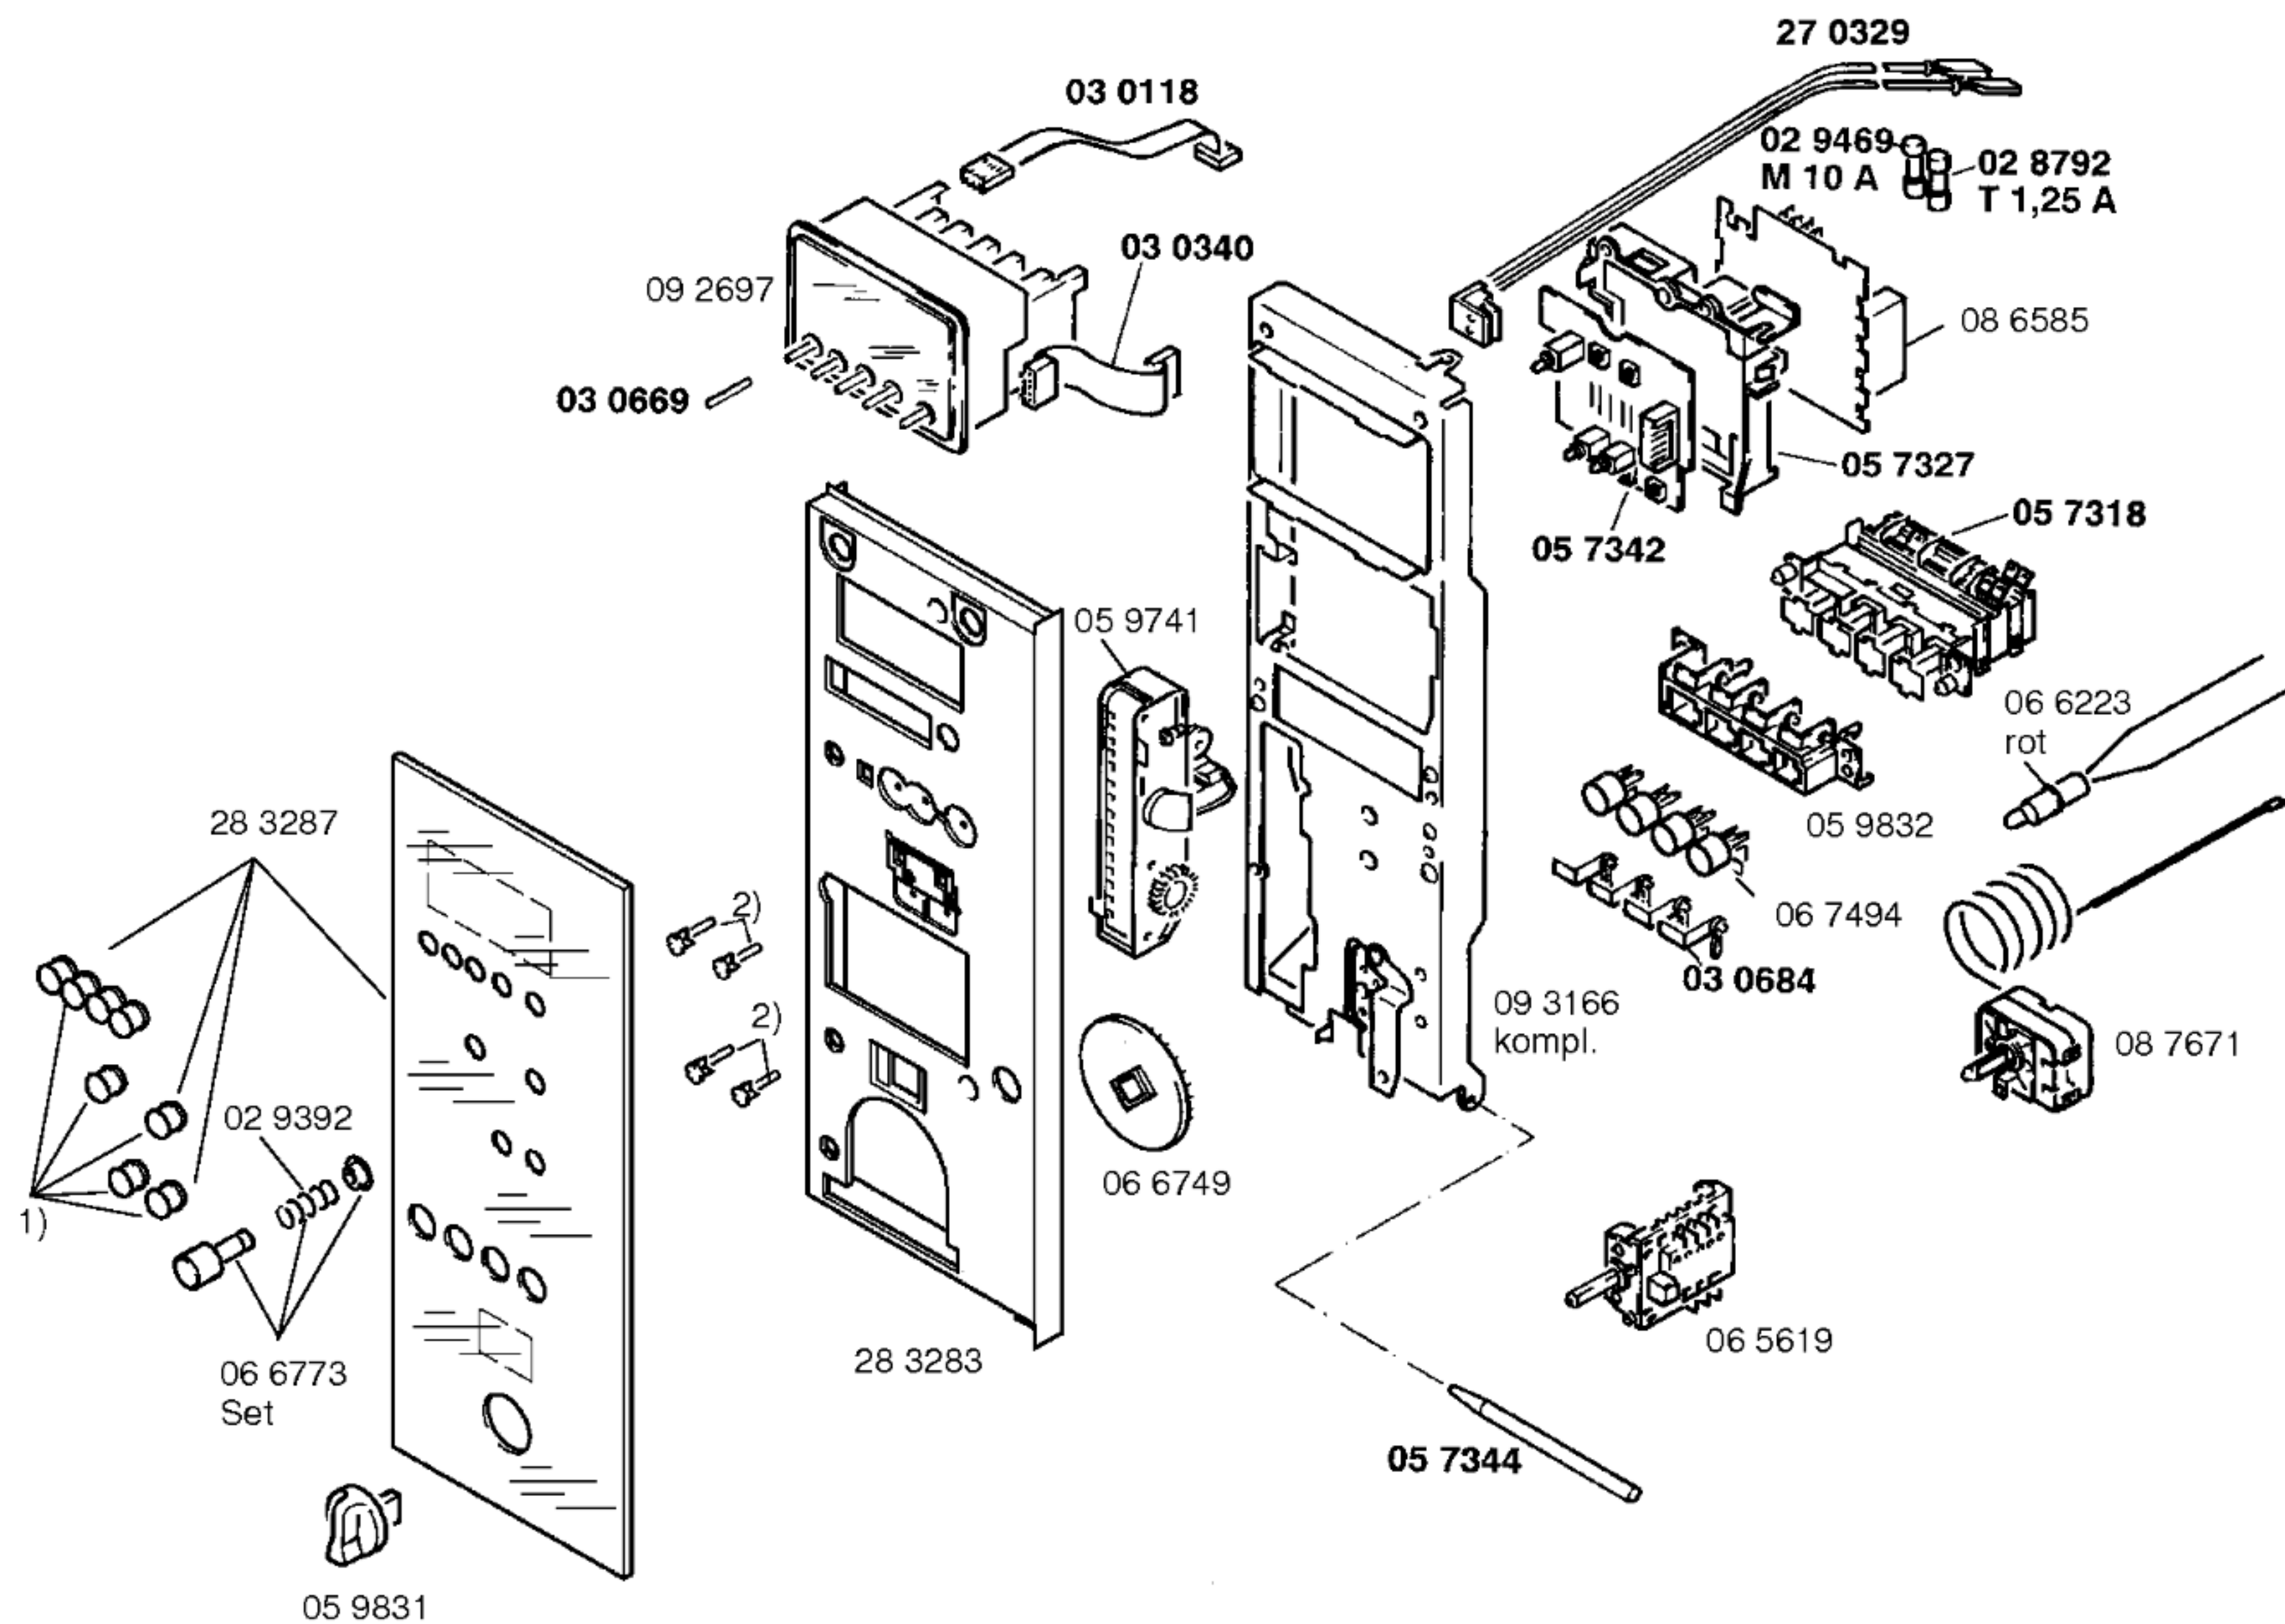

Gebrauchsanweisung
51 6104
(D,GB,F,I,NL)


Montageanleitung
51 6089
(D,F,GB,NL,I)

Kochbuch
51 5849
(NL)
51 5729
(D)


1) 06 8768
2) 03 0679

Zubehör:

Alu-Backblech
HZ 8055
Glaspfanne
HZ 8056
Glasbräter
HZ 9150

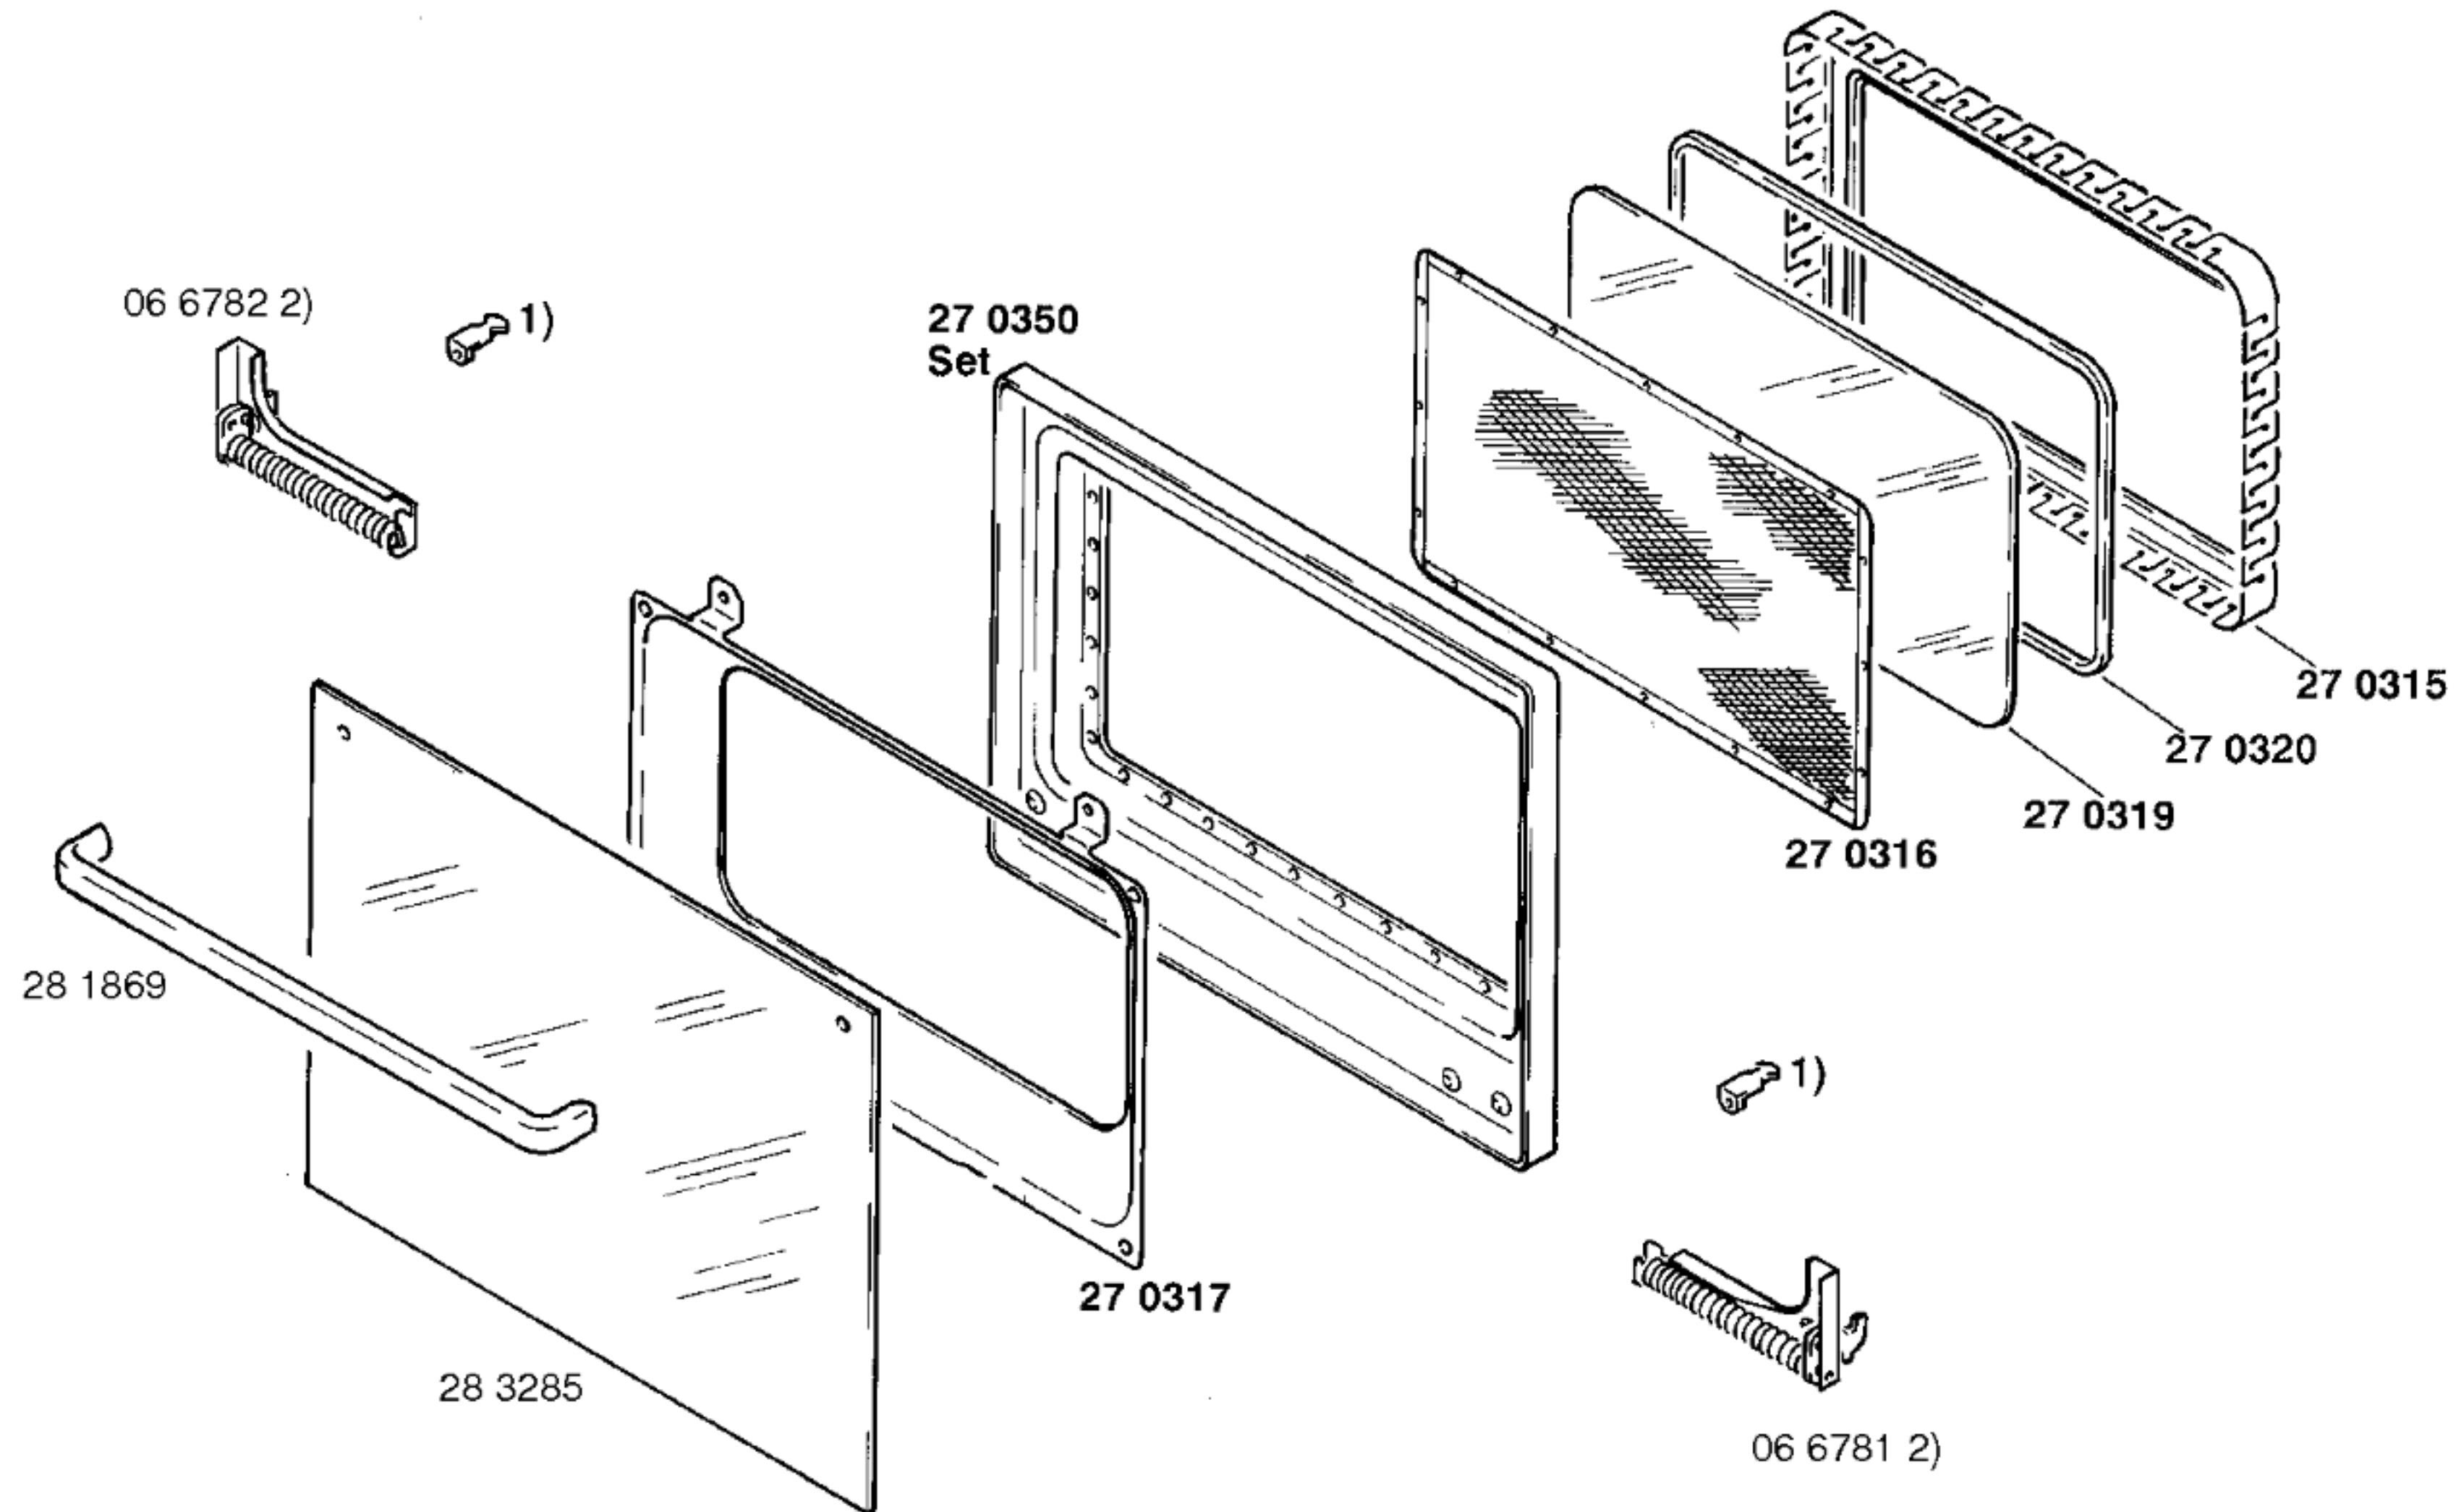


- 1) 03 0671
Stössel
- 2) 03 0813
Arretierstift

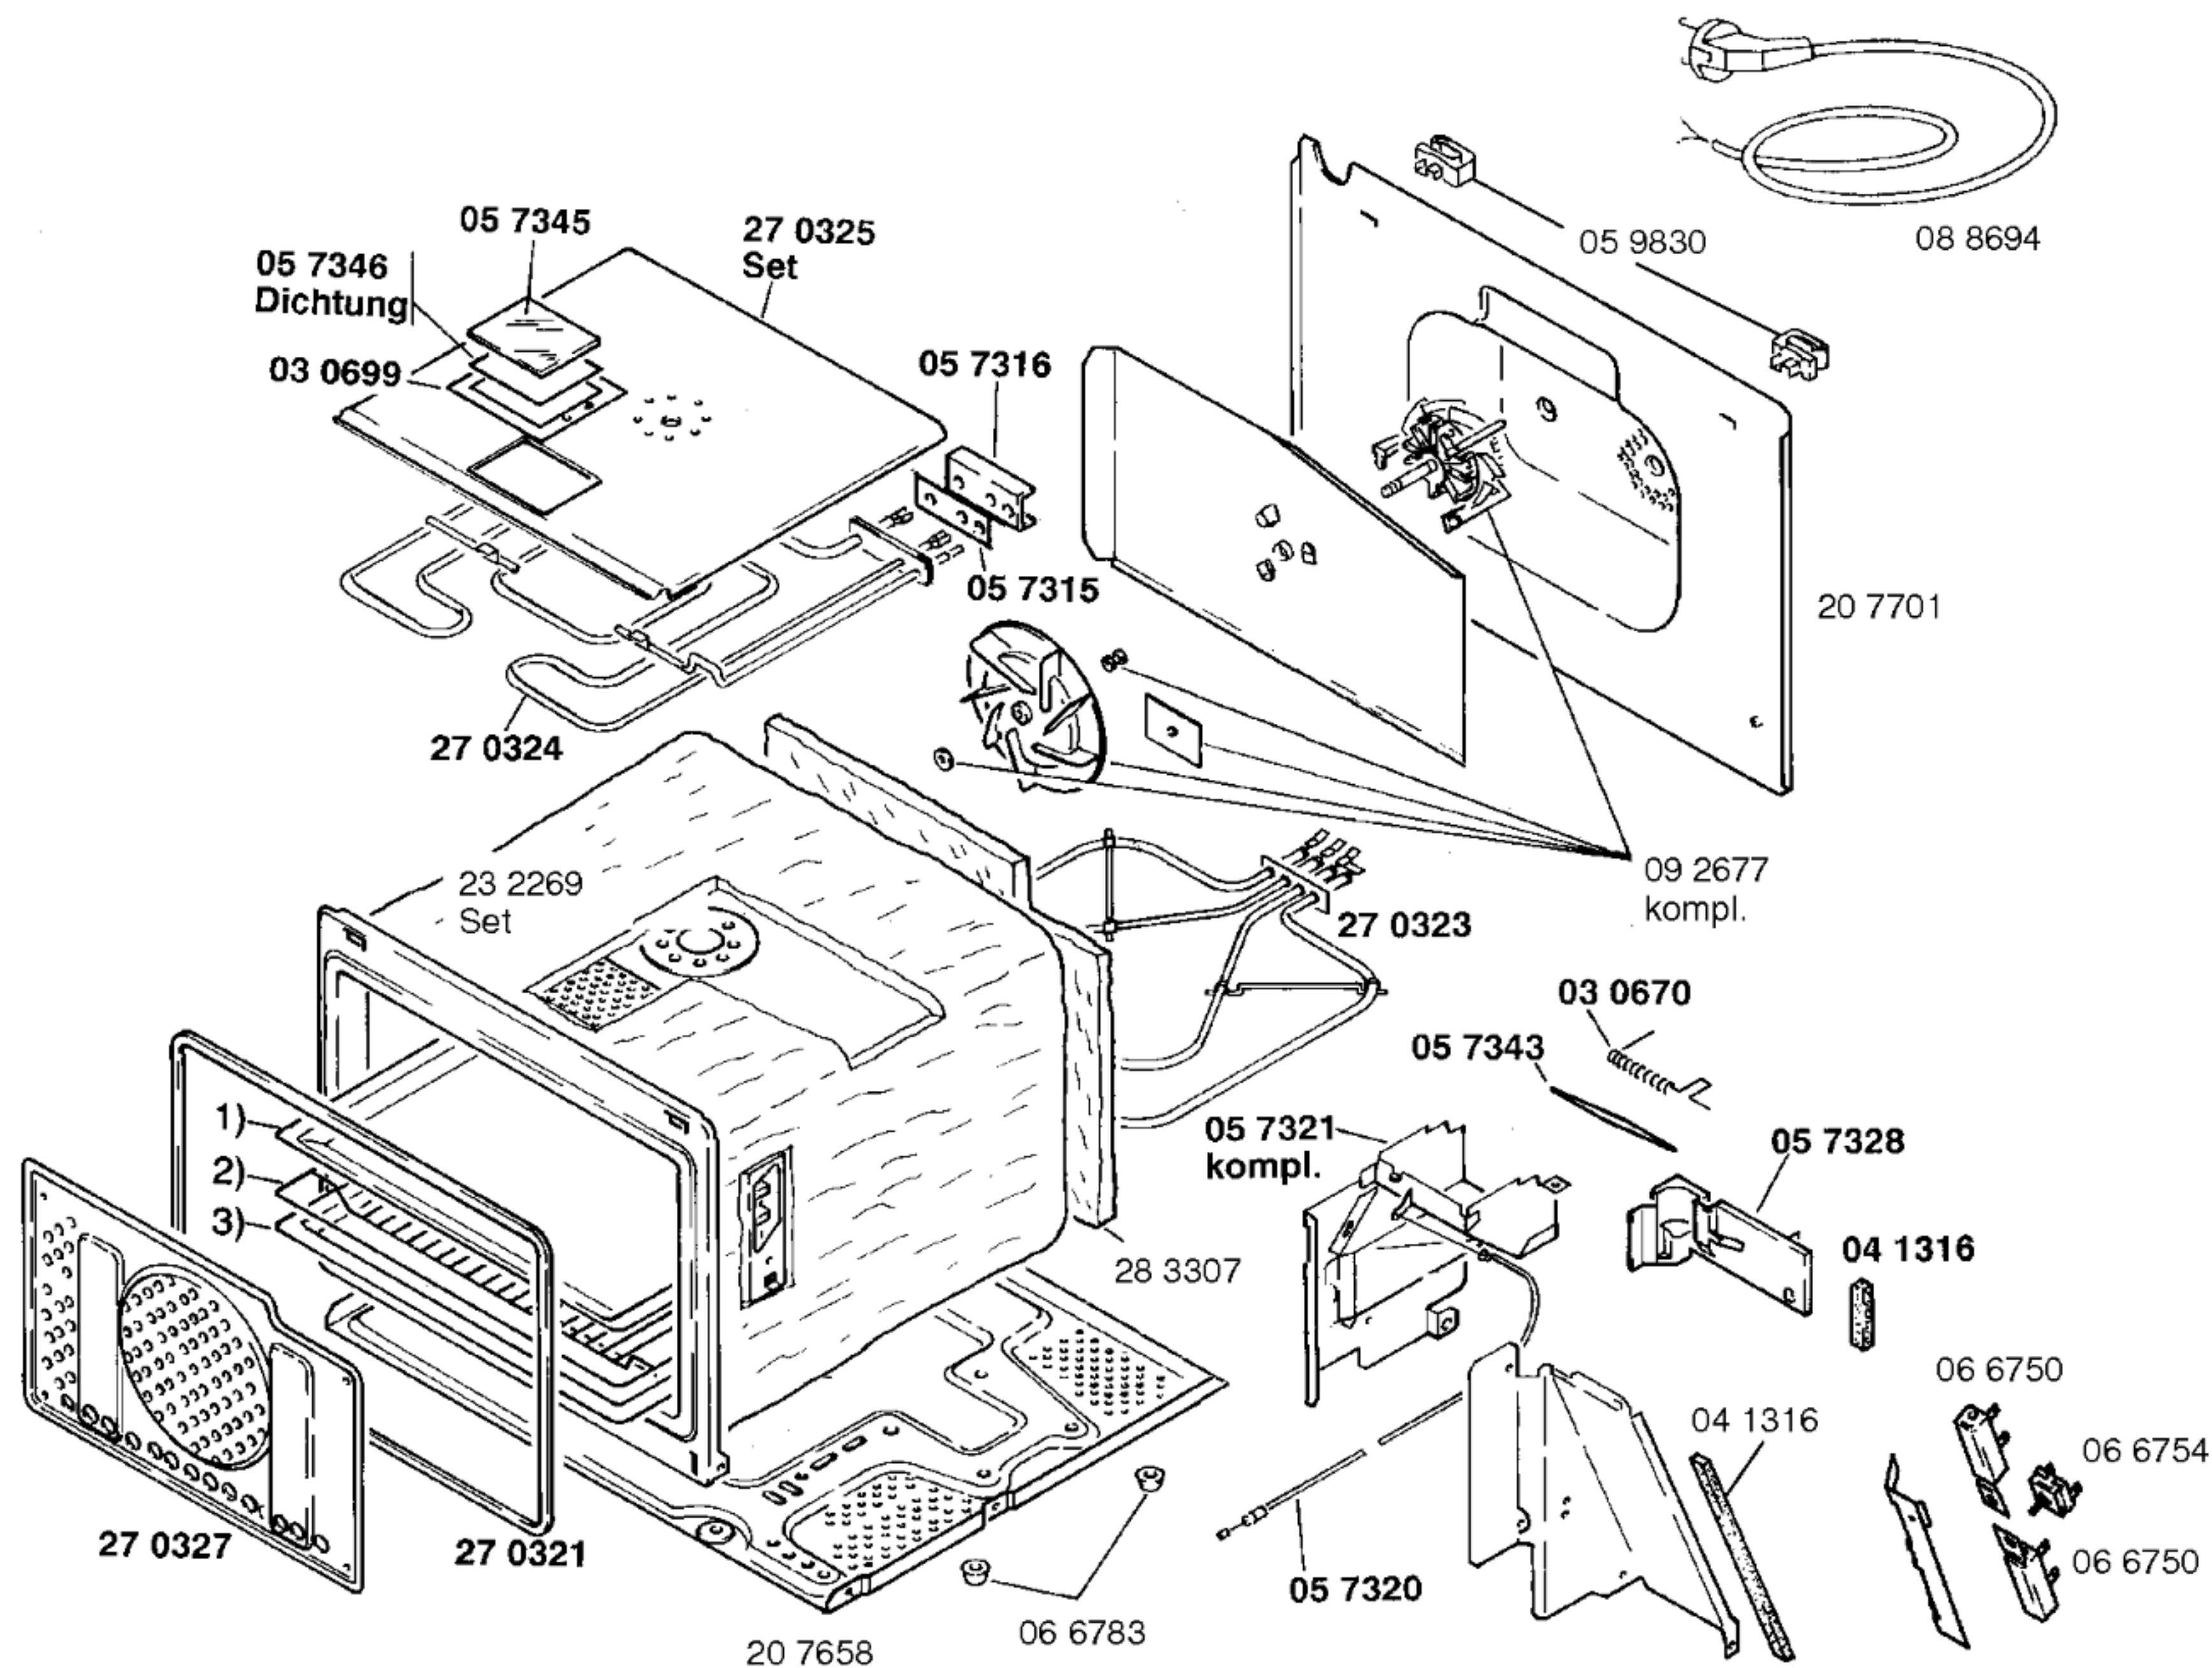


- 1) 11 4538
Backblech
- 2) 11 4539
Rost
- 3) 11 4537
Glasschale

02 8732
Anschlag für Backblech

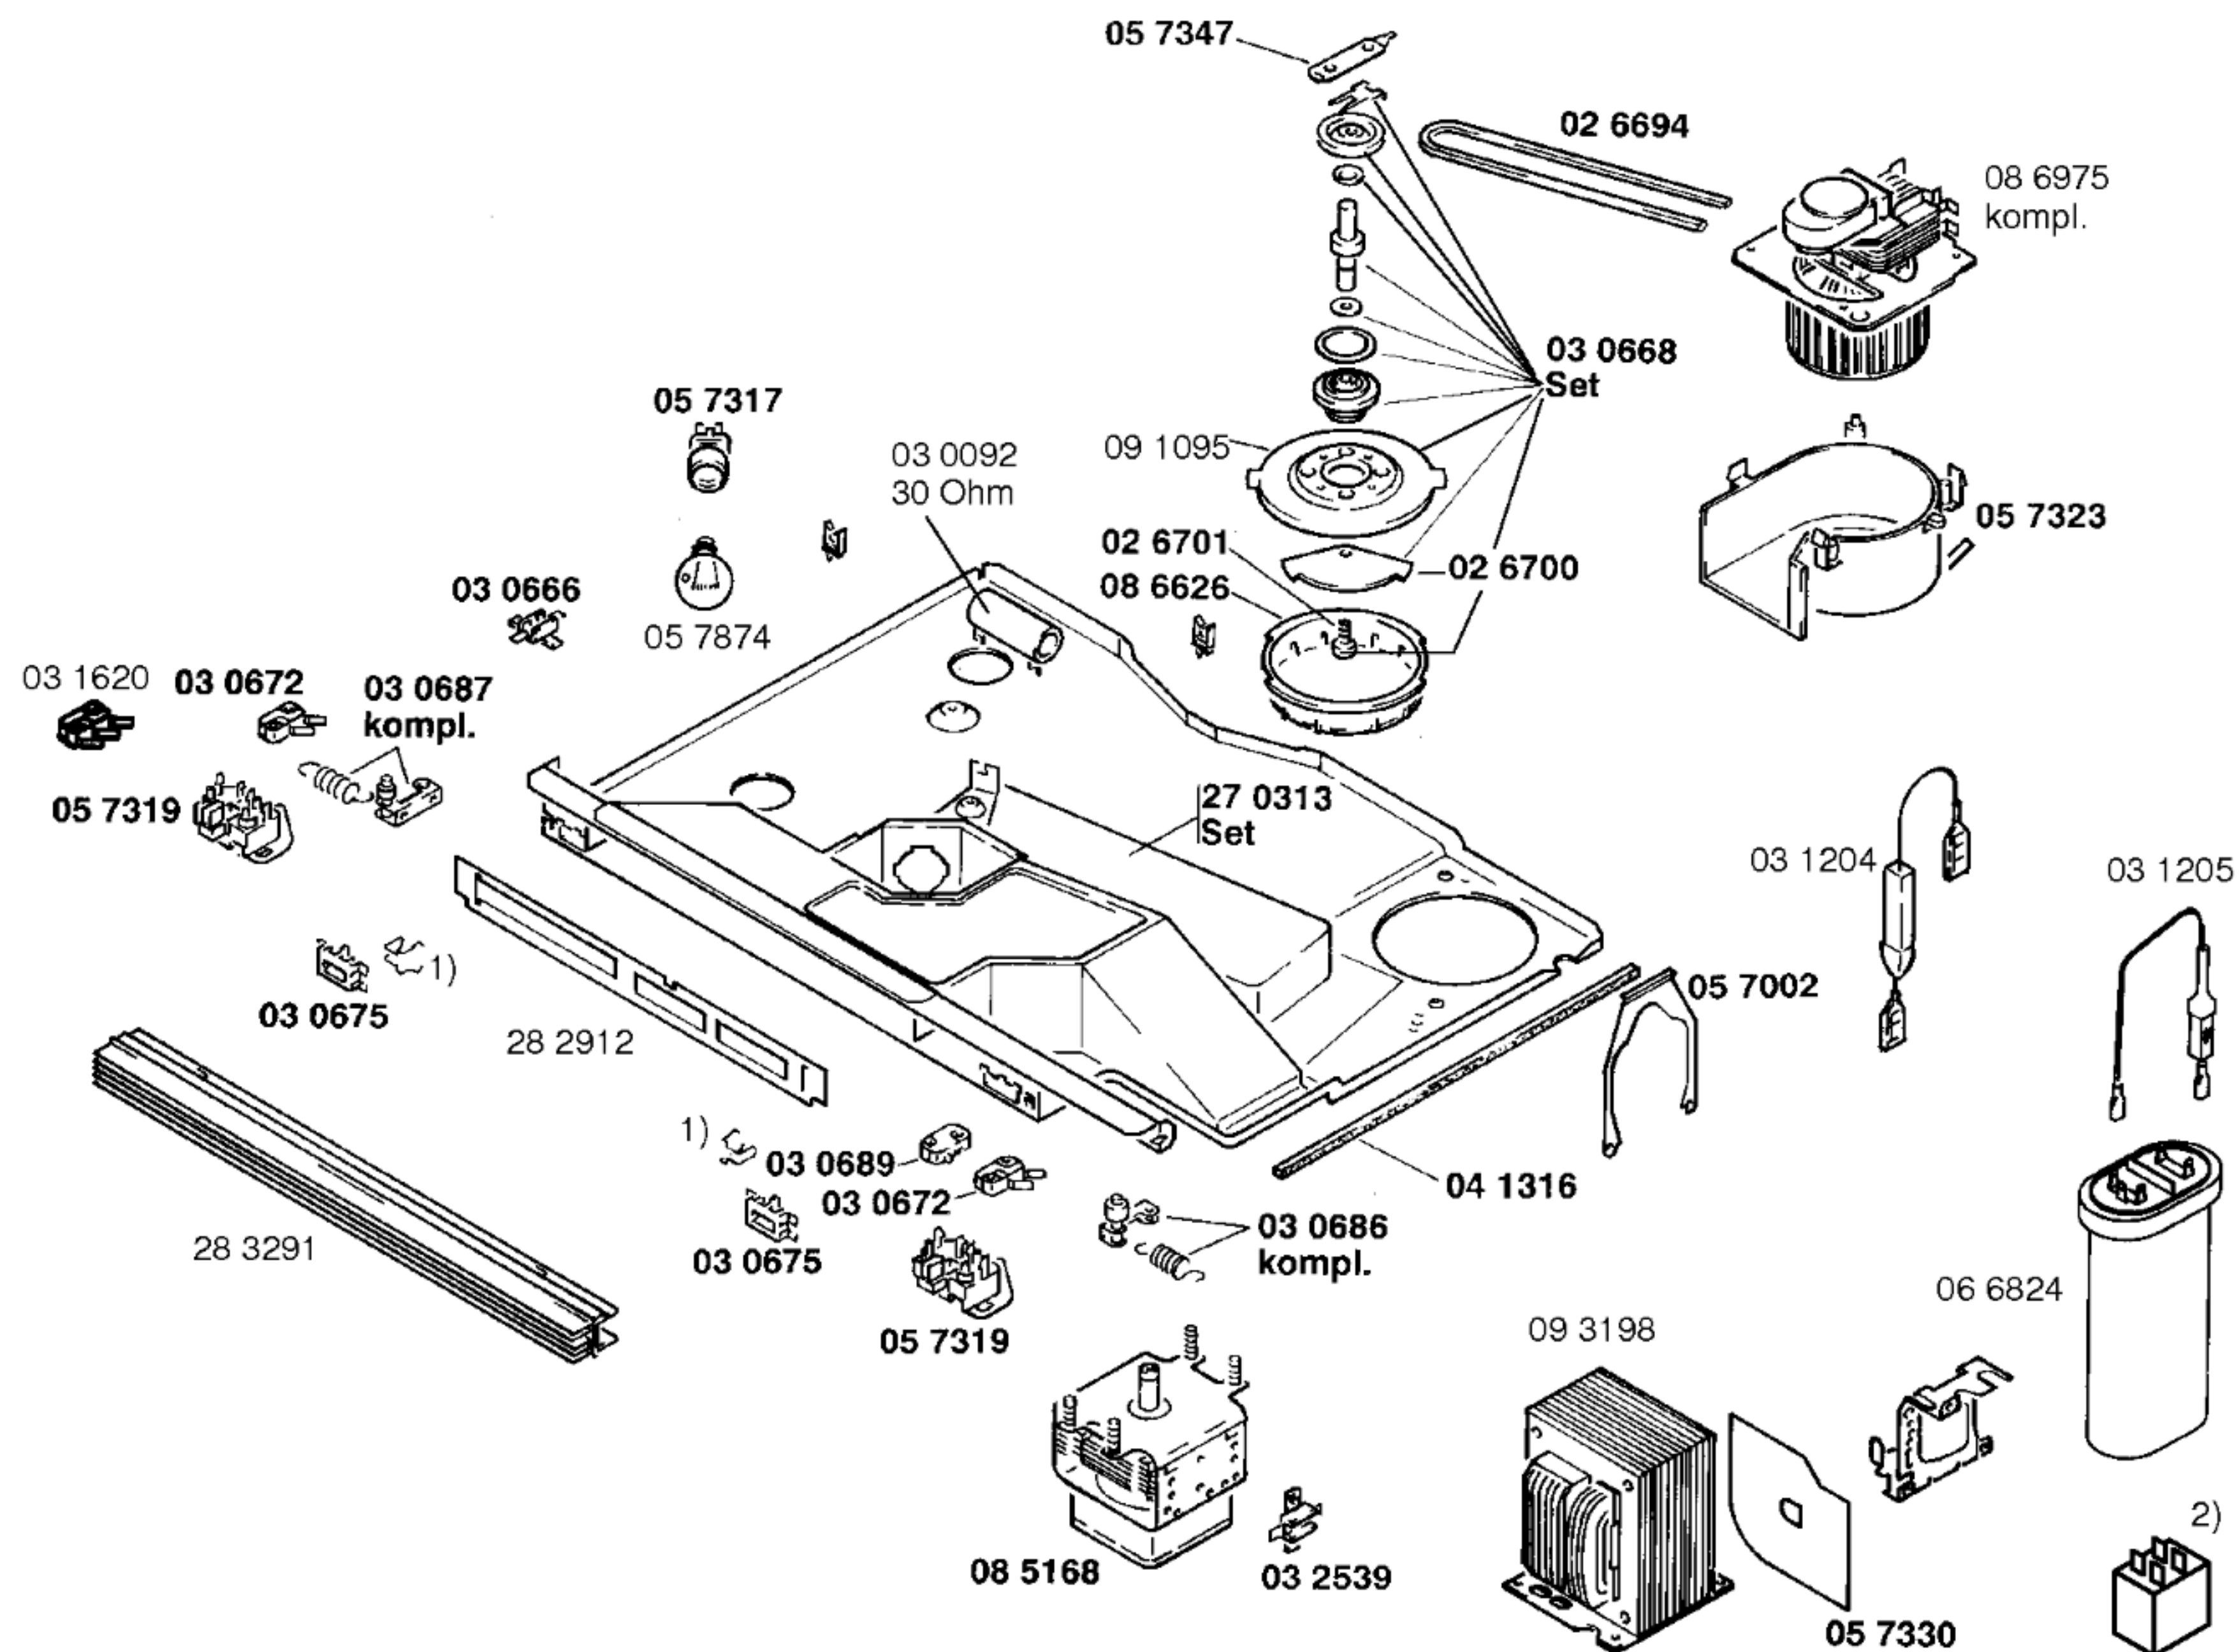

- 1) 06 6760
- 2) 06 5353

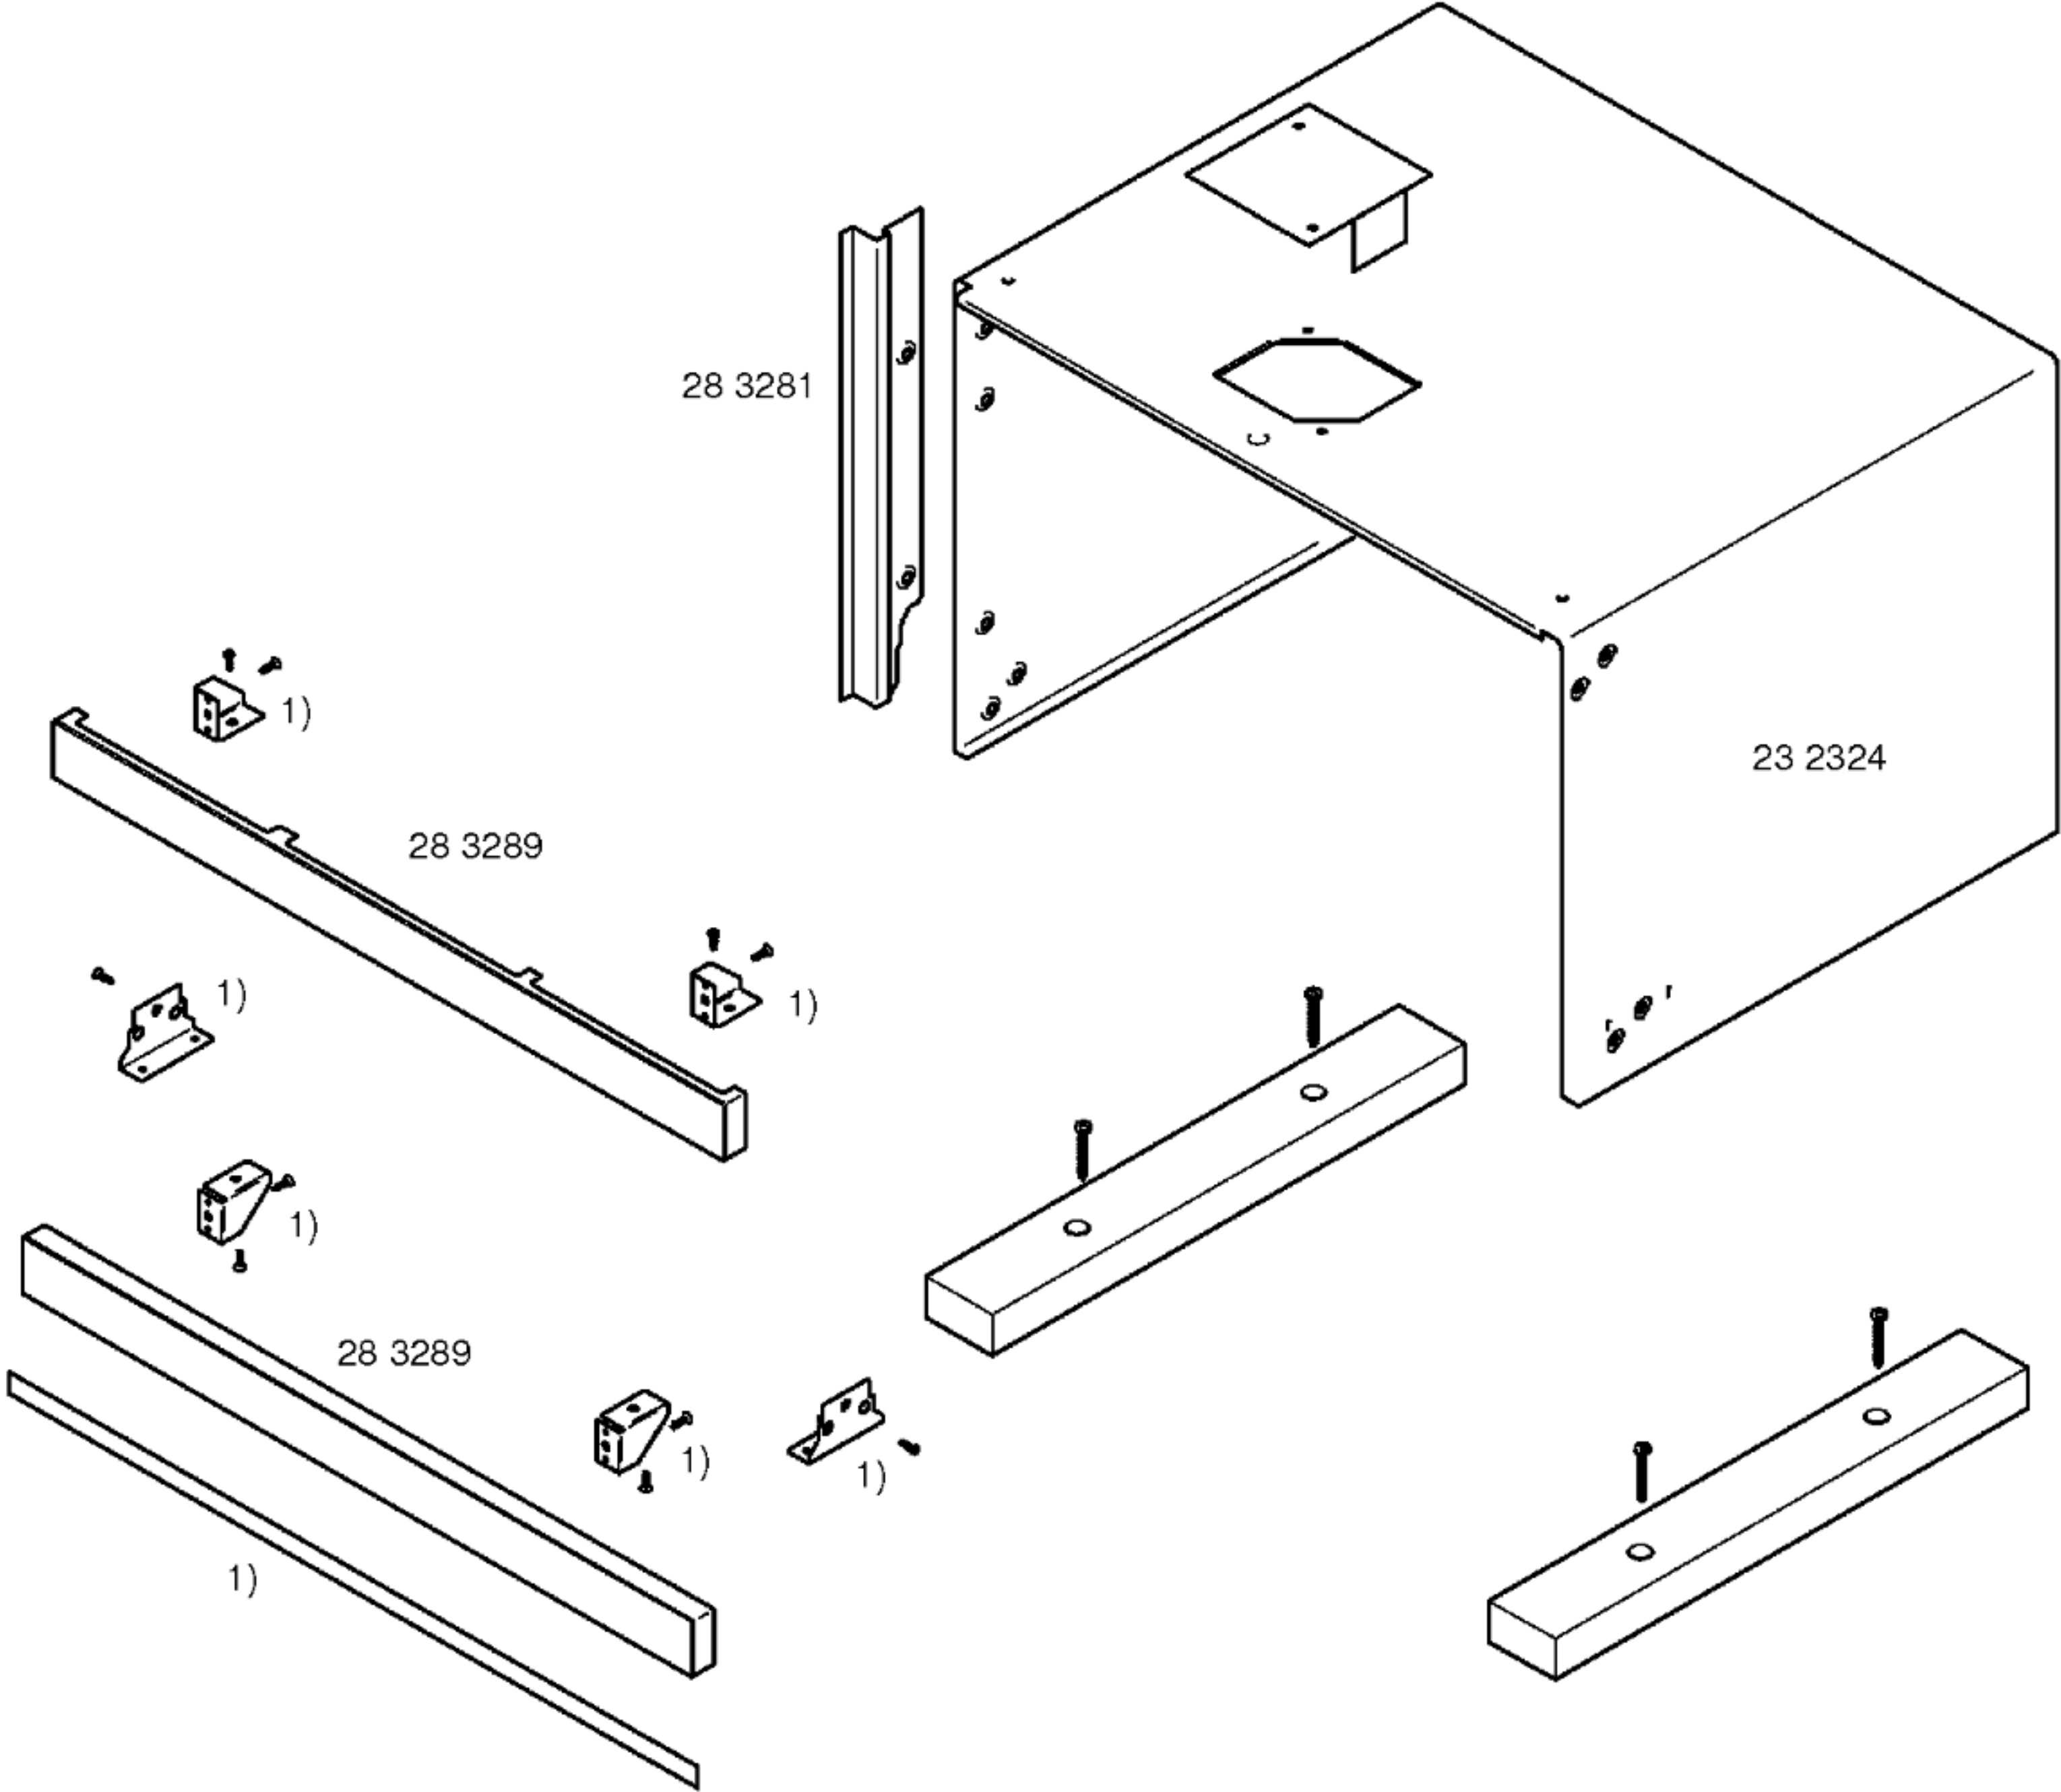

1) 06 6979