


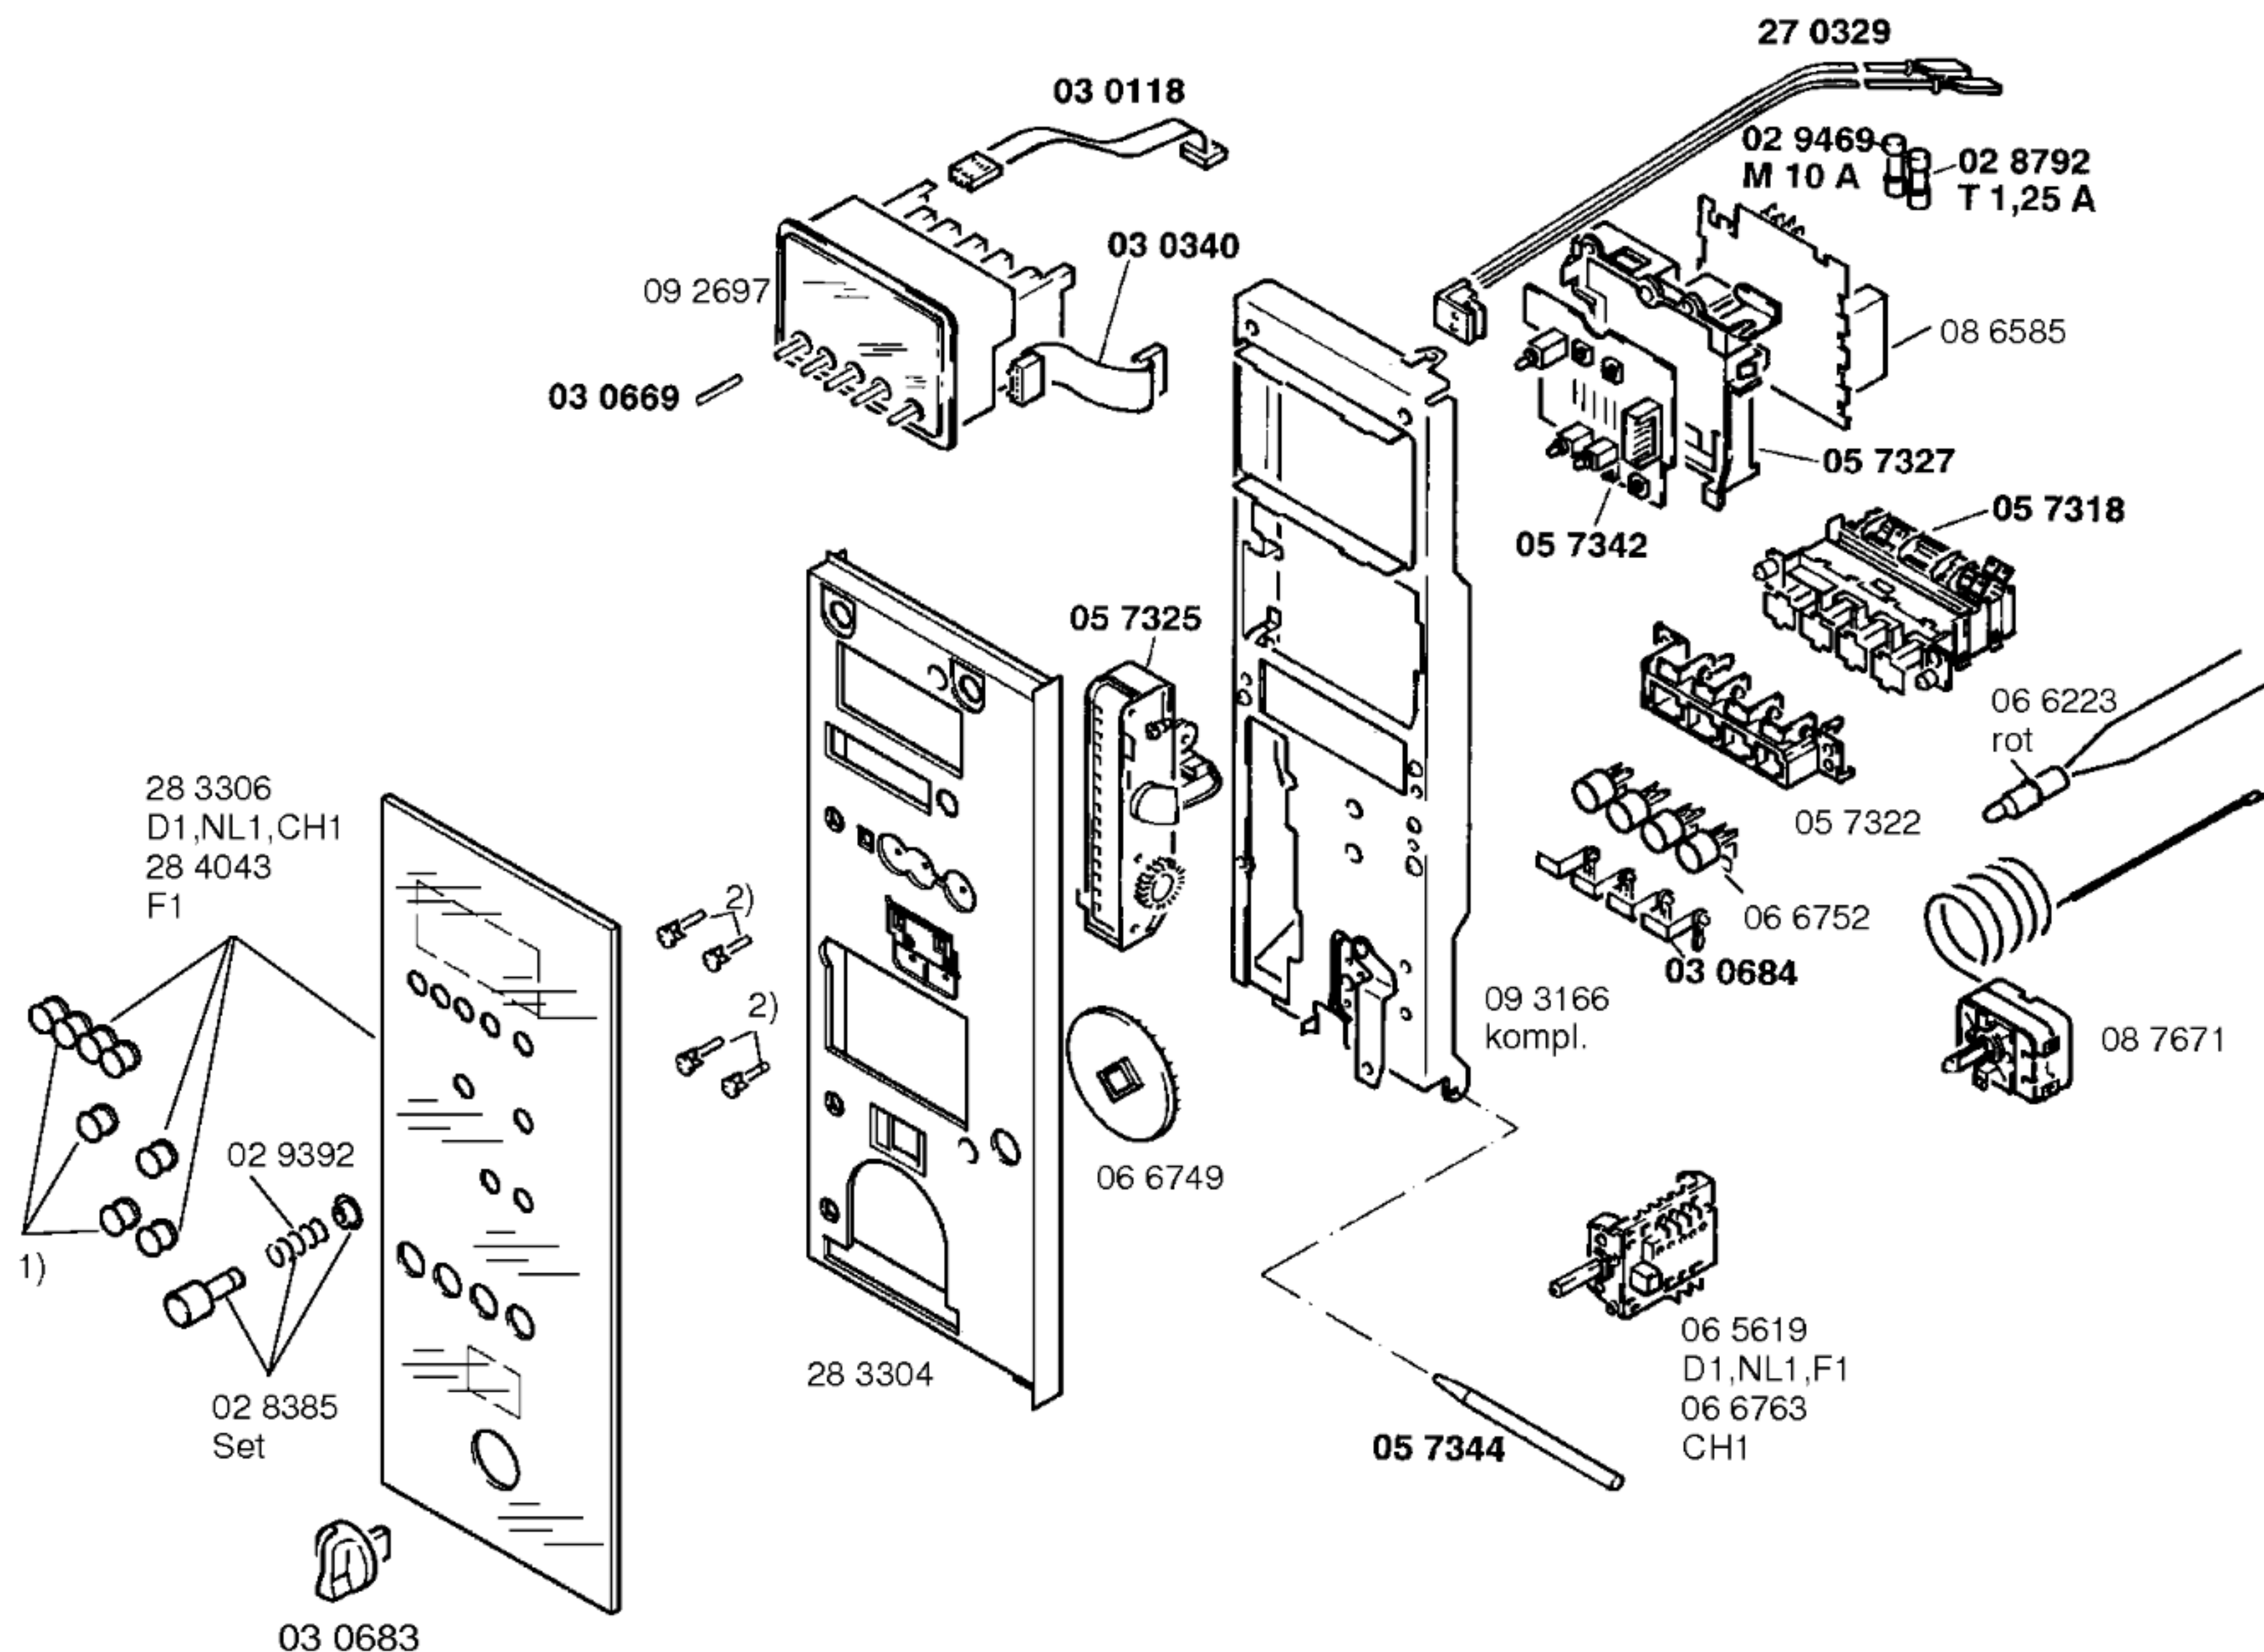

Gebrauchsanweisung

51 6103
 (D)
 51 6104
 (D, GB, F, I, NL)

Montageanleitung

51 6089
 (D, GB, F, I, NL)

Kurzanweisung

51 6104
 (D)


Kochbuch

51 5729
 (D)
 D1, CH1
 51 5849
 (NL)
 NL1
 51 5853
 (F)
 F1


1) 06 6751
 weiss
 2) 03 0679

Zubehör:

Alu-Backblech
 HZ 8055
 Glaspfanne
 HZ 8056
 Glasbräter
 HZ 9150

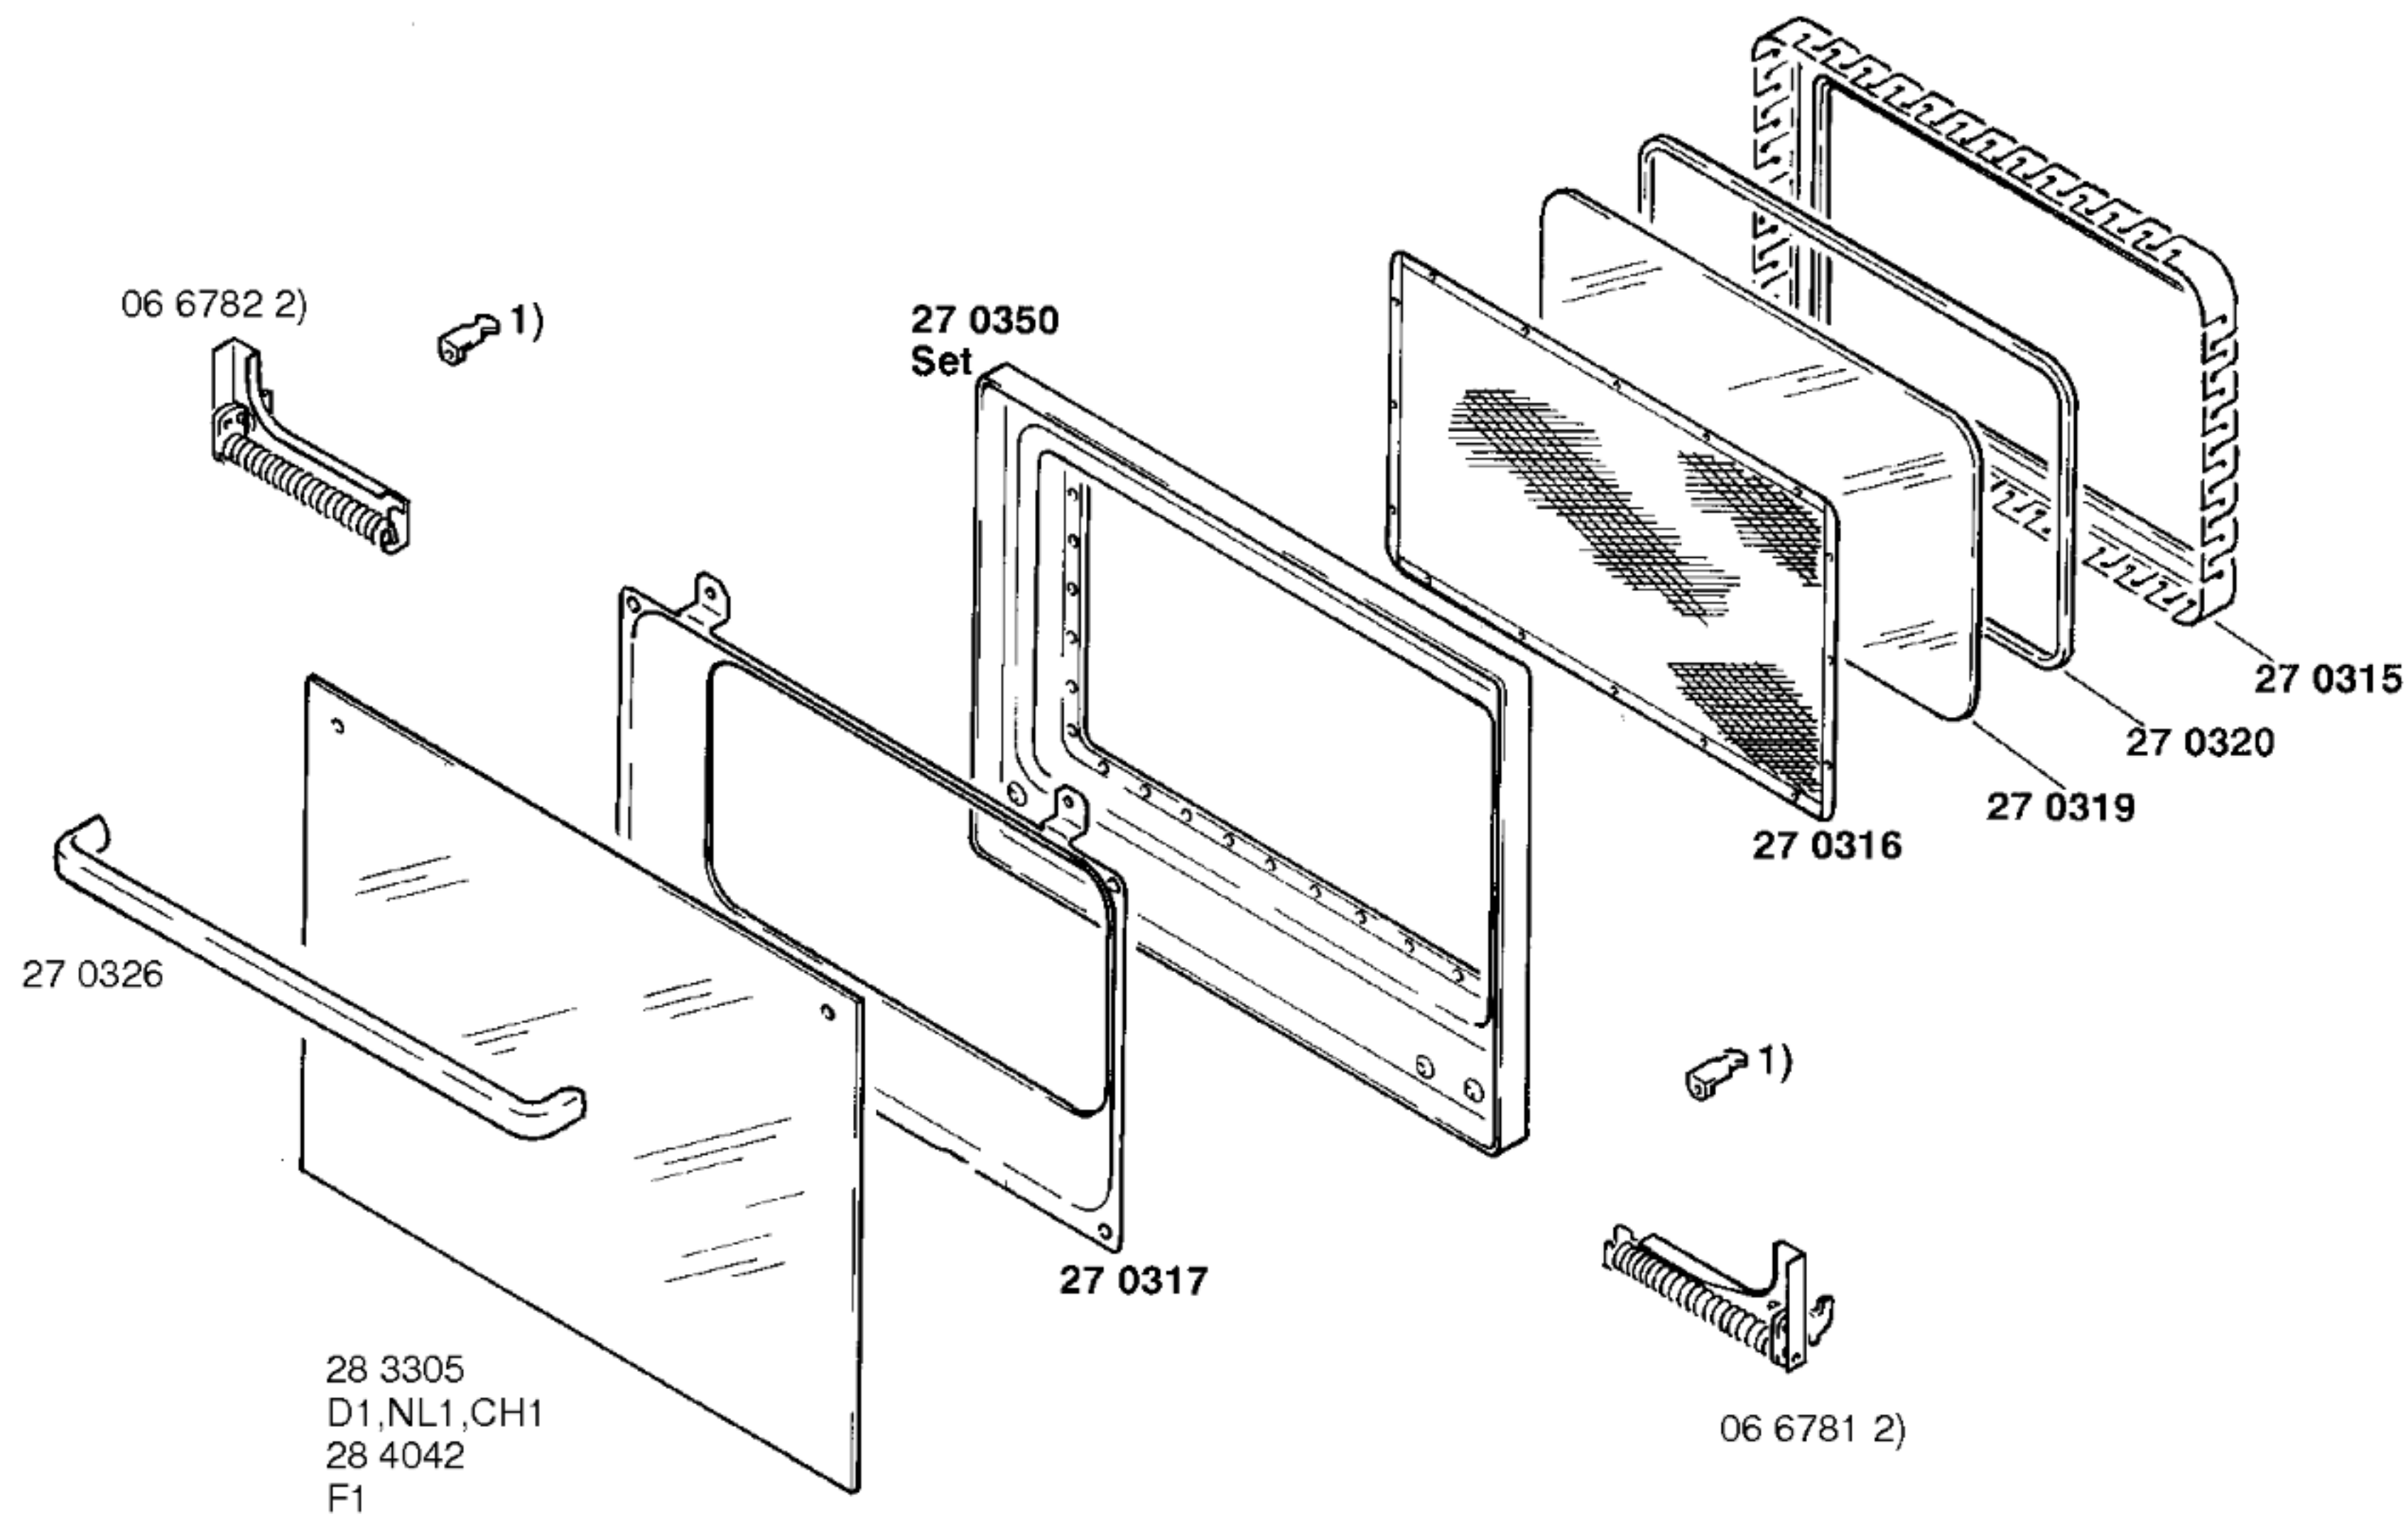


- 1) 03 0671
Stössel
- 2) 03 0813
Arretierstift

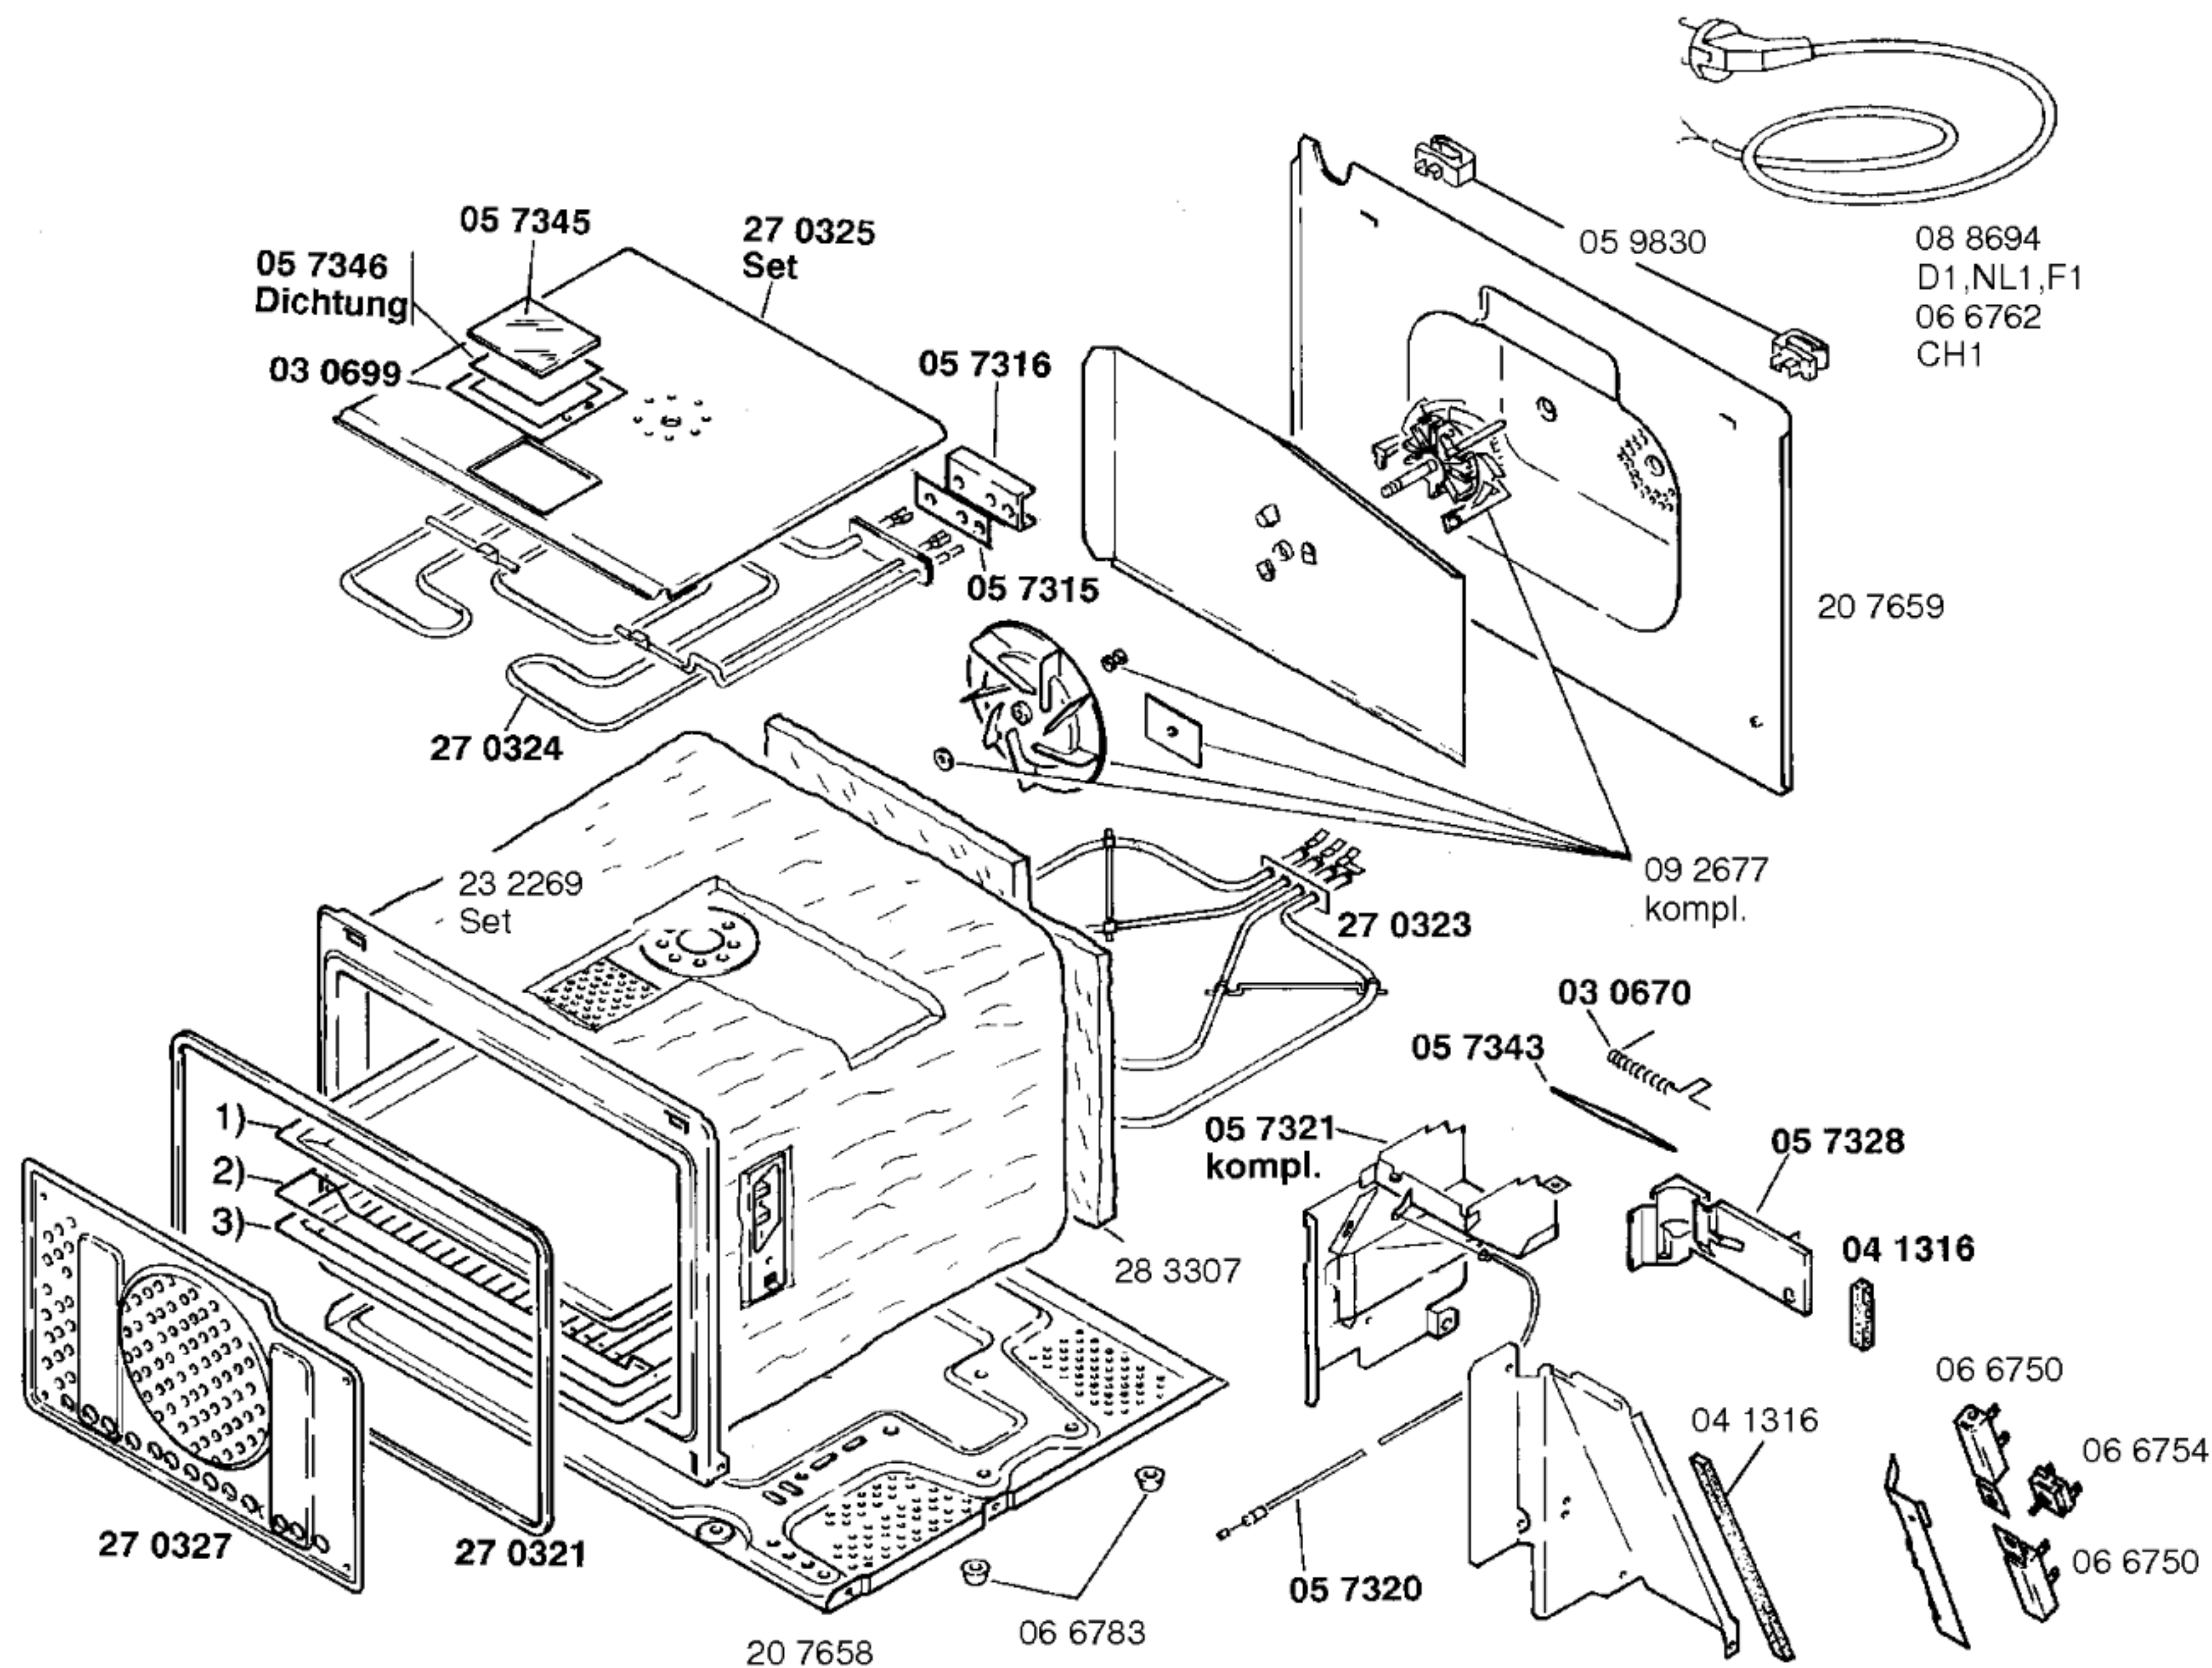

- 1) 11 4538
Backblech
- 2) 11 4539
Rost
- 3) 11 4537
Glasschale

02 8732
Anschlag für Backblech

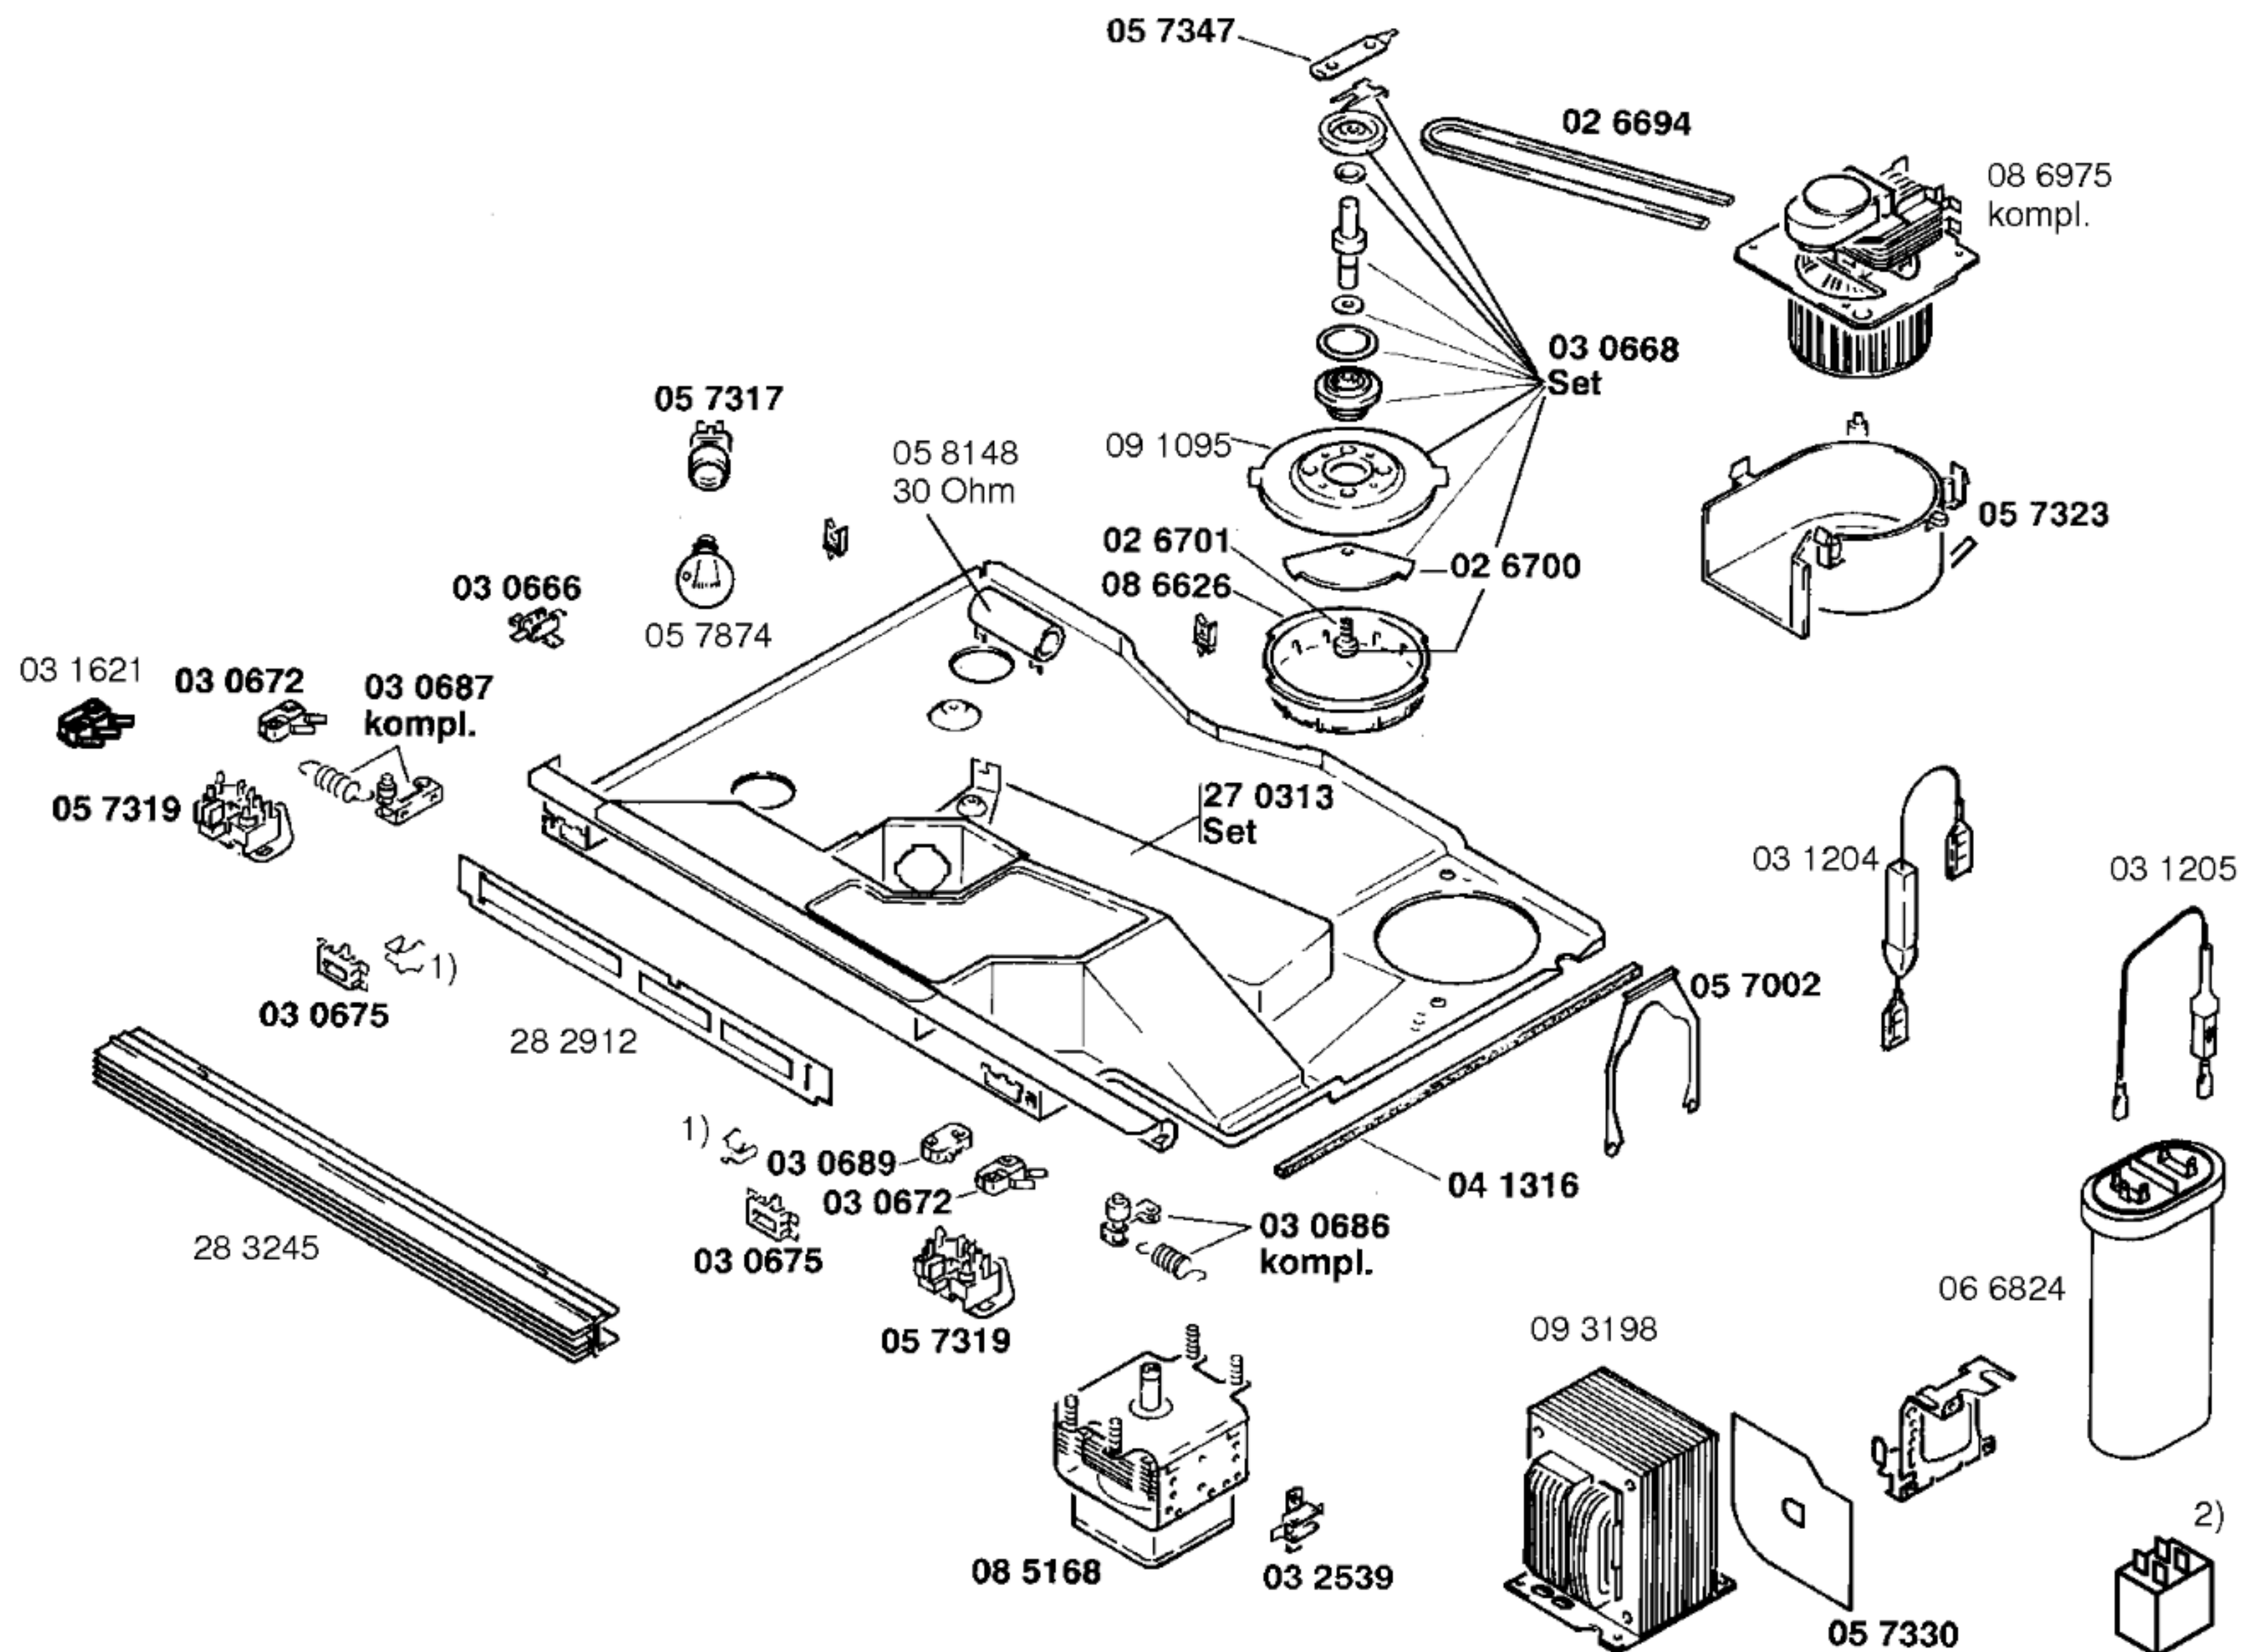

- 1) 06 6760
- 2) 06 5353
- D1, NL1, F1
- 05 8742
- CH1

1) 06 6979

