


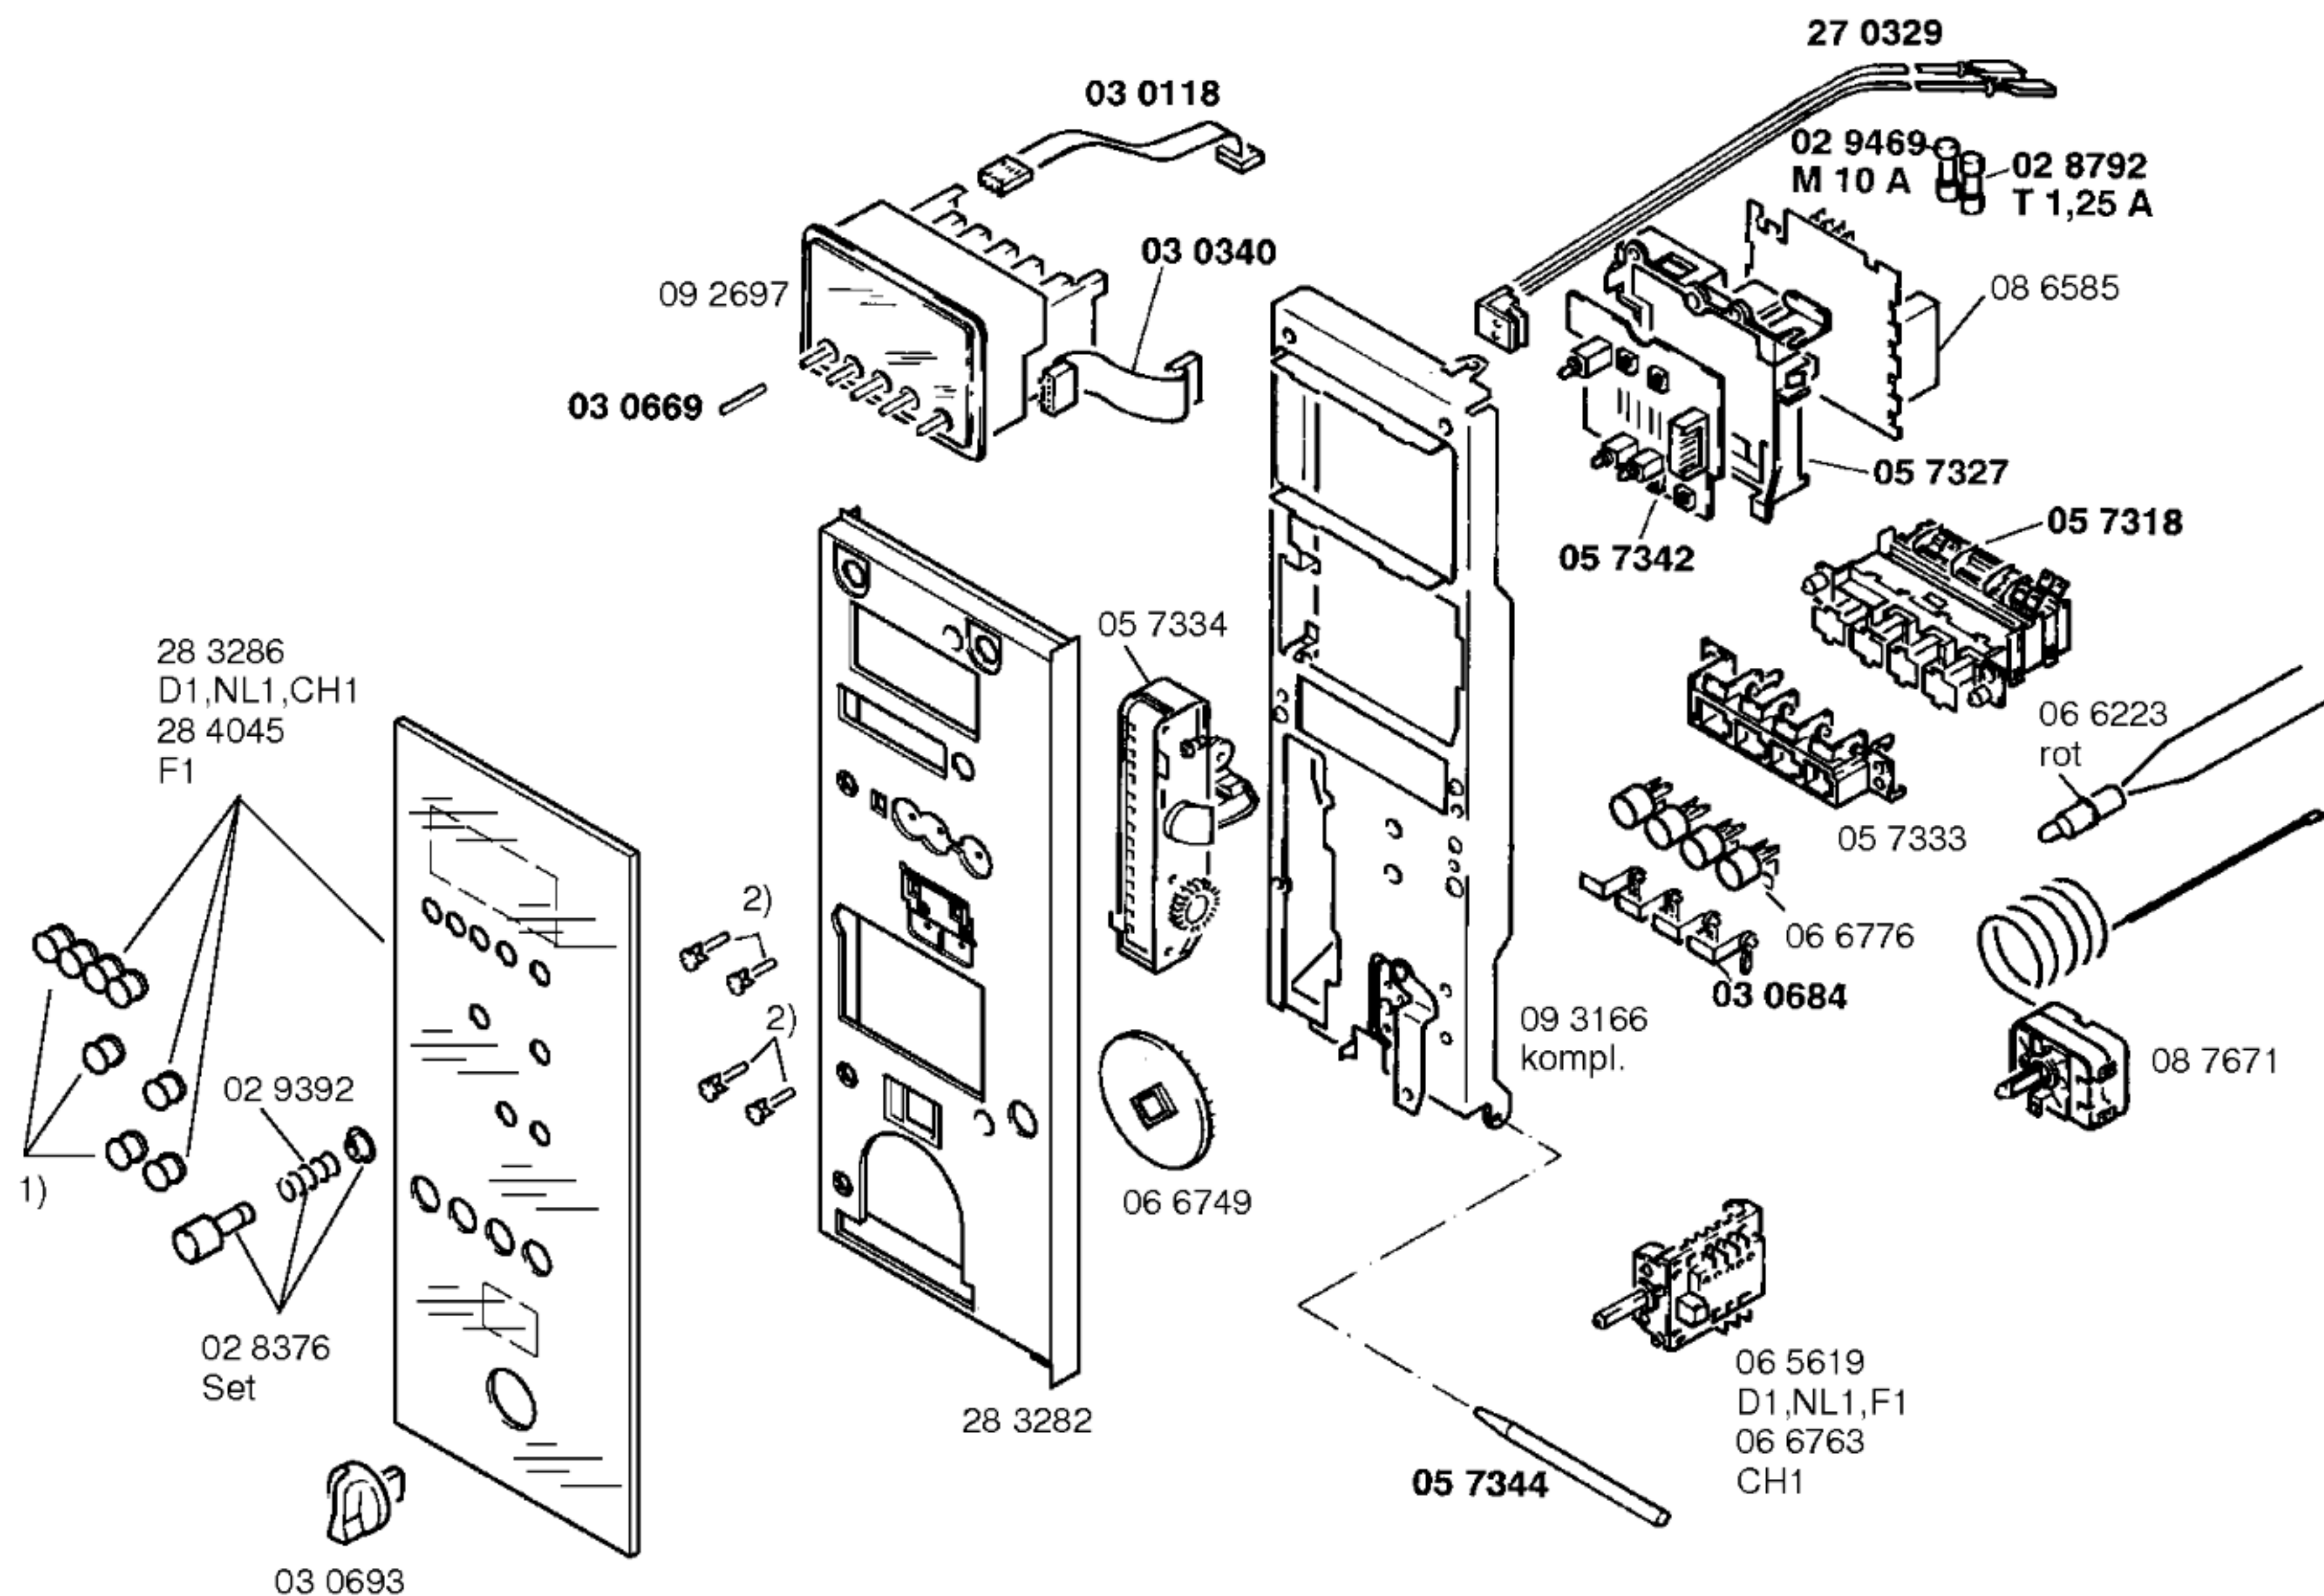

Gebrauchsanweisung

51 6103
(D)
51 6104
(D,GB,F,I,NL)

Montageanleitung

51 6089
(D,F,GB,I,NL)

Kurzanweisung

51 6004
(D)


Kochbuch

51 5729
(D)
D1,CH1
51 5849
(NL)
NL1
51 5853
(F)
F1


1) 06 6775
2) 03 0679

Zubehör:

Alu-Backblech
HZ 8055
Glaspfanne
HZ 8056
Glasbräter
HZ 9150

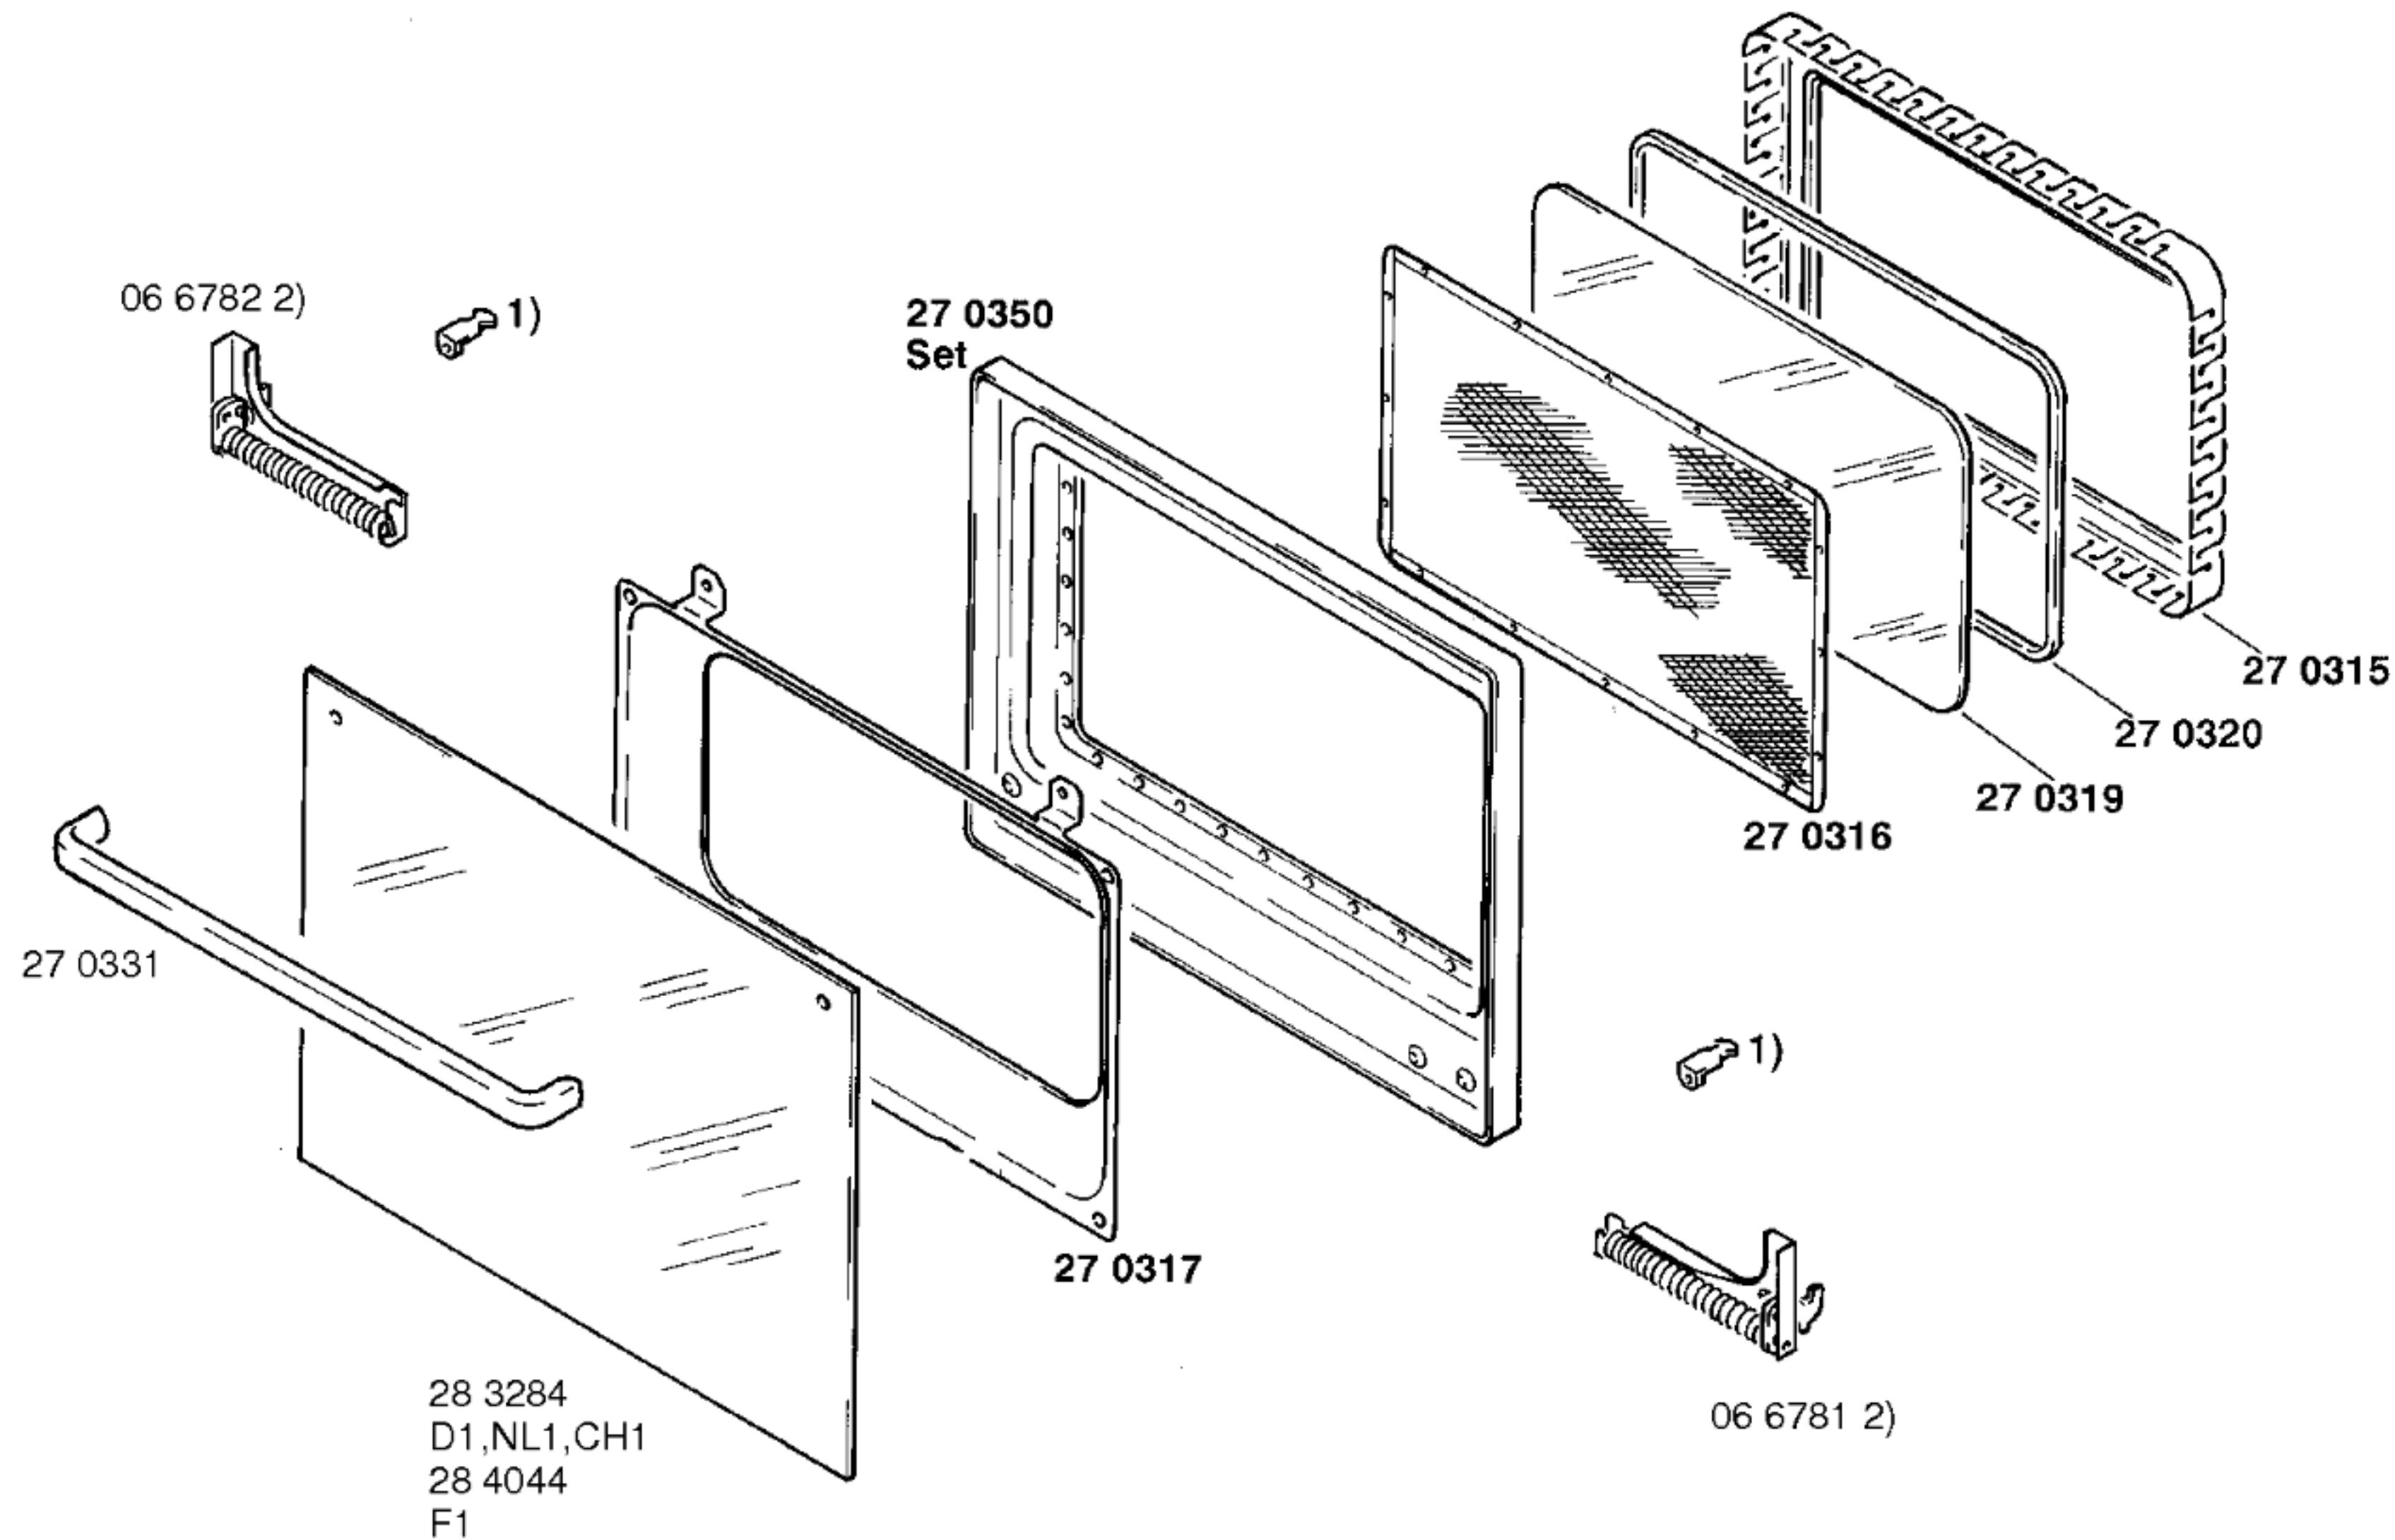


- 1) 03 0671
Stössel
- 2) 03 0813
Arretierstift

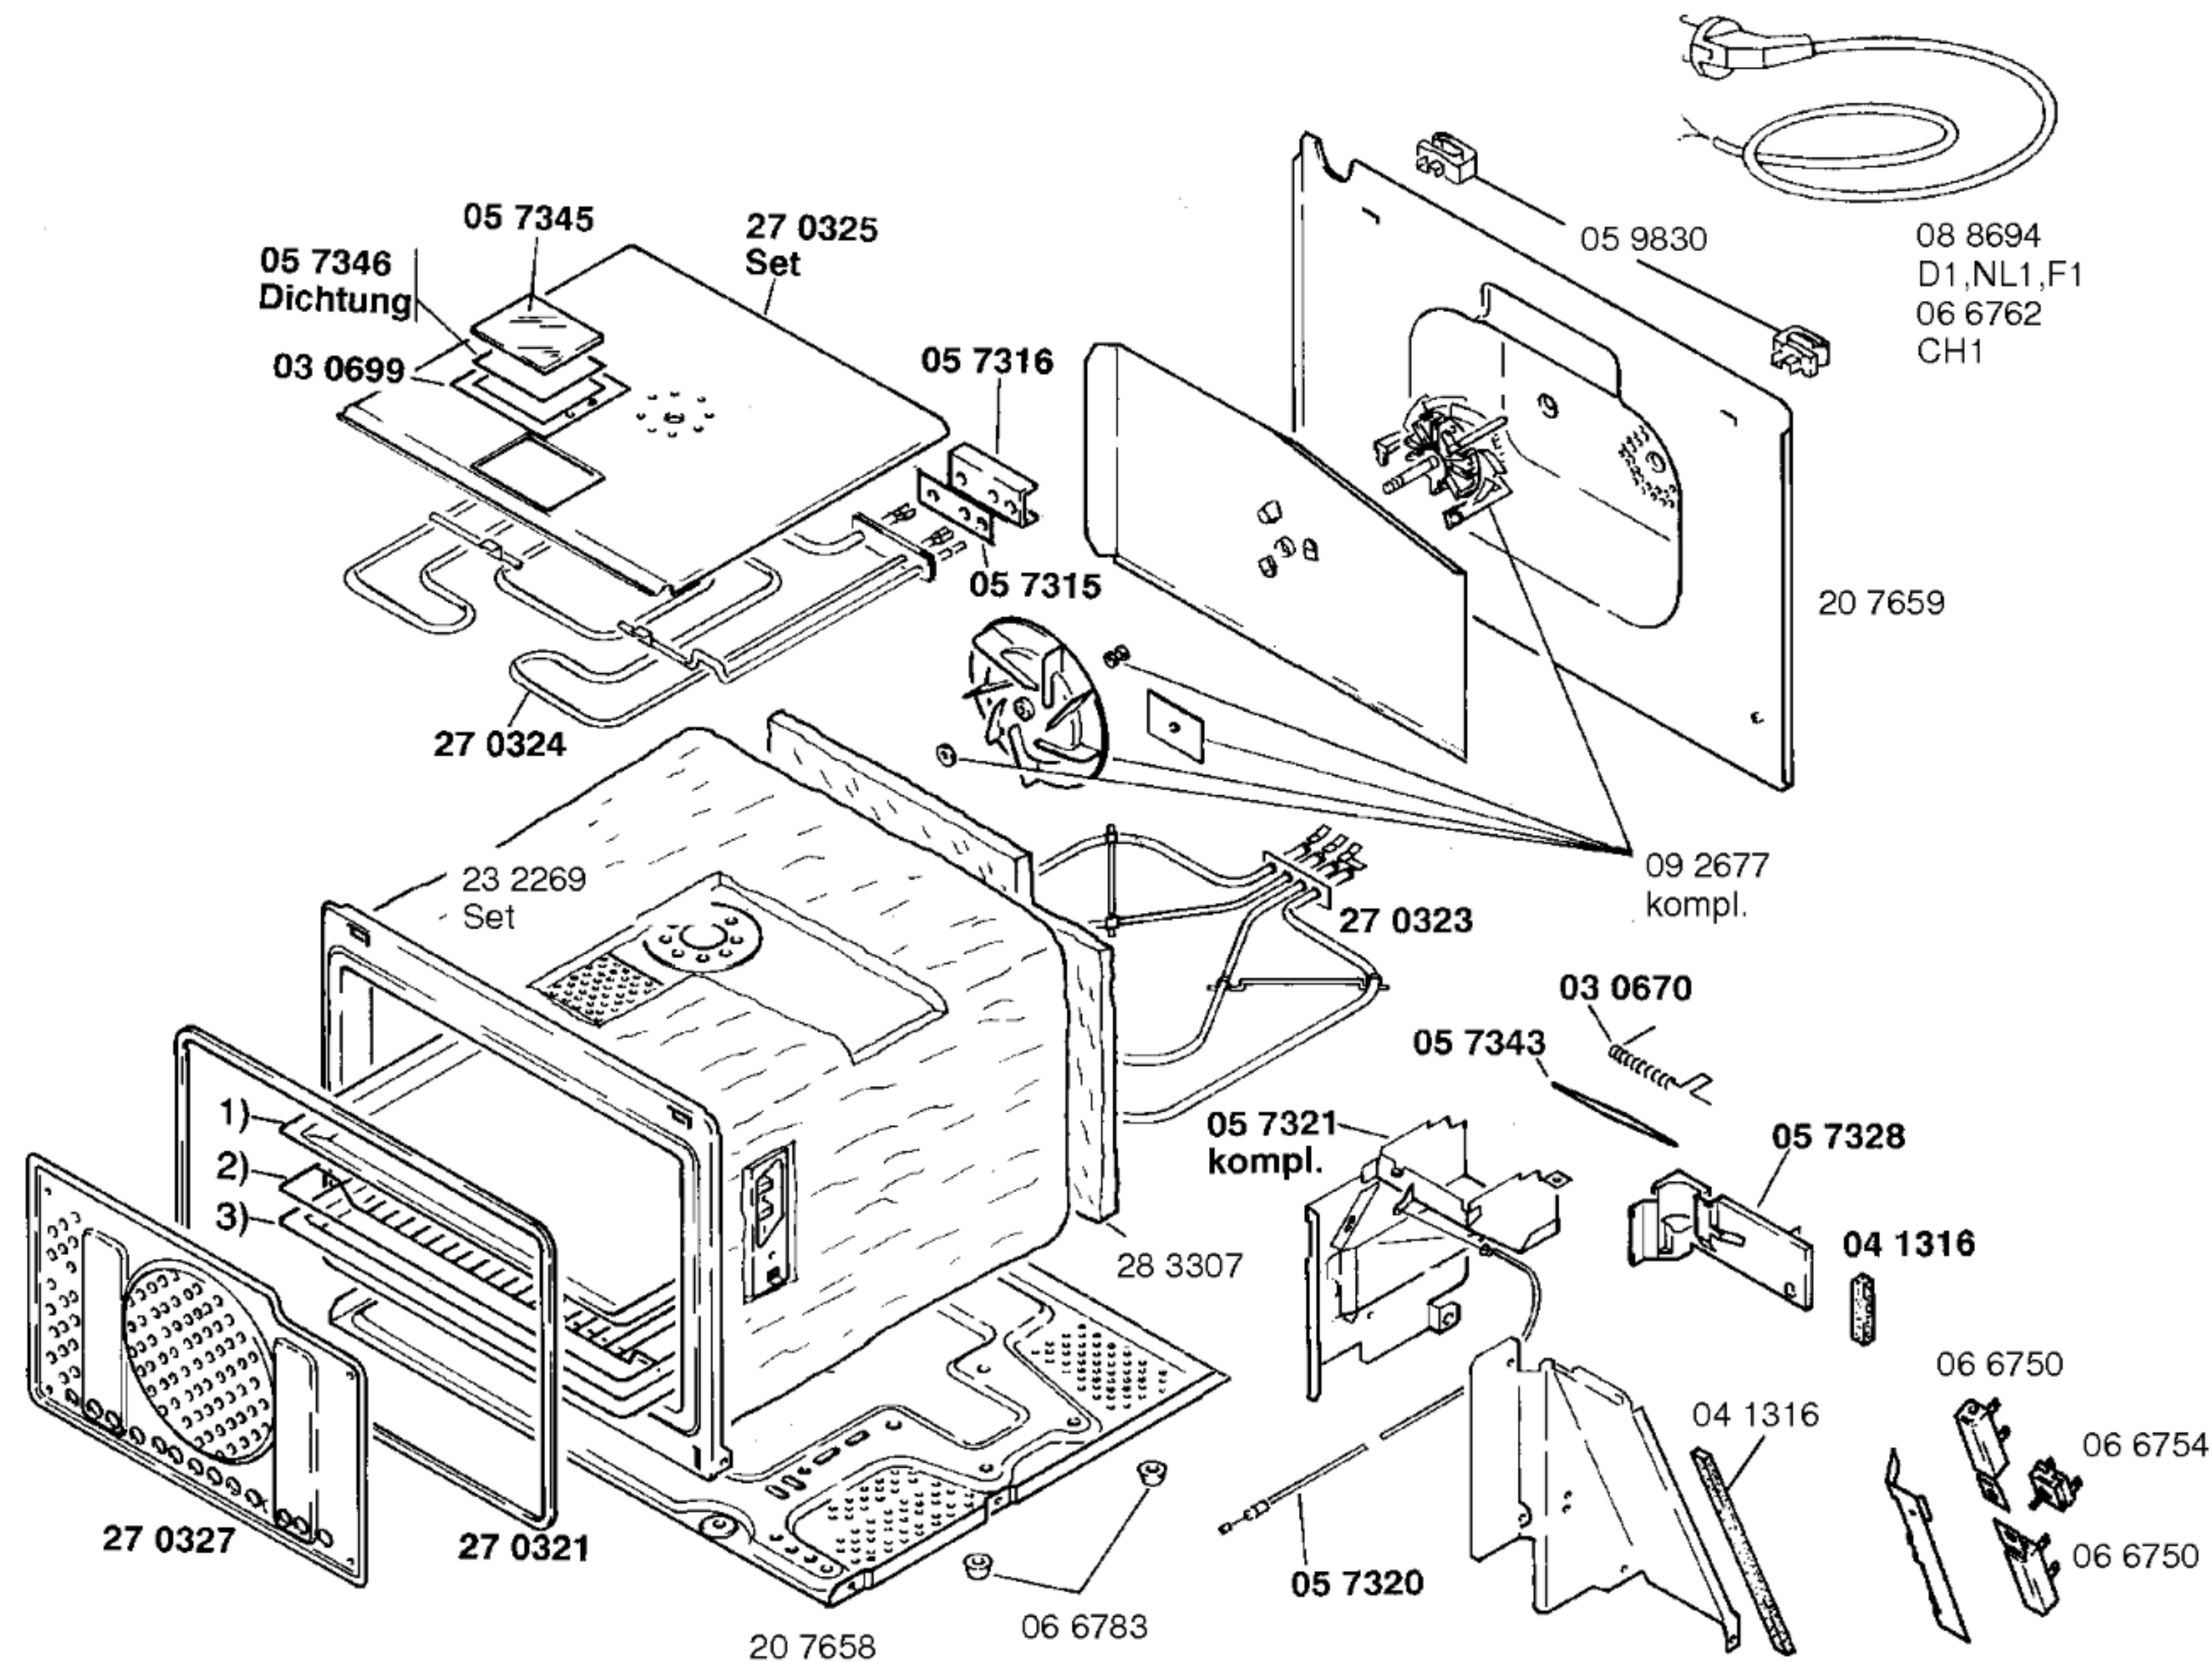

- 1) 11 4538
Backblech
- 2) 11 4539
Rost
- 3) 11 4537
Glasschale

02 8732
Anschlag für Backblech

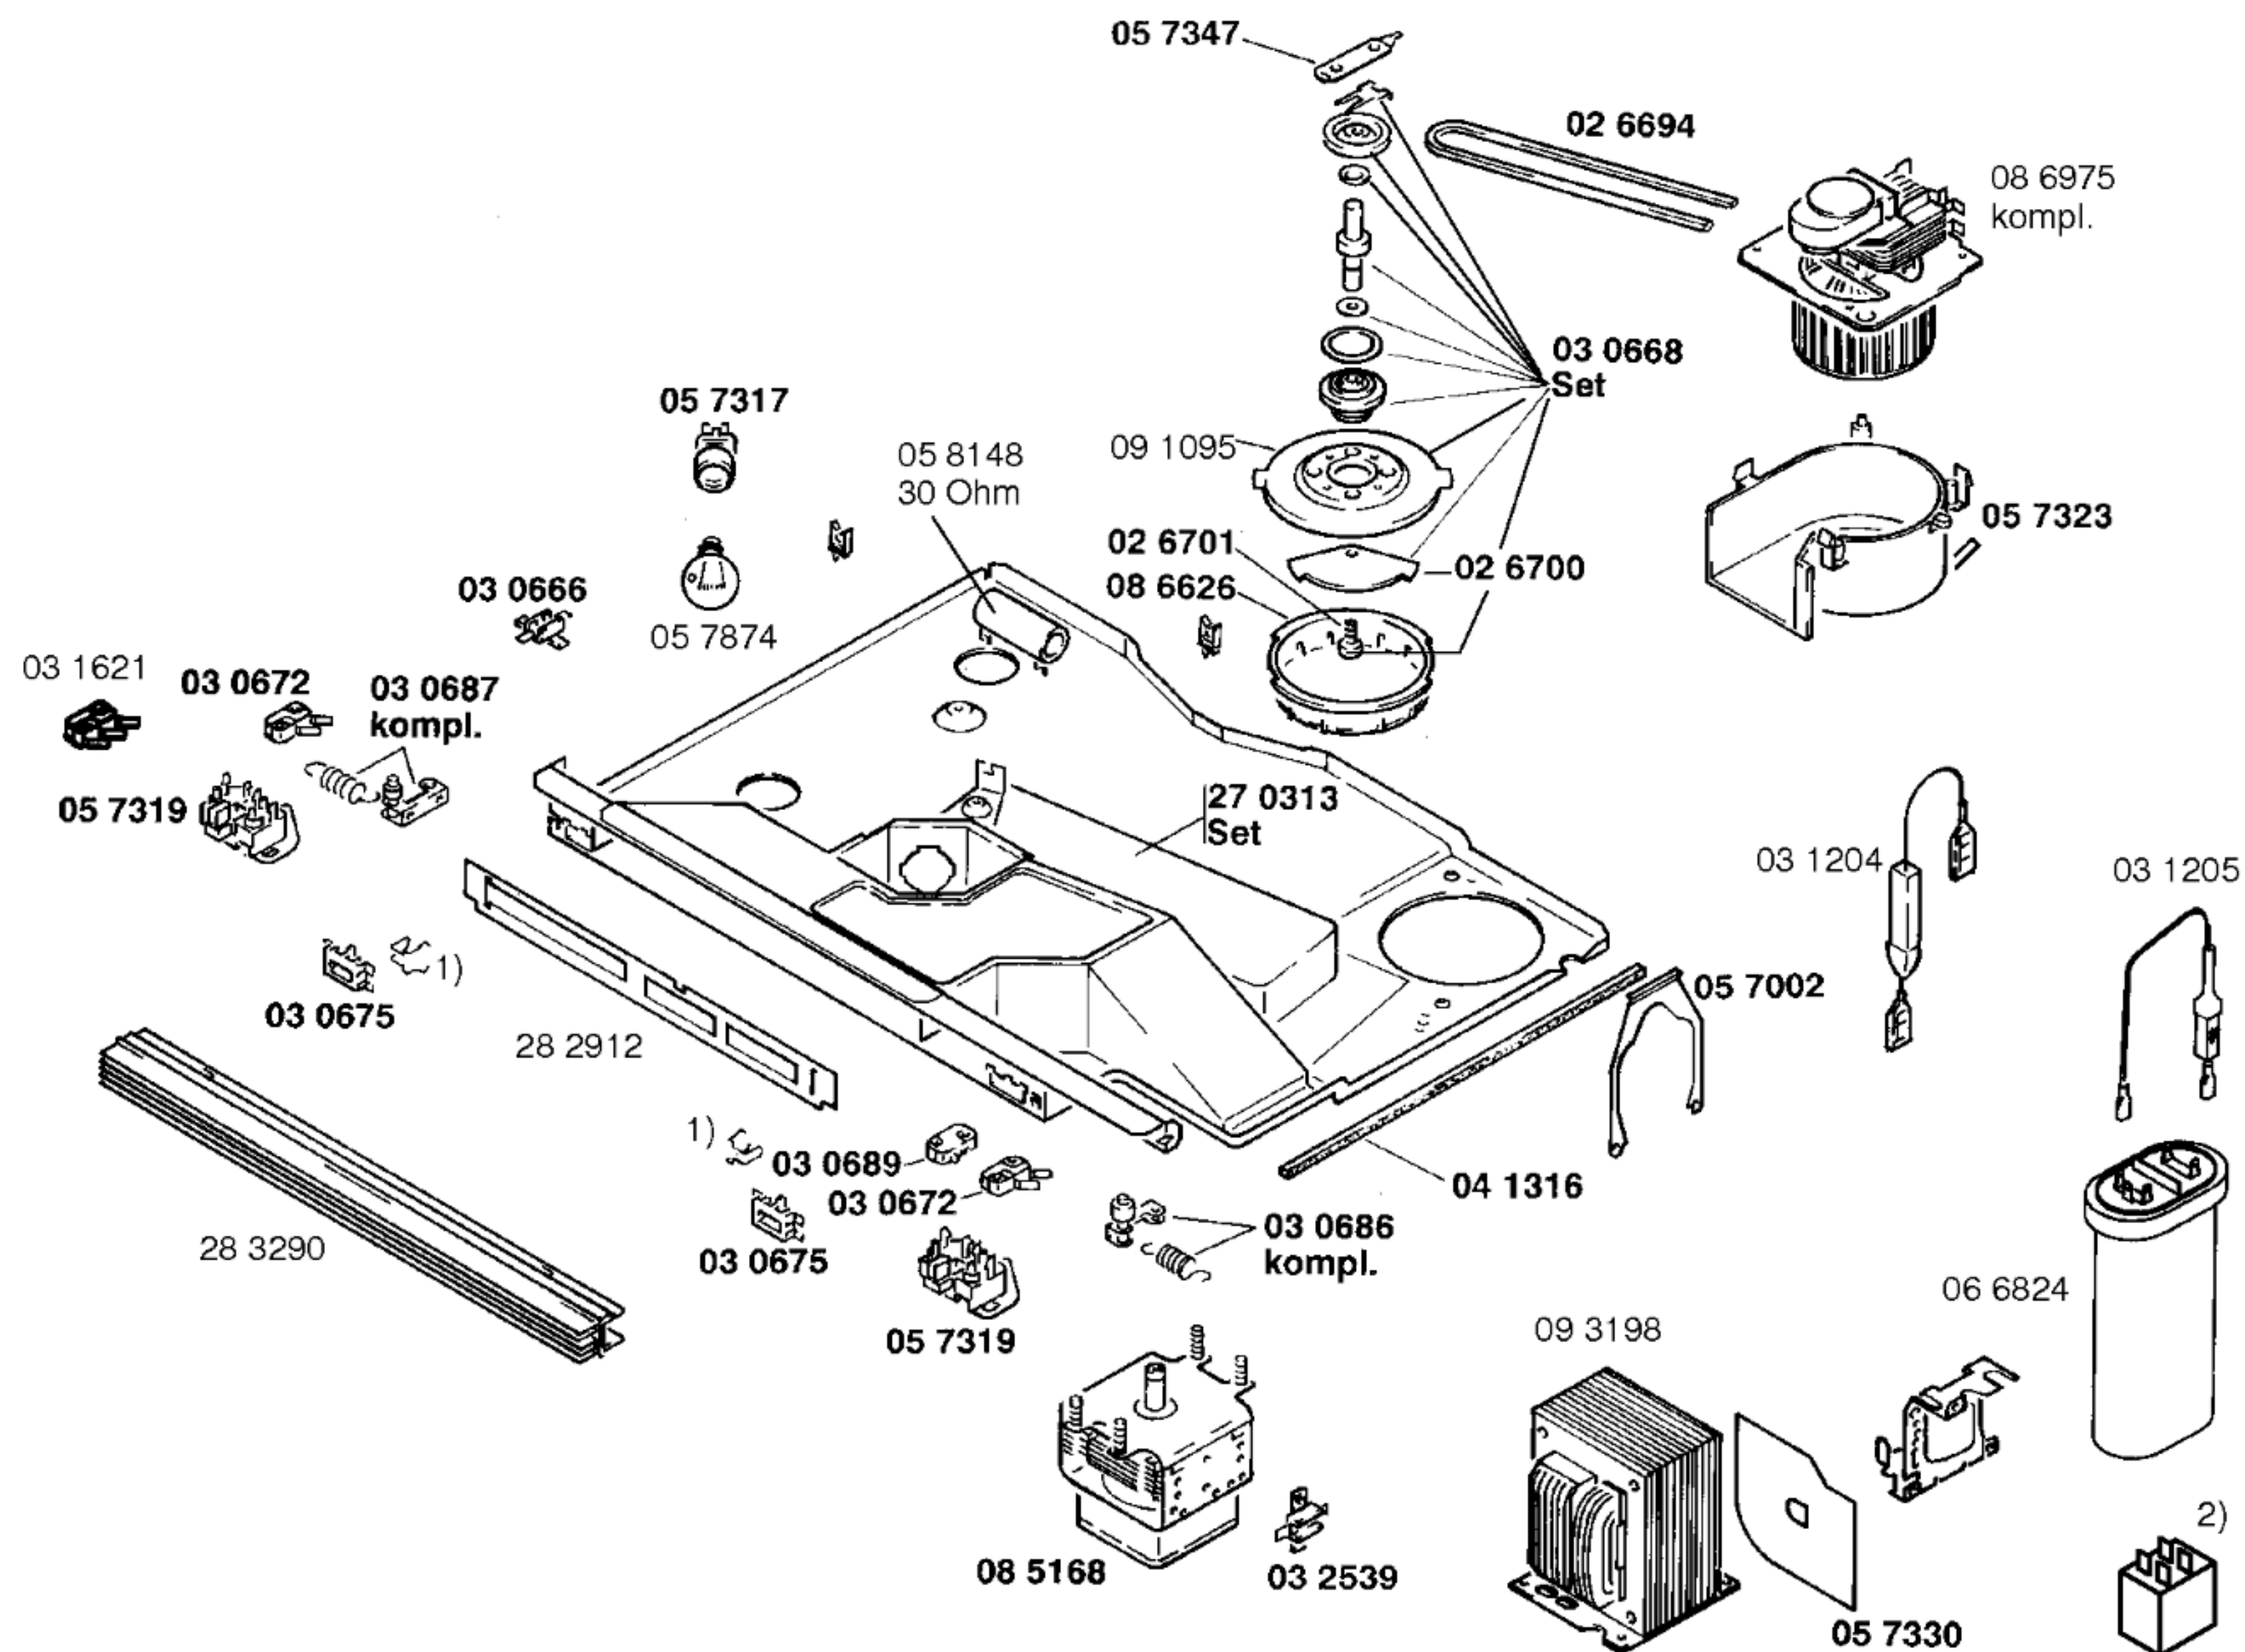

- 1) 06 6760
- 2) 06 5353
- D1,NL1,F1
- 05 8742
- CH1

